


# ELISE SERVICE PARTS LIST

## 2001 Model Year Onwards

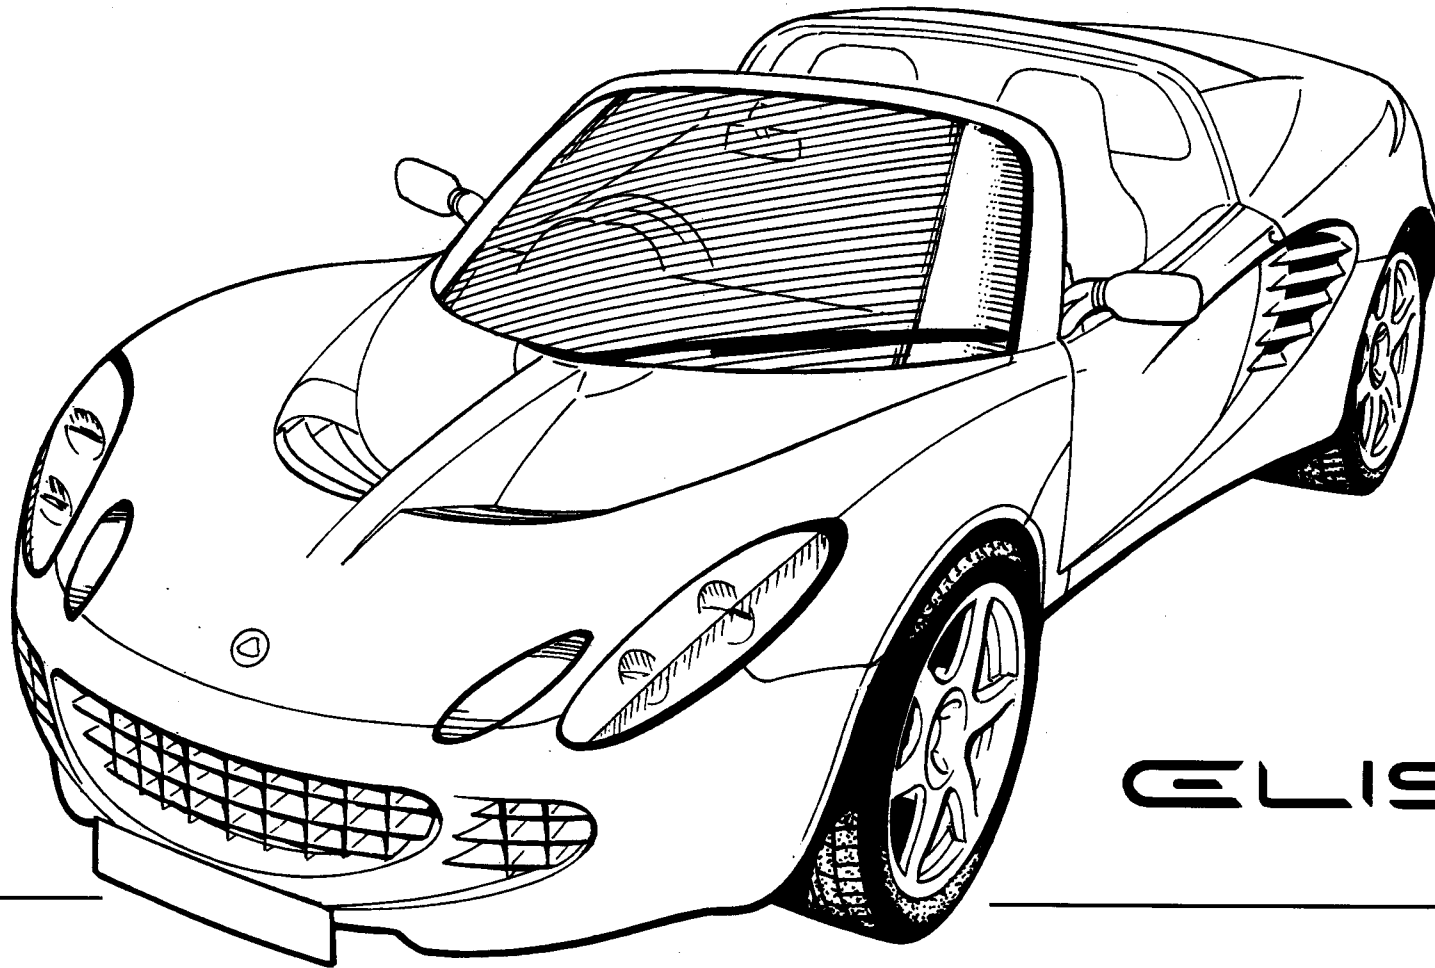

ELISE

Technical Service Dept., Lotus Cars Limited, Hethel, Norwich, Norfolk, NR14 8EZ. England.  
Telephone 01953 608000 Telefax 01953 608300

## FOREWORD

This publication has been designed for use by Lotus Dealers, and may be updated periodically by the issuing of update packages to the dealer network. Lotus policy is one of continuous product improvement and the right is reserved to alter specifications at any time without prior notice.


Whilst every care has been taken to ensure correctness of information, it is impossible to guarantee complete freedom from omissions and errors, or to accept liability arising from such errors or omissions, but nothing herein contained shall affect your statutory rights.

## USE OF THE PARTS LIST

This parts list covers the Elise range, 2001 model year onwards. The manual is arranged in function groups, as defined by the Contents page, and may sometimes use several versions of the same function group to accommodate model variations - take care to establish the full vehicle specification in order to properly identify the applicable parts list section.

## PART NUMBERS

Part numbers used in this publication are in the format as follows:

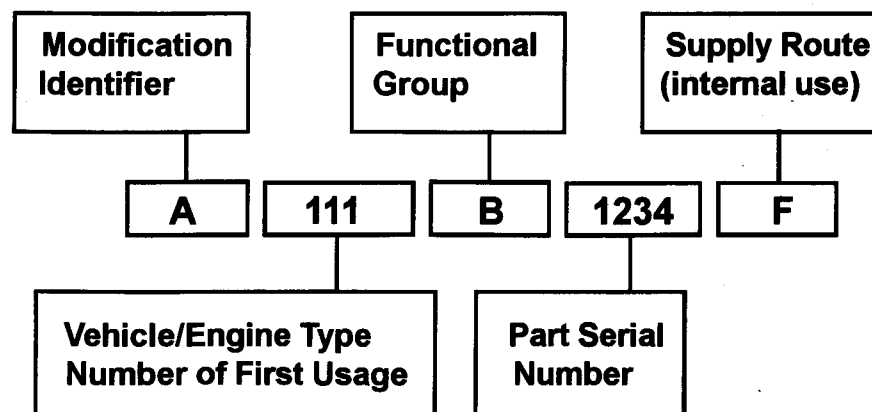

**Modification Identifier:** This letter identifies a version or modification of the part. Part numbers with different prefix letters may or may not be interchangeable - refer to the remarks column.

**Vehicle/Engine Type Number:** The type number indicates either the model or engine type on which the part was first used.

026, 036, 045, 500....Elan	076....Eclat S1	084....Eclat S2	111....Elise
050....Elan+2	079....Esprit S1/S2/S2.2	085....Esprit S3	340....340R
046, 054, 065, 074....Europa	082....Esprit Turbo	089....Excel	
075....Elite S1	083....Elite S2	100....Elan 1990	

**Functional Group:** A single letter indicating the functional area of the parts first use




A = Chassis	E = Engine	J = Brakes	P = Heater & AC	U = Hard Trim
B = Body	F = Transmission	K = Cooling	Q = Clutch	V = Soft Trim
C = Front Suspension	G = Wheels & Tyres	L = Fuel System	R = Final Drive	W = Standard Fixings
D = Rear Suspension	H = Steering	M = Electrics	S = Exhaust	

## VEHICLE IDENTIFICATION NUMBER & ENGINE NUMBER

The Vehicle Identification Number (V.I.N.) is stamped on the chassis in the right hand rear sill area, and is also printed on a label stuck to the body in the front services compartment. The engine number is marked on a vertical patch at the left hand end of the forward face of the cylinder block, and is most easily viewed using a mirror.

Both numbers should always be quoted with any vehicle enquiries, as Factory records are filed against V.I.N., and specification change points are identified by V.I.N. or engine number. The vehicle licence number may not accurately reflect vehicle age, may also be changed during the car's life, and is an unreliable method of vehicle identification.

The V.I.N. comprises 17 characters, coded in accordance with European Economic Community (EEC) directives. For change point identification in Service Notes and Service Parts Lists, characters 10 (model year) and 15 - 17, or 14 - 17 (serial number) will be quoted.

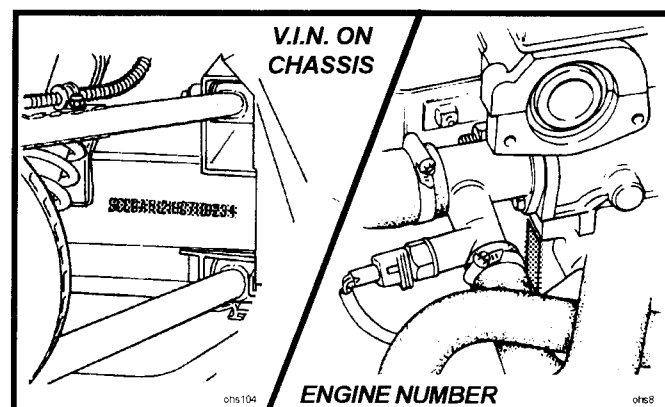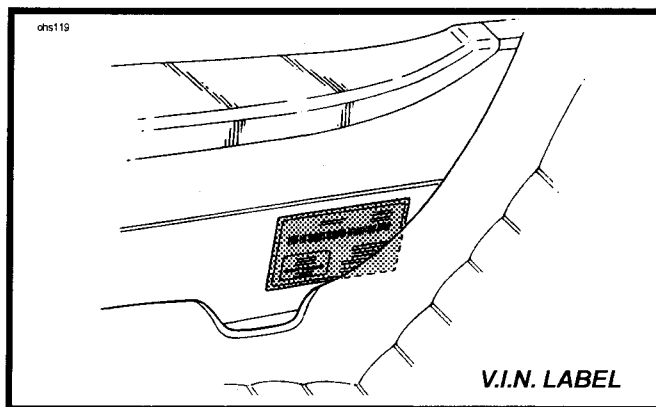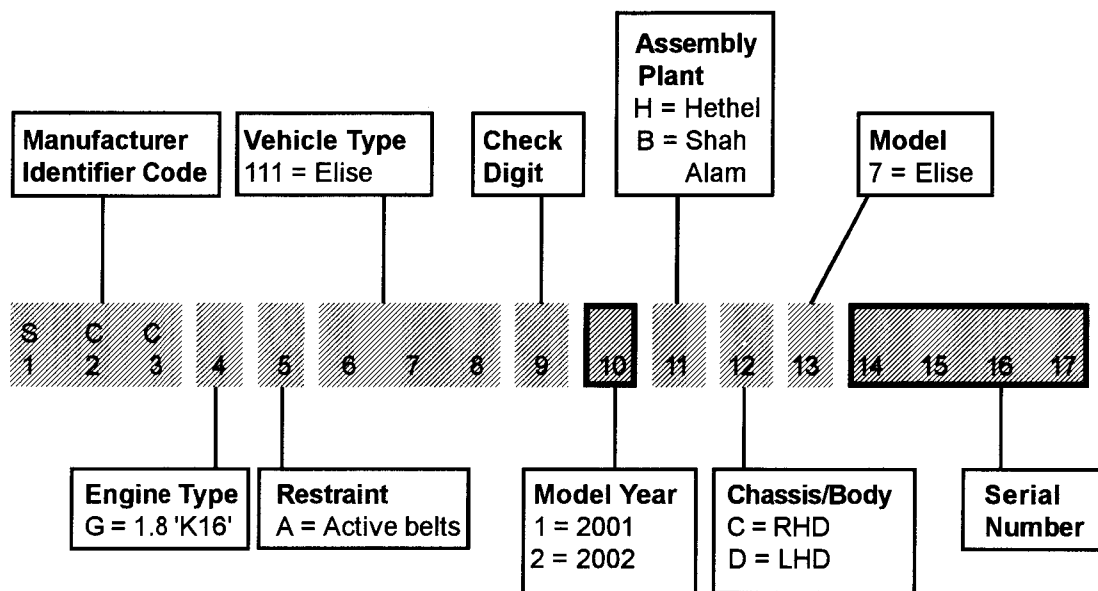

ELISE






# Service Parts List **ELISE**



## Function Code 10.01 Front & Rear Clamshells & Fixings

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Front Clamshell			A117B0003K	1
02	Rear Clamshell			A117B0017K	1
03	Door Hinge Cover Panel, RH			A117B0220K	1
04	Door Hinge Cover Panel, LH			A117B0219K	1
05	Screw, M8 x 25, S/S, button hd.			A111W7175F	6
06	Washer, flat, S/S, M8 x 21 x 1.6			A111W4176F	8
07	Bracket, centre front clamshell	Part of clamshell assy.		C117B0193F	1
08	Screw, M6 x 16, hex. hd.			A075W1028Z	22
09	Washer, flat, M6 x 18 x 1			B082W4018F	22
10	Spirenut, M6			B100W6372F	3
11	Nut, M6			A075W3020Z	2
12	Washer, spring, M6			A075W4035F	2
13	Height Adjuster/Outer Fixing, front access panels			A117B0334F	2
14	Locknut, M10, height adjuster fix.			A075W3024Z	4
15	Washer, flat, M10 x 24 x 1.5, adjuster to clamshell			A075W4023F	2
16	Bracket, front clamshell	Part of clamshell assy.		B117B0163F	2
17	Pad, front clamshell mounting	Not illustrated, on radiator housing		A117U0163F	2
18	Drain Tube, headlamp	Not illustrated		A117M6030F	2

**ELISE**

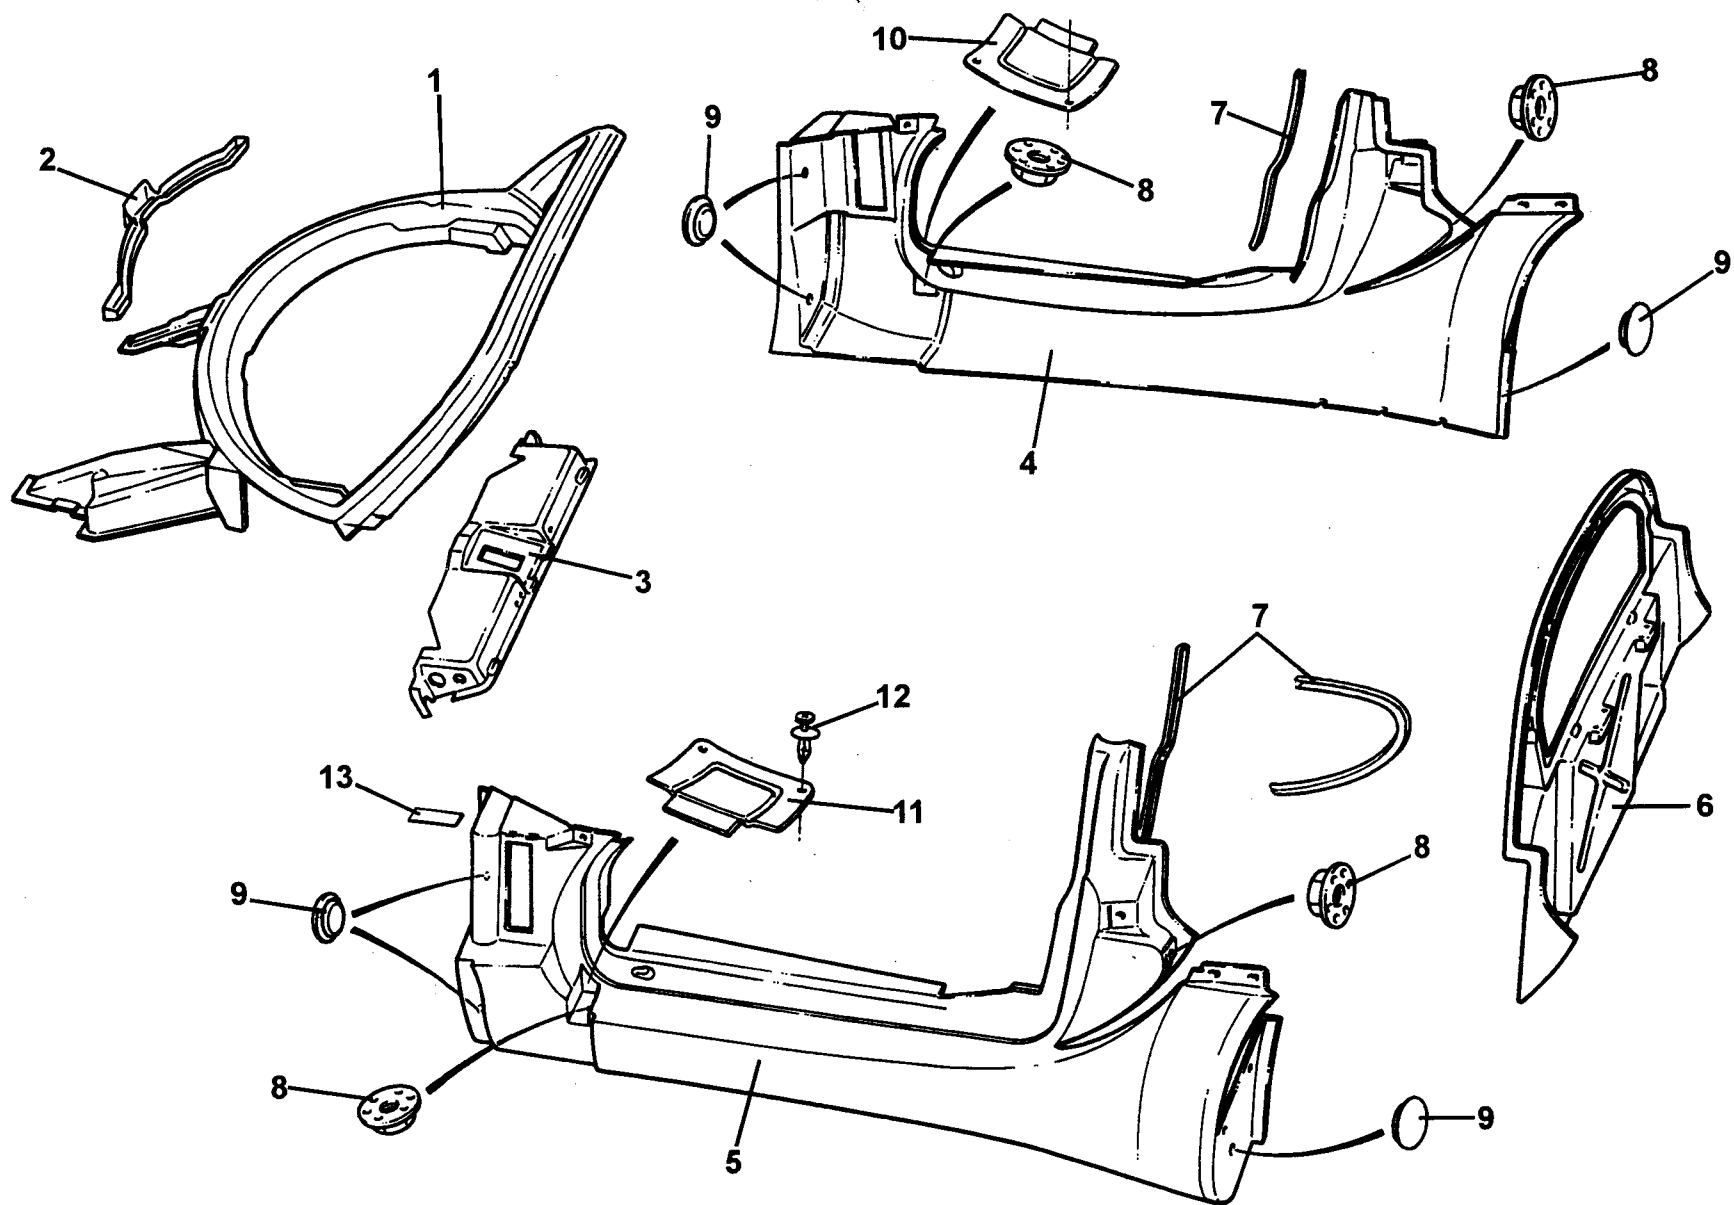

**ELISE**

**10.02a**

# Service Parts List **ELISE**




## Function Code 10.02a Body: Sill Panels, Windscreen Frame & Rear Bulkhead

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Windscreen Frame Assembly		Painted	A116B0148K	1
02	Gutter, windscreen frame			A117B0153F	1
03	Baffle, scuttle to fascia top			A116B0195J	1
04	Sill Panel, RH			A117B0030K	1
05	Sill Panel, LH			A117B0031K	1
06	Rear Bulkhead Assembly			B117U0041F	1
07	Edge Finisher, 'B' post/side intake	Cut to fit		A111U6034V	As req.
08	Captive Nut, M8, big hd.			A111W6592F	18
09	Blanking Grommet, 12.5mm			A100B6163F	1
10	Finisher Panel, front sill recess, RH			A117U0168F	1
11	Finisher Panel, front sill recess, LH			A117U0169F	1
12	Plastic Fastener, panel fix.			A100W6479F	4
13	Pad, hole blanking, upper hinge fixings			A117U0258F	2
14	NVH Foam, sill front	Not illustrated		B117B0034F	2

**ELISE**

2001 / 01

Function Code: 10.02a, Page: 1

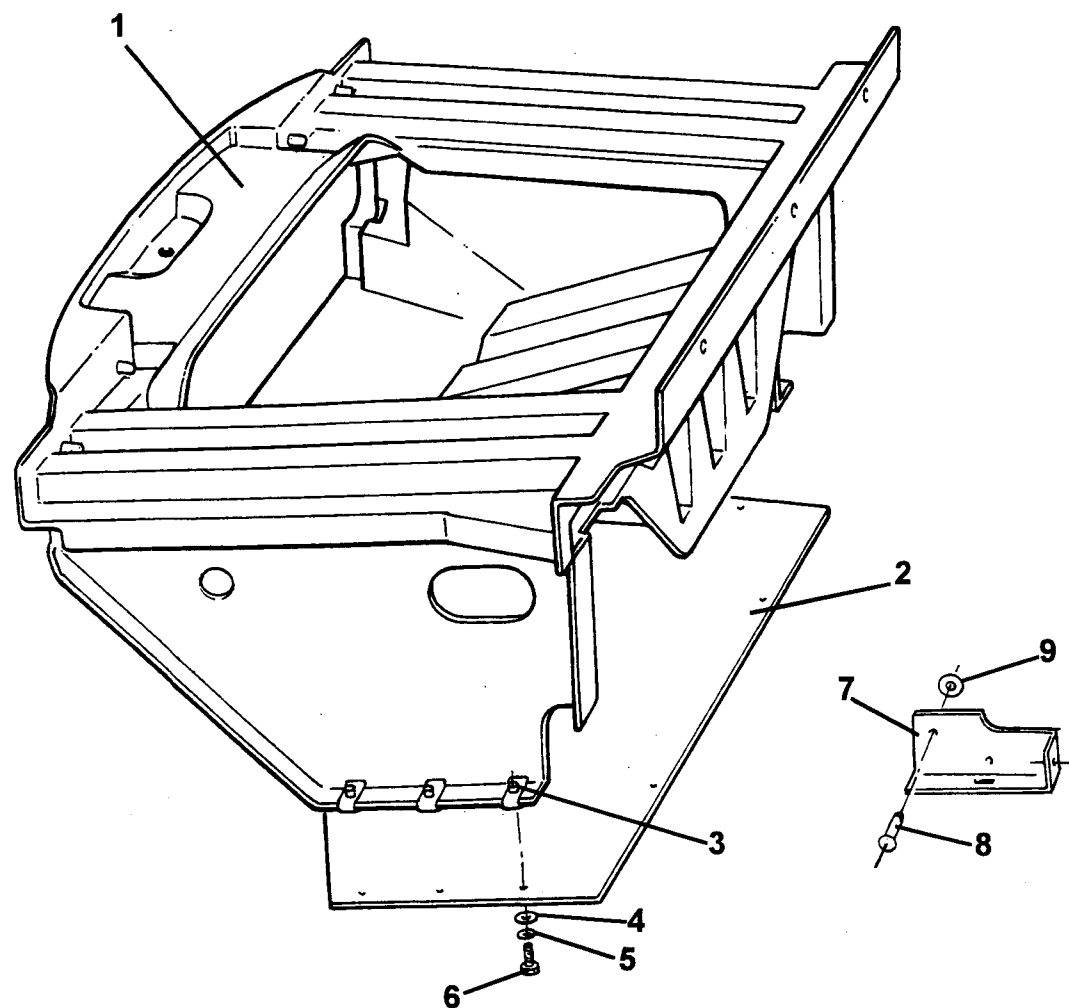


**ELISE**  
10.04

# Service Parts List



## Function Code 10.04 Crash Structures

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Front Crash Structure Assembly			B116B0225K	1
02	Panel, front undershield			B117B0237F	1
03	Spirenut, M6, undershield fix			B100W6372F	6
04	Screw, M6 x 25, pozi., undershield fix			A075W5089Z	9
05	Washer, spring, M6, undershield fix			A075W4035Z	9
06	Washer, flat, M6 x 15 x 1.5, undershield fix			A075W4015Z	9
07	Alloy Plate. LH			A111B0531F	1
07a	Alloy Plate, RH			A111B0530F	1
08	Pop Rivet, plate fix.			A085W6259F	6
09	Washer, flat, 3/16" x 1/2", plate to crash structure			A075W4000Z	4
12	Betaseal 1701, crash structure bonding	Not illustrated		A082B6281F	300mm

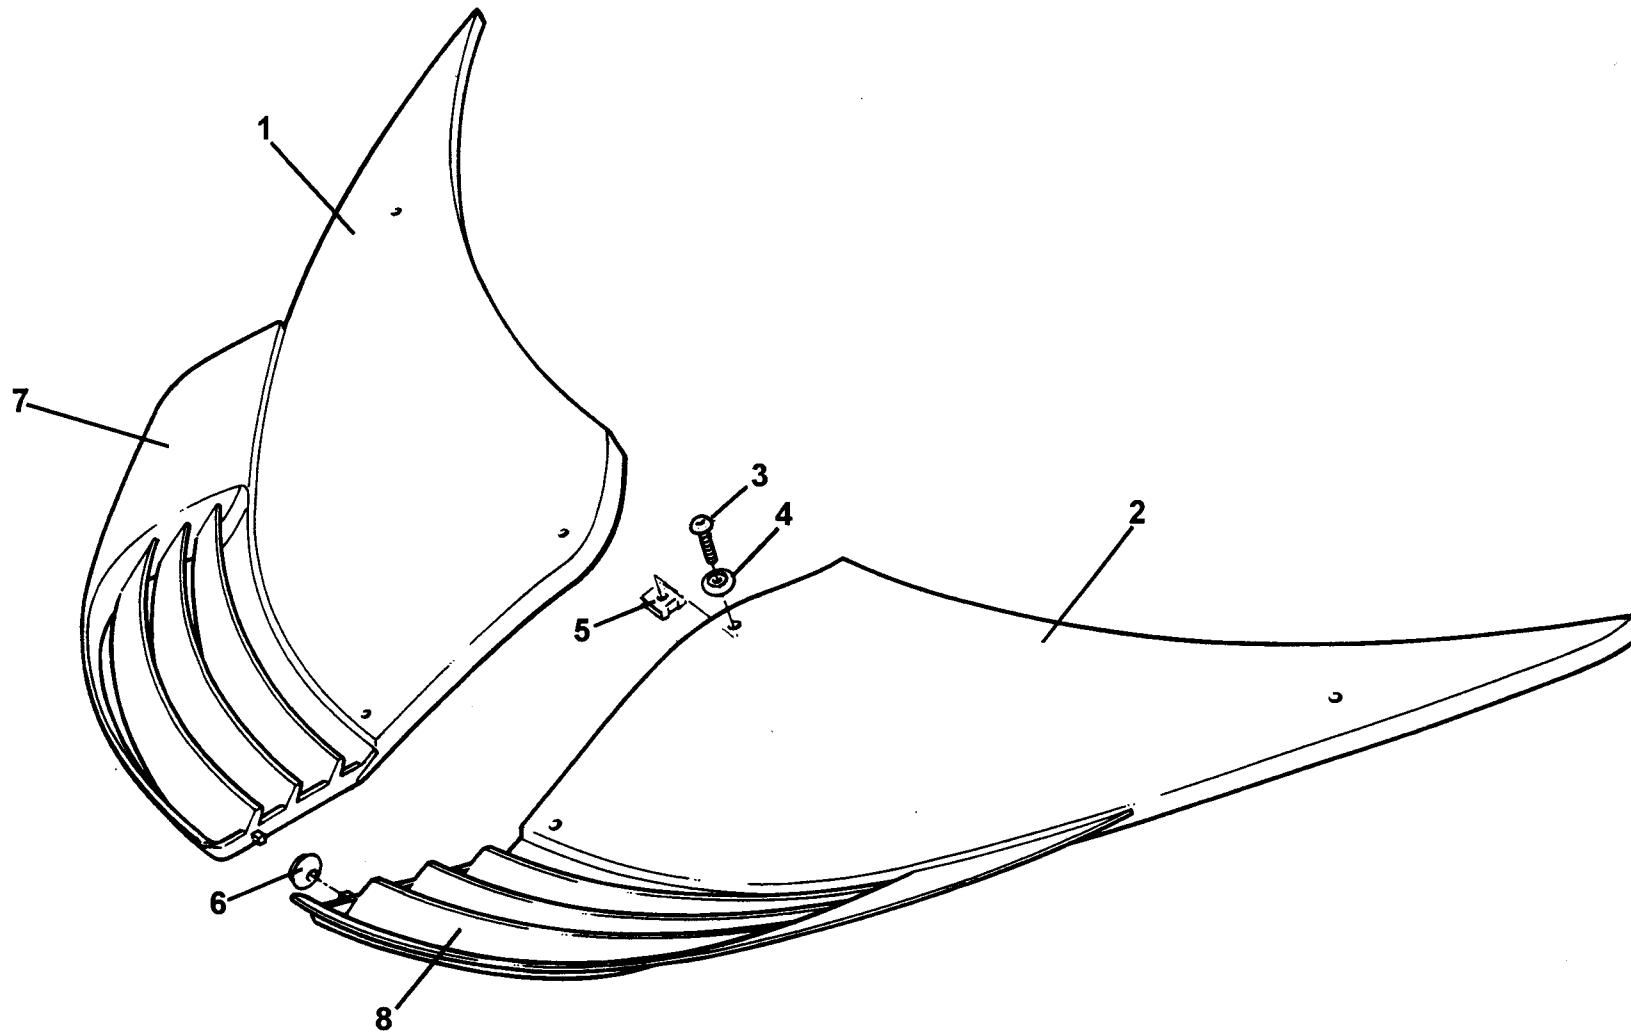

**ELISE**


**10.09a**

# Service Parts List **ELISE**



## Function Code 10.09a Front Services Access Panels

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Access Panel, front services, RH			B117B0266J	1
02	Access Panel, front services, LH			B117B0267J	1
03	Screw, M5 x 20, button. skt. hd., panel fix.			A082W7173F	6
04	Escutcheon, screw to panel			B340B0123F	6
05	Spire Nut, M5			A117W6682F	4
06	Grommet, panel spigot retaining			X036B6010Z	2
07	Grille, front access panel, RH			C117B0122F	1
08	Grille, front access panel, LH			C117B0121F	1

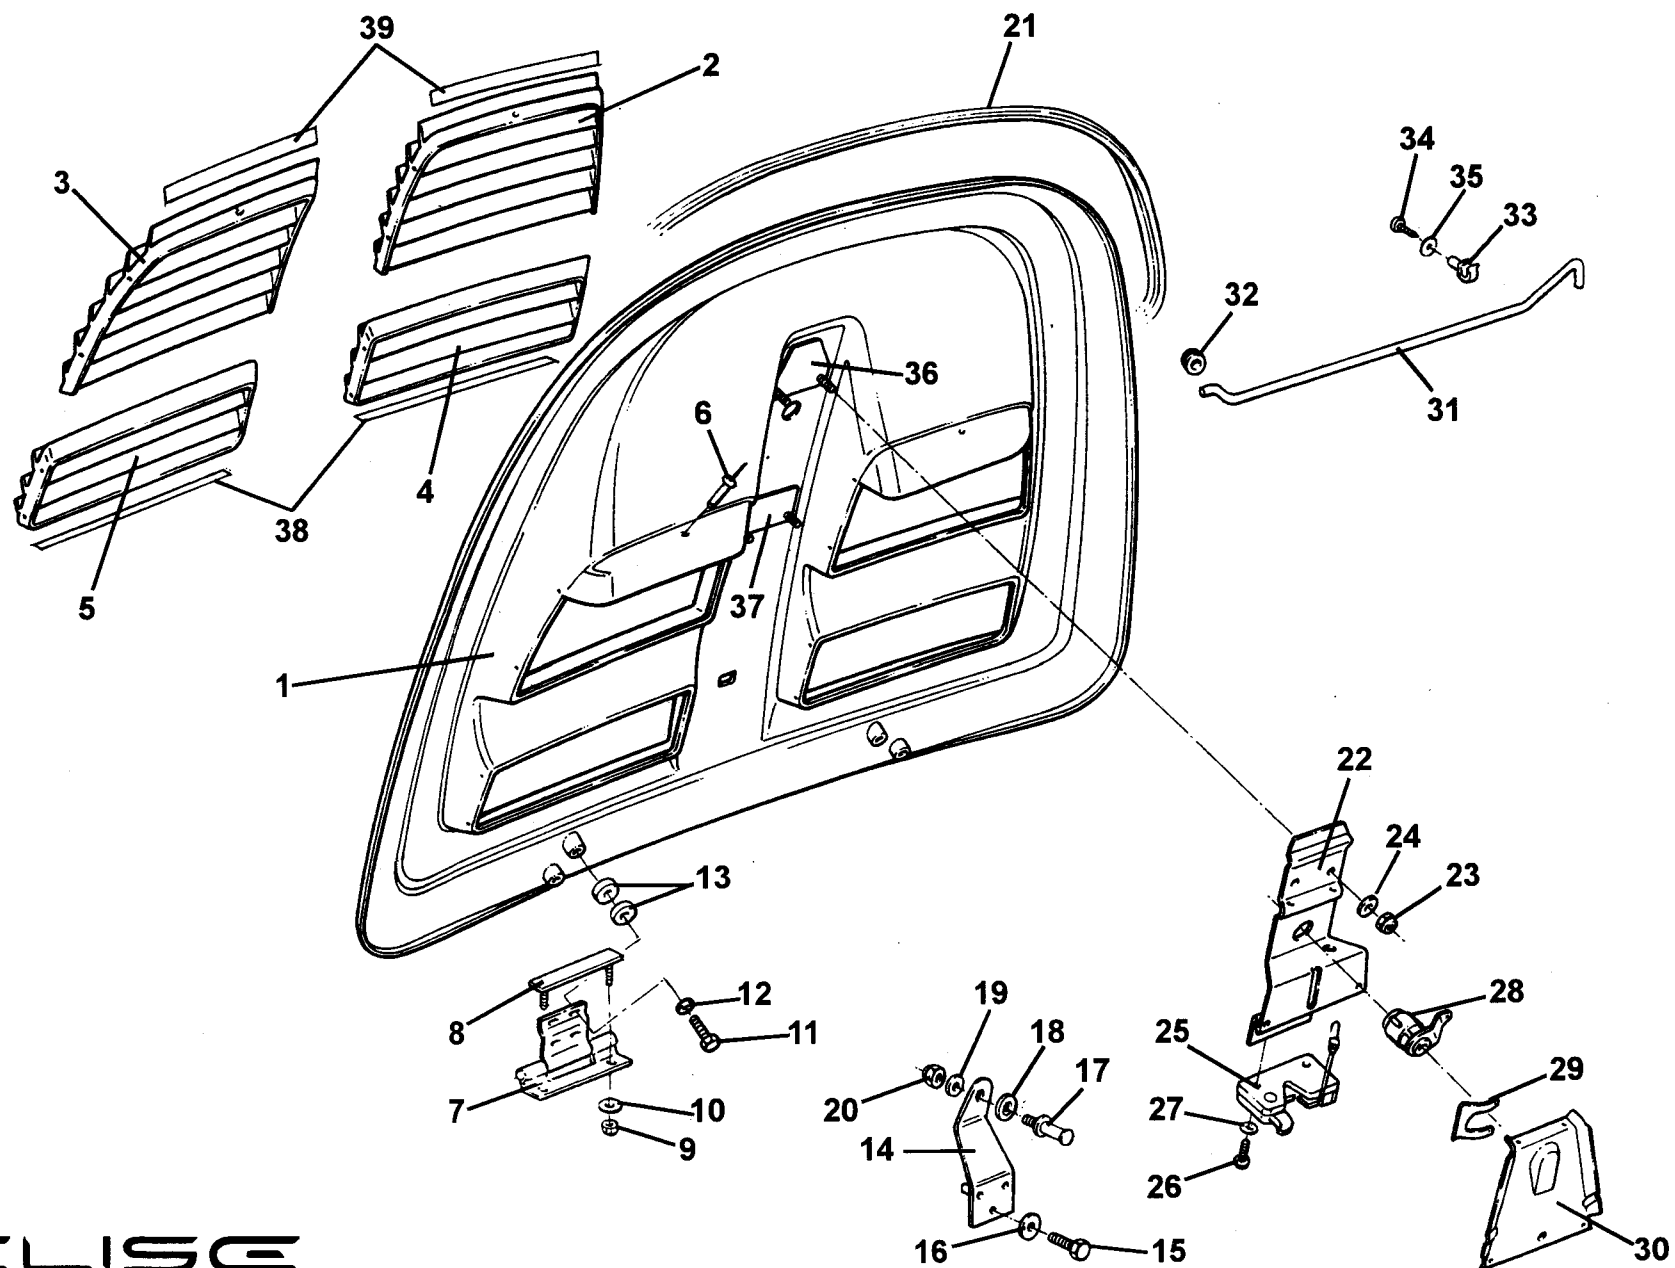

**ELISE**  
10.11




# Service Parts List **ELISE**



## Function Code 10.11 Engine Cover Lid & Latch Mechanism

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Engine Cover Lid			A117B0057K	1
02	Grille, outlet, RH rear			C117B0218F	1
03	Grille, outlet, LH rear			C117B0217F	1
04	Grille, outlet, RH front			C117B0130F	1
05	Grille, outlet, LH front			C117B0129F	1
06	Pop Rivet, plastic, rear grilles to lid			A082W6528F	16
07	Hinge assembly			C117B6002F	2
08	Stud Plate, hinge retention			A117B0236F	2
09	Nyloc Nut, M6, hinge to stud plate			A907E6285F	4
10	Washer, flat, M6 x 25			B075W4017Z	4
11	Screw, M6 x 16, hex. hd., hinge to lid			A075W1028F	4
12	Washer, flat, M6 x 15 x 3			A075W4014Z	4
13	Washer, spacer, M8 x 20 x 2.5			A079W4019F	8
14	Bracket, striker pin			A117B0222F	1
15	Screw, M6 x 20, hex.hd., bracket to bulkhead			A075W1030Z	3
16	Washer, flat, M6 x 18			B082W4018F	3
17	Striker Pin			A117B0223F	1
18	Washer, flat, M10 x 20.5 x 1.8			A075W4024Z	


**ELISE**

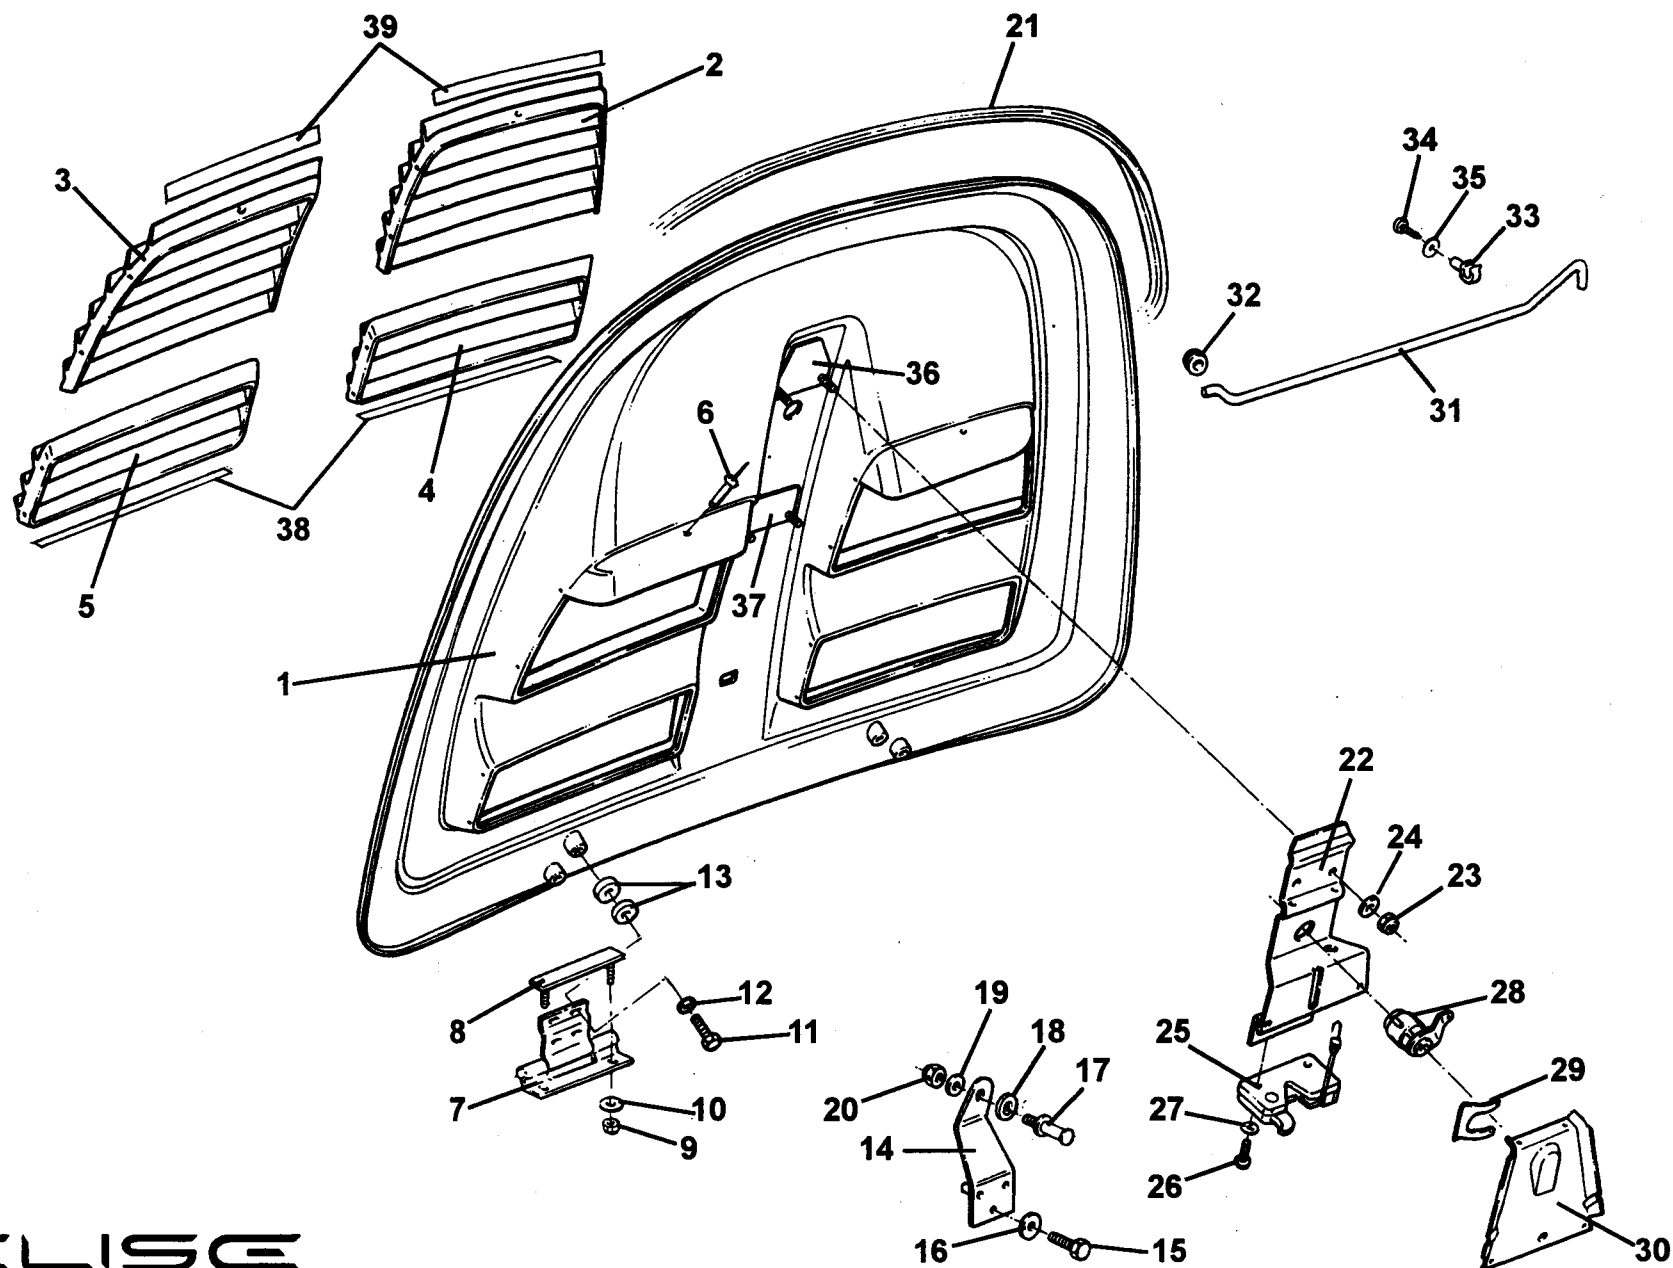

**ELISE**  
10.11

**Function Code 10.11 Engine Cover Lid & Release Mechanism**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
19	Washer, flat, M6 x 12.1 x 1.4			A075W4013Z	1
20	Nyloc Nut, M6, pin to bracket			A907E6285F	1
21	Weatherseal, luggage compartment gutter			A089V6055F	1
22	Bracket, latch retention			A117B0053F	1
23	Nyloc Nut, M6, bracket to lid			A907E6285F	4
24	Washer, flat, M6 x 12.1 x 1.4			A075W4013Z	4
25	Latch Assembly			A117B6001F	1
26	Screw, M6 x 20, pan hd. pozi. latch to bracket	Black finish		A111W1150F	3
27	Washer, flat, M6 x 25 x 1.4, SS	Black finish		A082W4131F	3
28	Lock Barrel	Part of vehicle lock set, see 10.17		B117H0001F	1
29	Clip, barrel retention			A117B6009F	1
30	Cover, latch assembly			A117U0162F	1
31	Stay, lid supporting			A117B0244F	1
32	Grommet, stay to bulkhead			X036B6150Z	1
33	Retaining Clip, stay			A082W6325F	1
34	Screw, No.8 x 0.5", pan hd., pozi., clip fixing			A075W5034Z	1
35	Washer, flat, 3/16 x 1/2", blk.			A075W4063Z	1
36	Stud Plate, bracket fixing, rear			A117B0243F	1
37	Stud Plate, bracket fixing, front			A117B0242F	1
38	Double Sided Tape, 5mm, front edge of grilles to lid	Cut to fit		A117B0362V	As req.
39	Double Sided Tape, 19mm, rear edge of grilles to lid	Cut to fit		A117B0361V	As req.

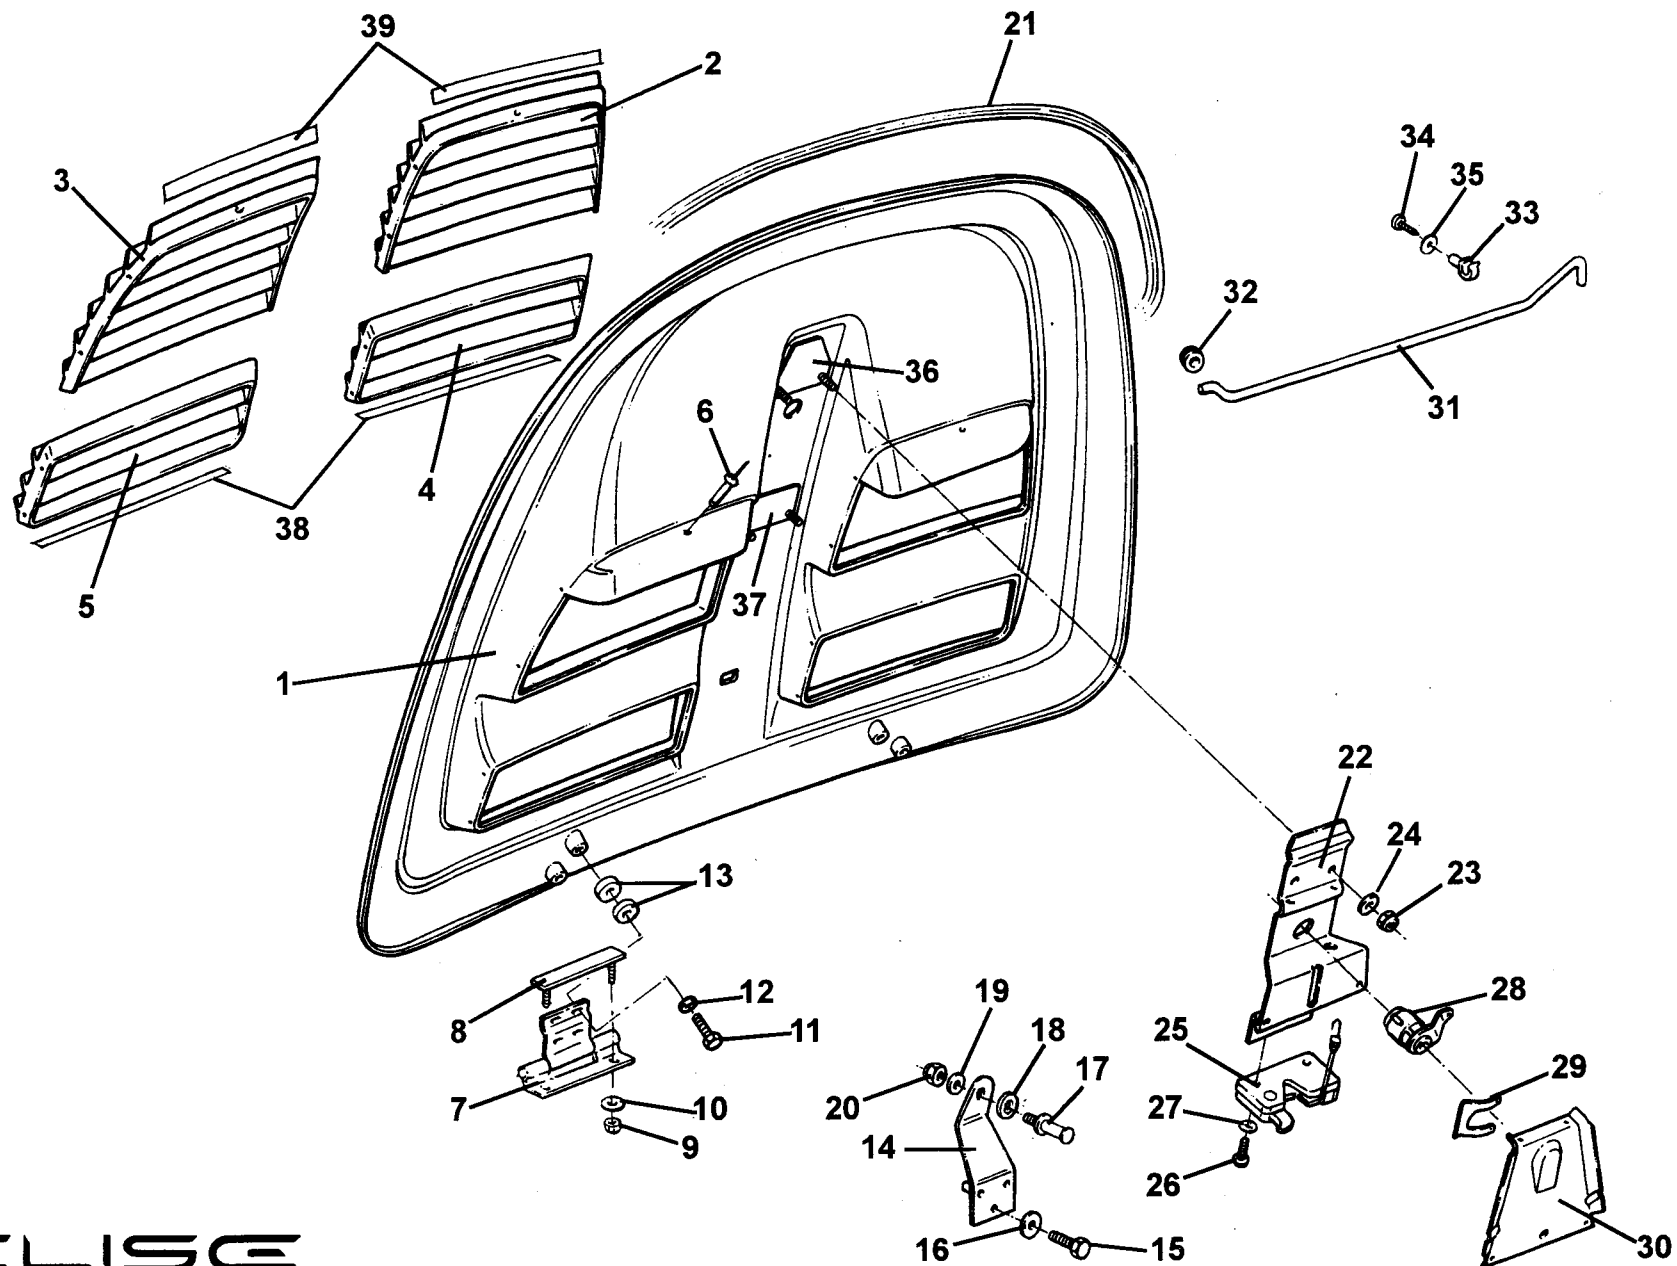


**ELISE**  
10.11

---

**Function Code 10.11 Engine Cover Lid & Release Mechanism**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
40	Permabond A130	Not illustrated, used on screw item 25		A912E7133F	As req.

---

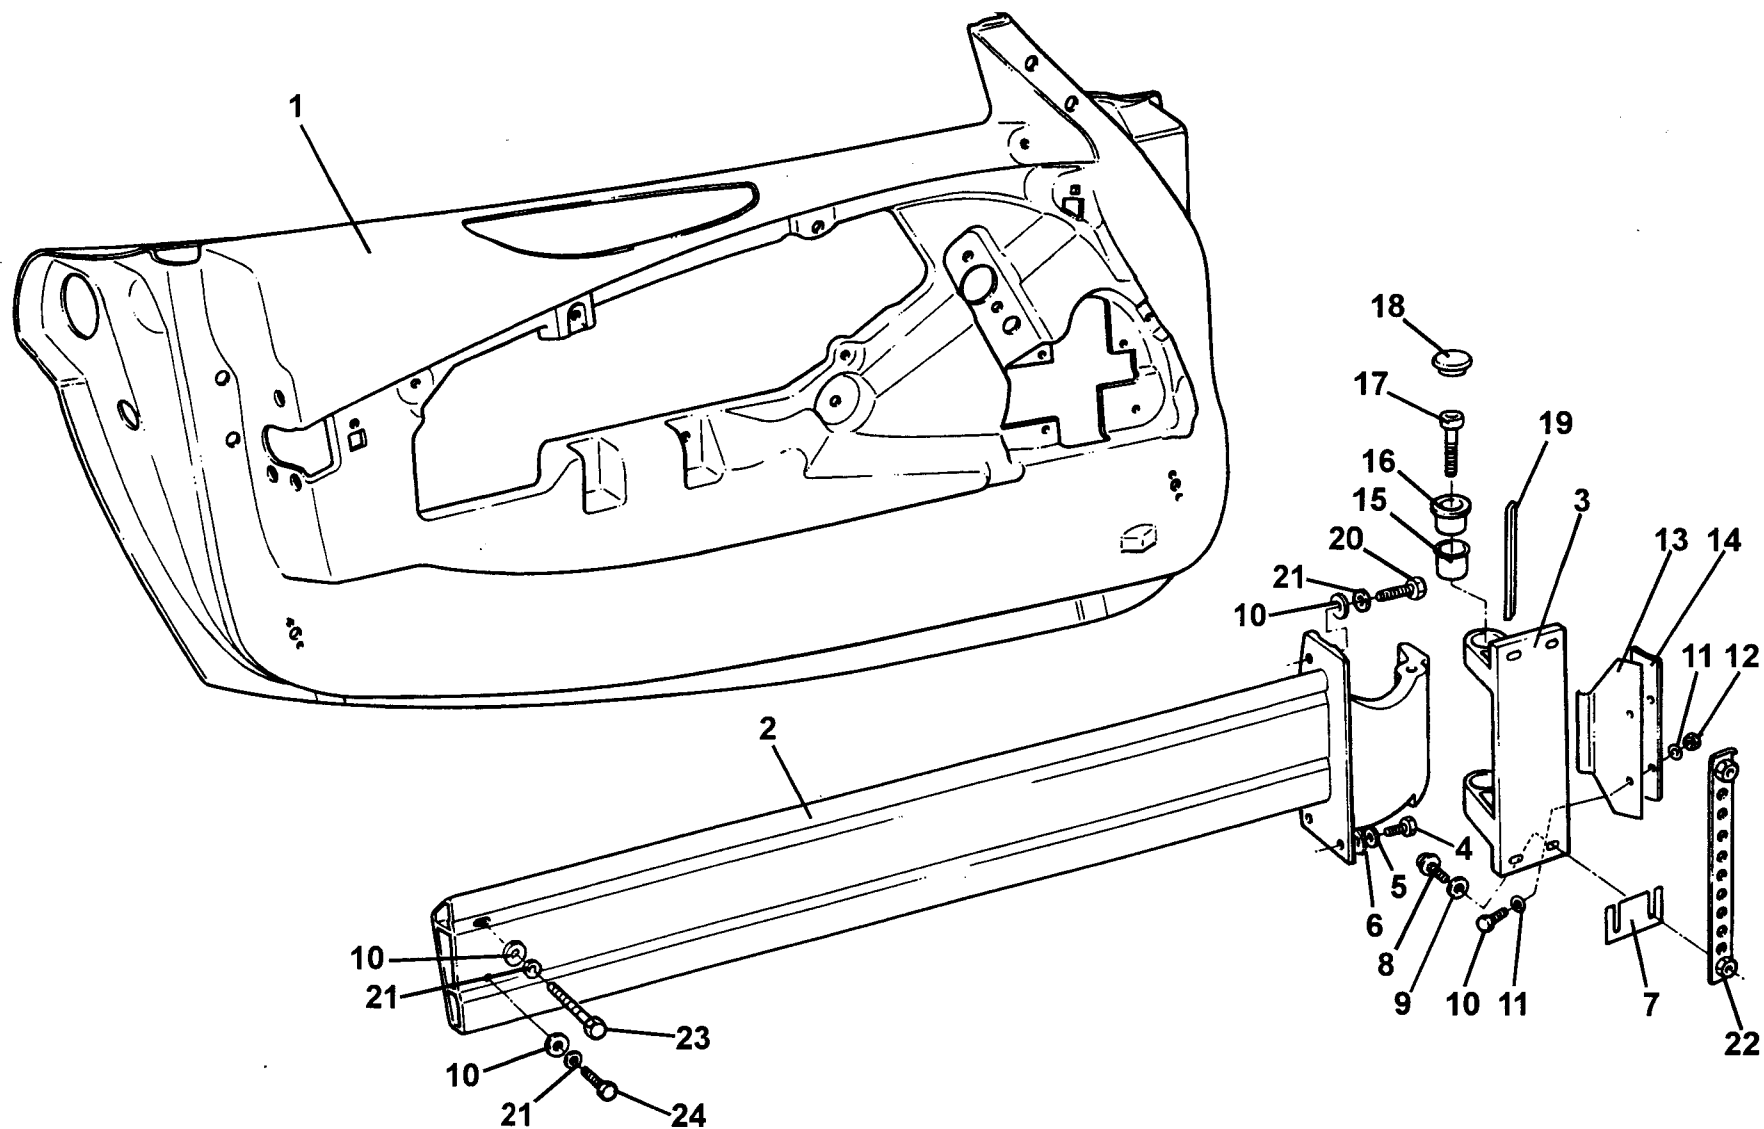

**ELISE**  
**10.15**

# Service Parts List **ELISE**




## Function Code 10.15 Door Shells, Beams, Hinges

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Door Shell, LH			A117B0061K	1
01a	Door Shell, RH			A117B0060K	1
02	Door Beam, LH			A116U0029F	1
02a	Door Beam, RH			A116U0030F	1
03	Hinge, chassis to door beam			A111U0055F	2
04	Setscrew, M6 x 20, hex. hd., beam to door fix.			A075W1030Z	4
05	Washer, shakeproof, M6			A075W4046Z	4
06	Washer, flat, M6 x 1.5			A075W4015Z	4
07	Shim, door hinge, 1.0mm			A111B0316F	As req
07a	Shim, door hinge, 1.5mm			A111B0317F	As req
07b	Shim, door hinge, 2.0mm			B111B0314F	As req.
07c	Shim, door hinge, 3.0mm			B111B0315F	As req
08	Screw, M8 x 30, cap hd.			A089W7052F	8
09	Washer, flat, M8 x 16.6 x 1.4			A075W4020Z	18
10	Screw, M6 x M20, hex. hd.			A075W1030Z	4
11	Washer, flat, M6			A075W4013Z	8
12	Nut, M6, Nyloc			A075W3009Z	4
13	Spring Plate, door check			C116B0257F	2

**ELISE**

Function Code: 10.15, Page: 1

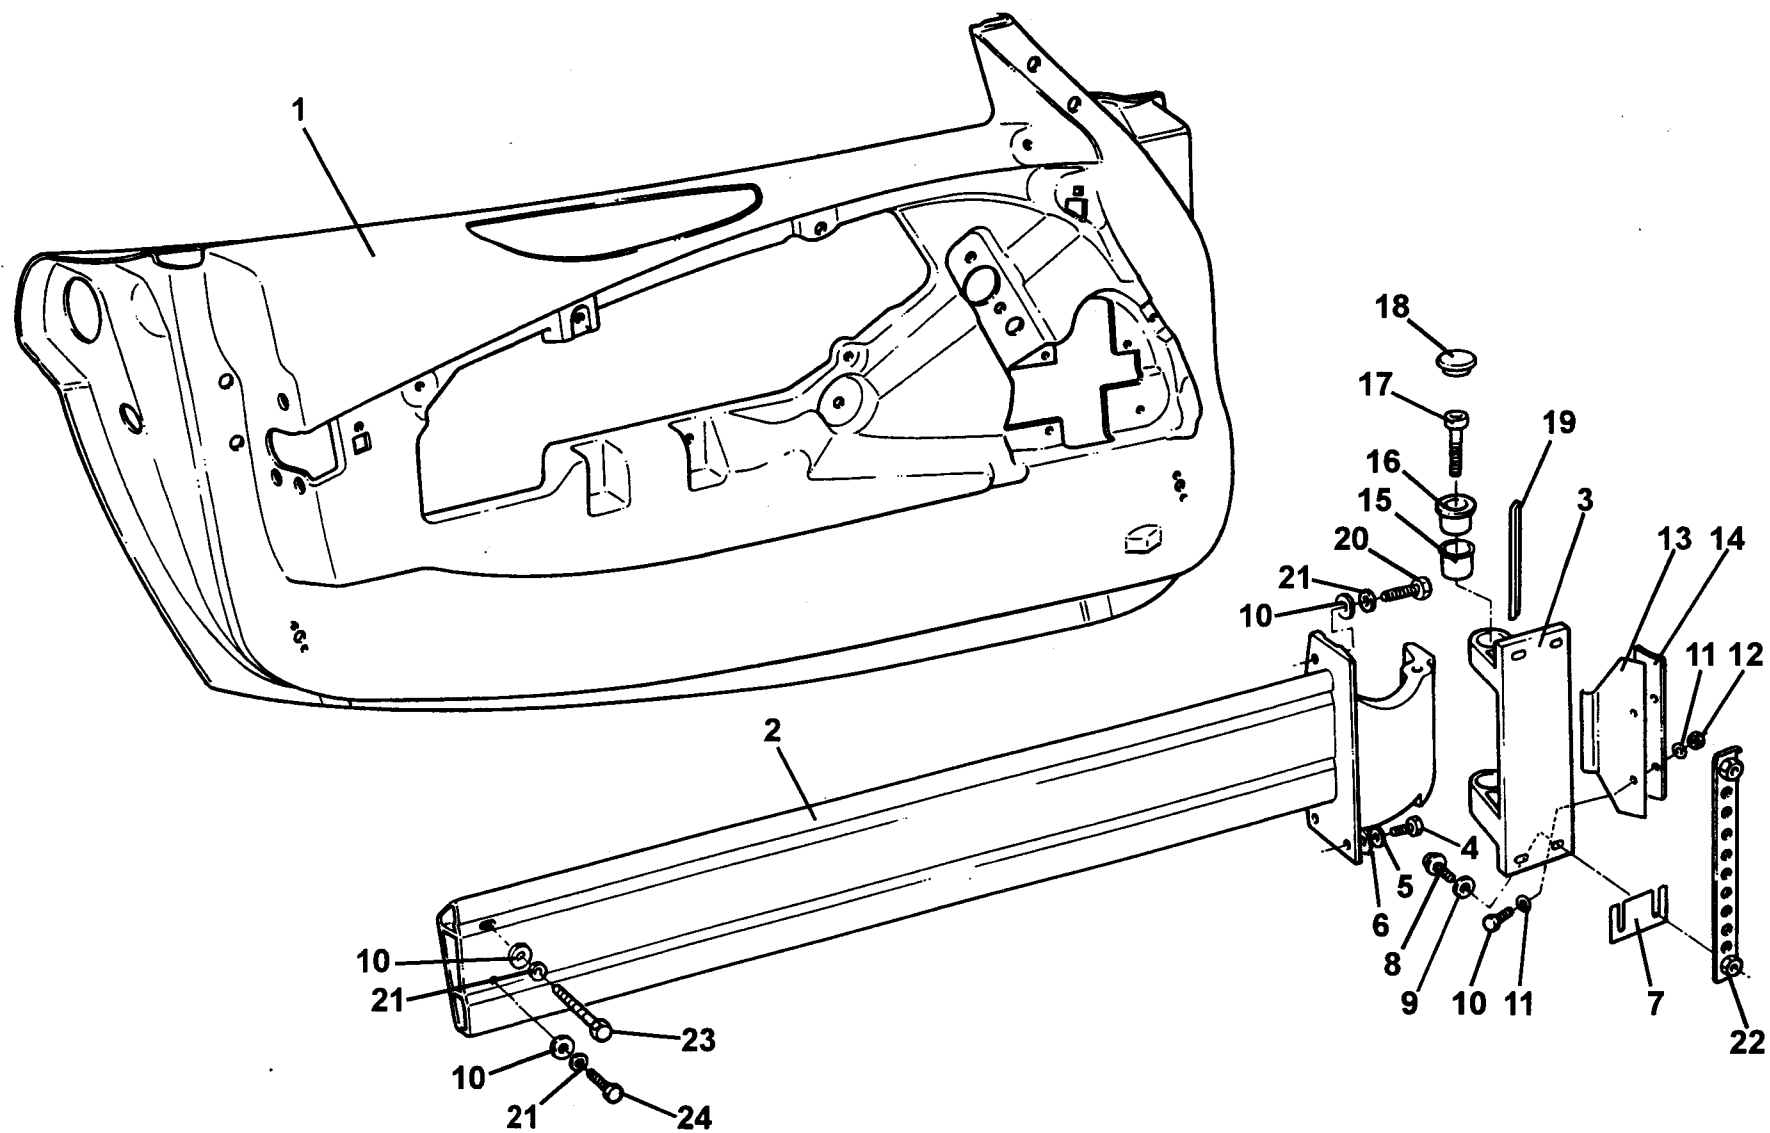


**ELISE**  
10.15



**Function Code 10.15 Door Shells, Beams, Hinges**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
14	Support Plate, door check spring			C111B0175F	2
15	Bearing, door hinge			A111U6025F	4
16	Bush, door hinge			A111U0057F	4
17	Screw, M10 x 30, cap hd.			A075W7030F	4
18	Dust Cap, door hinge			A111U6024F	2
19	Door Stop Buffer Strip			B111B0178K	2
20	Setscrew, M8 x 20, hex. hd., beam to door fix.			A075W1038Z	4
21	Washer, shakeproof, M8			A075W4048Z	10
22	Nutplate, door hinges	Fitted in chassis		A111U0056F	4
23	Bolt, M8 x 45, hex,hd.,beam to rear bracket, upper			A075W2040Z	2
24	Setscrew, M8 x 25, hex. hd., beam to rear bracket, lower			A075W1039Z	2

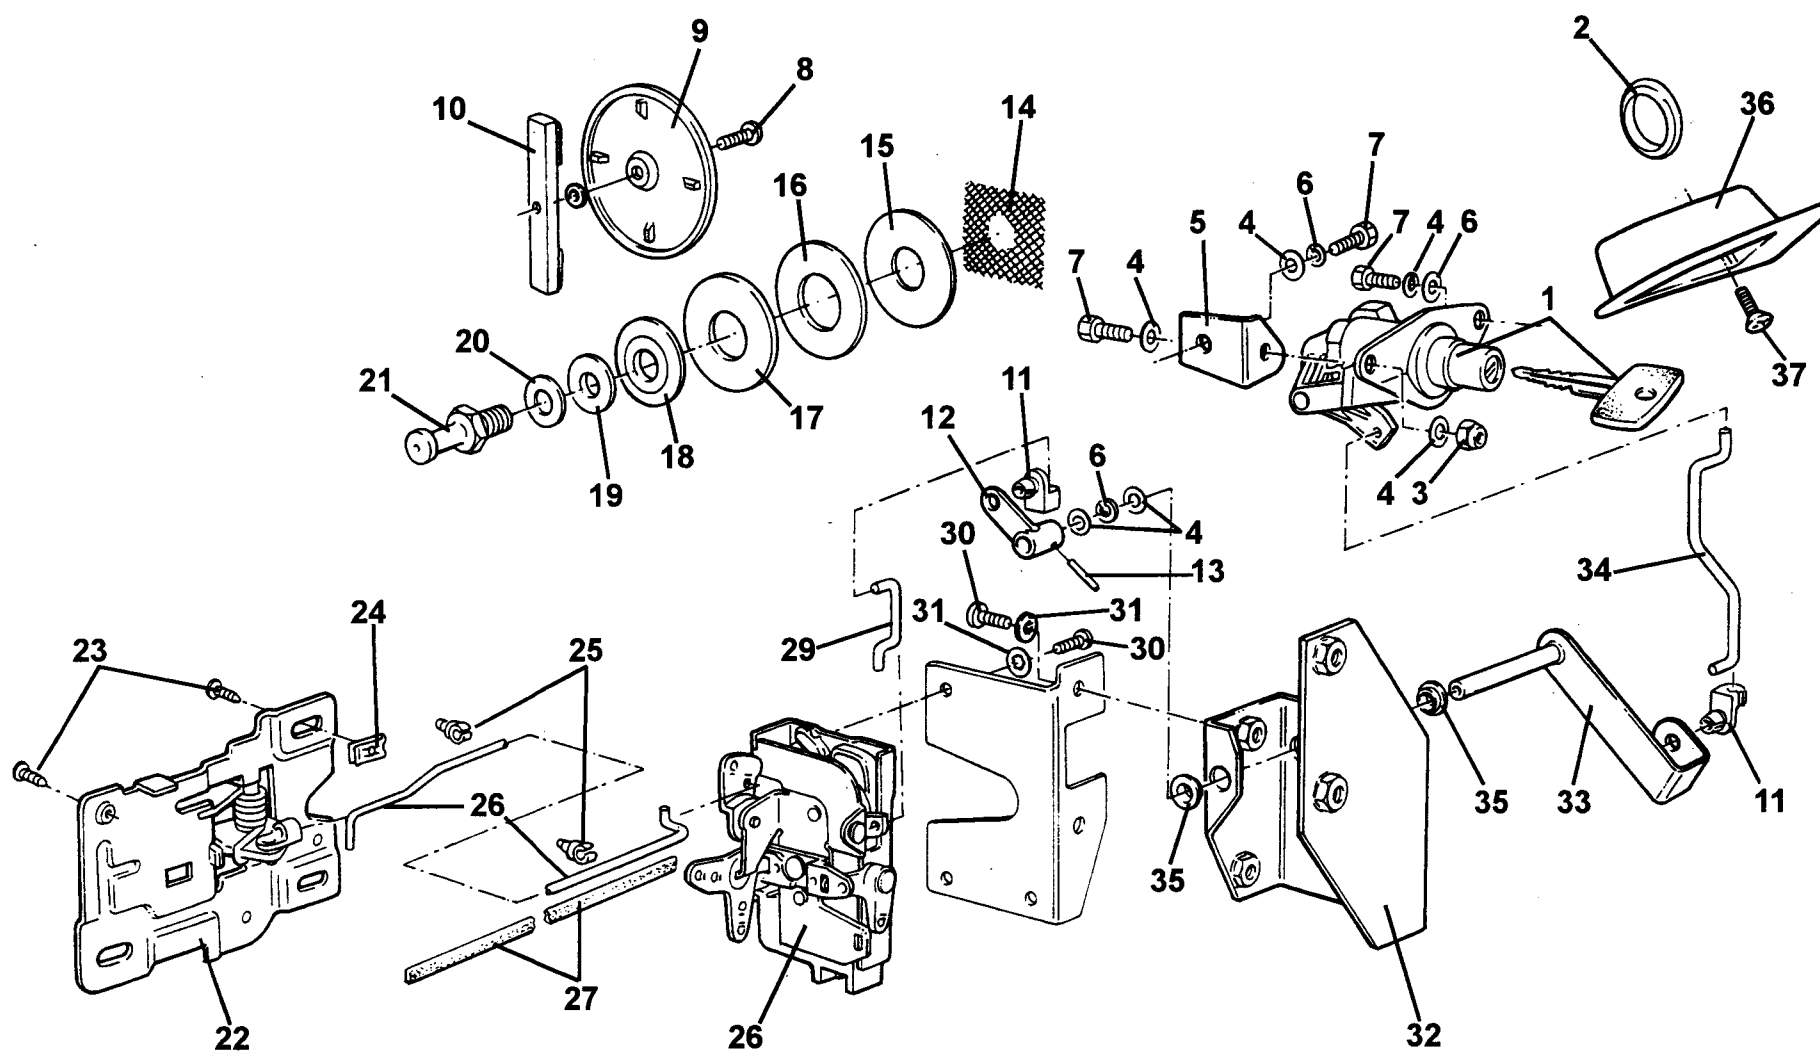

**ELISE**  
10.17

# Service Parts List **ELISE**




## Function Code 10.17 Door Latch Mechanism

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Vehicle Lock Set, door, boot, steering, fuel cap + 2 keys			B117H0001F	1
02	Blanking Grommet, linkage access hole			A082B6057F	2
03	Nut, nyloc, M6, support brkt fix			A082B6057F	2
04	Washer, flat, M6 x 12.1 x 1.4, support brkt fix			A075W4013Z	12
05	Support Bracket, release button, LH			A117U0001F	1
05a	Support Bracket, release button, RH			A117U0002F	1
06	Washer, wavy, 0.25", support brkt. fix.			A075W4087F	6
07	Setscrew, M6 x 16, support brkt. fix.			A075W1028Z	6
08	Screw, M5 x 10, pozi, cover plate fix			A111W5223F	2
09	Cover Plate, mechanism access hole			B111U0094K	2
09a	Reflector/Cover	Replaces cover plate: item 9		A117M6026F	2
10	Fixing Strap, cover plate			A111U0095K	2
11	Nylon Clip, linkage retention			A082U6267F	4
12	Lever, door latch release			A111U0122F	2
13	Roll Pin, door latch lever to spindle retention			A111U6560F	2
14	Shim, expanded stainless, door striker attachment			A111U0215F	2
15	Shim, 2mm, door striker pin			A111U0220F	2
16	Shim, 4mm, door striker pin			A111U0219F	2

**ELISE**

Function Code: 10.17, Page: 1

2001 / 01

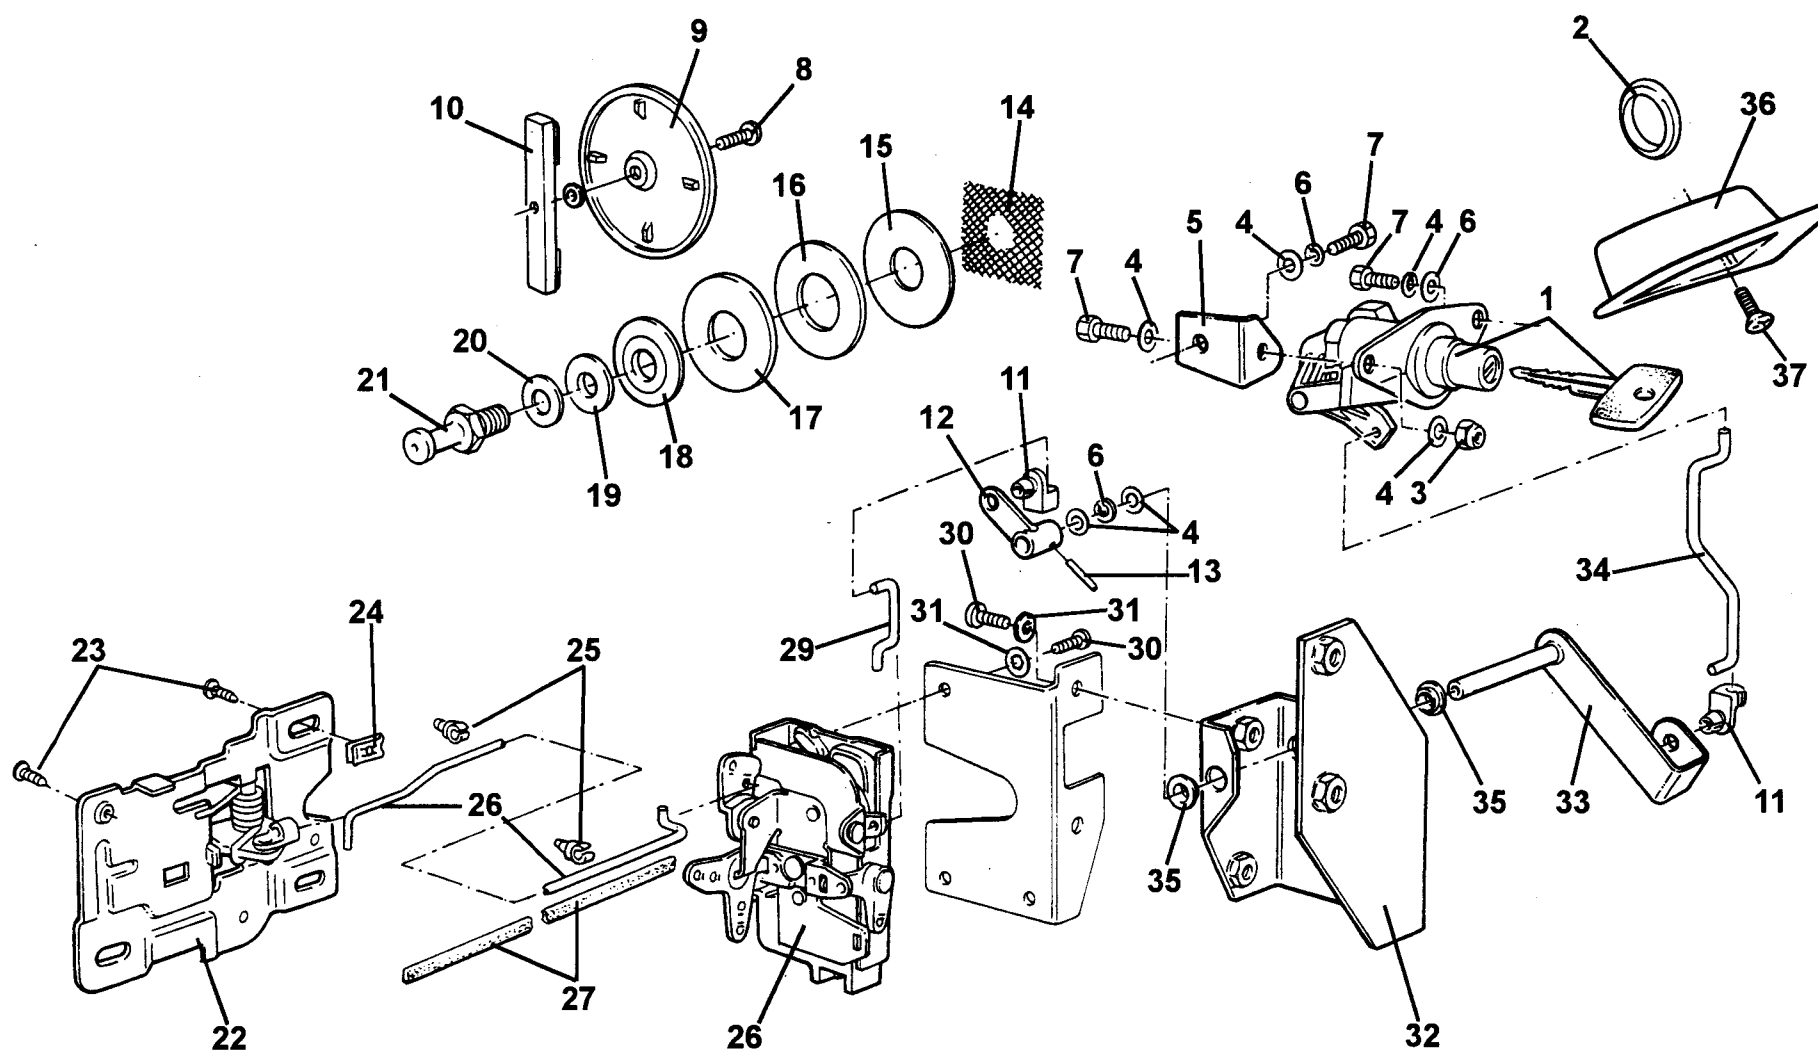

**ELISE**  
**10.17**

# Service Parts List **ELISE**




## Function Code 10.17 Door Latch Mechanism

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Vehicle Lock Set, door, boot, steering, fuel cap + 2 keys			B117H0001F	1
02	Blanking Grommet, linkage access hole			A082B6057F	2
03	Nut, nyloc, M6, support brkt fix			A082B6057F	2
04	Washer, flat, M6 x 12.1 x 1.4, support brkt fix			A075W4013Z	12
05	Support Bracket, release button, LH			A117U0001F	1
05a	Support Bracket, release button, RH			A117U0002F	1
06	Washer, wavy, 0.25", support brkt. fix.			A075W4087F	6
07	Setscrew, M6 x 16, support brkt. fix.			A075W1028Z	6
08	Screw, M5 x 10, pozi, cover plate fix			A111W5223F	2
09	Cover Plate, mechanism access hole			B111U0094K	2
09a	Reflector/Cover	Replaces cover plate: item 9		A117M6026F	2
10	Fixing Strap, cover plate			A111U0095K	2
11	Nylon Clip, linkage retention			A082U6267F	4
12	Lever, door latch release			A111U0122F	2
13	Roll Pin, door latch lever to spindle retention			A111U6560F	2
14	Shim, expanded stainless, door striker attachment			A111U0215F	2
15	Shim, 2mm, door striker pin			A111U0220F	2
16	Shim, 4mm, door striker pin			A111U0219F	2

**ELISE**

Function Code: 10.17, Page: 1


2001 / 01

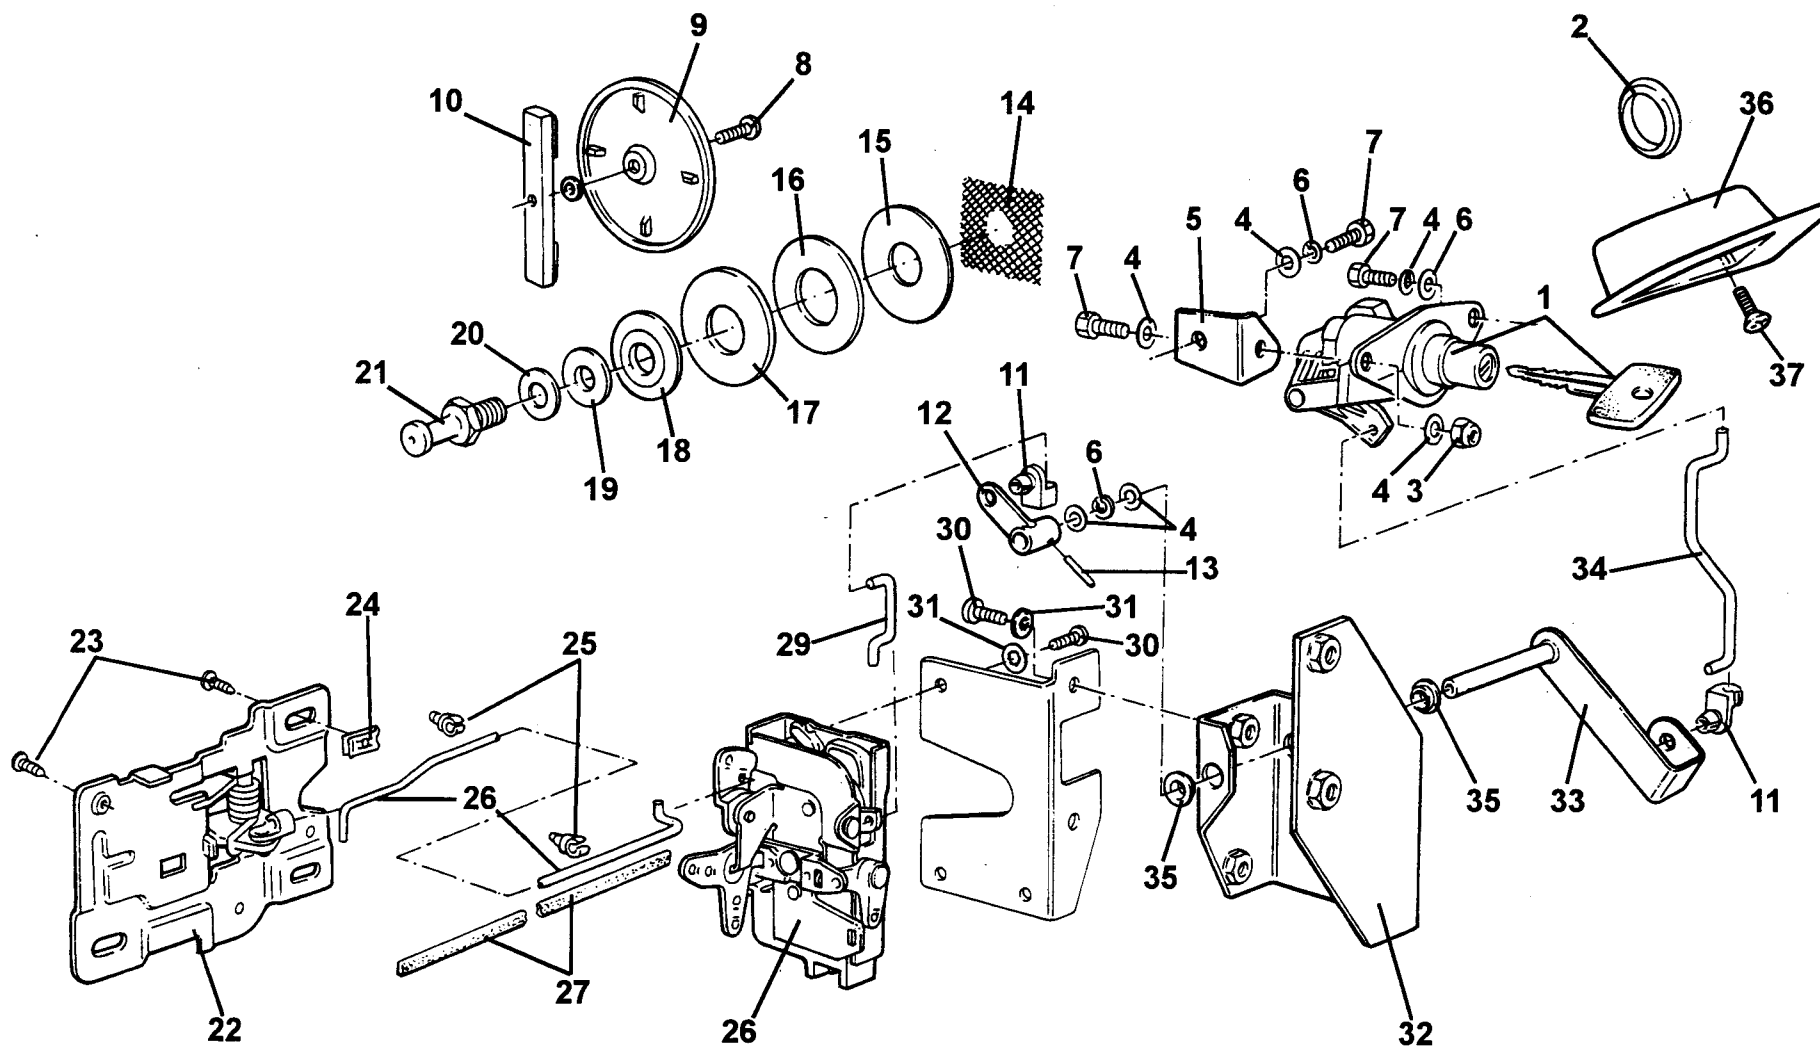

**ELISE**  
10.17

**Function Code 10.17 Door Latch Mechanism**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
17	Front Collar, door striker pin			A111U0138F	2
18	Finisher, door striker pin			A111U0137K	2
19	Washer, striker			A111U0136F	2
20	Washer, flat, M12 x 24 x 1.6, door striker pin			A075W4071F	2
21	Striker Pin, door latch			A111U6003F	2
22	Release, door latch, interior, LH			A111U6005F	1
22a	Release, door latch, interior, RH			A111U6004F	1
23	Screw, No. 8 x 3/4", pozi., door release fix.			A075W5074Z	6
24	Spire Nut, No 8 captive, door release fix.			A075W6016Z	4
25	Plastic Clip, interior release rod guide			A075J6027Z	4
26	Rod, interior release to latch, LH			B117U0137F	1
26a	Rod, interior release to latch, RH			B117U0138F	1
27	Foam Strip, 19 x 3mm			A082U6067F	As req.
28	Latch mechanism, LH			A111U0389S	1
28a	Latch mechanism, RH			A111U0388S	1
29	Rod, latch to lever assy.			A111U0134F	2
30	Screw, M6 x 12, pozi., door latch/ bracket fix.			A111W5214F	10
31	Washer, shakeproof, M6, door latch fix.			A075W4046Z	6
32	Bracket, door beam attachment, LH			A111U0069F	1
32a	Bracket, door beam attachment, RH			A111U0068F	1
33	Spindle/Lever, door latch release, LH			C111U0121F	1

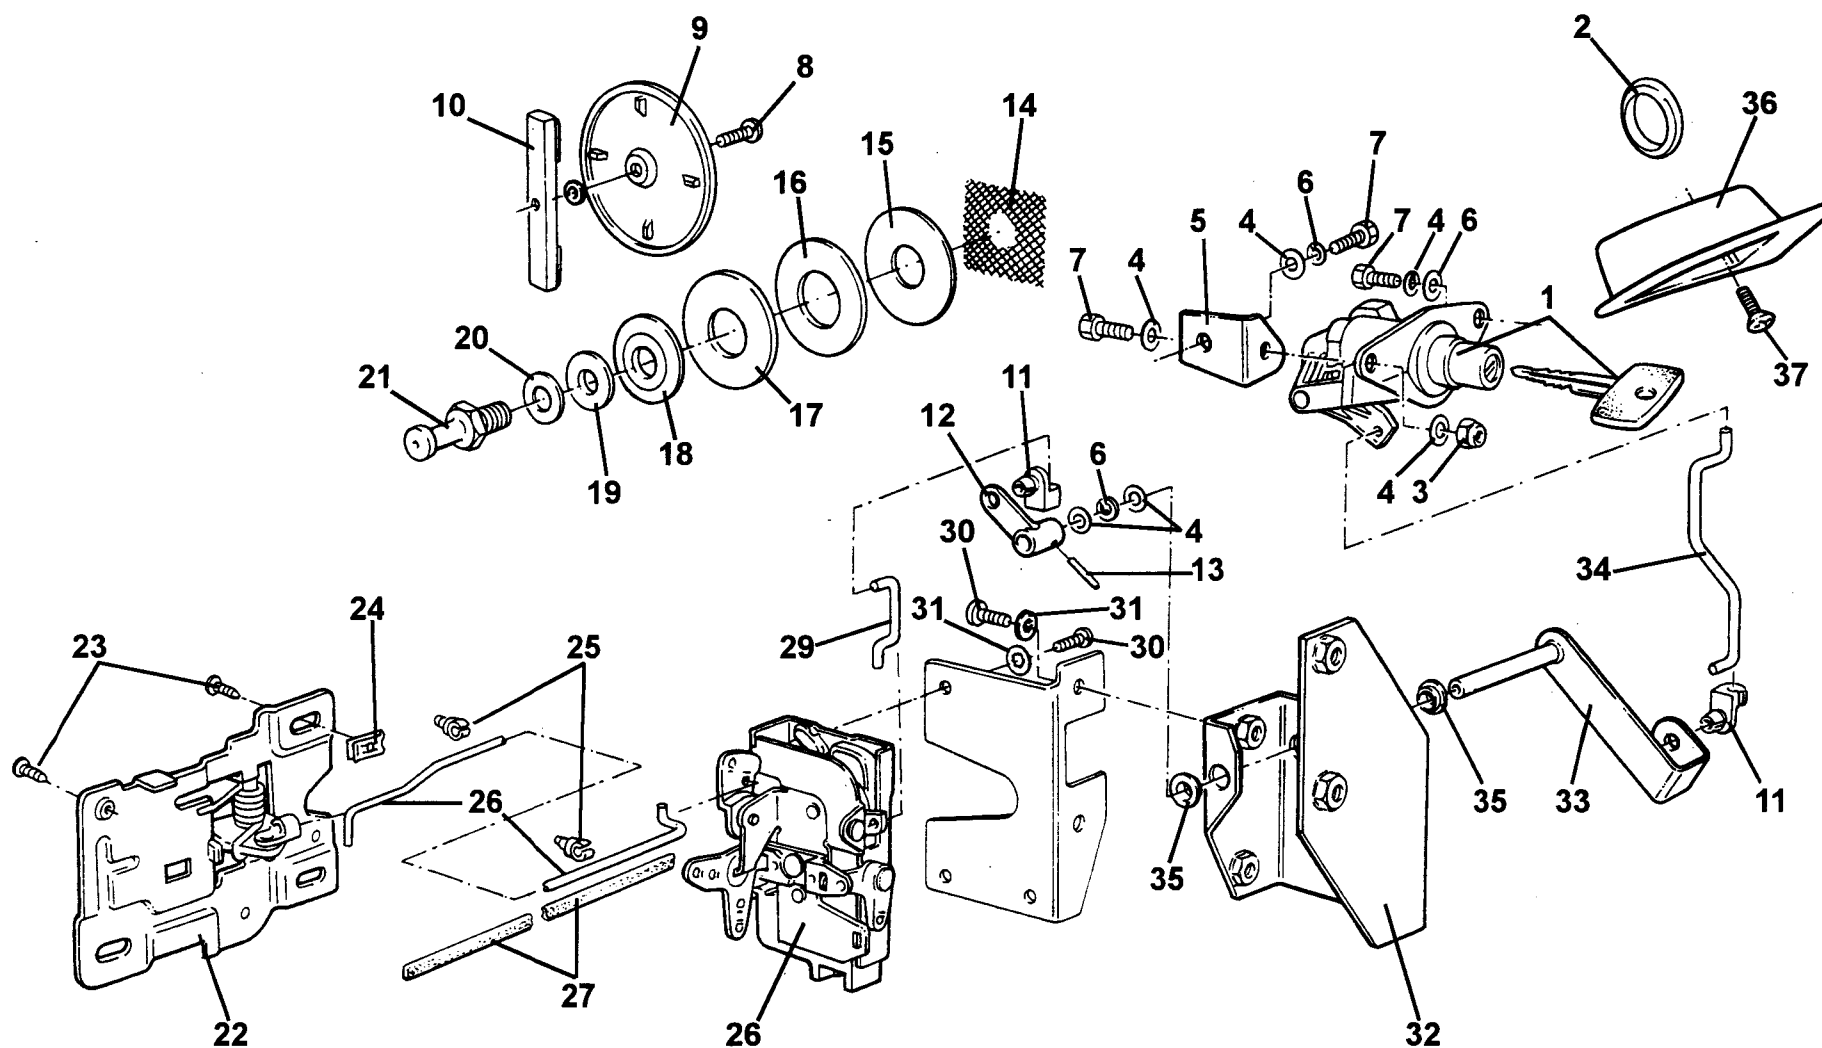


**ELISE**  
10.17



**Function Code 10.17 Door Latch Mechanism**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
33a	Spindle/Lever, door latch release, RH			C111U0120F	1
34	Rod, latch to release button			A117U0003F	2
35	Bush, lever/spindle assy.			A111U6018F	4
36	Door Pull, exterior, LH			C117B0135F	1
36a	Door Pull, exterior, RH			C117B0136F	1
37	Screw, M4 x 16, csk, pozi, exterior door pull fix.			A100W5033F	4

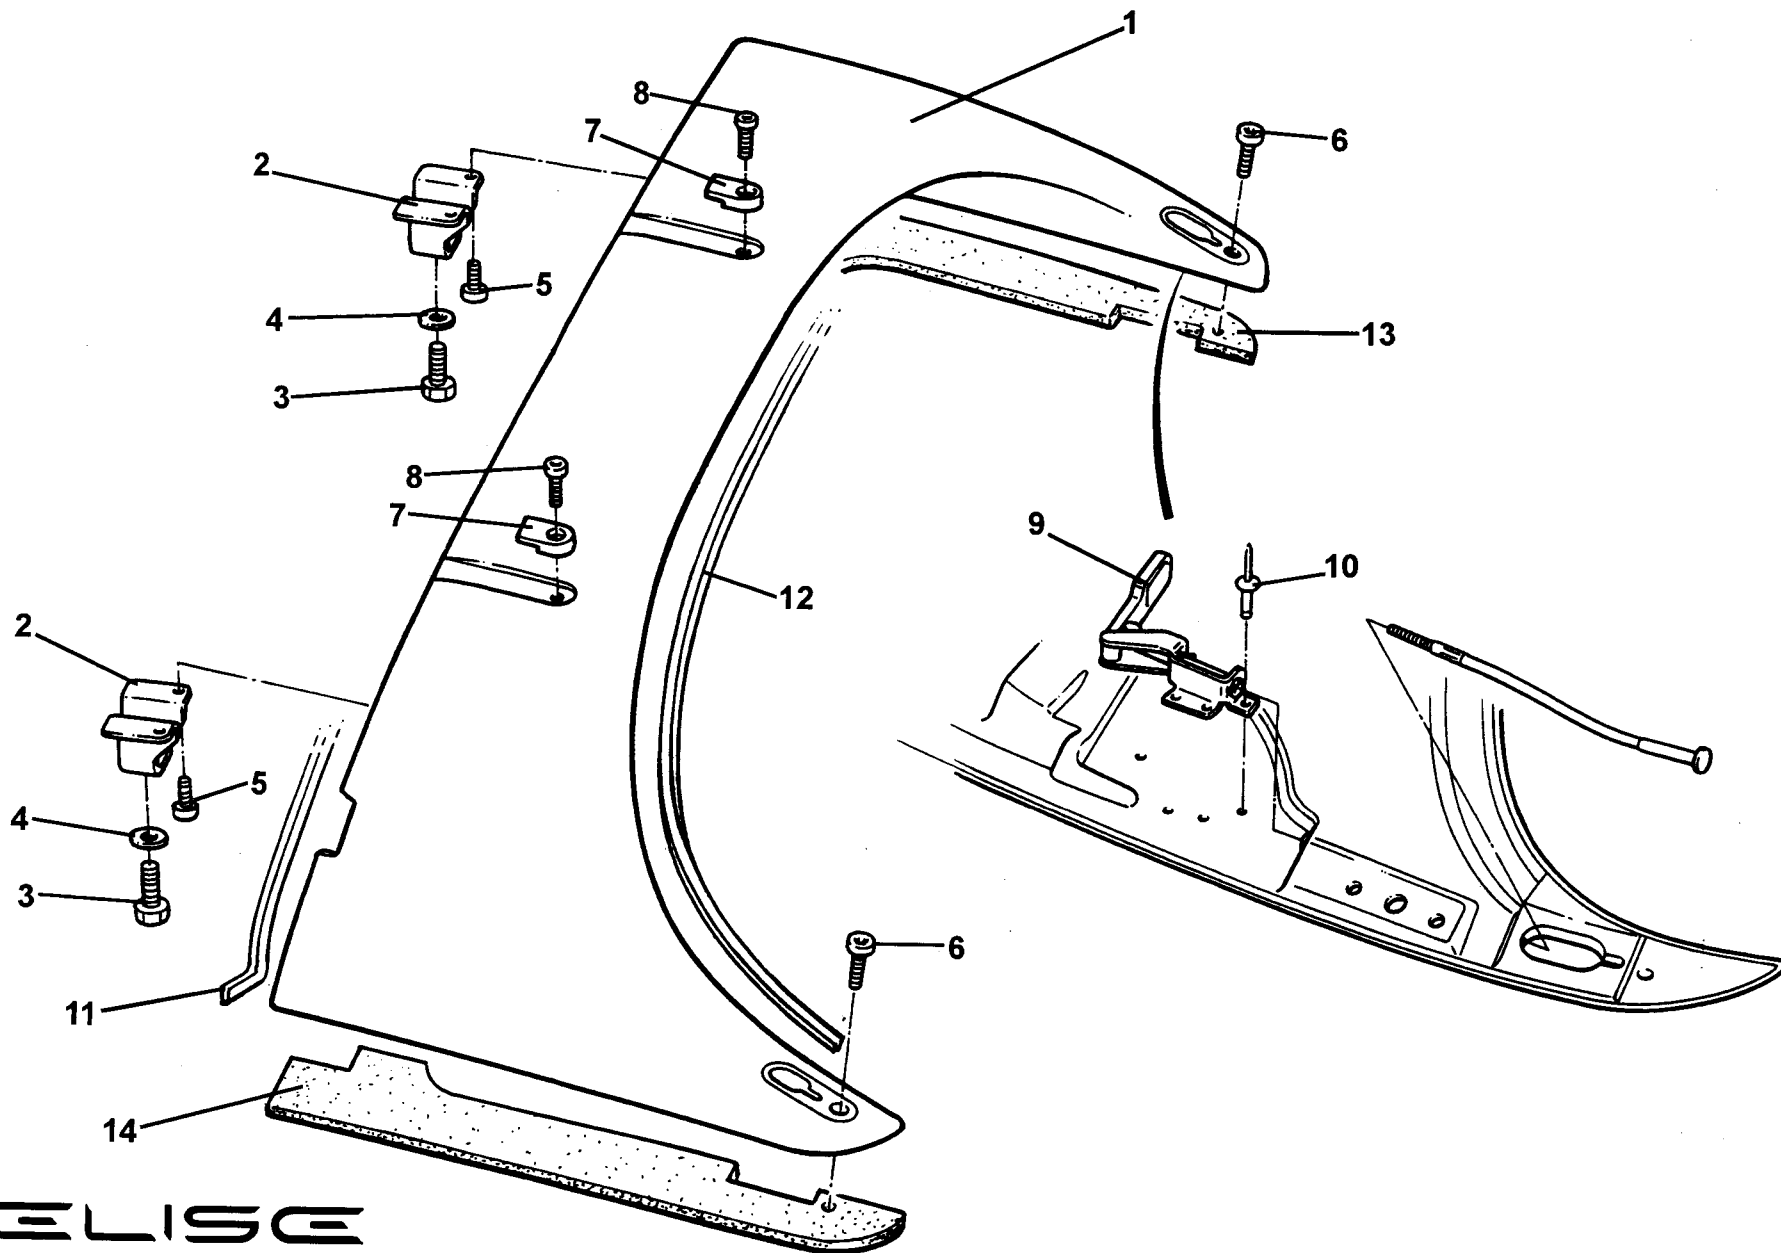


**ELISE**  
10.20

# Service Parts List **ELISE**



## Function Code 10.20 Rear Window Shroud & Fixings

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Rear Window Shroud Assembly	Includes all fittings etc.		B117B0088F	1
02	Bracket, shroud to bulkhead			A117B0091F	2
03	Screw, 0.5"UNF x 1.5", hex. hd., bracket to bulkhead			A075W1020Z	2
04	Washer, flat, M6 x 18 x 1, bracket to bulkhead			B082W4018F	2
05	Screw, M4 x 8, cap hd., bracket to shroud			A117B0208H	4
06	Screw, M6 x 25, cap hd., shroud to clamshell			A111W7170F	2
07	Keeper Plate, rear of hood stays			A117B0084F	2
08	Screw, M4 x 10, cap hd., keeper to shroud			A117B0207H	2
09	Tensioner Assembly, soft top tail, RH			A117B0206F	1
09a	Tensioner Assembly, soft top tail, LH			A117B0205F	1
10	Pop Rivet, lever assy. to shroud			A075W6070Z	6
11	Edge Finisher, front edge of shroud	Cut to fit		A111U6034V	As req.
12	Edge Finisher, rear edge of shroud	Cut to fit		A117B6010V	As req.
13	Foam Gasket, RH, shroud to clamshell			A117B	1
14	Foam Gasket, LH, shroud to clamshell			A117B	1

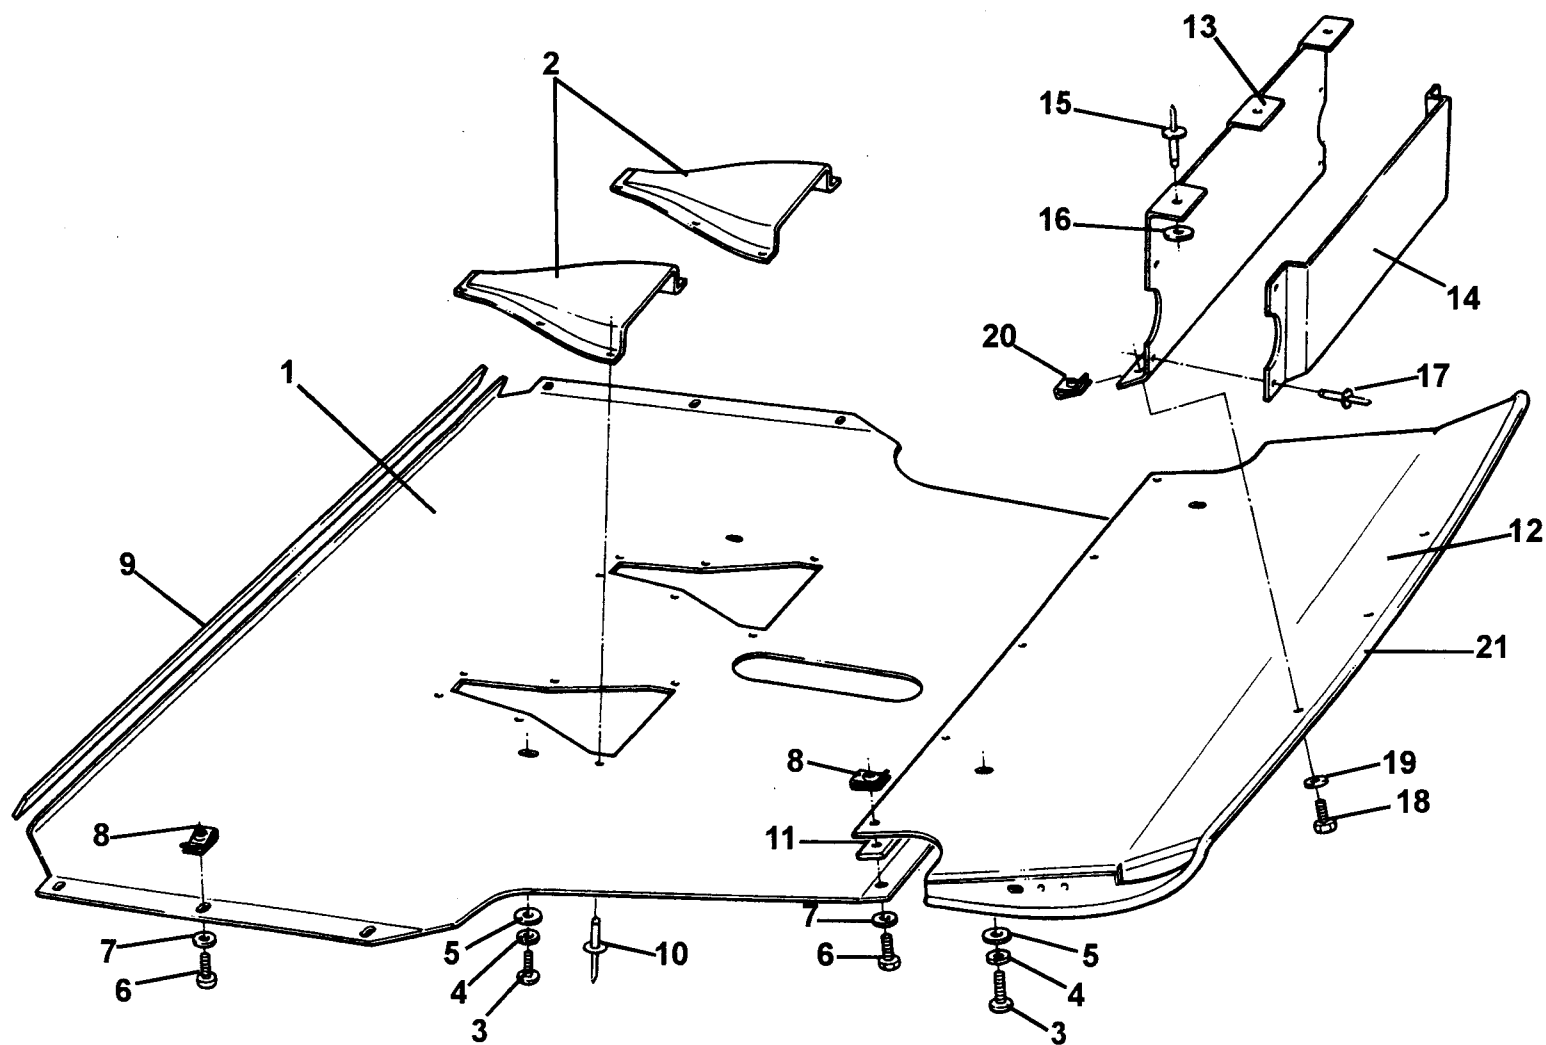

ELISE

10.25


# Service Parts List **ELISE**



## Function Code 10.25 Undertray & Diffuser

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Undertray	Without NACA ducts		A117A0036F	1
01a	Undertray Assembly	With NACA ducts		A117A0056J	1
02	NACA Duct	Part of item 1		A111A0218K	2
03	Screw, M8 x 25, button hd.			A111W7175F	4
04	Washer, spring, M8			A075W4036Z	4
05	Washer, flat, M8 x 25 x 1.4 mm			A075W4021Z	4
06	Screw, M5 x 16, hex. hd.			A111W1163F	11
07	Washer, flat, M5 x 25 mm x 1.4			A082W4098F	11
08	Spire Nut, M5			B100W6372F	11
09	Foam Strip, self adhesive, 10mm x 6mm			A100B0431V	As req.
10	Pop Rivet, NACA duct fix.			A075W6065Z	12
11	Foam Strip, self adhesive, 19mm x 3mm			A082U6067F	3
12	Diffuser			A117A0102J	1
13	Support Plate, diffuser			A117B0270F	1
14	Panel, license plate mounting			A117B0271F	1
15	Pop Rivet, plate to clamshell			A089W6397F	3
16	Washer, flat, 3/16" x 0.75"			B075W4009Z	3
17	Pop Rivet, domed. black, license plate panel to plate			A082W6512F	3

**ELISE**

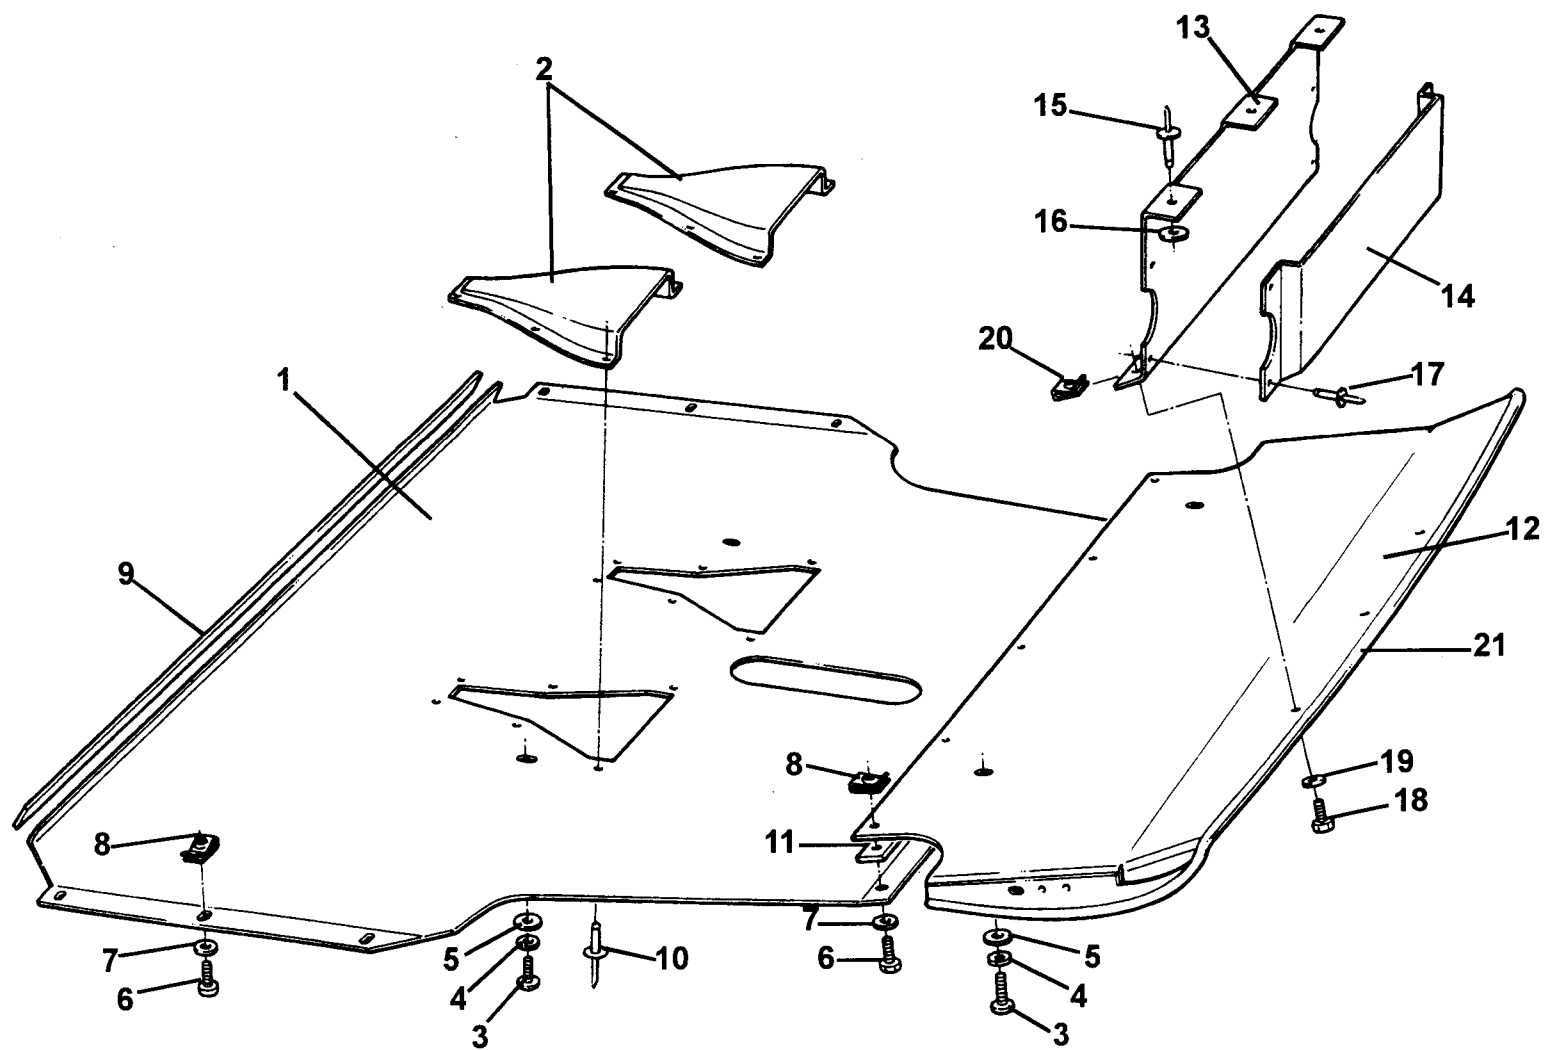


**ELISE**  
10.25

---

**Function Code 10.25 Undertray & Diffuser**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
18	Screw, M5 x 16, hex. hd. SS, diffuser to plate			A111W1163F	3
19	Washer, flat, 3/16 x 0.75, SS			B075W4009Z	3
20	Spirenut, M5			B100W6372F	3
21	Edging Strip. diffuser			A117A0050V	As req.

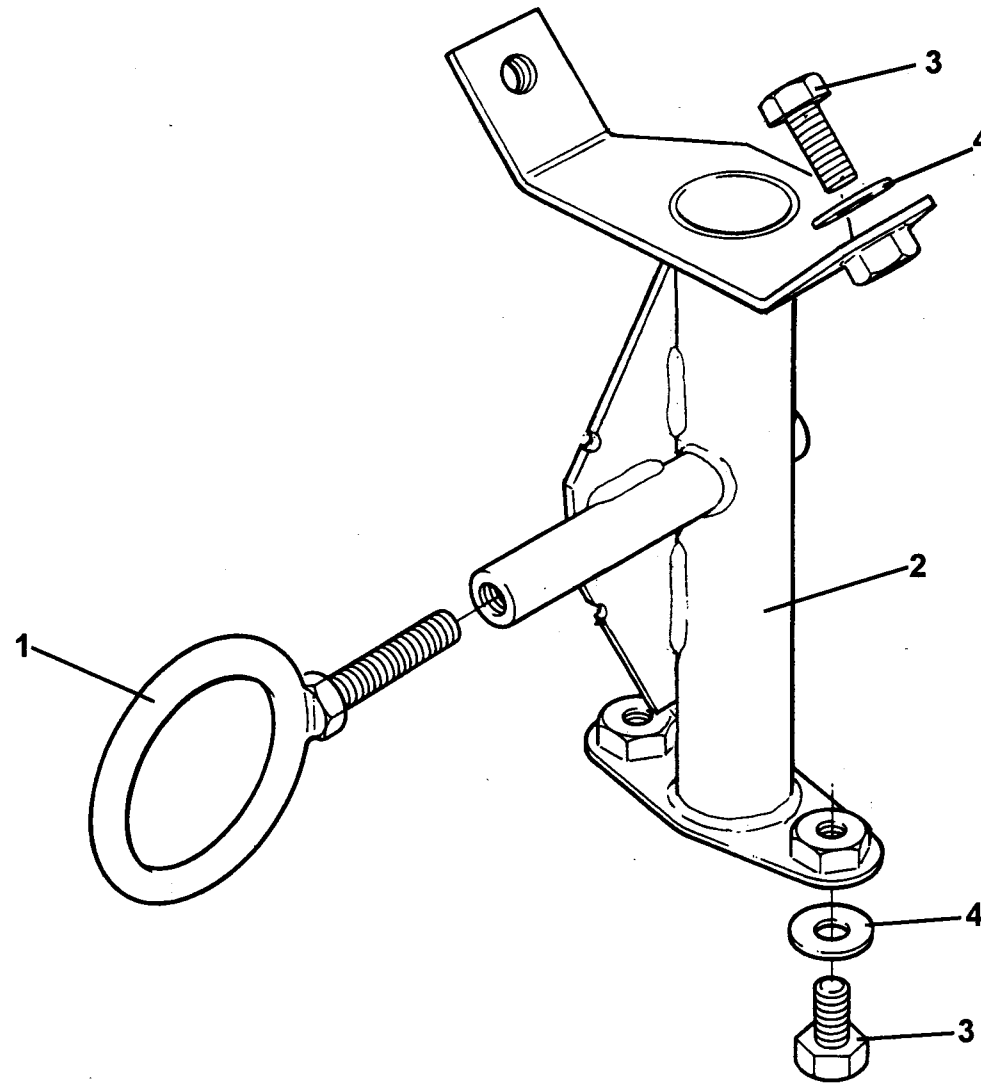

**ELISE**  
10.31




# Service Parts List **ELISE**



## Function Code 10.31 Towing Strut/ Hook

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Towing Eye			A111B6087F	1
02	Mounting Strut, towing eye			A117B0160F	1
03	Setscrew, M8 x 16, hex. hd., grade 8.8 Zn			A075W1036Z	4
04	Washer, flat, M8 x 1.4 Zn			A075W4021Z	4

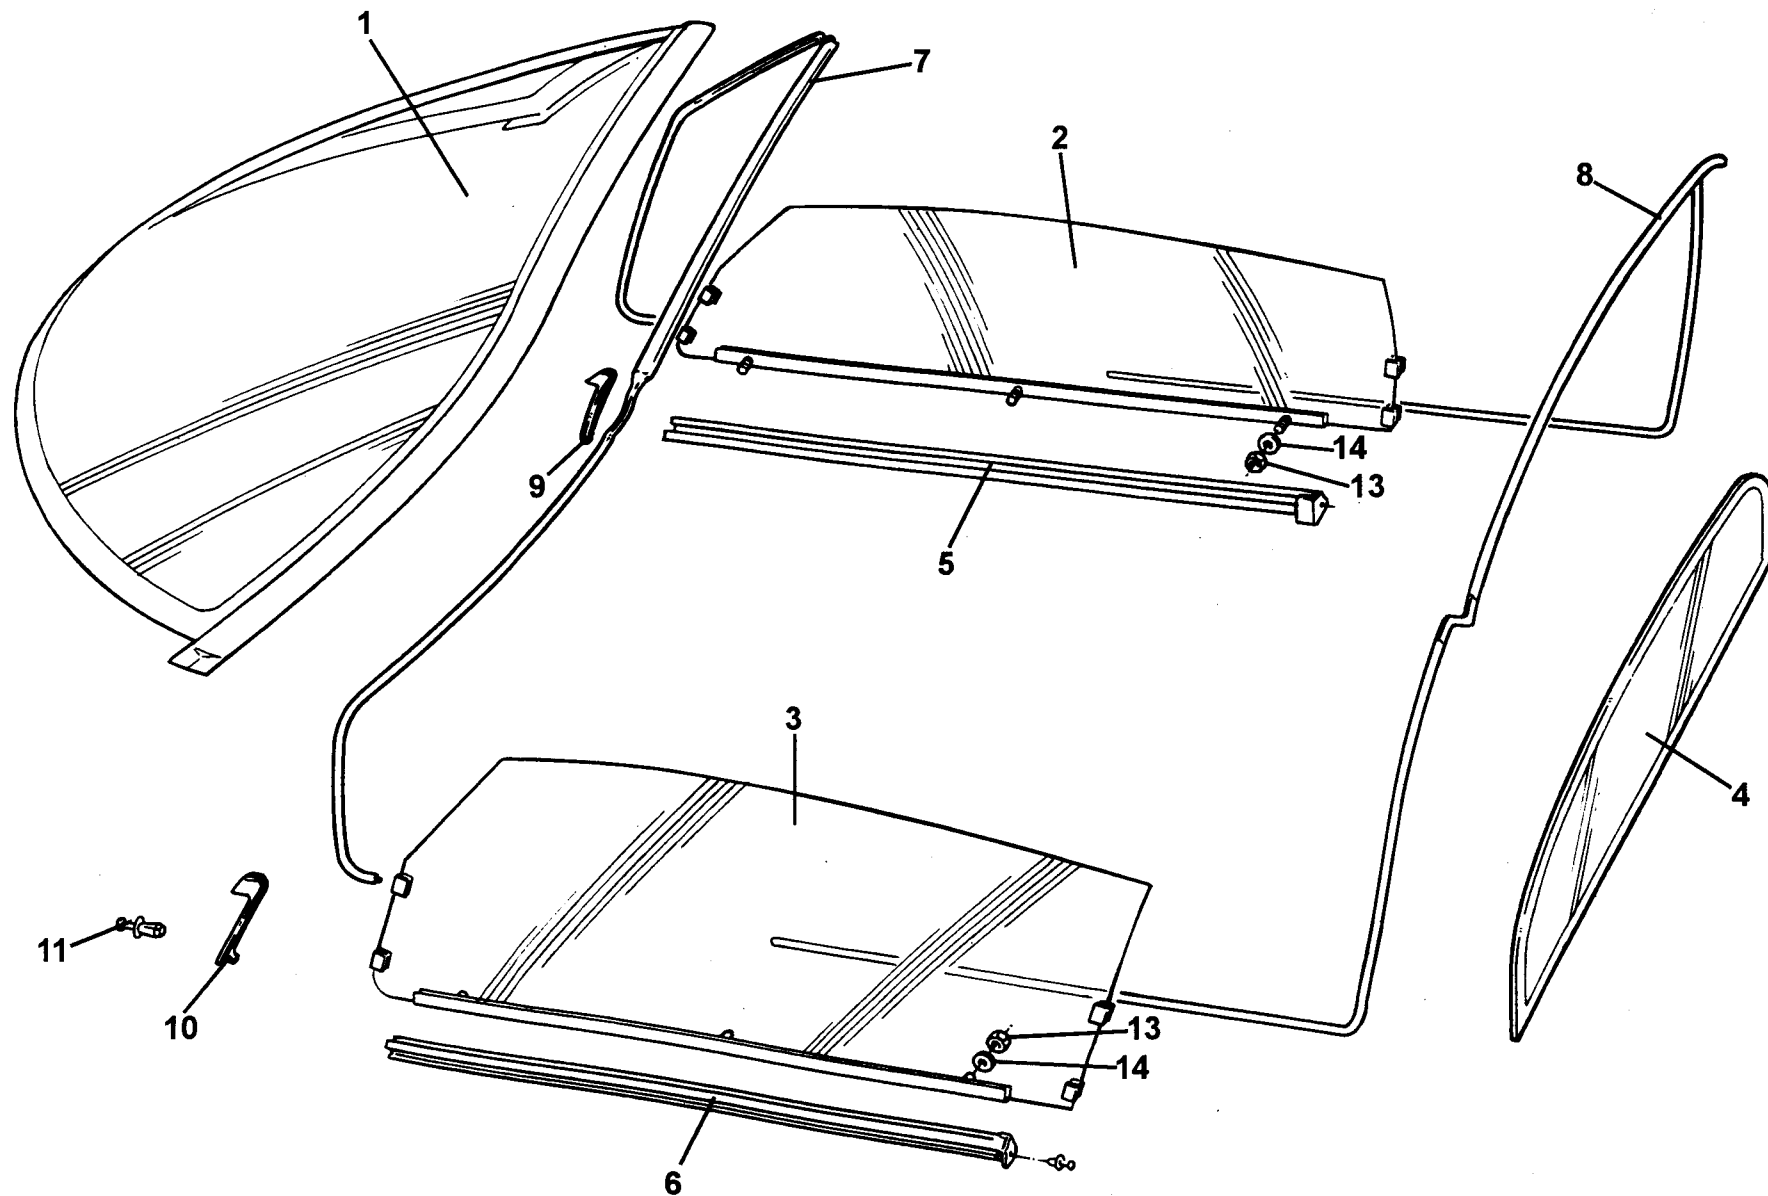


**ELISE**  
11.01

# Service Parts List **ELISE**



## Function Code 11.01 Windscreen, Door Glass, Seals & Weather Strips

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Windscreen & Finisher Assembly			A117B0094F	1
02	Door Glass Assembly, RH			B116B0186F	1
03	Door Glass Assembly, LH			B116B0185F	1
04	Rear Window, glass	Bonded to bulkhead		A117B0138F	1
05	Seal Assembly, door waist, RH	Includes plastic fastener		A117U0010F	1
06	Seal Assembly, door waist, LH	Includes plastic fastener		A117U0009F	1
07	Front Door/Roof Seal Assembly			A117B0239F	1
08	Rear Door/Roof Seal Assembly			A117B0201F	1
09	Door Cheater Seal, RH			A117U0134F	1
10	Door Cheater Seal, LH			A117U0133F	1
11	Plastic Fastener, cheater seal fix.			A079W6195F	2

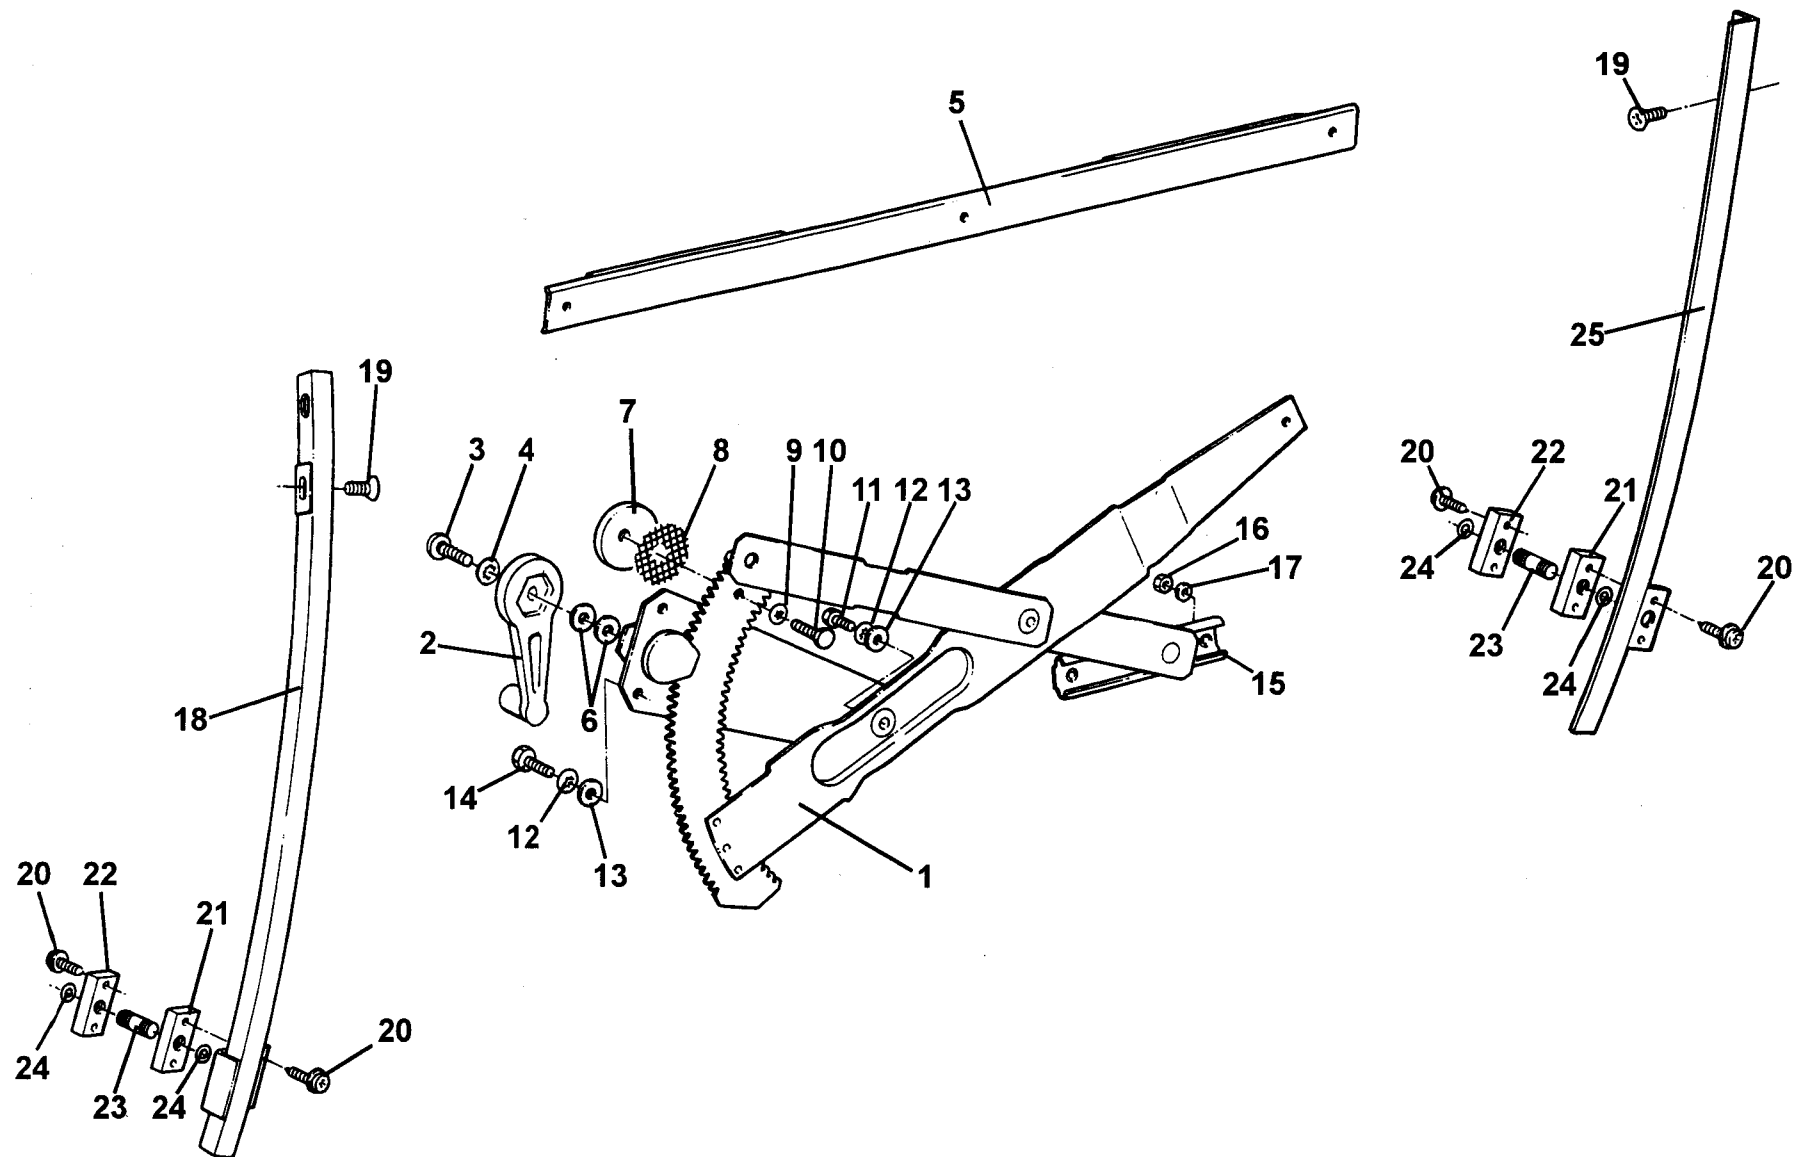

**ELISE**  
11.02

# Service Parts List **ELISE**




## Function Code 11.02 Door Window Lift Mechanism

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Window Regulator, RH			C111U0082K	1
01a	Window Regulator, LH			C111U0083K	1
02	Window Winder Handle, alloy brushed/polished	Includes fixings	Standard & Race Tech	B117U0057F	2
02a	Window Winder Handle, alloy polished	Includes fixings	Sports Tourer	A117U0220F	2
03	Screw, M5 x 12, button. skt. hd., regulator handle fix,	Supplied with handle		A111W7138F	2
04	Washer, shakeproof, M5, regulator handle fix,	Supplied with handle		A075W4045Z	2
05	Glass Carrier Channel			B116U0130F	2
06	Spacer, window regulator handle			A082W4109F	4
07	Eccentric Stop			B111U0084F	2
08	Mesh Washer, eccentric stop			A111U0251F	1
09	Washer, shakeproof			A075W4046Z	2
10	Setscrew, eccentric stop fix.			A100W1055F	2
11	Setscrew, regulator fix			A075W1028Z	2
12	Washer, spring, M6			A075W4035Z	6
13	Washer, flat,,M6			B082W4018F	6
14	Setscrew M6, regulator fix			A075W1027Z	4
15	Guide Channel, window regulator			A111U6011F	1
16	Nyloc Nut, M5			A075W3113F	4

**ELISE**

2001 / 01


Function Code: 11.02, Page: 1

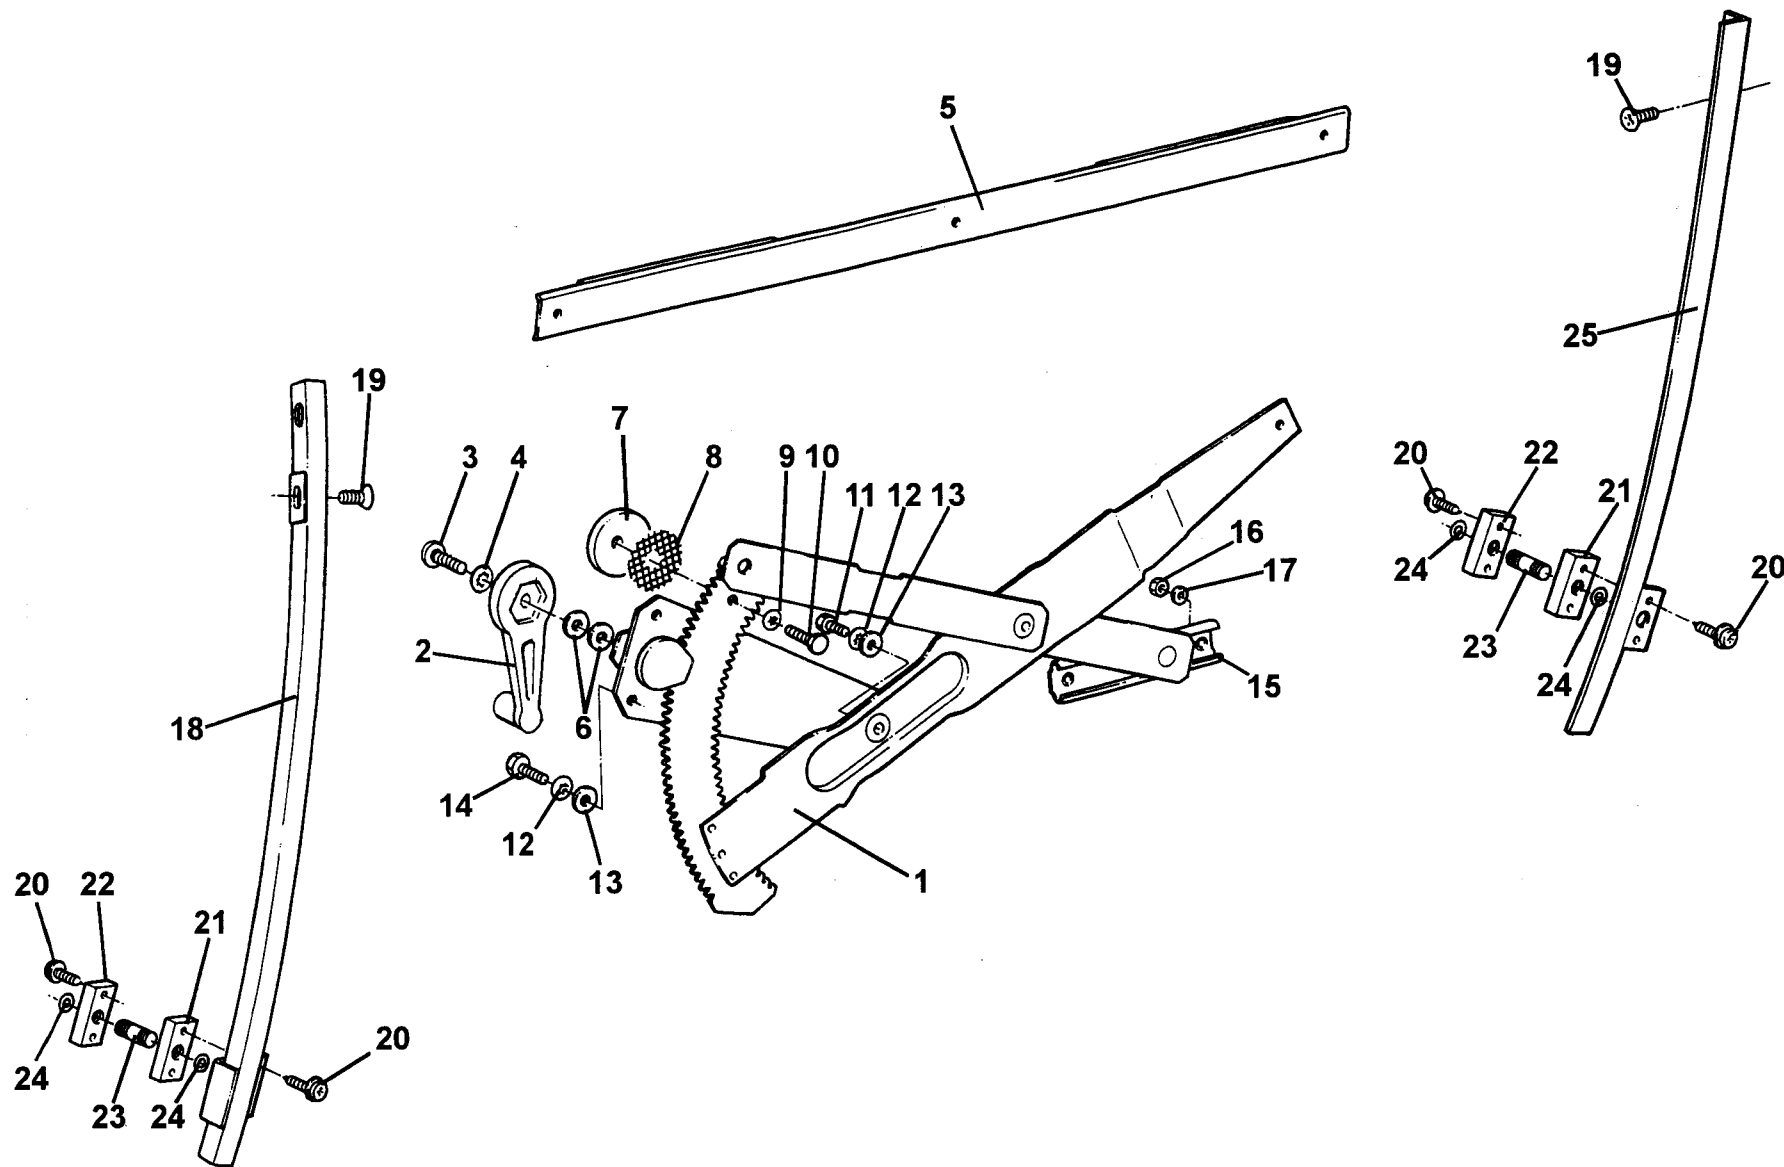

**ELISE**  
11.02

**Function Code 11.02 Door Window Lift Mechanism**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
17	Washer, flat M5			A075W4000Z	4
18	Guide Rail, door glass, front, LH			C116U0007F	1
18a	Guide Rail, door glass, front, RH			C116U0006F	1
19	Screw, M5 x 12, csk. pozi., rail to door	Black finish		A100W5196F	4
20	Screw, No,8 x 0.75", flg. pozi, hd., block fixing			A075W5074Z	16
21	Adjuster Block, guide rail LH thread			A116U0020F	4
22	Adjuster Block, guide rail RH thread			A116U0021F	4
23	Stud, rail adjusting			A116U0022F	4
24	'O' Ring			A116U0023F	8
25	Guide Rail, door glass, rear, LH			C116U0005F	1
25a	Guide Rail, door glass, rear, RH			C116U0004F	1

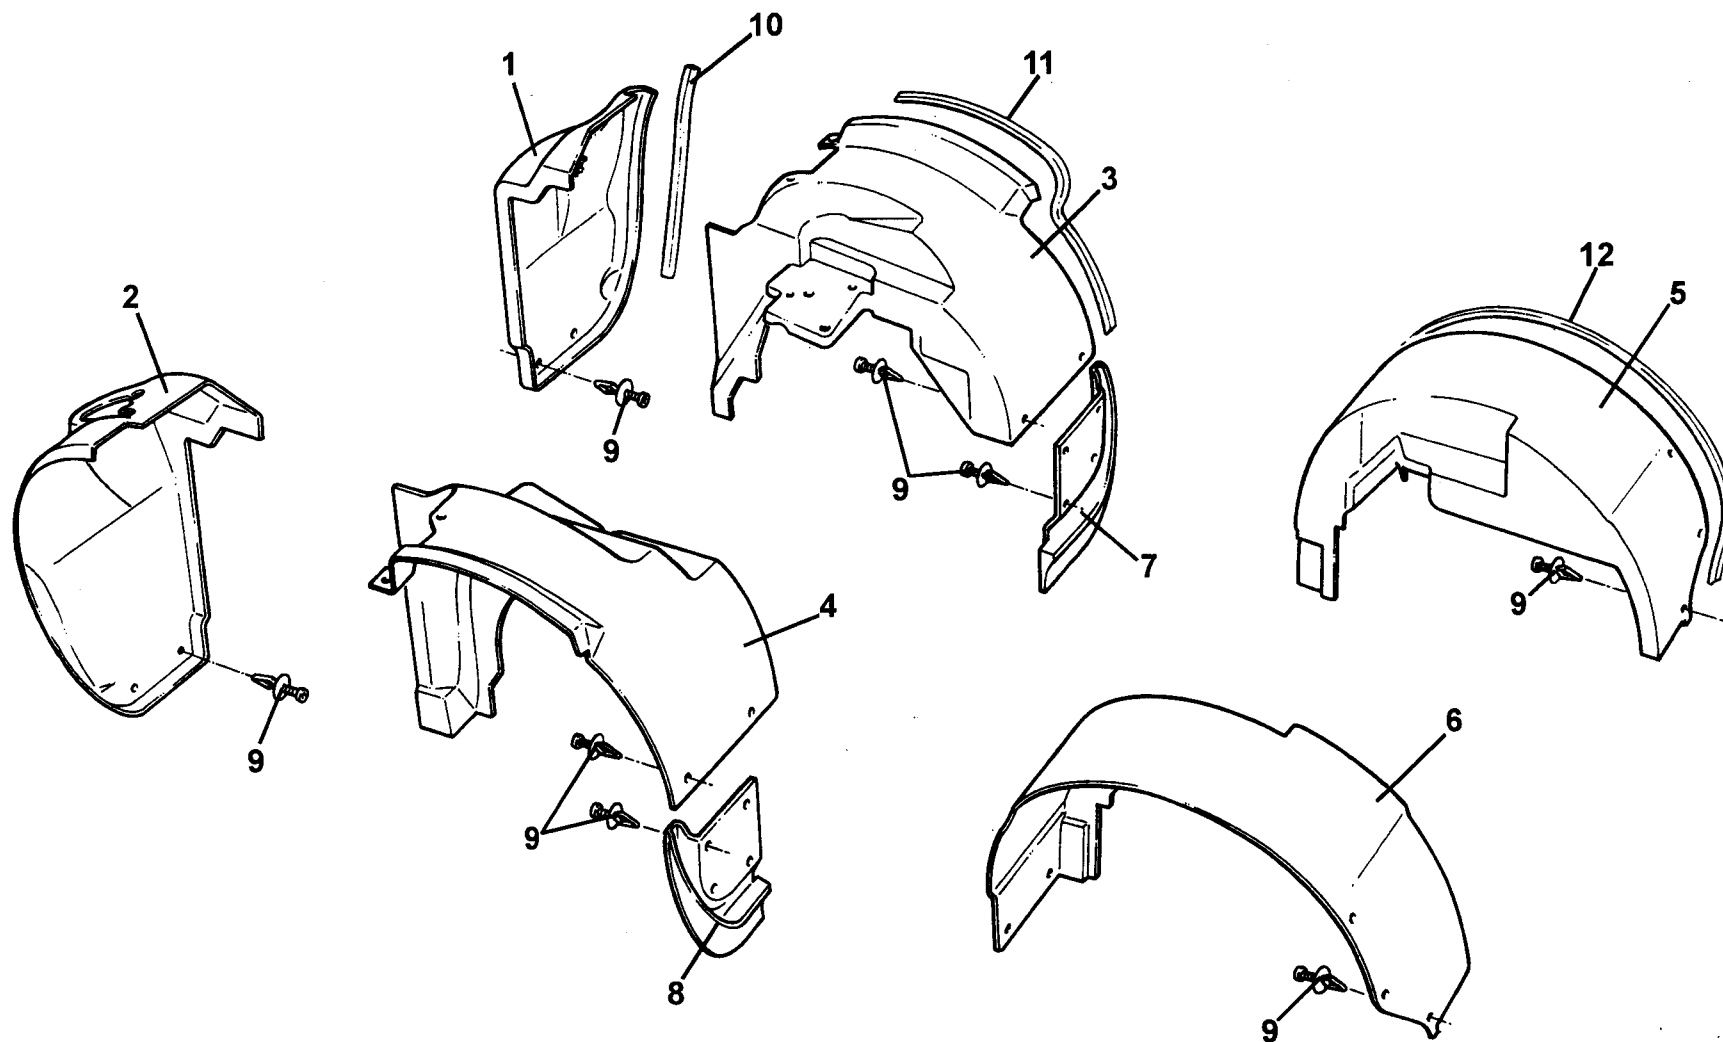

**ELISE**  
**12.01**




# Service Parts List **ELISE**



## Function Code 12.01 Wheelarch Liners

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Access Panel, front wheelarch, RH			A117B0190F	1
02	Access Panel, front wheelarch, LH			A117B0191F	1
03	Wheelarch Liner, front, RH			A117B0150F	1
04	Wheelarch Liner, front, LH			A117B0149F	1
05	Wheelarch Liner, rear, RH			A117B0148F	1
06	Wheelarch Liner, rear, LH			A117B0147F	1
07	Mudflap, front, RH			A117B0172F	1
08	Mudflap, front, LH			A117B0171F	1
09	Plastic Fastener, liners/mudflaps retention			A100W6391F	26
10	Weatherseal, front access panel	Cut to fit		A089U6056F	As req.
11	Weatherseal, front liner	Cut to fit		A089U6056F	As req.
12	Weatherseal, rear liner	Cut to fit		A089U6056F	As req.

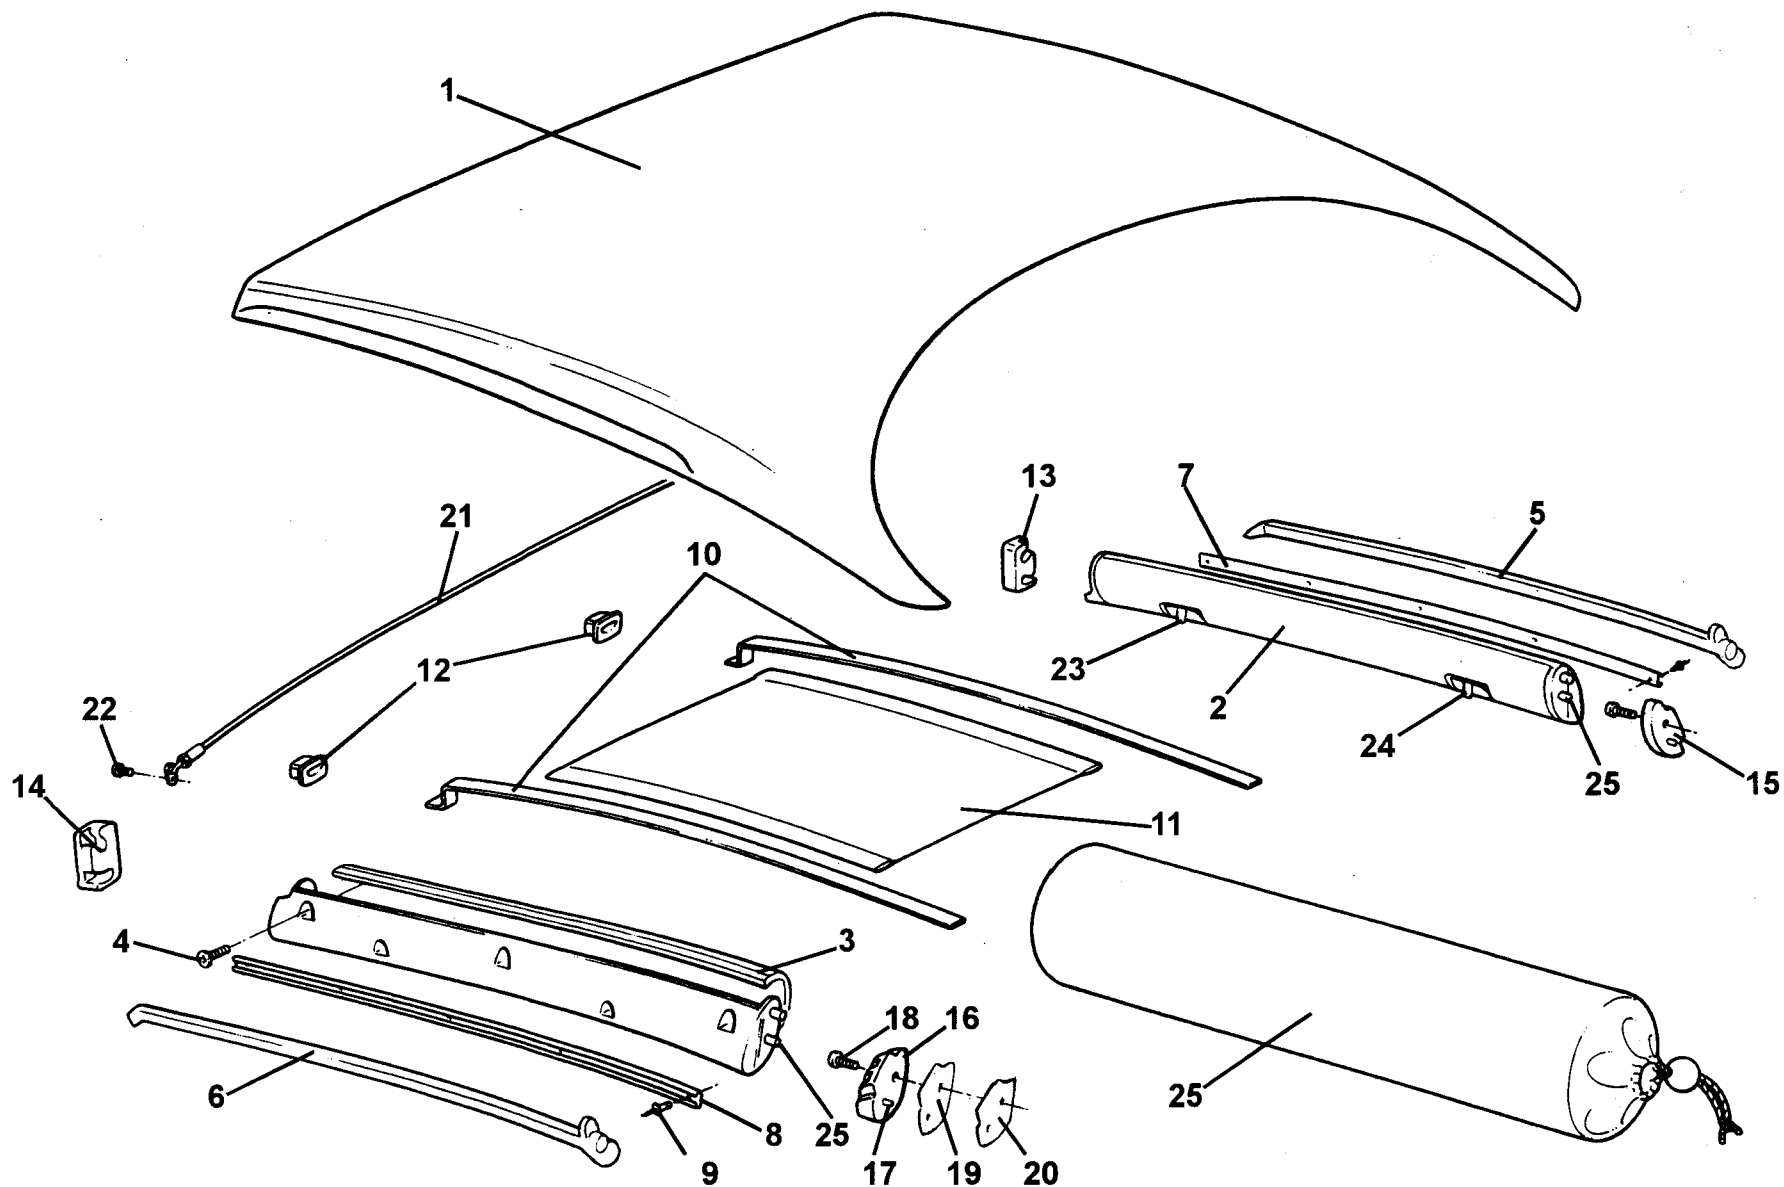

**ELISE**  
12.02

# Service Parts List **ELISE**




## Function Code 12.02 Soft Top Roof, Cant Rails & Hood Bows

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Soft Top Roof Assembly	Includes cant rail assemblies, stays & diaphragm	Black	B117B0074F	1
01a	Soft Top Roof Assembly	Includes cant rail assemblies, stays & diaphragm	Blue	B117B0272F	1
01b	Soft Top Roof Assembly	Includes cant rail assemblies, stays & diaphragm	Red	B117B0274F	1
01c	Soft Top Roof Assembly	Includes cant rail assemblies, stays & diaphragm	Green	B117B0273F	1
02	Trim Panel, cant rail, RH			B116V0004H	1
03	Trim Panel, cant rail, LH			B116V0003H	1
04	Screw, No. 12 x 0.5" trim panel to cant rail			A116V0083H	10
05	Weatherseal, RH			A116V0092H	1
06	Weatherseal, LH			A116V0091H	1
07	Seal Carrier, RH			B116V0088H	1
08	Seal Carrier, LH			B116V0089H	1
09	Pop Rivet, seal carrier to cant rail			A116V0090H	12
10	Stay, soft top supporting			B117B0081F	2
11	Diaphragm, soft top supporting			A117B0309H	1
12	Pocket, stay to header rail	Bonded to windscreen frame		A116B0184F	2
13	Latch Plate, front, RH	Bonded to windscreen frame		A116B0002F	1

**ELISE**

2001 / 01


Function Code: 12.02, Page: 1

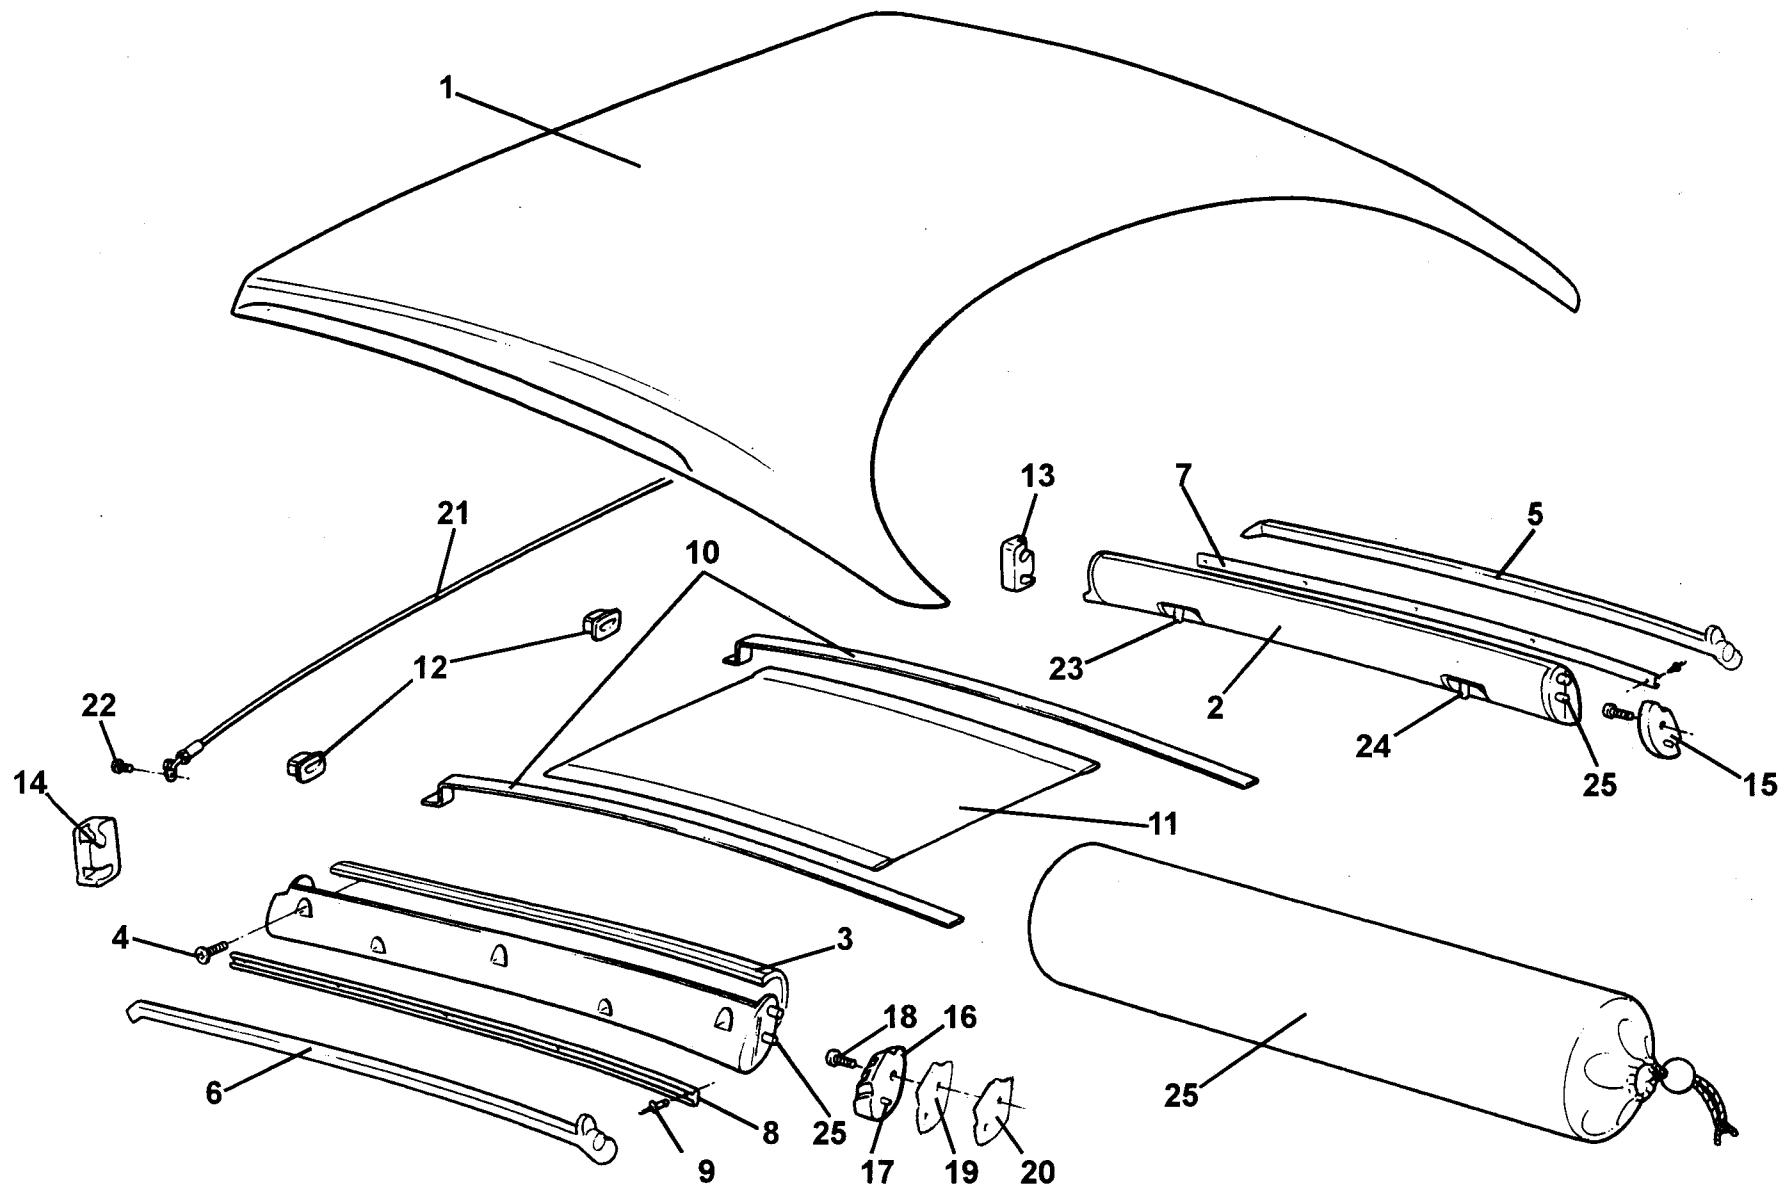

**ELISE**  
**12.02**

**Function Code 12.02 Soft Top Roof, Cant Rails & Hood Bows**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
14	Latch Plate, front, LH	Bonded to windscreen frame		A116B0001F	1
15	Latch Plate, rear, RH			A117B0212F	1
16	Latch Plate, rear, LH			A117B0213F	1
17	Dowel Pin, plate to roll-over bar			A117B0281F	2
18	Screw, M6 x 20, cap hd., black, latch plate to roll-over bar			A082W7041F	2
19	Shim Plate, 0.5mm, latch plate to roll-over bar			A117B0313F	As req.
20	Shim Plate, 1.0mm, latch plate to roll-over bar			A117B0314F	As req.
21	Cable, front, soft top tensioning			B116V0064H	1
22	Screw, cables to soft to assy.			A116V0065H	4
23	Latch Assembly, front, RH			A117B0154H	1
23a	Latch Assembly, front, LH			A117B0155H	1
24	Latch Assembly, rear, RH			A117B0156H	1
24a	Latch Assembly, rear, LH			A117B0157H	1
25	End Cap, latching pin			A116V0150F	4
26	Soft Top Stowage Bag			A117B0086H	1

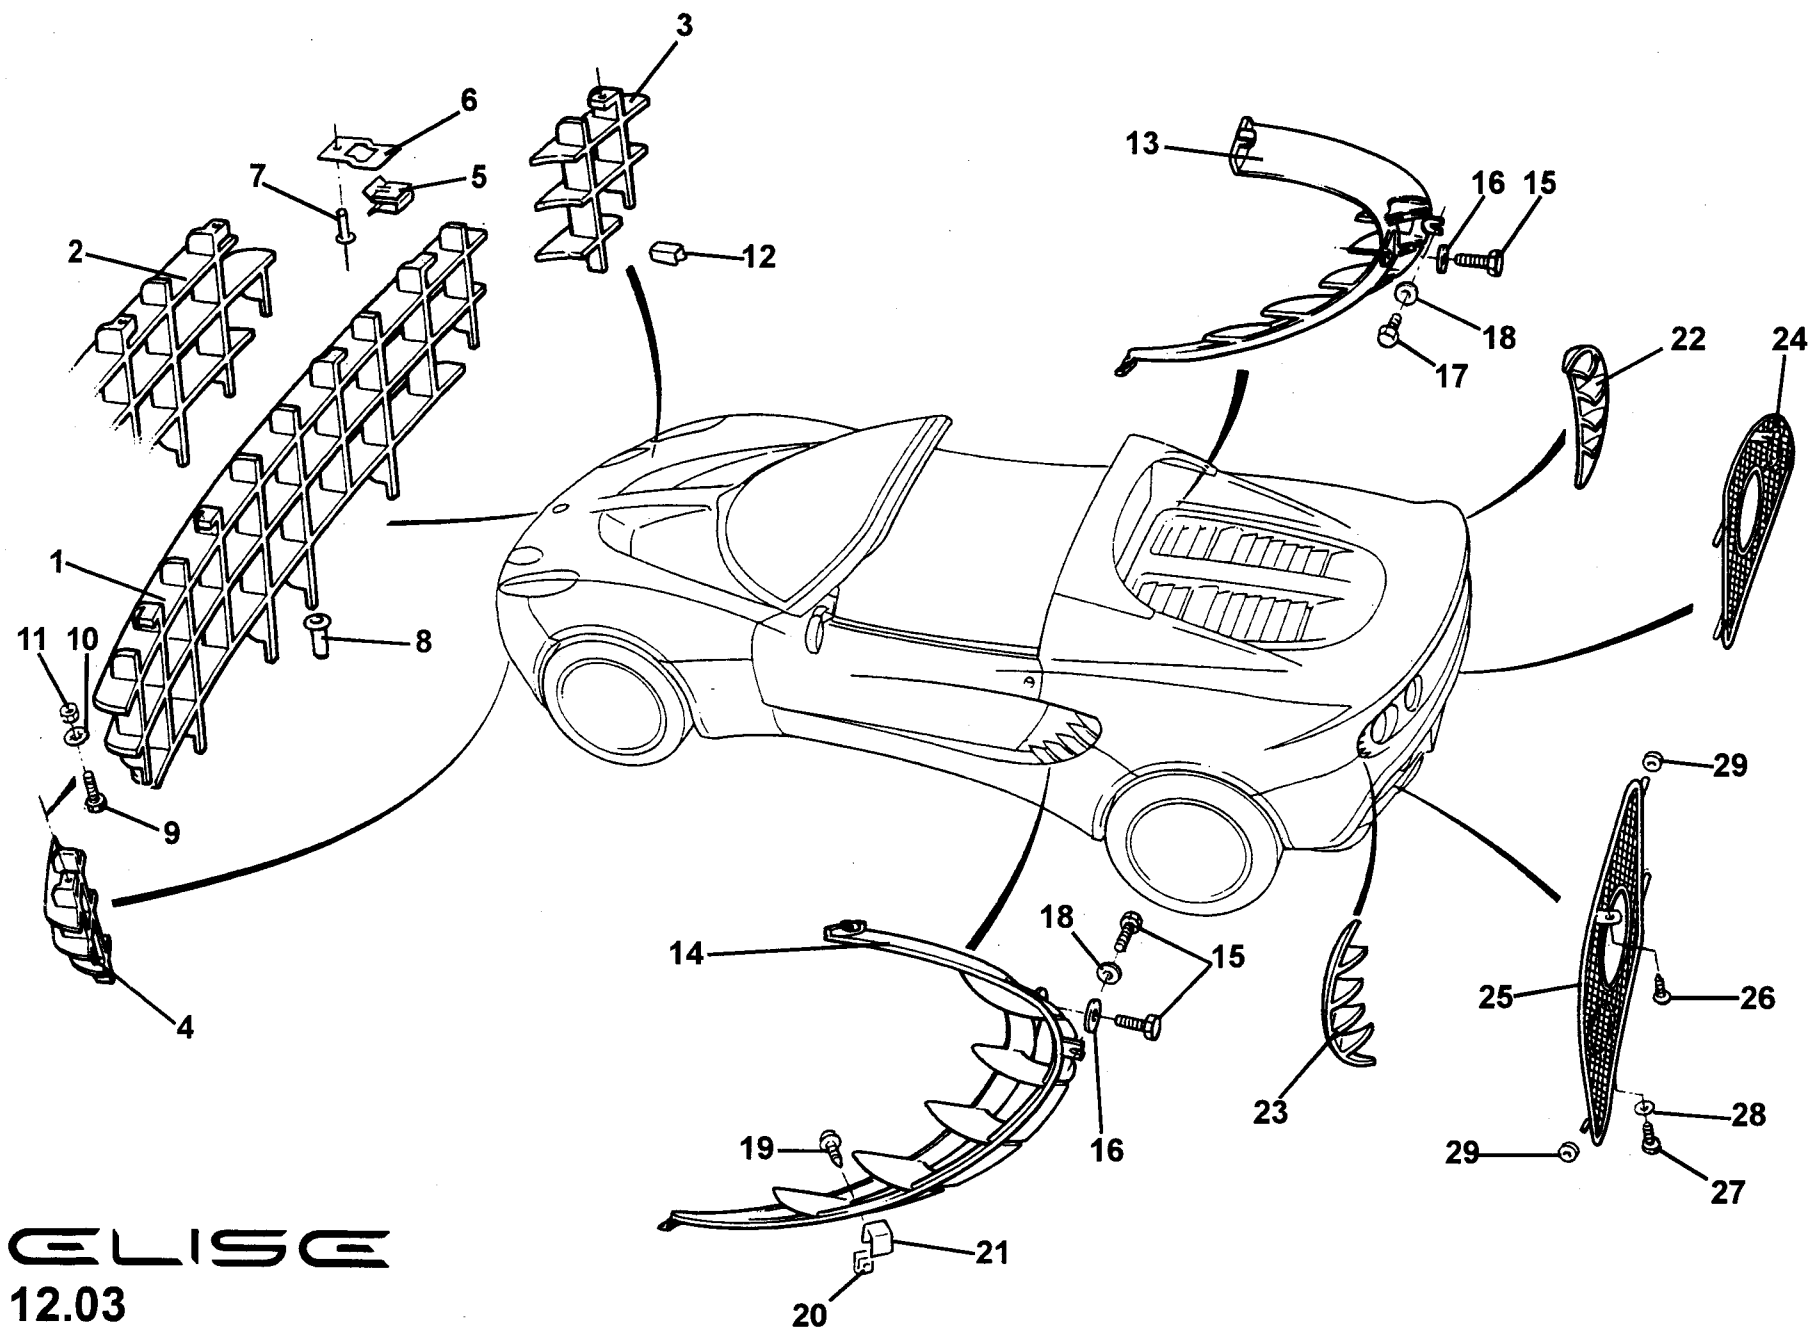

**ELISE**  
**12.03**

# Service Parts List **ELISE**




## Function Code 12.03 Grilles and Louvres

Dep	Part Description	Remarks	Option	Part Number	Qty
01	Grille, front intake, central, without driving lamps		Standard	G117B0114F	1
02	Grille, front intake, central, with driving lamps	For factory fitted lamps, 80mm wide lens*	Race Tech/Sports Tourer	D117B0317F	1
02a	Grille, front intake, central, with driving lamps	For dealer fitted lamps, 40mm dia. lens*	Race Tech	E117B0234F	1
03	Grille, front intake, LH			E117B0117F	1
04	Grille, front intake, RH			E117B0118F	1
05	Clip, central grille retention			A117B6003F	4
06	Bracket, clip to clamshell			A117B0328F	4
07	Pop Rivet, 3.2mm x 11mm, black, bracket to clamshell			A082W6512F	4
08	Receptacle, grille spigots to clamshell	Replaces grommet	X036B6010Z R/B	A117B6004F	4
09	Screw, M5 x 16, hex. hd., outer grilles to clamshell	Black finish		A082W1088R	2
10	Washer, shakeproof, M5, outer grilles to clamshell			A075W4045Z	2
11	Nut, M5, outer grilles to clamshell			A082W3084F	2
12	Clip, outer grilles retention			C117B0235F	2
13	Grille, side intake, RH			E117B0126F	1
14	Grille, side intake, LH			E117B0125F	1
15	Screw, M6 x 16, hex. hd., side grille to clamshell			A075W1028Z	3
16	Washer, flat, M6 x 25, side grille to clamshell			B075W4017Z	2

**ELISE**

2001 / 01

Function Code: 12.03, Page: 1

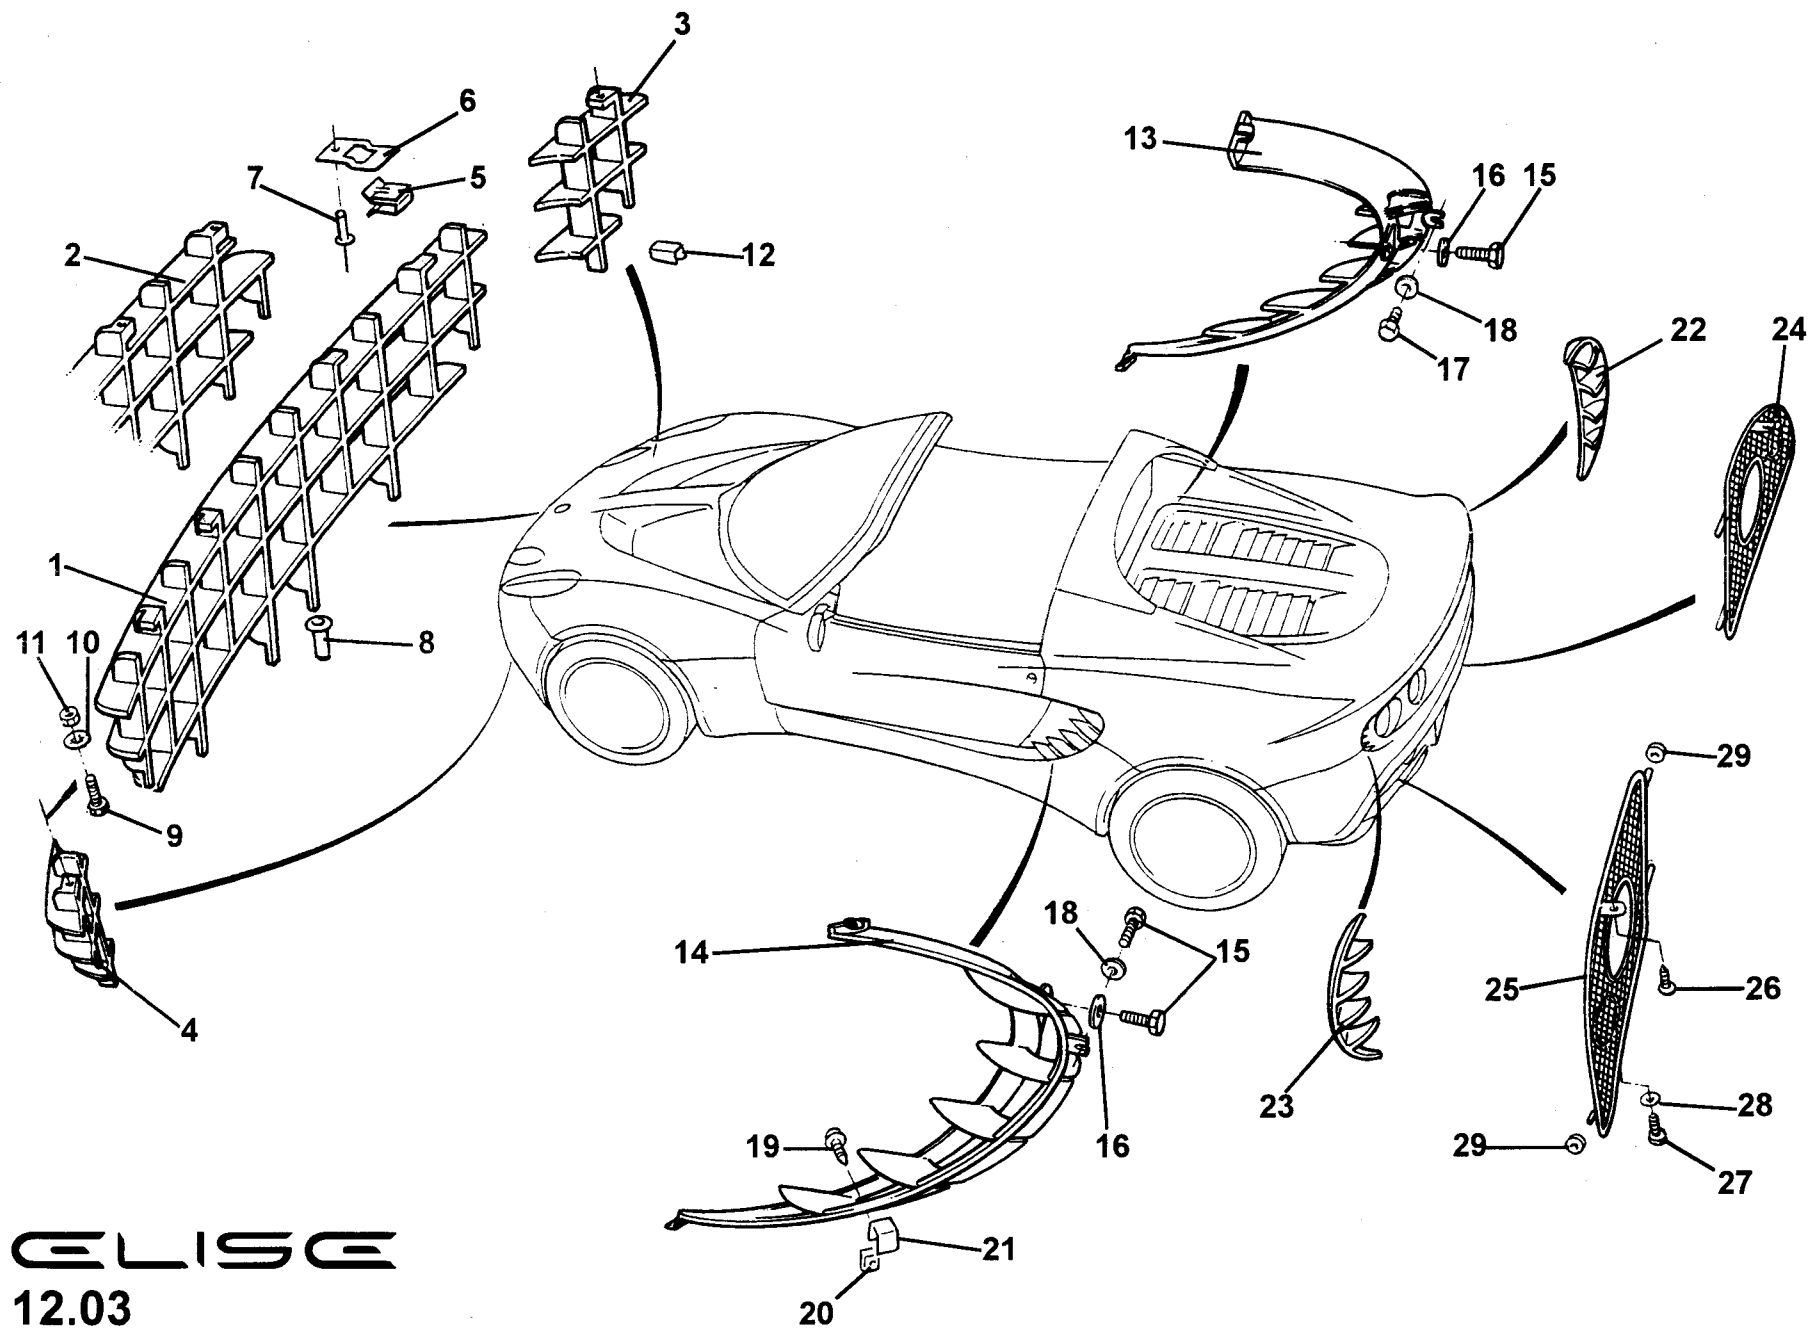


**ELISE**  
**12.03**



**Function Code 12.03 Grilles and Louvres**

<b>Dep</b>	<b>Part Description</b>	<b>Remarks</b>	<b>Option</b>	<b>Part Number</b>	<b>Qty</b>
17	Screw, M6 x 12, hex. hd., RH side grille to clamshell			A075W1027Z	1
18	Waher, flat, M6 x 18, side grille to clamshell			B082W4018F	2
19	Screw, No.8 x 0.7, self tap., flg. hd., pozi., grille fix.			A075W5074Z	6
20	Spire Nut, No.8			A075W6016Z	6
21	Bracket, side grille mounting,	Bonded to sill panel		A117B0329F	2
22	Grille, rear transom, RH			C117B0134F	1
23	Grille, rear transom, LH			C117B0133F	1
24	Grille, rear body to diffuser, RH			A117B0268F	1
25	Grille, rear body to diffuser, LH			A117B0269F	1
26	Screw, M5 x 16, pan hd., pozi. upper grille to clamshell	Black finish		A082W5184F	2
27	Screw, M5 x 16, hex. hd. SS, lower grille to diffuser			A111W1163F	2
28	Washer, flat, 3/16" x 0.75", lower grille to diffuser			B075W4009Z	2
29	Grommet, grille spigots to clamshell			A082B6158F	6
*See 17.11					

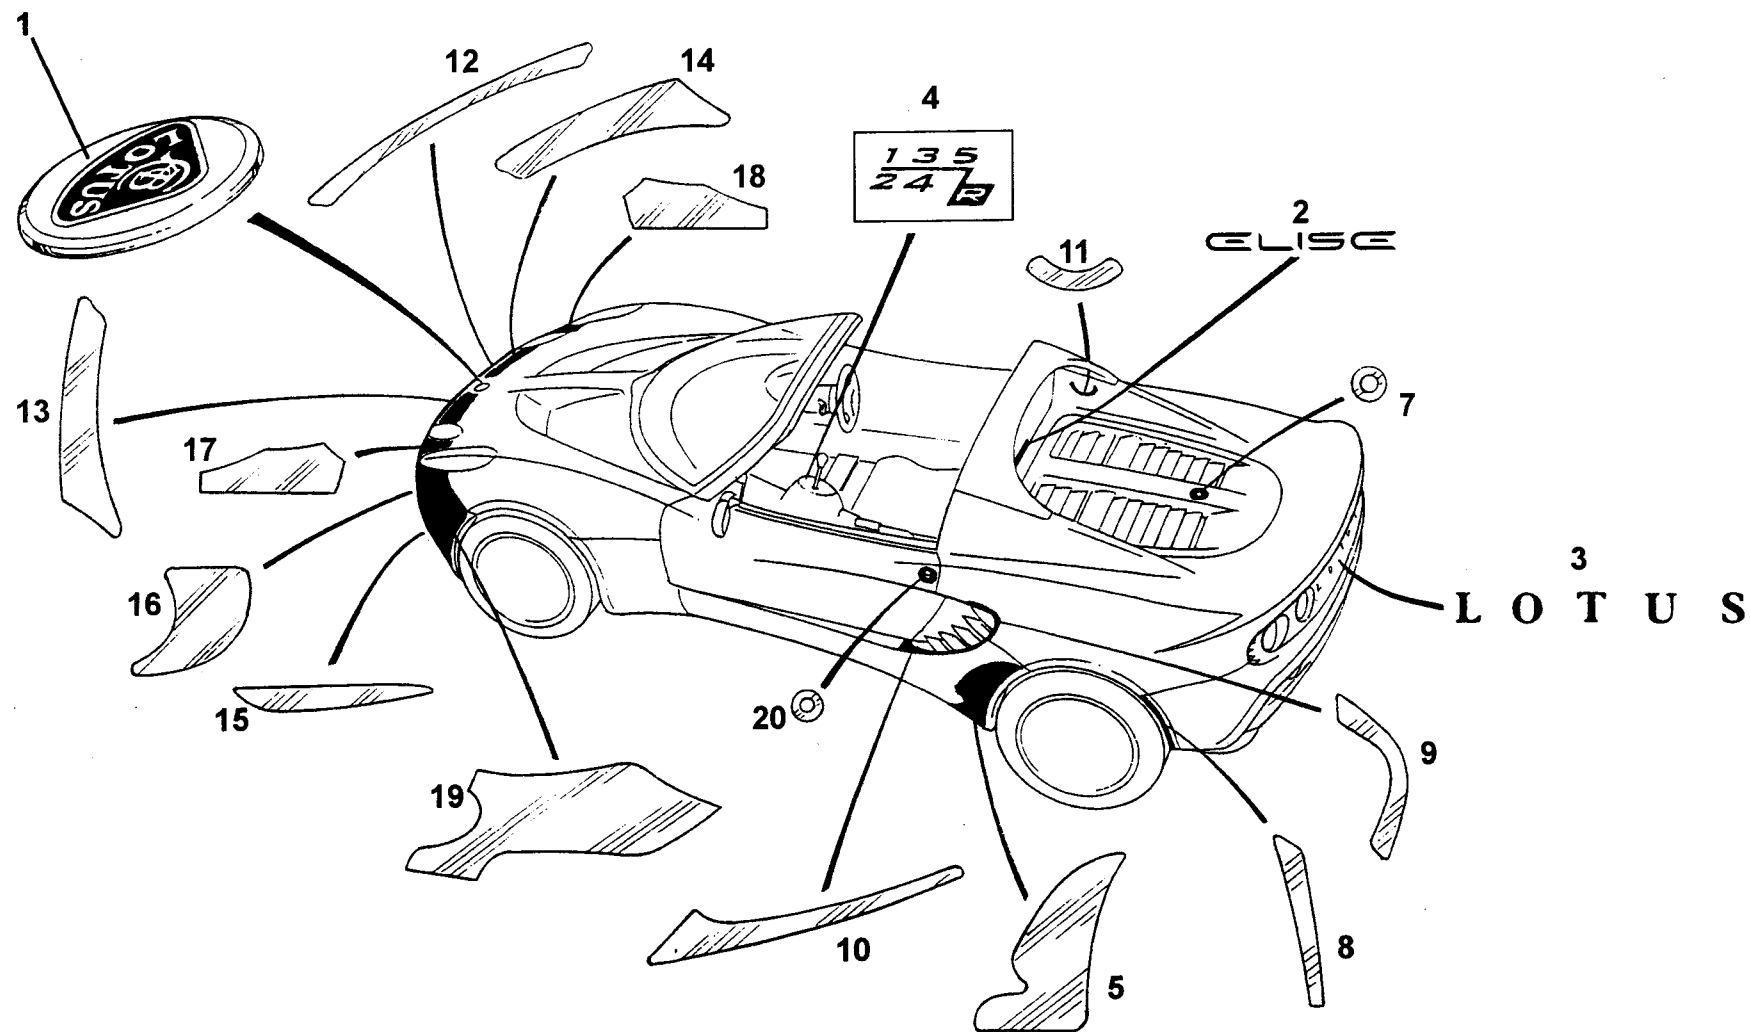

**ELISE**  
12.05


# Service Parts List **ELISE**



## Function Code 12.05 Decals, Badges & Protective Film

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Nose Badge, Lotus logo		All cars	A117U0170F	1
02	Decal, elise	On rear glass	All cars	A117U0192F	1
03	Decal, Lotus	On rear transom	All cars	A117U0193F	1
04	Decal, gearshift pattern	On gear lever cover	All cars	A117U	1
05	Film, sill protection, LH		All cars	A117B0301F	1
05a	Film, sill protection, RH		All cars	A117B0302F	1
06	Film Set, additional protection	Comprises items 07 to 20	Accessory	LOTAC05147	1
07	Film, engine cover lock surround protection		Accessory	A117B0305F	1
08	Film, rear wheelarch protection, LH		Accessory	A117B0365F	1
08a	Film, rear wheelarch protection, RH		Accessory	A117B0366F	1
09	Film, side intake upper, LH		Accessory	A117B0363F	1
09a	Film, side intake upper, RH		Accessory	A117B0364F	1
10	Film, side intake, lower, LH		Accessory	A117B0303F	1
10a	Film, side intake, lower, RH		Accessory	A117B0304F	1
11	Film, filler neck surround protection		Accessory	A117B0345F	1
12	Film, nose badge panel, centre		Accessory	A117B0346F	1
13	Film, nose badge panel, LH		Accessory	A117B0347F	1
14	Film, nose badge panel, RH		Accessory	A117B0348F	1

**ELISE**

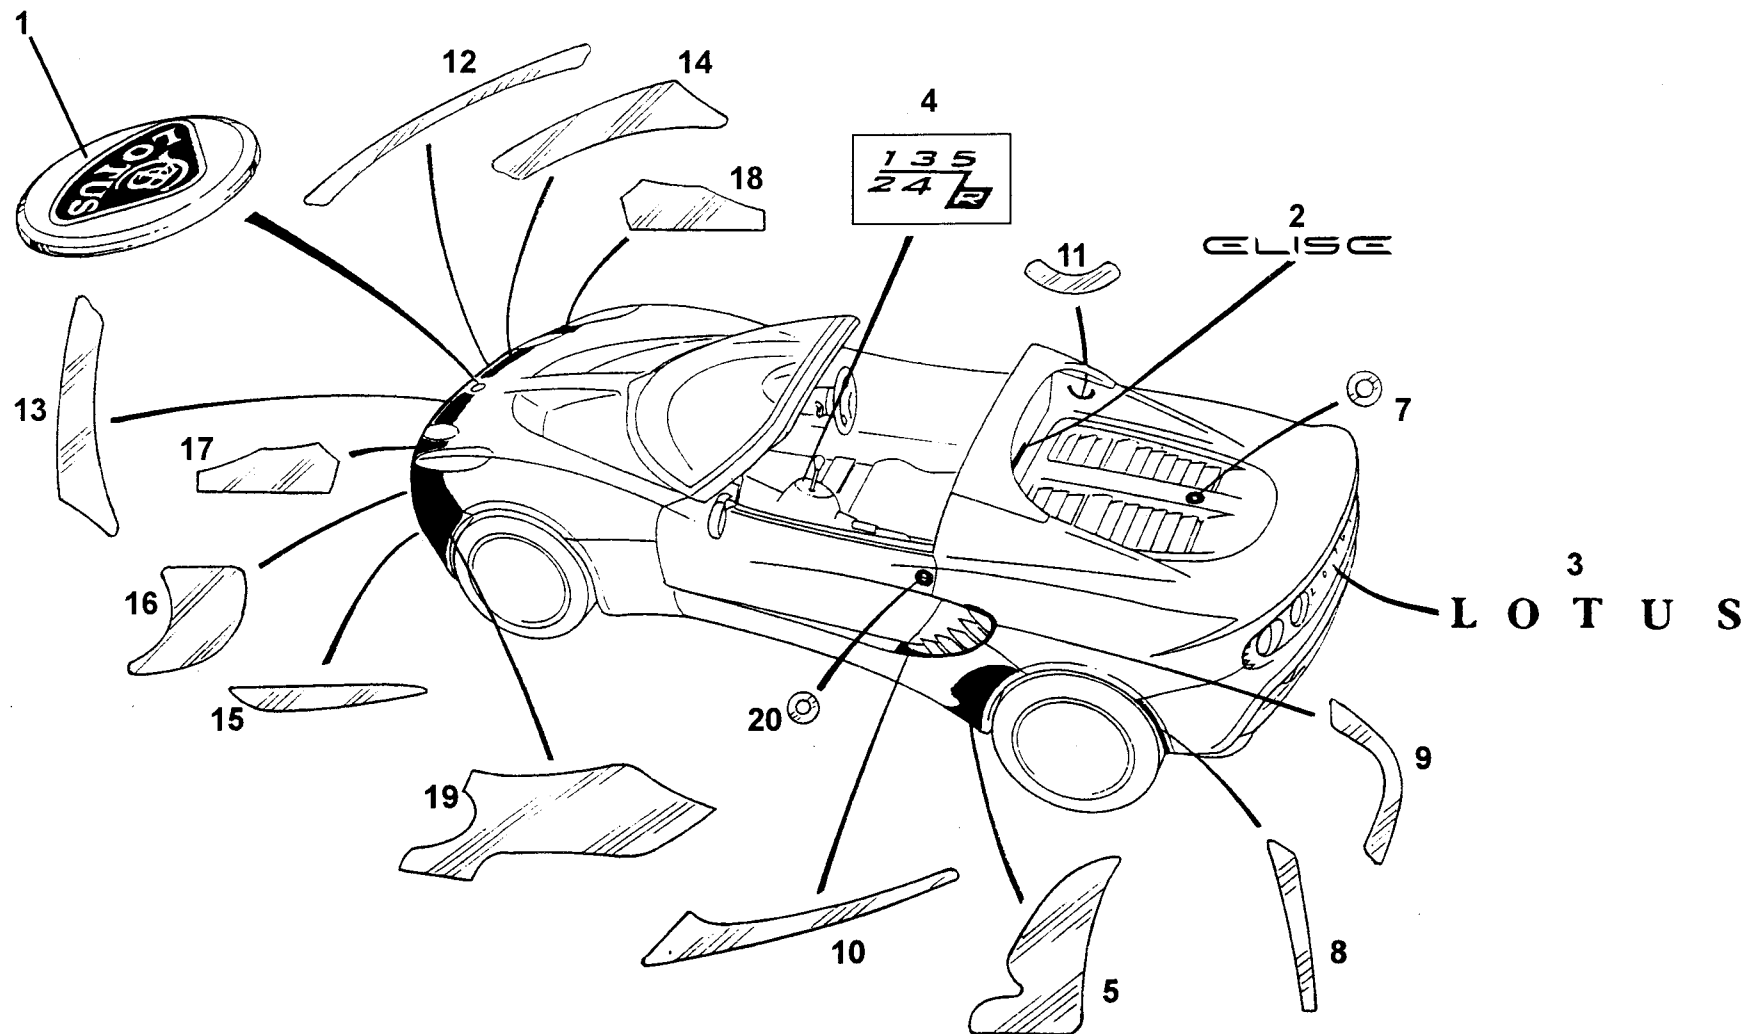


**ELISE**

**12.05**

---

**Function Code 12.05 Decals, Badges & Protective Film**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
15	Film, chin spoiler protection, LH		Accessory	A117B0349F	1
15a	Film, chin spoiler protection, RH		Accessory	A117B0350F	1
16	Film, front intake protection, LH		Accessory	A117B0351F	1
16a	Film, front intake protection, RH		Accessory	A117B0352F	1
17	Film, front lamps/nose panel protection, LH	Between lamps	Accessory	A117B0353F	1
18	Film, front lamps/nose panel protection, RH	Between lamps	Accessory	A117B0354F	1
19	Film, chin panel protection. LH		Accessory	A117B0355F	1
19a	Film, chin panel protection. RH		Accessory	A117B0356F	1
20	Film, door lock surround protection		Accessory	A117B0357F	2

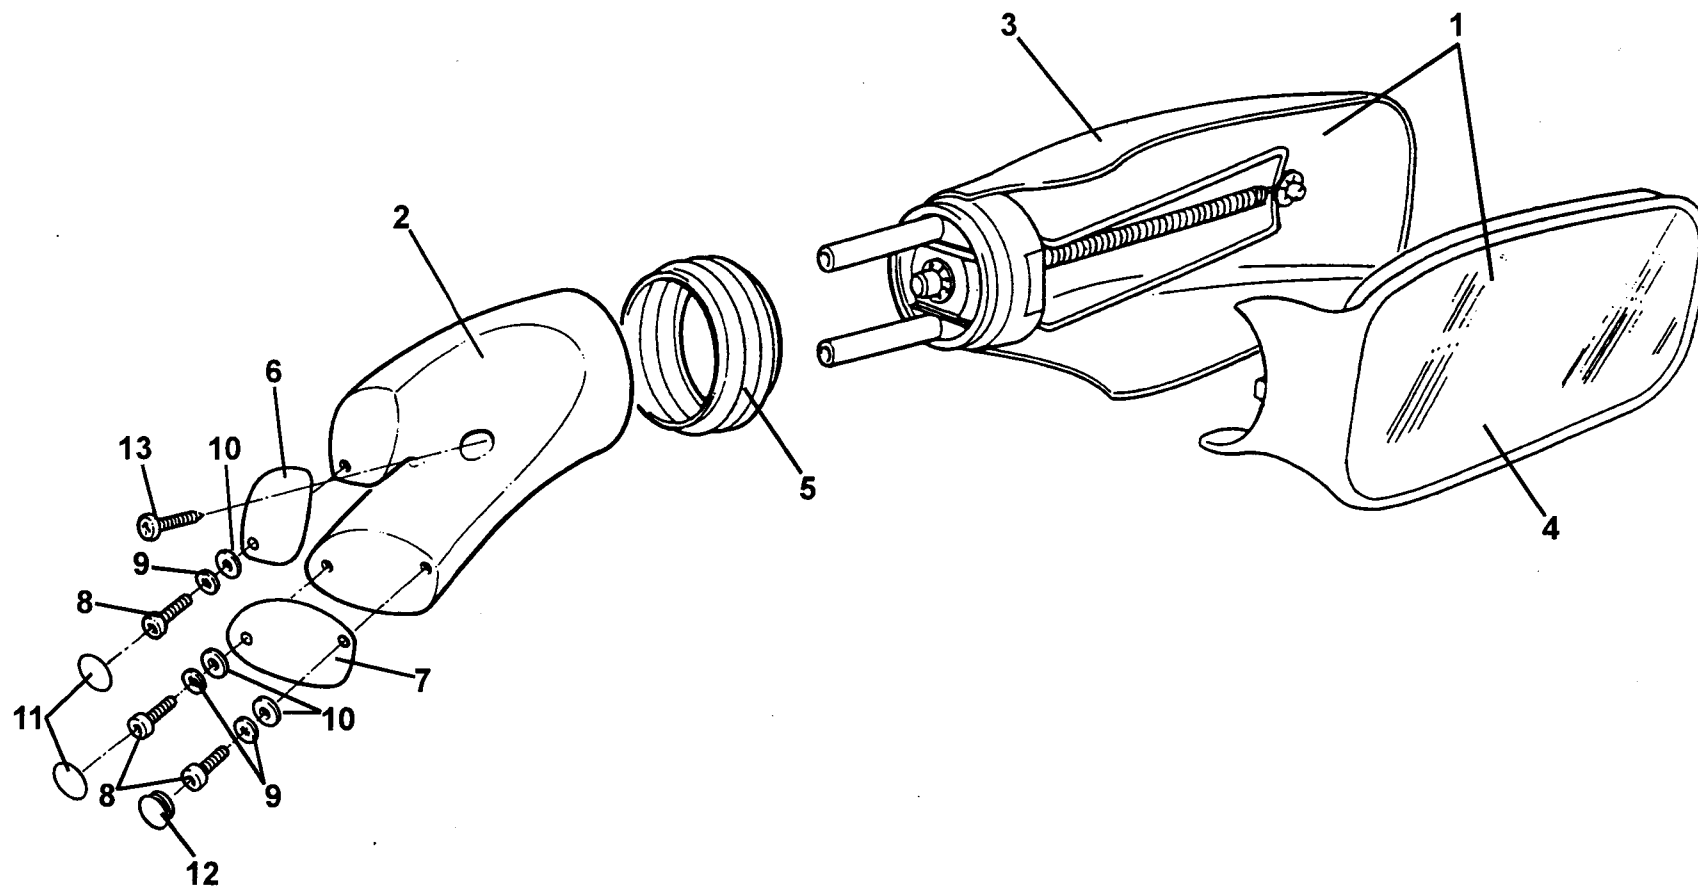

**ELISE**  
12.09


# Service Parts List **ELISE**



## Function Code 12.09 Exterior Driving Mirrors

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Mirror Assembly, convex glass	Painted	Common RH & LH	A111U0335J	1
01a	Mirror Assembly, flat glass	Painted	Australia only RH & LH	B111U0279J	1
02	Plinth, mirror mounting, RH	Not painted		A117U0124F	1
02a	Plinth, mirror mounting, LH	Not painted		A117U0123F	1
03	Mirror Housing	Not painted	Common RH & LH	B111U0117K	2
03a	Mirror Housing, common RH & LH	Primed	Common RH & LH	A111S0424K	2
04	Glass, convex			A111U6046F	2
04a	Glass, flat		Australia only	A111U6039F	2
05	Bellows, mirror to plinth			A111U6032F	2
06	Gasket, mirror plinth upper			A117U0237F	2
07	Gasket, mirror plinth lower			A117U0238F	2
08	Screw, M5 x 20, cap hd.			A111W7126F	6
09	Washer, internal shakeproof, M5			A075W4045Z	6
10	Washer, flat, M5			A075W4011Z	6
11	Blanking Tape			A111V0206K	4
12	Blanking Grommet			A100B6163F	2
13	Screw, No 10 x 1", pan hd. pozi., plinth to mirror			A075W5043Z	2

**ELISE**

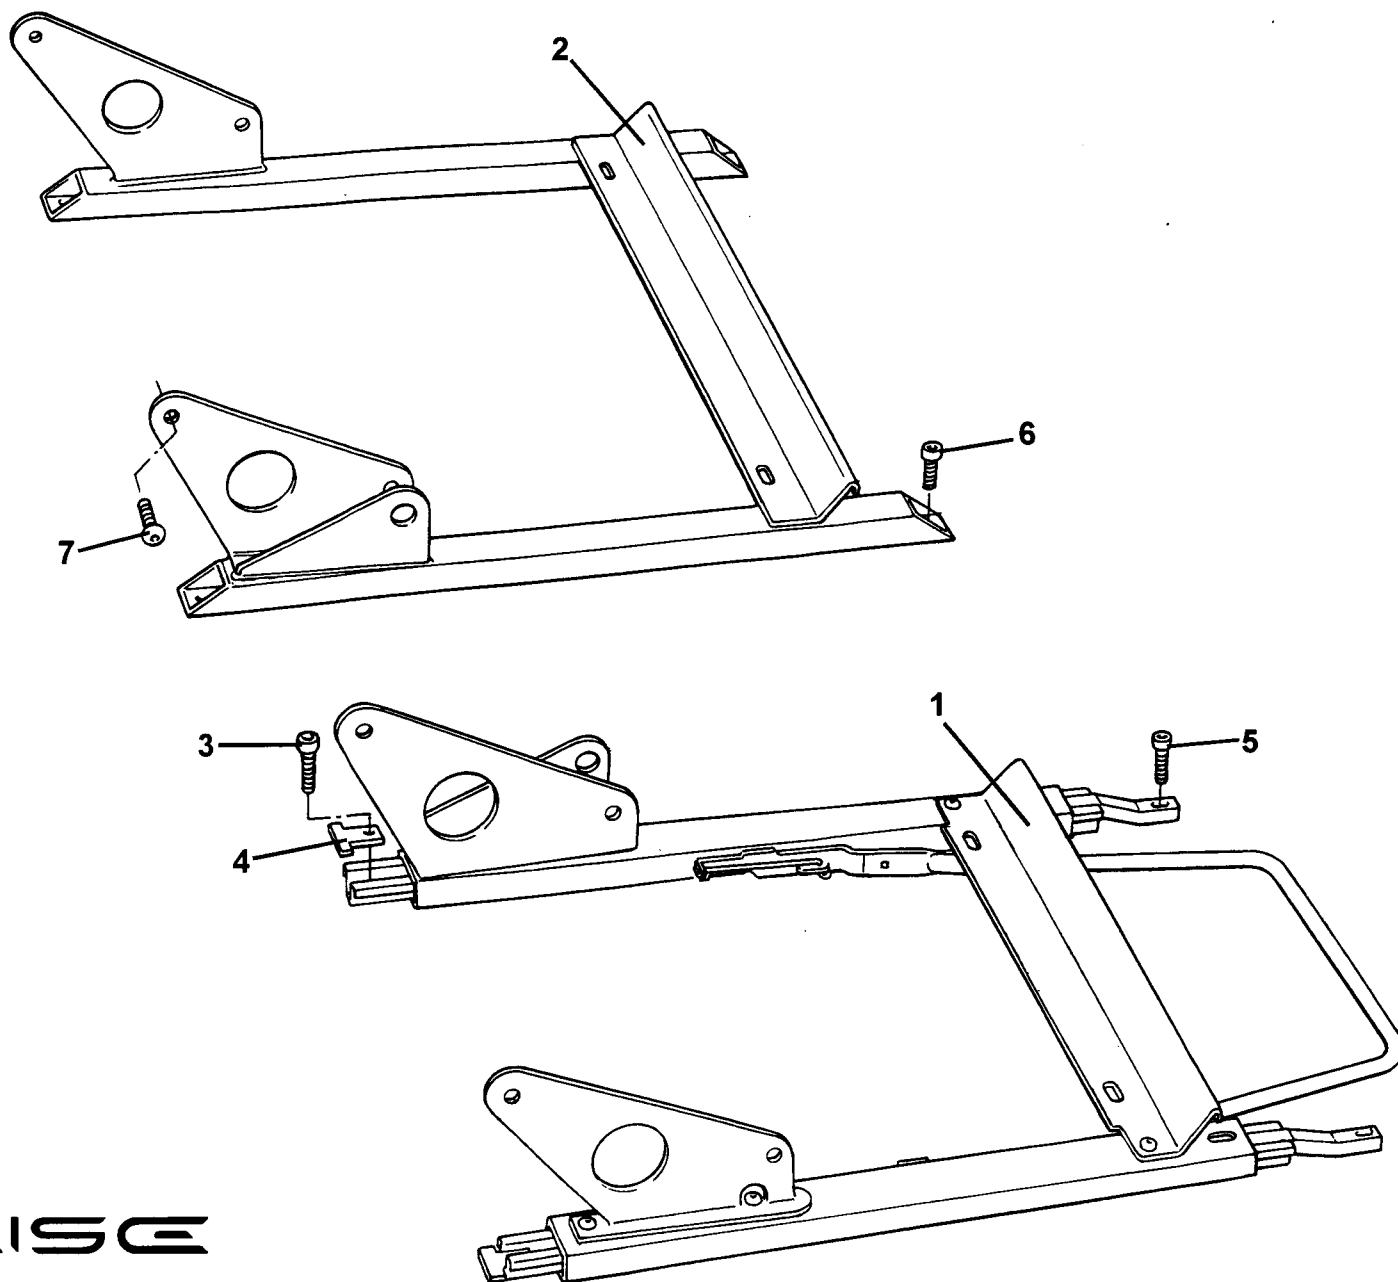

**ELISE**  
13.01




# Service Parts List **ELISE**



## Function Code 13.01 Seat Runners

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Seat Runners, driver, RHD			A111V0012J	1
01a	Seat Runners, driver, LHD			A111V0011J	1
02	Seat Mounting Frame, passenger, RHD			A111V0013F	1
02a	Seat Mounting Frame, passenger, LHD			A111V0014F	1
03	Screw, M8 x 20, cap hd.	Runner rear fix.		A111W7130F	2
04	Stop, seat runner			B111V0017F	2
05	Screw, M8 x 25, cap hd.	Runner front fix.		A111W7115F	2
06	Screw, M8 x 16, cap hd.	Mounting frame fix.		A111W7125F	4
07	Screw, M8 x 12, button hd.	Side brackets to seat fix.		A111W7131F	4

**ELISE**

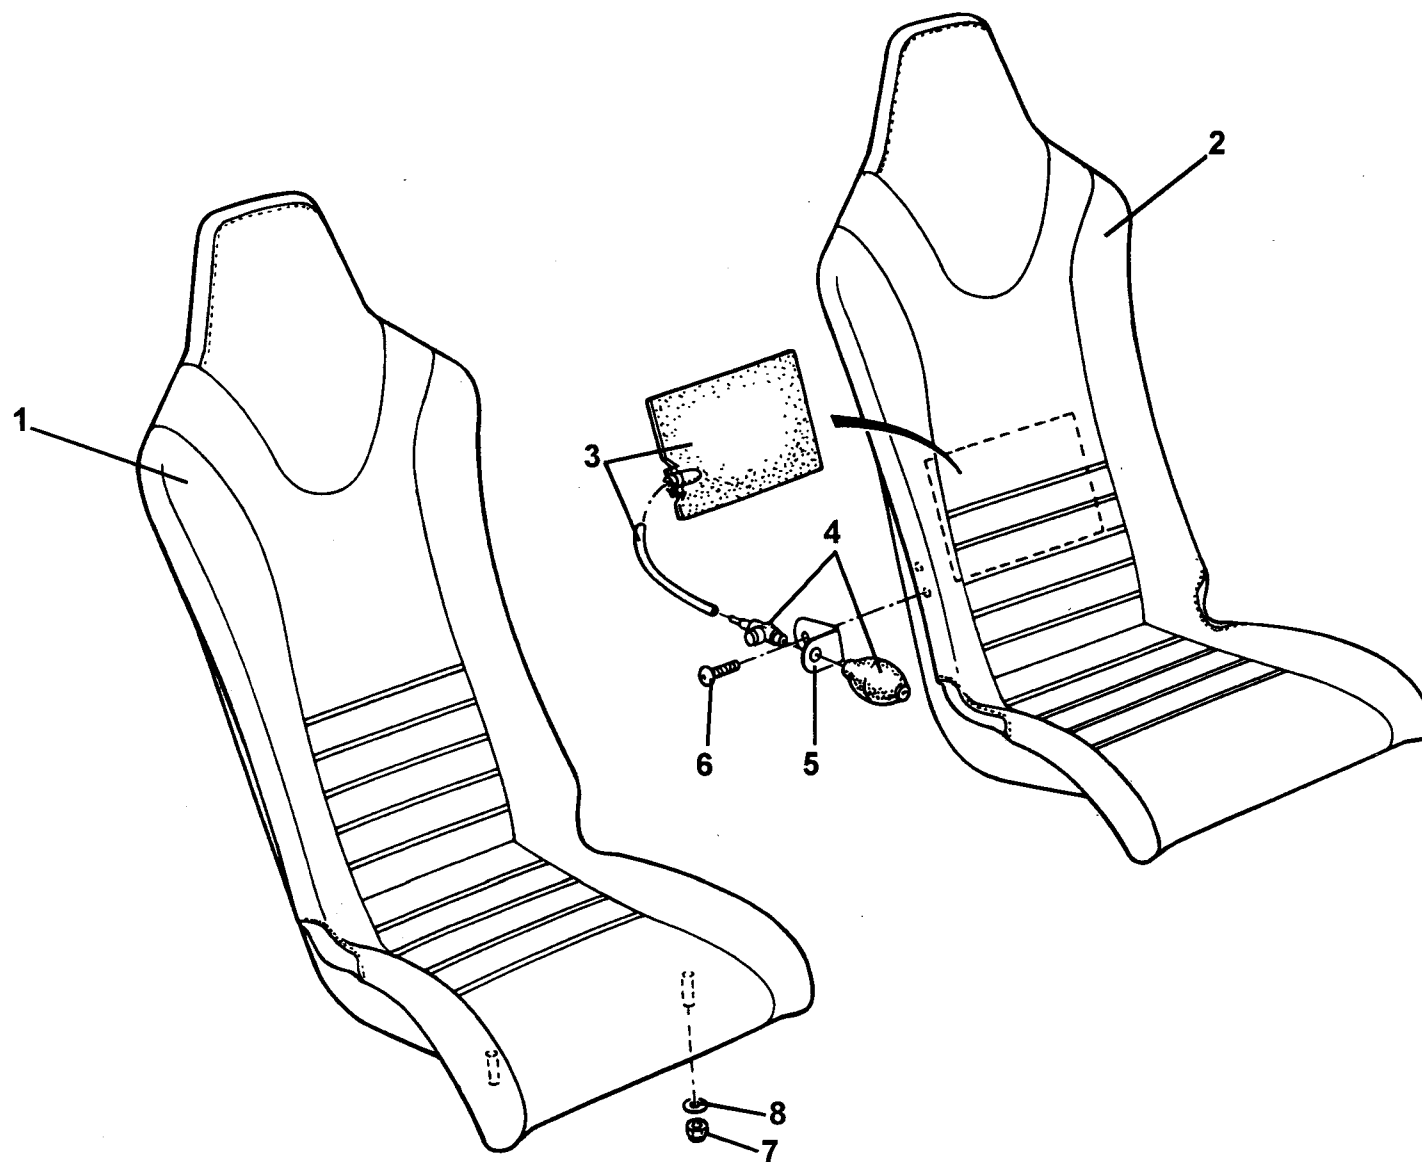

**ELISE**  
13.02


# Service Parts List **ELISE**



## Function Code 13.02 Seat Assemblies

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Seat Assembly, without lumbar support		Black cloth, standard	A117V0124J	2
01a	Seat Assembly, without lumbar support	Seat sides/top in carbon leather	Black alcantara, race tech	A117V0125J	2
01b	Seat Assembly, without lumbar support	Seat sides/top in carbon leather	Red alcantara, race tech	A117V0126J	2
01c	Seat Assembly, without lumbar support	Seat sides/top in carbon leather	Blue alcantara, race tech	A117V0127J	2
01d	Seat Assembly, without lumbar support	Seat sides/top in carbon leather	Silver alcantara, race tech	A117V0128J	2
01e	Seat Assembly, without lumbar support	Seat sides/top in keprotec fabric	Black leather, sports tourer	A117V0129J	2
01f	Seat Assembly, without lumbar support	Seat sides/top in keprotec fabric	Red leather, sports tourer	A117V0130J	2
01g	Seat Assembly, without lumbar support	Seat sides/top in keprotec fabric	Blue leather, sports tourer	A117V0131J	2
01h	Seat Assembly, without lumbar support	Seat sides/top in keprotec fabric	Silver leather, sports tourer	A117V0132J	2
01i	Seat Assembly, without lumbar support	Seat sides/top in keprotec fabric	Green leather, sports tourer	A117V0133J	2
01j	Seat Assembly, without lumbar support	Seat sides/top in keprotec fabric	Beige leather, sports tourer	A117V0134J	2
01k	Seat Assembly, without lumbar support	Seat sides/top in keprotec fabric	Tan leather, sports tourer	A117V0135J	2
02	Seat Assembly, with lumbar support, RH pump/valve		Black cloth, standard	A117V0136J	1
02a	Seat Assembly, with lumbar support, RH pump/valve	Seat sides/top in carbon leather	Black alcantara, race tech	A117V0137J	1
02b	Seat Assembly, with lumbar support, RH pump/valve	Seat sides/top in carbon leather	Red alcantara, race tech	A117V0138J	1
02c	Seat Assembly, with lumbar support, RH pump/valve	Seat sides/top in carbon leather	Blue alcantara, race tech	A117V0139J	1
02d	Seat Assembly, with lumbar support, RH pump/valve	Seat sides/top in carbon leather	Silver alcantara, race tech	A117V0140J	1
02e	Seat Assembly, with lumbar support, RH pump/valve	Seat sides/top in keprotec fabric	Black leather, sports tourer	A117V0141J	1


**ELISE**

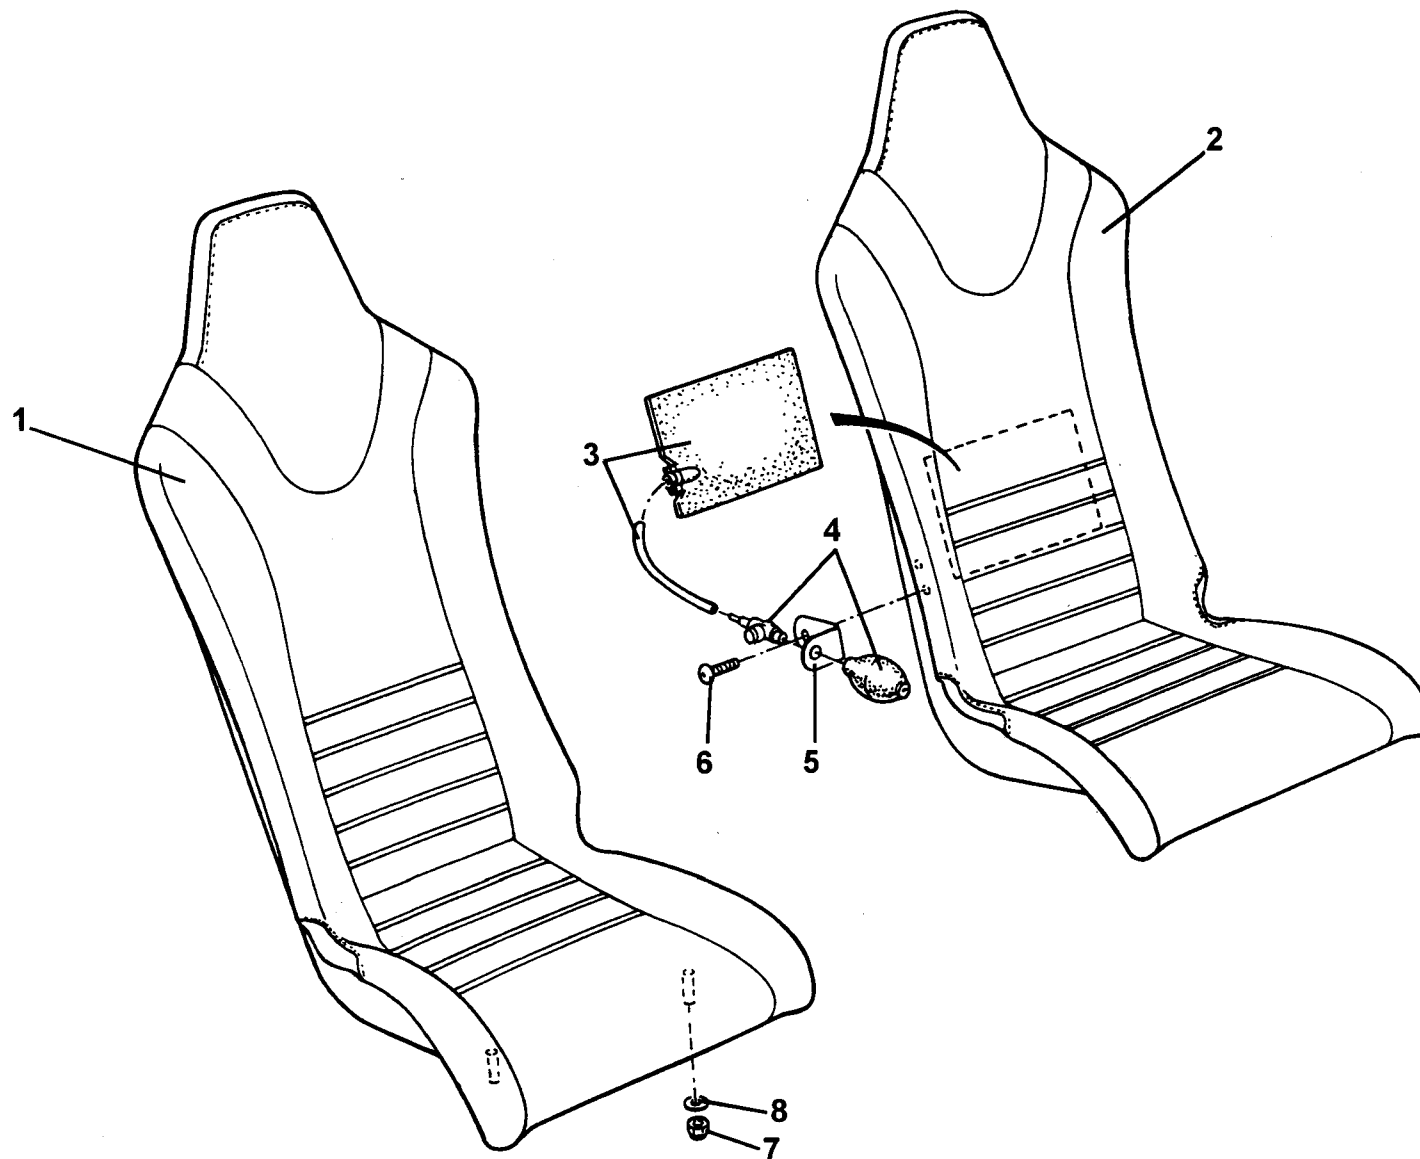

**ELISE**  
**13.02**

**Function Code 13.02 Seat Assemblies**

<b>Dep</b>	<b>Part Description</b>	<b>Remarks</b>	<b>Option</b>	<b>Part Number</b>	<b>Qty</b>
02f	Seat Assembly, with lumbar support, RH pump/valve	Seat sides/top in keprotec fabric	Red leather, sports tourer	A117V0142J	1
02g	Seat Assembly, with lumbar support, RH pump/valve	Seat sides/top in keprotec fabric	Blue leather, sports tourer	A117V0143J	1
02h	Seat Assembly, with lumbar support, RH pump/valve	Seat sides/ top in keprotec fabric	Silver leather, sports tourer	A117V0144J	1
02i	Seat Assembly, with lumbar support, RH pump/valve	Seat sides/top in keprotec fabric	Green leather, sports tourer	A117V0145J	1
02j	Seat Assembly, with lumbar support, RH pump/valve	Seat sides/top in keprotec fabric	Beige leather, sports tourer	A117V0146J	1
02k	Seat Assembly, with lumbar support, RH pump/valve	Seat sides/top in keprotec fabric	Tan leather, sports tourer	A117V0147J	1
02l	Seat Assembly, with lumbar support, LH pump/valve		Black cloth, standard	A117V0148J	1
02m	Seat Assembly, with lumbar support, LH pump/valve	Seat sides/top in carbon leather	Black alcantara, race tech	A117V0149J	1
02n	Seat Assembly, with lumbar support, LH pump/valve	Seat sides/top in carbon leather	Red alcantara, race tech	A117V0150J	1
02o	Seat Assembly, with lumbar support, LH pump/valve	Seat sides/top in carbon leather	Blue alcantara, race tech	A117V0151J	1
02p	Seat Assembly, with lumbar support, LH pump/valve	Seat sides/top in carbon leather	Silver alcantara, race tech	A117V0152J	1
02q	Seat Assembly, with lumbar support, LH pump/valve	Seat sides/top in keprotec fabric	Black leather, sports tourer	A117V0153J	1
02r	Seat Assembly, with lumbar support, LH pump/valve	Seat sides/top in keprotec fabric	Red leather, sports tourer	A117V0154J	1
02s	Seat Assembly, with lumbar support, LH pump/valve	Seat sides/top in keprotec fabric	Blue leather, sports tourer	A117V0155J	1
02t	Seat Assembly, with lumbar support, LH pump/valve	Seat sides/top in keprotec fabric	Silver leather, sports tourer	A117V0156J	1
02u	Seat Assembly, with lumbar support, LH pump/valve	Seat sides/top in keprotec fabric	Green leather, sports tourer	A117V0157J	1
02v	Seat Assembly, with lumbar support, LH pump/valve	Seat sides/top in keprotec fabric	Beige leather, sports tourer	A117V0158J	1
02w	Seat Assembly, with lumbar support, LH pump/valve	Seat sides/top in keprotec fabric	Tan leather, sports tourer	A117V0159J	1
03	Inflatable Lumbar Support/Tube	Option on standard car	Race Tech/Sports Tourer	A111V0117F	1
04	Pump & Valve, lumbar support	Option on standard car	Race Tech/Sports Tourer	A089V6142F	1
05	Bracket, pump & valve assy. mounting	Option on standard car	Race Tech/Sports Tourer	B111V0127F	1

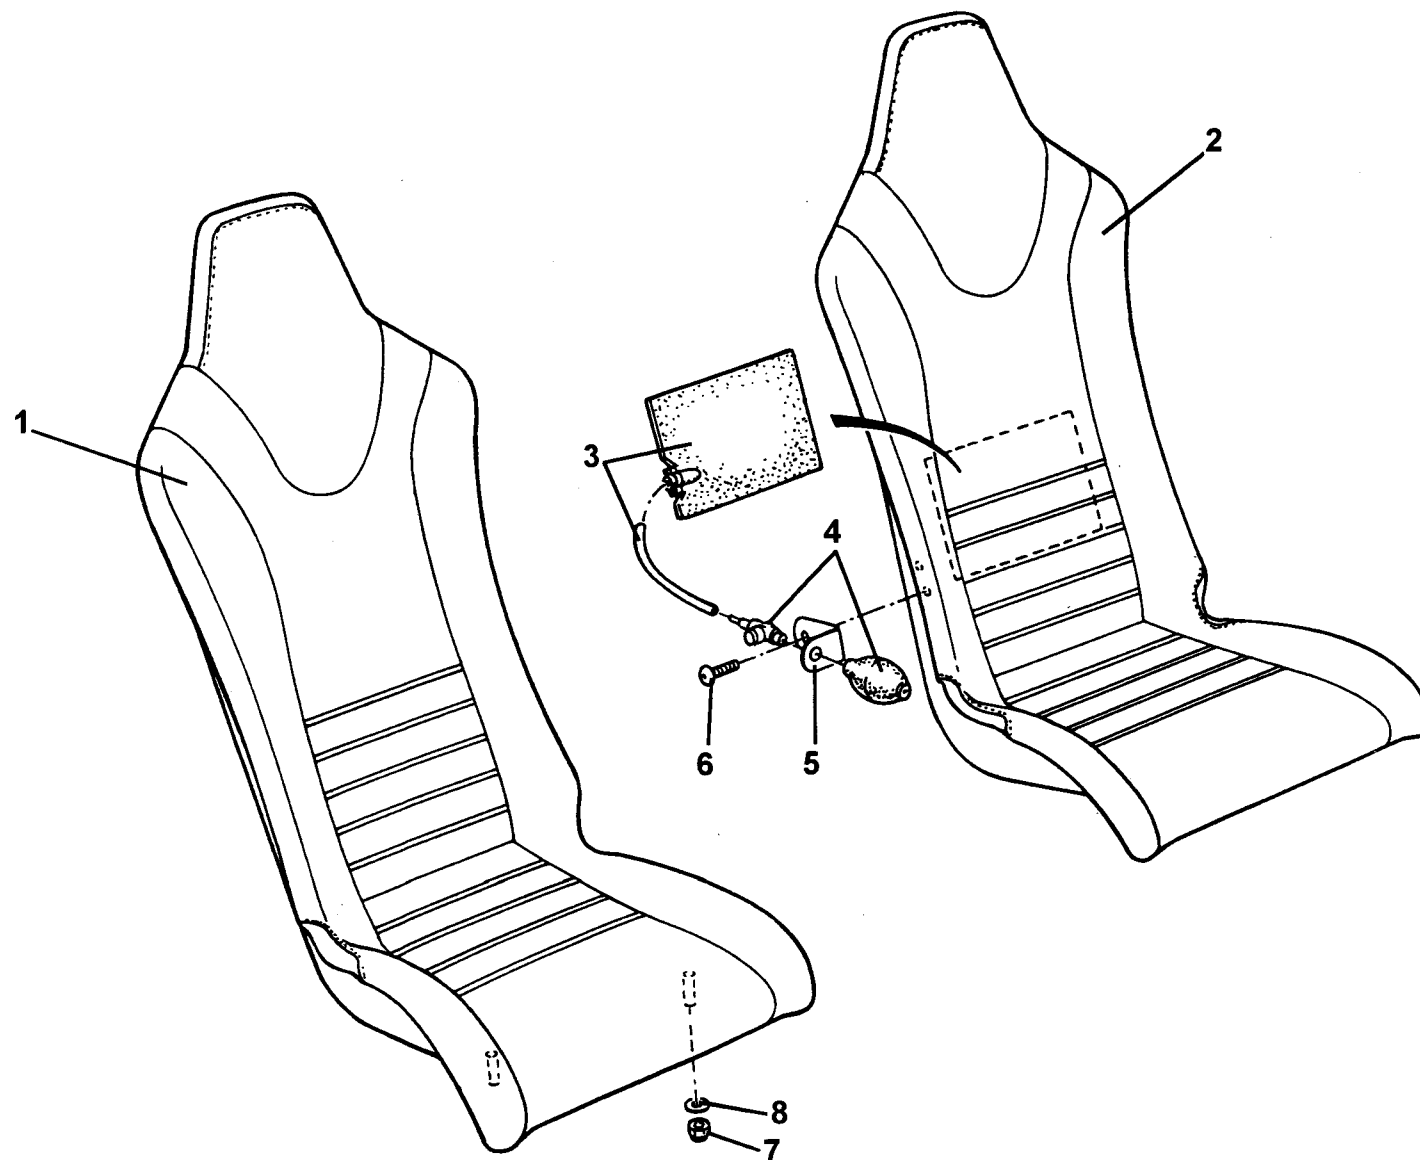


**ELISE**  
13.02

---

**Function Code 13.02 Seat Assemblies**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
06	Screw, M8 x 25, big hd., bracket to seat	Option on standard car	Race Tech/Sports Tourer	A111W6532F	4
07	Nyloc Nut, M8, seat to runner/frame			A075W3010Z	4
08	Washer flat, M8 x 17 x 1.6, seat to runner/frame			A075W4020Z	4

---

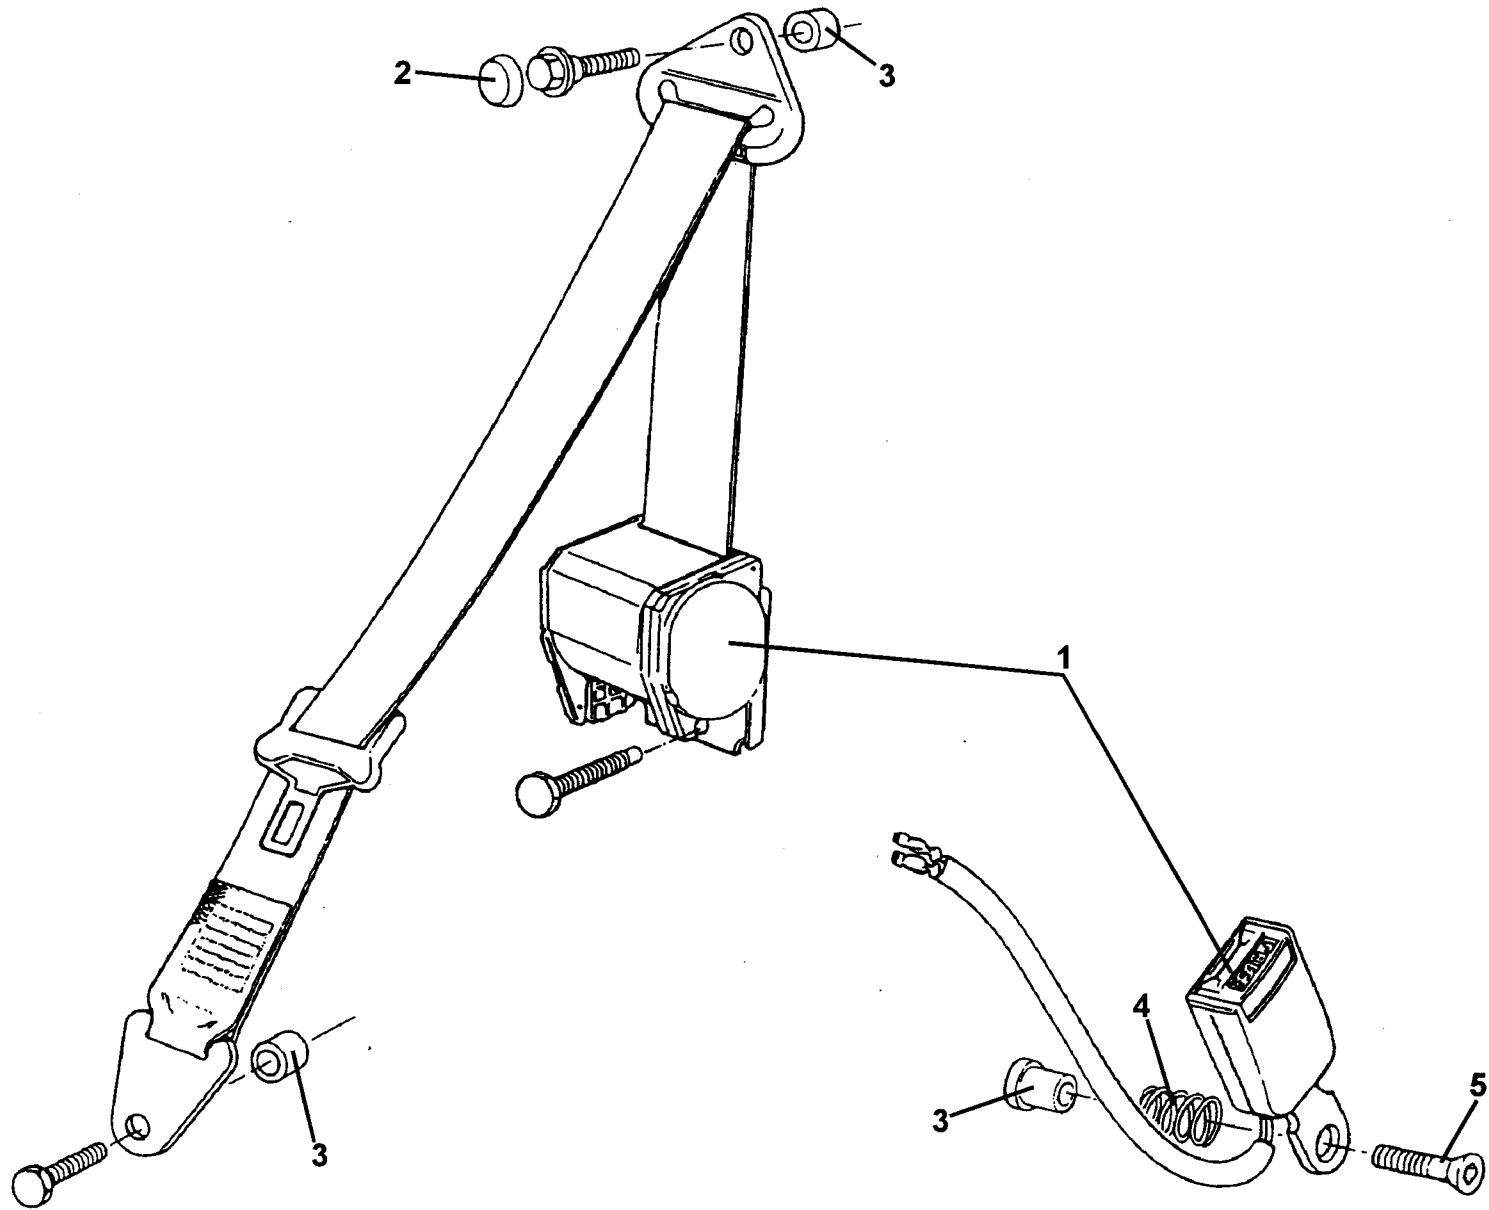

**ELISE**  
13.27




# Service Parts List **ELISE**



## Function Code 13.27 Seat Belts

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Seat Belt Assembly	Includes fixings, Items 2,3,4,5.		A111U0001F	2
02	Cap, black, top fixing bolt			A111U6015H	2
03	Spacer			A111U0017F	2
04	Spring, buckle to seat			A111U6016F	2
05	Bolt, special, buckle to seat fix.			B111U0016F	2

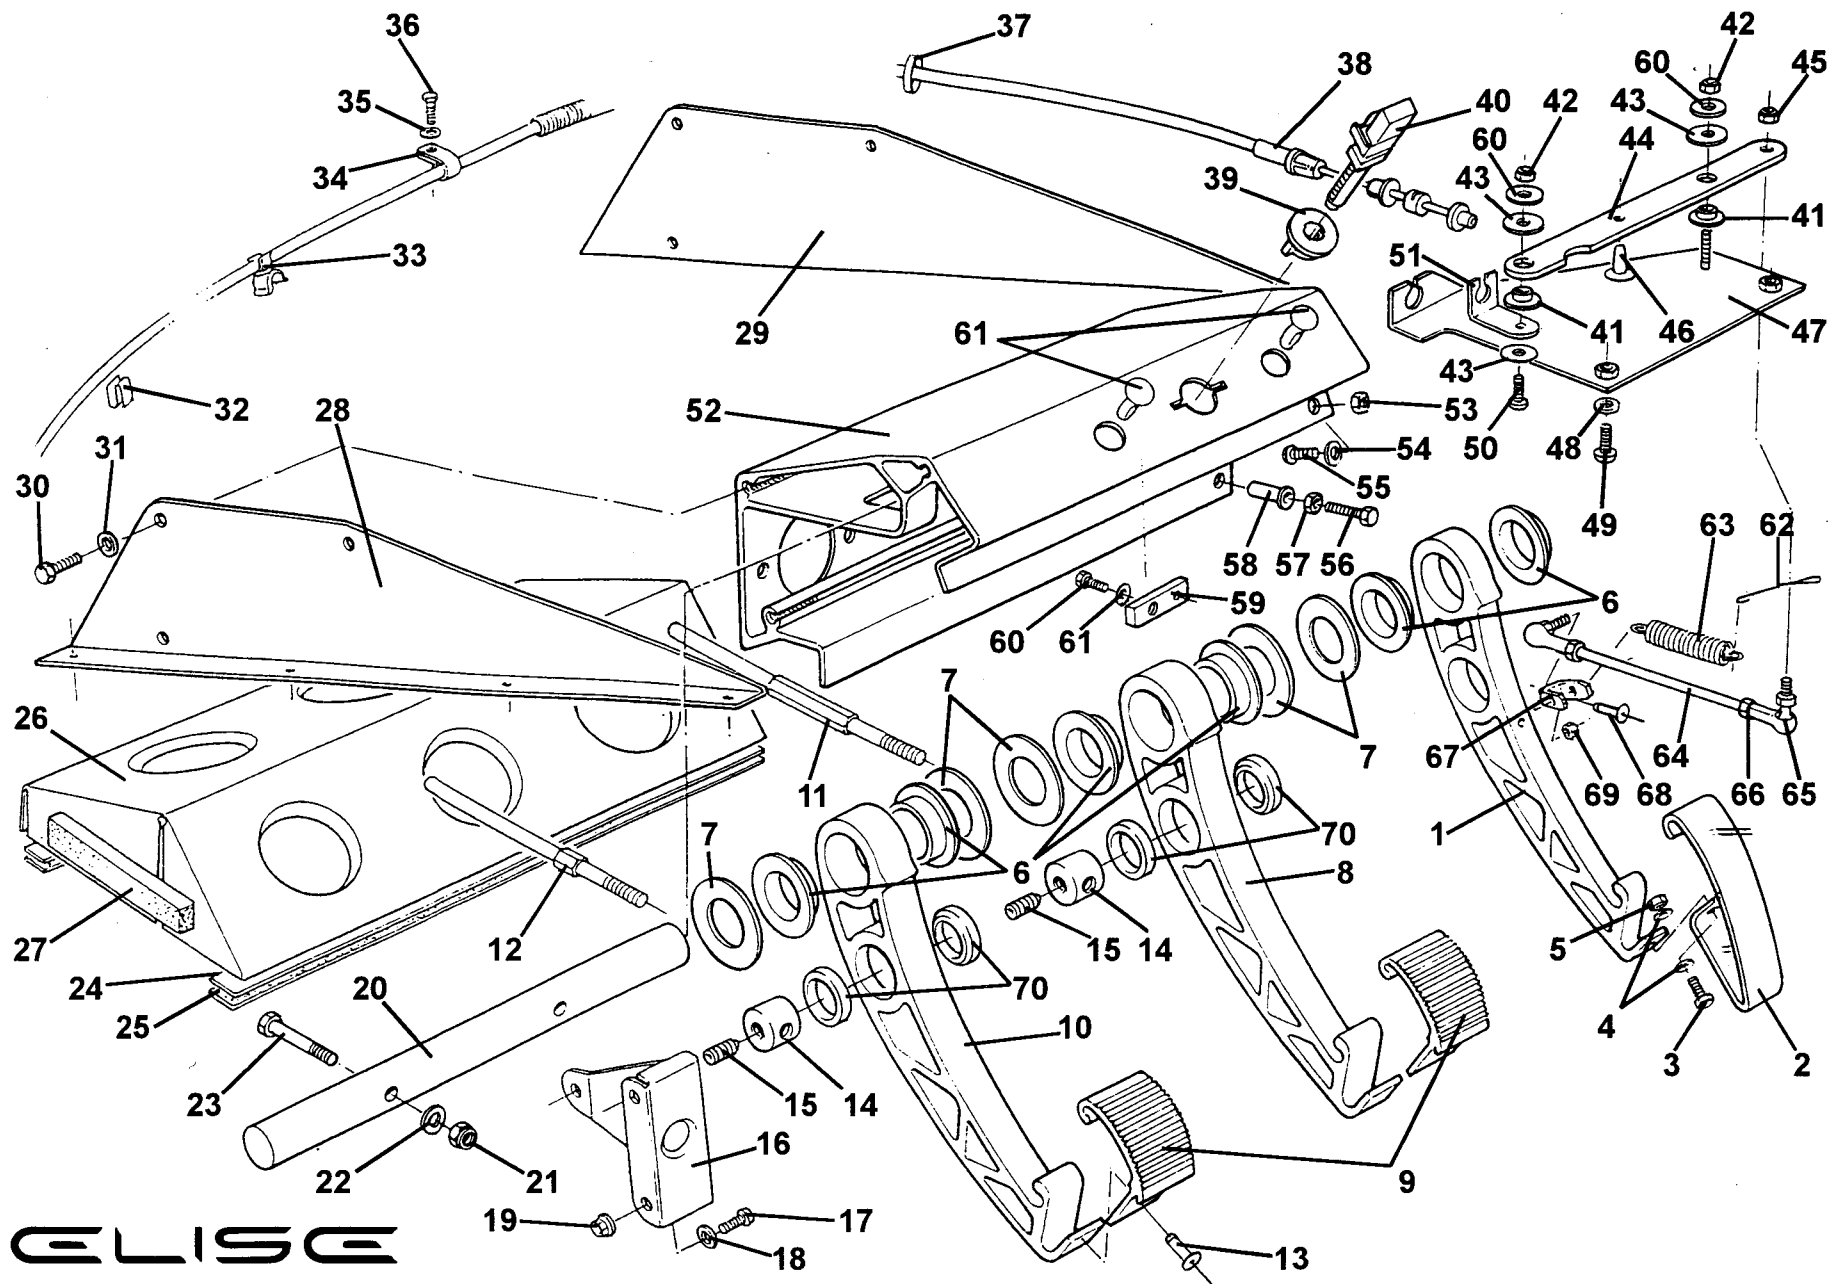

**ELISE**  
14.01


# Service Parts List **ELISE**



## Function Code 14.01 Pedal Box, Pedals, Throttle Cable

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Throttle Pedal			C111J0018F	1
01a	Throttle Pedal Assembly			C111J0016J	1
02	Pad, throttle pedal			A111J0081F	1
03	Setscrew, M5 x 16, pad to arm retention			A075W1085F	1
04	Washer, M5 x 10 x 1.0, pad to arm retention			A075W4011Z	2
05	Nyloc Nut, M5, pad to arm retention			A075W3008Z	1
06	Bearing, pedal pivots			A111J6018F	6
07	Thrust Washer, pedal pivots			A111J6019F	5
08	Brake Pedal			B111J0069F	1
08a	Brake Pedal Assembly			B111J0070F	1
09	Pad, brake & clutch pedals			C111J0019F	2
10	Clutch Pedal			C111J0017F	1
11	Push Rod, brake master cylinder			A111J0041F	1
12	Push Rod, clutch master cylinder			A111J0042F	1
13	Pop Rivet, 5/32" x 1/2", pad fix.			A075W6068Z	2
14	Trunnion, clutch/brake pedal			A111J0155F	2
15	Grubscrew, M6 x 6, push rod locking			A111W7147F	2
16	Driver Footrest, RHD			A111A0103F	1

**ELISE**

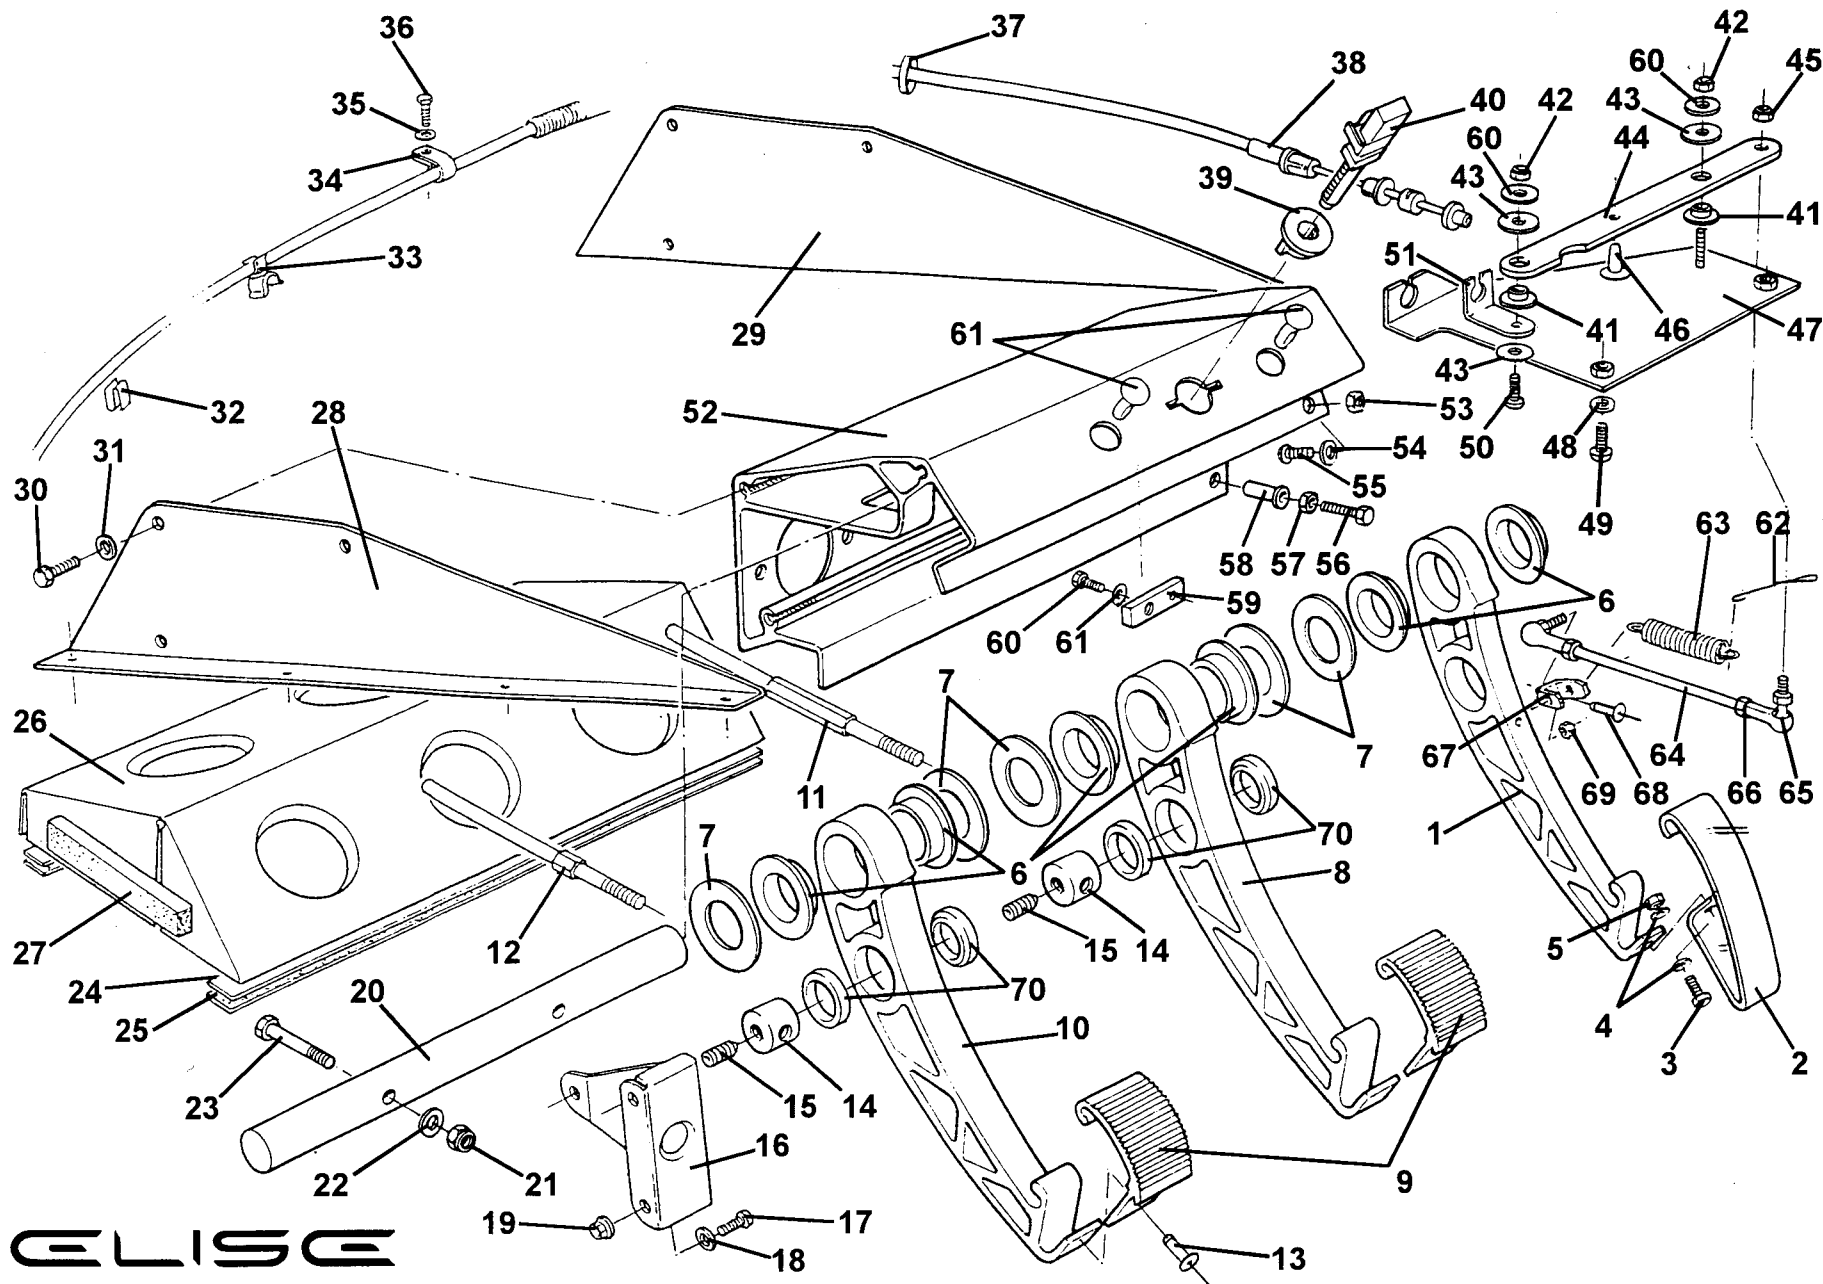


**ELISE**  
14.01

**Function Code 14.01 Pedal Box, Pedals, Throttle Cable**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
16a	Driver Footrest, LHD			A111A0104F	1
17	Screw, M6 x 16, pozi, footrest fix.			A076W5090F	3
18	Washer, shakeproof, M6, footrest fix.			A075W4046Z	3
19	Locknut, M6, footrest fix.			A100W3108F	3
20	Pedal Shaft			B111J0038F	1
21	Nyloc Nut, , M6, shaft fix.			A075W3009Z	2
22	Washer, flat, M6, shaft fix.			A075W4013Z	2
23	Screw, M6 x 35, hex. hd., shaft fix.			A075W1033Z	2
24	Grip-Lock, self adhesive, hook			A111V6020V	0.6M
25	Grip-Lok, self adhesive, loop			A111V6019V	0.6M
26	Passenger Footrest Assembly, RHD			B111A0101J	1
26a	Passenger Footrest Assembly, LHD			B111A0102J	1
27	Foam Seal, 25 x 12.5			A082U6065V	As req.
28	Side plate, pedal box, LH			B111J0033F	1
29	Side plate, pedal box, RH			B111J0034F	1
30	Screw, M6 x 20, hex. hd., side plate fix.			A111W1155F	6
31	Washer, spring, M6			A075W4035Z	6
32	Clip, throttle cable to manifold fix.			A082W6370F	1
33	Clip, throttle cable to canister pipe fix.			A089W6268F	1
34	'P' Clip, throttle cable to sump			A111W6611F	1
35	Washer, shakeproof, M8, 'P' clip to sump			A075W4048Z	1


**ELISE**

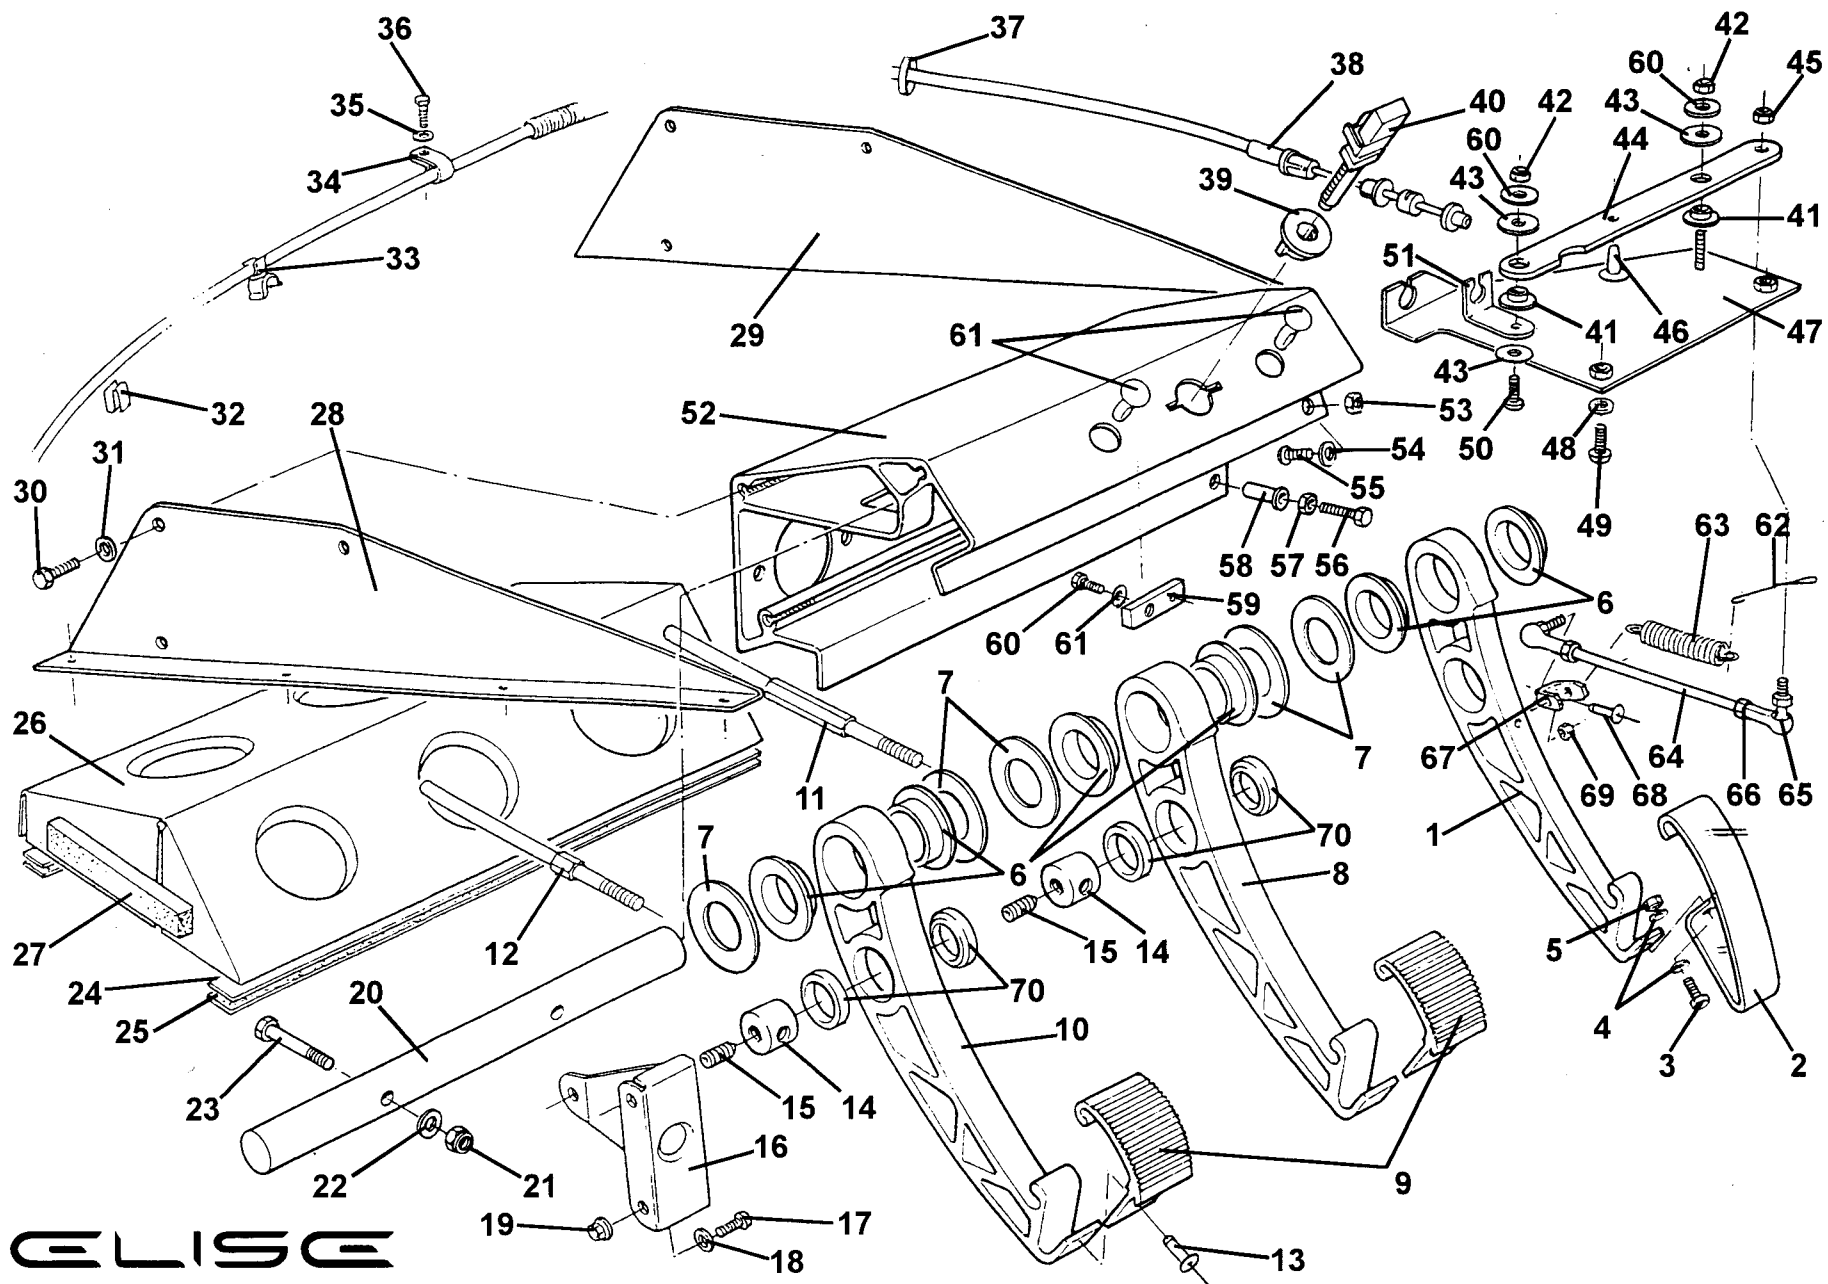

**ELISE**  
14.01

**Function Code 14.01 Pedal Box, Pedals, Throttle Cable**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
36	Setscrew, M8 x 20, 'P' clip to sump			A075W1038Z	1
37	Tie Wrap, throttle cable fix.			A082W6324F	1
38	Throttle Cable			A117J0061F	1
39	Collar, brake light switch fix.			A089M6020F	1
40	Brake Light Switch			A089M6019F	1
41	Bush, nylon, relay lever			A111J6017J	1
42	Nut, M4, nyloc			A075W3049F	1
43	Thrust Washer, nylon, relay lever			A111J6016F	8
44	Relay Lever, throttle linkage			B111J0045F	1
45	Nut, nyloc, M5			A100W3113F	2
46	Slider Button, relay lever			A111J6020F	1
47	Base Plate, relay lever, RHD			C111J0048F	1
47a	Base Plate, relay lever, LHD			C111J0047F	1
48	Washer, shakeproof, M5, base plate fix			A075W4054Z	2
49	Screw, M5 x 10, pozi, base plate fix.			A082W5097F	2
50	Screw, M4 x 16, pozi, swivel fix.			A100W5133F	2
51	Swivel, throttle linkage			A111J0043F	1
52	Pedal Box Extrusion			D111J0021F	1
53	Nut, M5, nyloc			A075W3008Z	1
54	Washer, flat, M5 x 10 x 0.8,			A111W4168F	1
55	Screw, M5 x 12, button hd.			A111W7138F	1

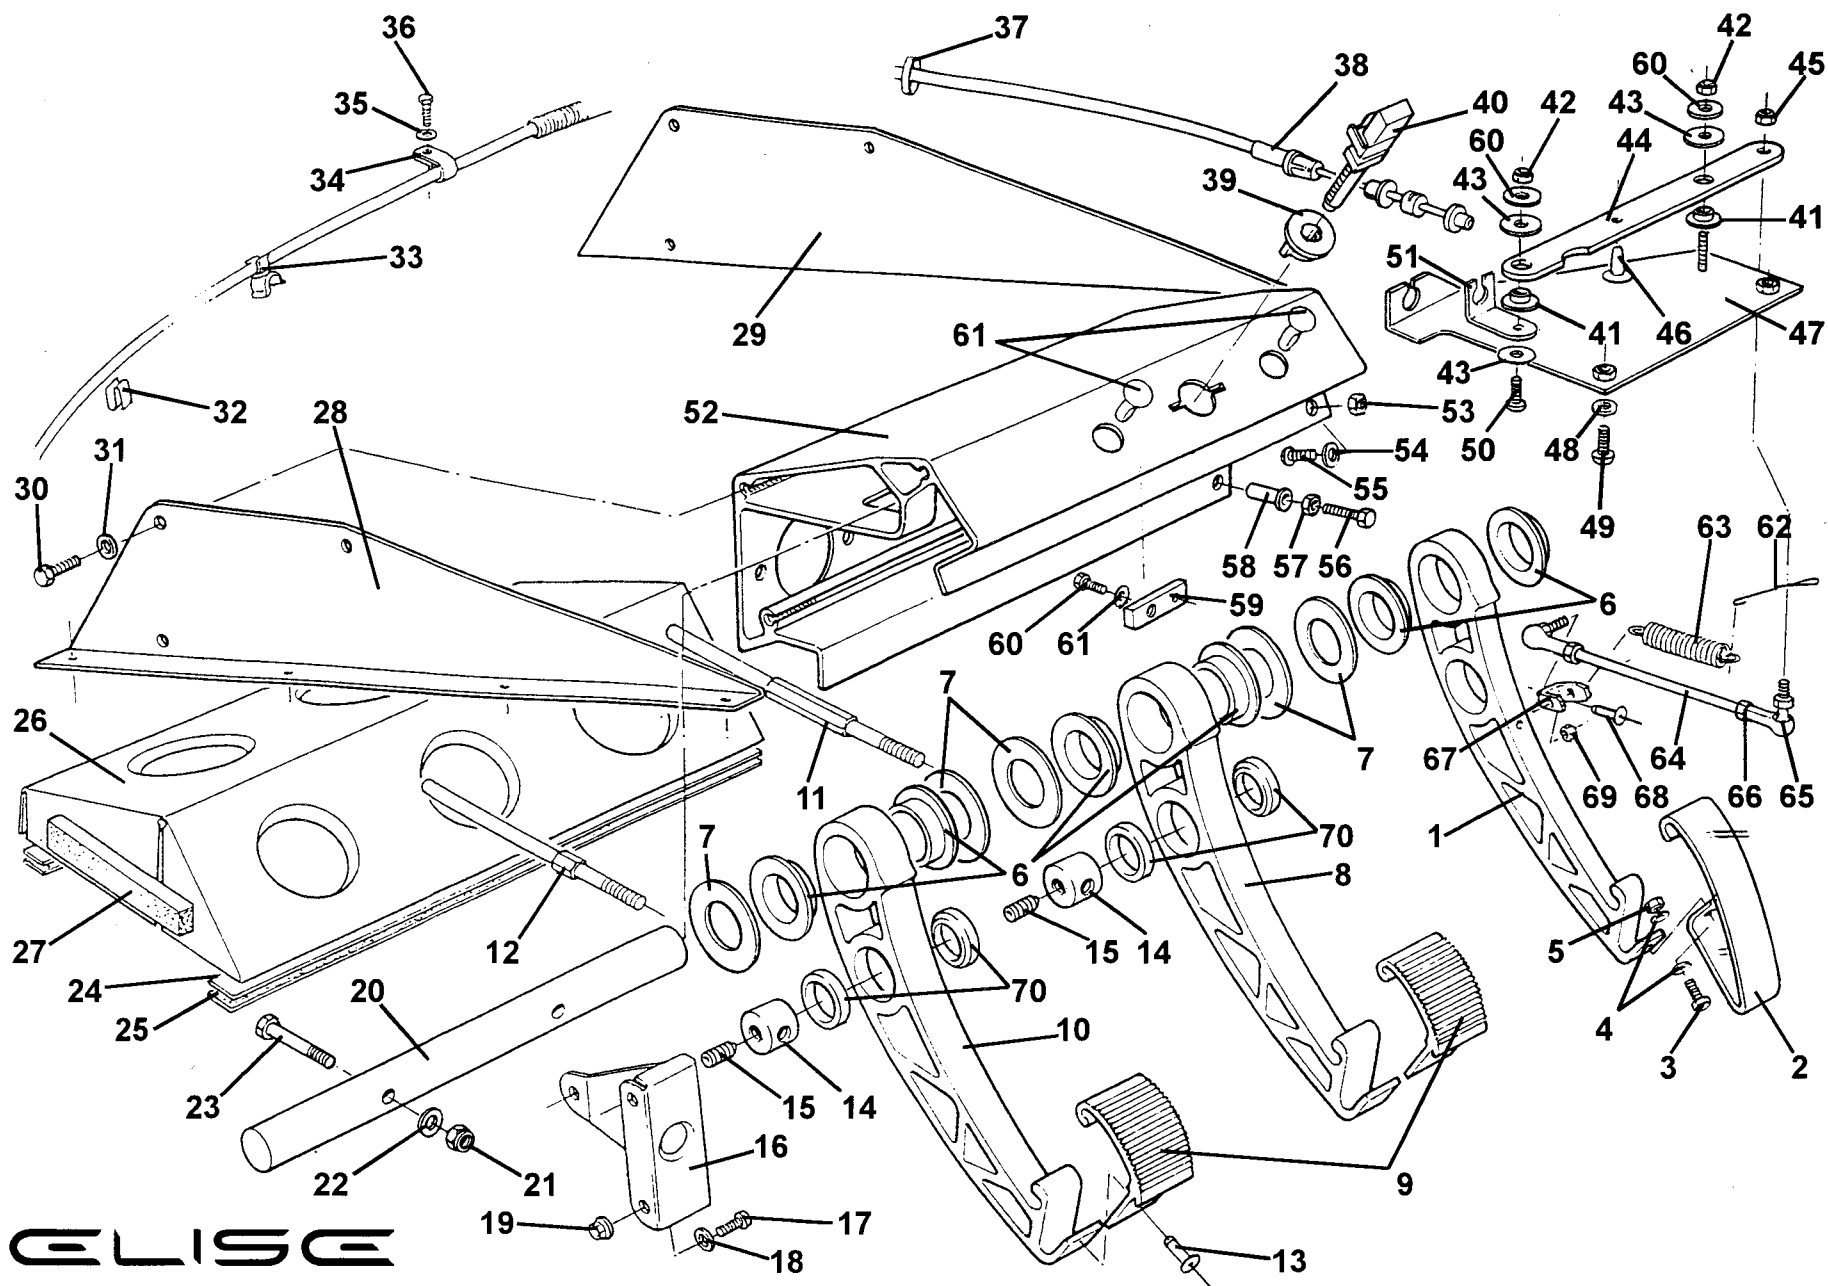


**ELISE**  
14.01



**Function Code 14.01 Pedal Box, Pedals, Throttle Cable**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
56	Setscrew, M6 x 35, throttle pedal stop			A075W1033Z	1
57	Nyloc Nut, M6, throttle pedal stop			A082W3085F	1
58	Pulsert, M6 x 1.0			A079W6156F	1
59	Nut Plate, pedal box			A111J0083F	1
60	Setscrew, M5 x 12, hex. hd.			A075W1021Z	1
61	Blanking Plug			A111J6020F	2
62	Link, throttle spring, RHD			A111J0096F	1
62a	Link, throttle spring, LHD			A111J0097F	1
63	Throttle Return Spring			A075J6029Z	1
64	Pull Rod , throttle linkage	Rod only		A111J0044F	1
65	Ball Joint, pull rod			A111J6015F	2
66	Locknut, M5, ball joint/pull rod			A082W3088F	2
67	Bracket, throttle pedal to pull rod			B111J0046F	1
68	Pop Rivet, 3/16", bracket to throttle pedal			A075W6087Z	1
69	Nyloc Nut, M5, throttle pedal link fix.			A100W3113F	2
70	Bush, synthetic, pedal trunnions			A111J6036F	4
71	Grease, molycite DC33 medium, pedal bush lube	Not illustrated		A111F6016V	As req.

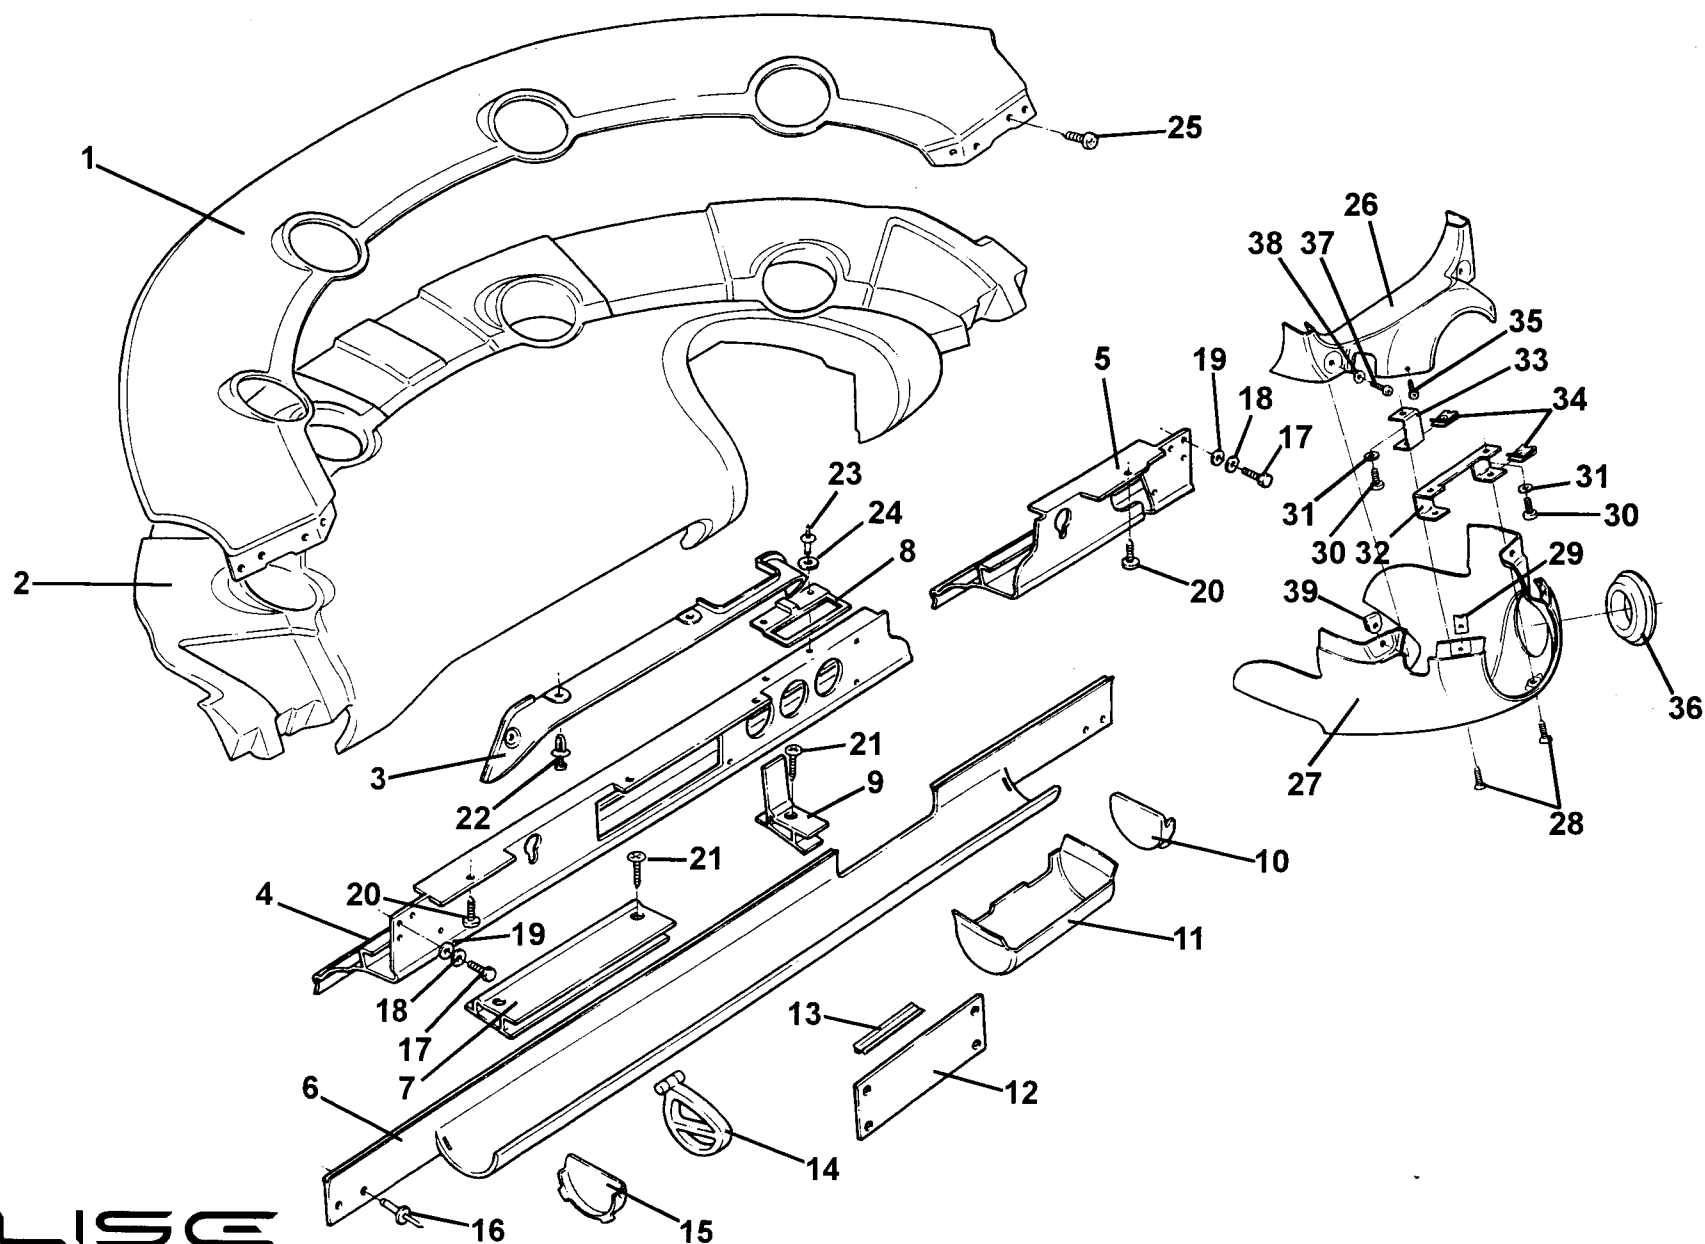

**ELISE**  
14.05


# Service Parts List **ELISE**



## Function Code 14.05 Fascia Structure & Supporting Hardware

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Capping Panel, fascia top			A117U0014F	1
02	Fascia Top Panel, black, RHD		Standard	C117U0090F	1
02a	Fascia Top Panel, black, LHD		Standard	C117U0089F	1
02b	Fascia Top Panel, black alcantara, RHD		Race Tech Pack	C117U0256F	1
02c	Fascia Top Panel, black alcantara, LHD		Race Tech Pack	C117U0257F	1
02d	Fascia Top Panel, black leather, RHD		Sports Tourer Pack	C117U0094F	1
02e	Fascia Top Panel, black leather, LHD		Sports Tourer Pack	C117U0093F	1
03	Trim Panel, lamp recess, RHD			B117U0142F	1
03a	Trim Panel, lamp recess, LHD			B117U0015F	
04	Dash Panel Upper, passenger, RHD			B117U0020F	1
04a	Dash Panel Upper, passenger, LHD			B117U0019F	1
05	Dash Panel Upper, driver, RHD			B117U0018F	1
05a	Dash Panel Upper, driver, LHD			B117U0017F	1
06	Dash Panel Lower/Stowage Shelf, RHD			C117U0032F	1
06a	Dash Panel Lower/Stowage Shelf, LHD			C117U0031F	1
07	Bracket, dash support, passenger's side			B117U0022F	1
08	Bracket, interior lamp fix.			A117U0149F	1
09	Bracket, dash suport, driver's side			A116U0096F	1


**ELISE**

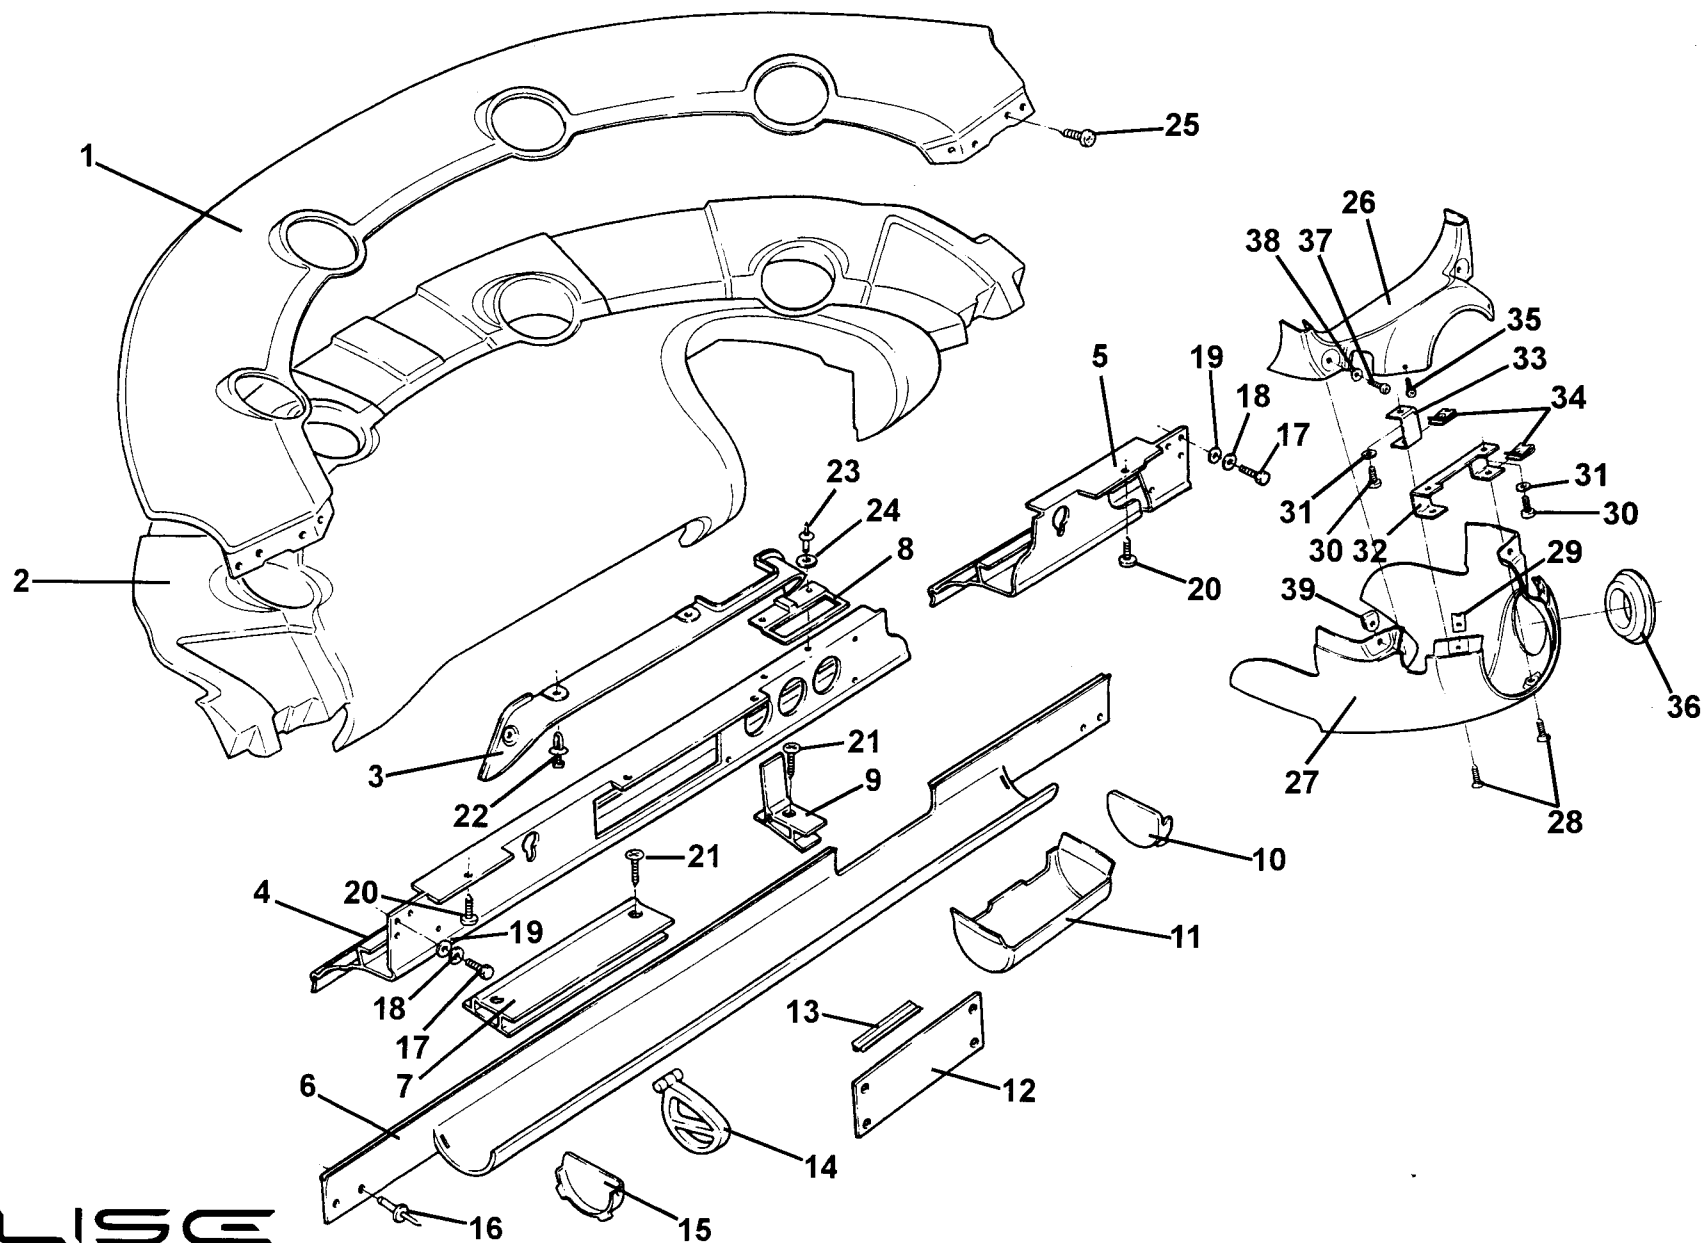

**ELISE**  
14.05

**Function Code 14.05 Fascia Structure & Supporting Hardware**


<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
10	Divider, stowage shelf, RH			<b>B117U0027F</b>	1
11	Tray, stowage shelf			<b>B117U0026F</b>	1
12	Blanking Panel, radio aperture			<b>C117U0122F</b>	1
13	Edging Strip, radio protection	Fitted to item 7			1
14	Divider, alloy, stowage shelf		Optional/accessory		As req.
15	Closing Panel, stowage shelf, LH			<b>B117U0028F</b>	1
16	Pop Rivet				2
17	Screw, hex. hd.				4
18	Washer, spring				4
19	Washer, flat				4
20	Screw, pan hd., pozi.				4
21	Screw, pan hd., pozi., brackets to chassis				3
22	Plastic Fastener				2
23	Pop Rivet				2
24	Washer, flat				2
25	Screw, pan hd., pozi., trim panel fix.				4
26	Column Shroud, upper			<b>C007U0024F</b>	1
27	Column Shroud, lower			<b>C117U0025F</b>	1
28	Screw, csk. hd., shroud to brackets				3
29	Spire Nut			<b>A075W5014Z</b>	2
30	Screw, brackets to column				3

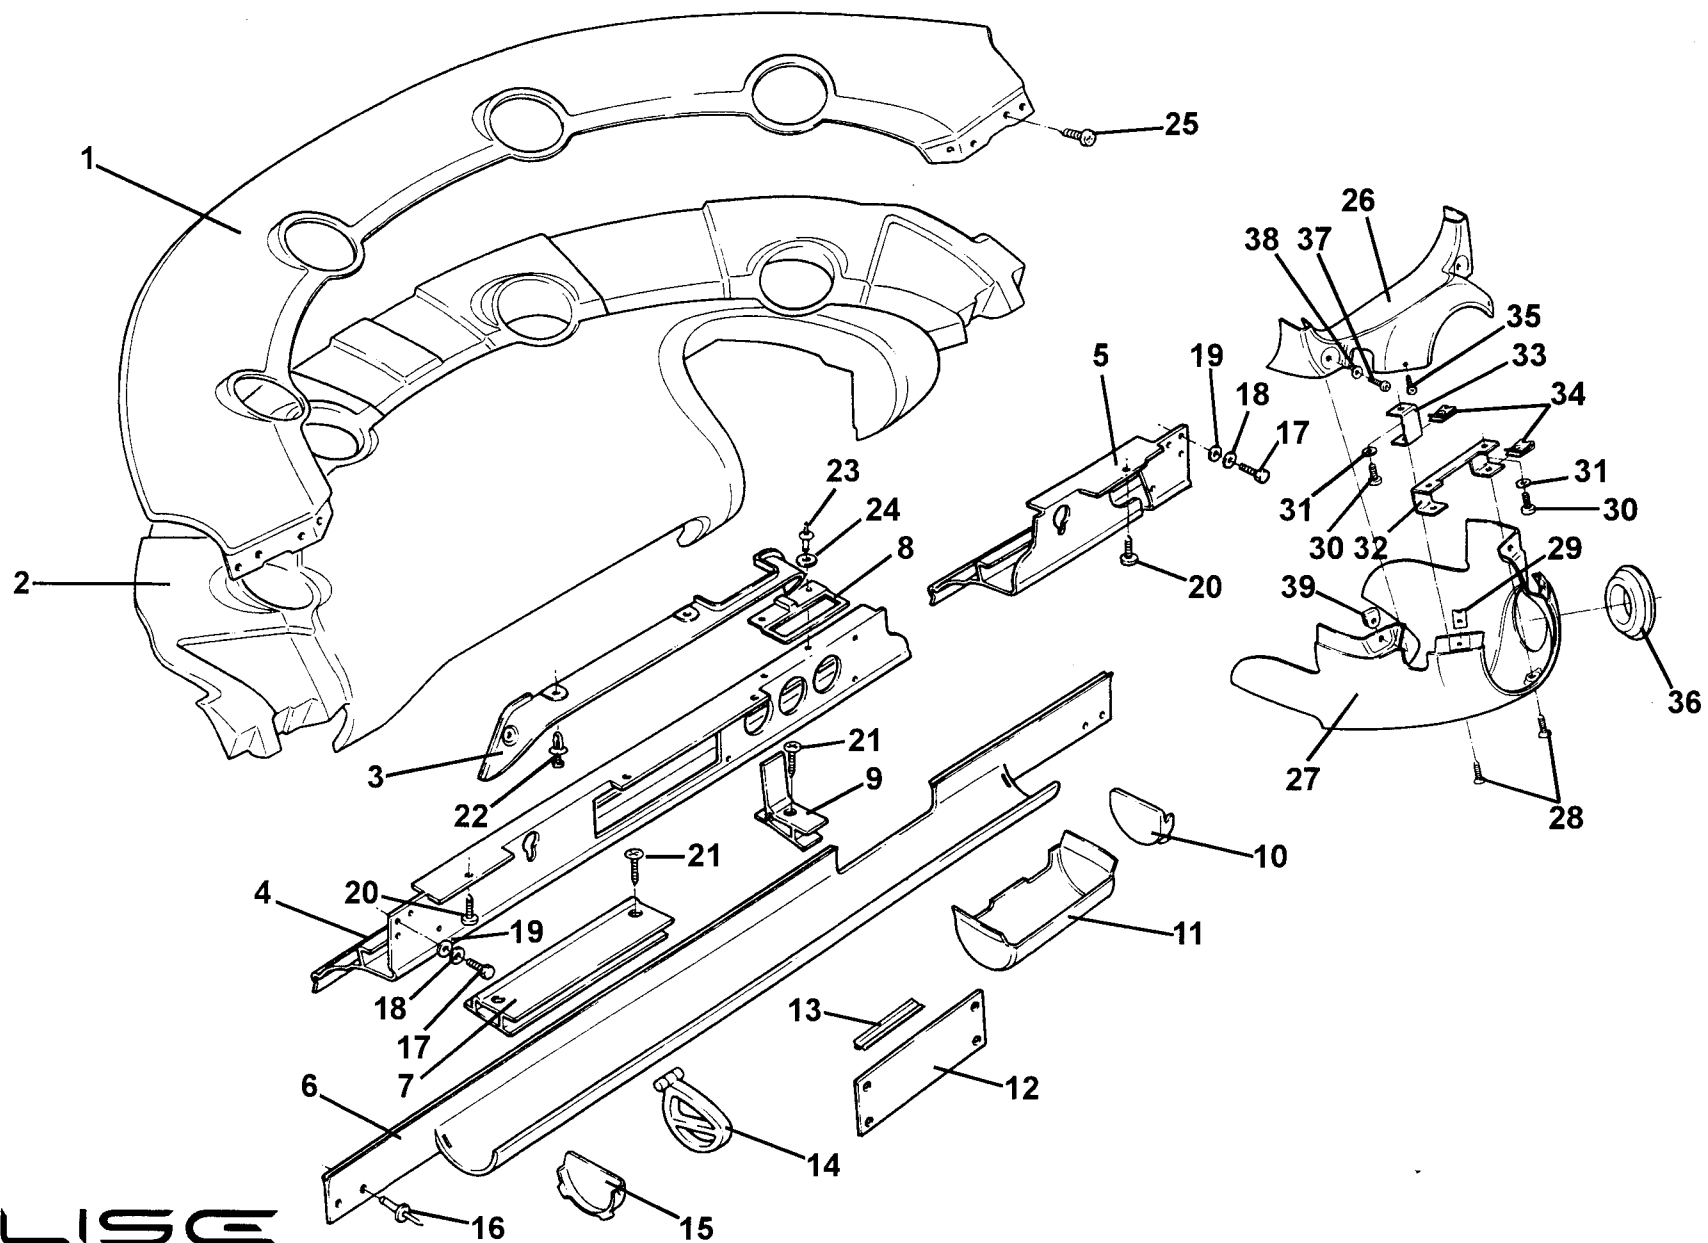

**ELISE**  
14.05

**Function Code 14.05 Fascia Structure & Supporting Hardware**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
31	Washer, flat				3
32	Bracket, shroud to column front				1
33	Bracket, shroud to column rear				1
34	Spire Nut				3
35	Screw, No.6 x 0.5", button hd.			A075W5012F	2
36	Finisher Ring, steering lock to shroud				2
37	Screw, ejot			A117F6001F	2
38	Washer, flat, m4 x 9 x 0.8			A082W4136F	2
39	Easy Fastener, ejot			A117F6000F	2

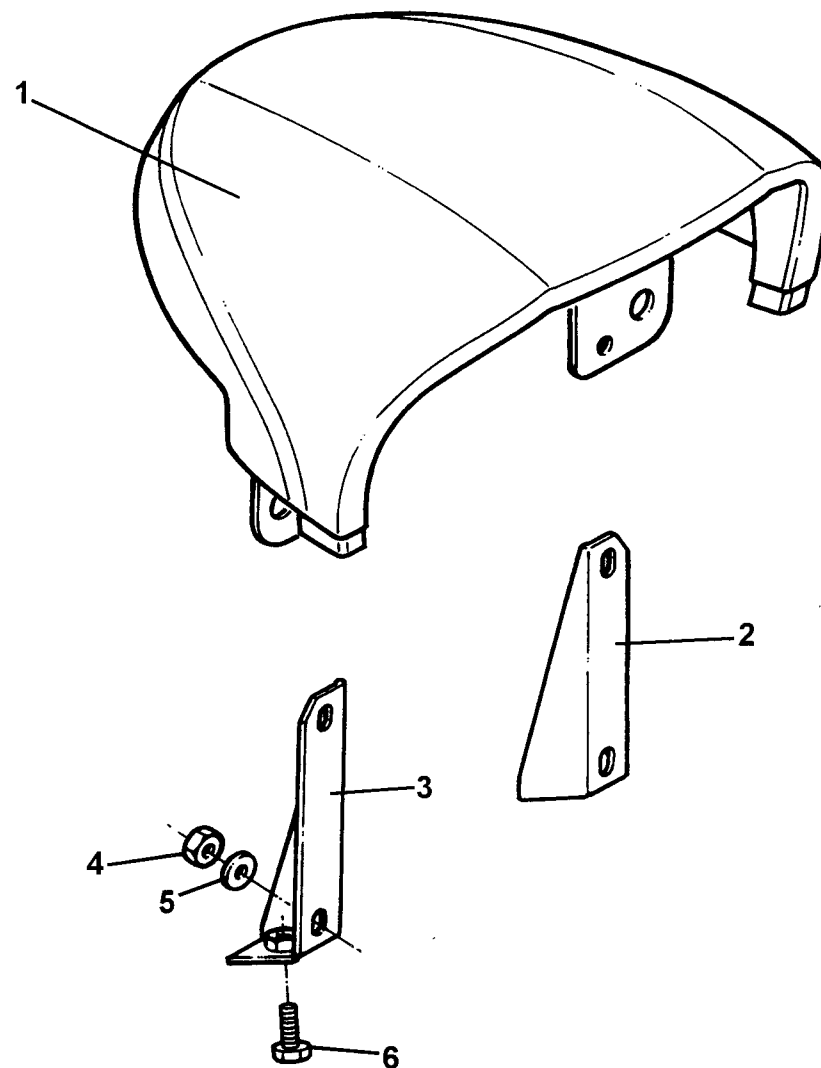

**ELISE**  
14.10




# Service Parts List **ELISE**



## Function Code 14.10 Instrument Cowling

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Instrument Cowling			B117U0040F	1
02	Bracket, instrument mounting, RH			C111U0156F	1
03	Bracket, instrument mounting, LH			C111U0155F	1
04	Nut, M4	Instrument pack to brackets		A075W3019F	4
05	Washer, flat, M4 x 9 x 0.8	Instrument pack to brackets		A082W4099F	4
06	Screw, M6 x 15, hex. hd.	Brackets to dash		A100A6024F	2

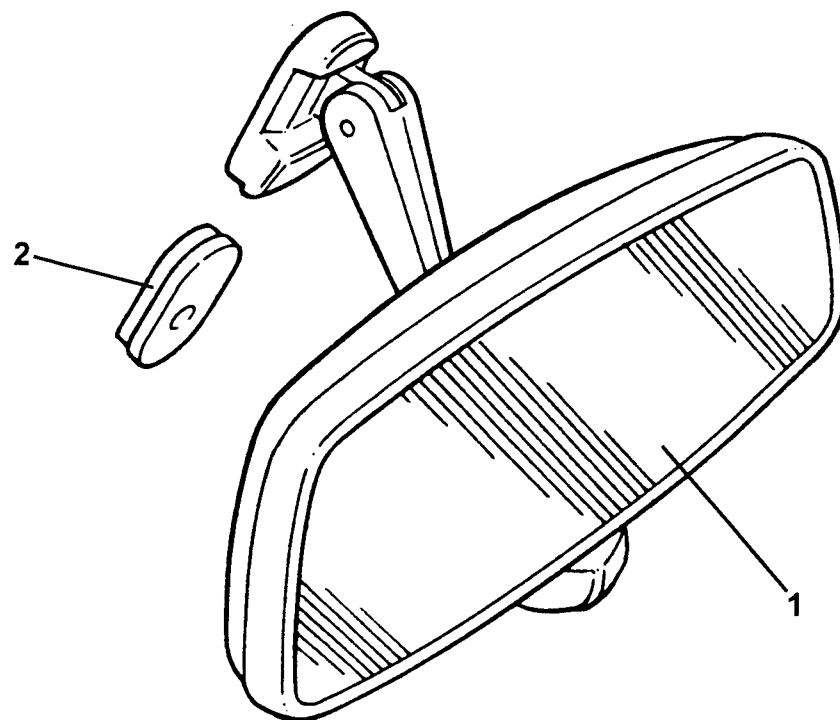

ELISE


15.05

# Service Parts List **ELISE**



## Function Code 15.05 Interior Driving Mirror

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Mirror, interior rear view			A111U6001F	1
02	Mounting Plinth, interior mirror			A111U6026F	1
03	Adhesive Kit, mirror mounting plinth	Not illustrated		A100B6230S	1

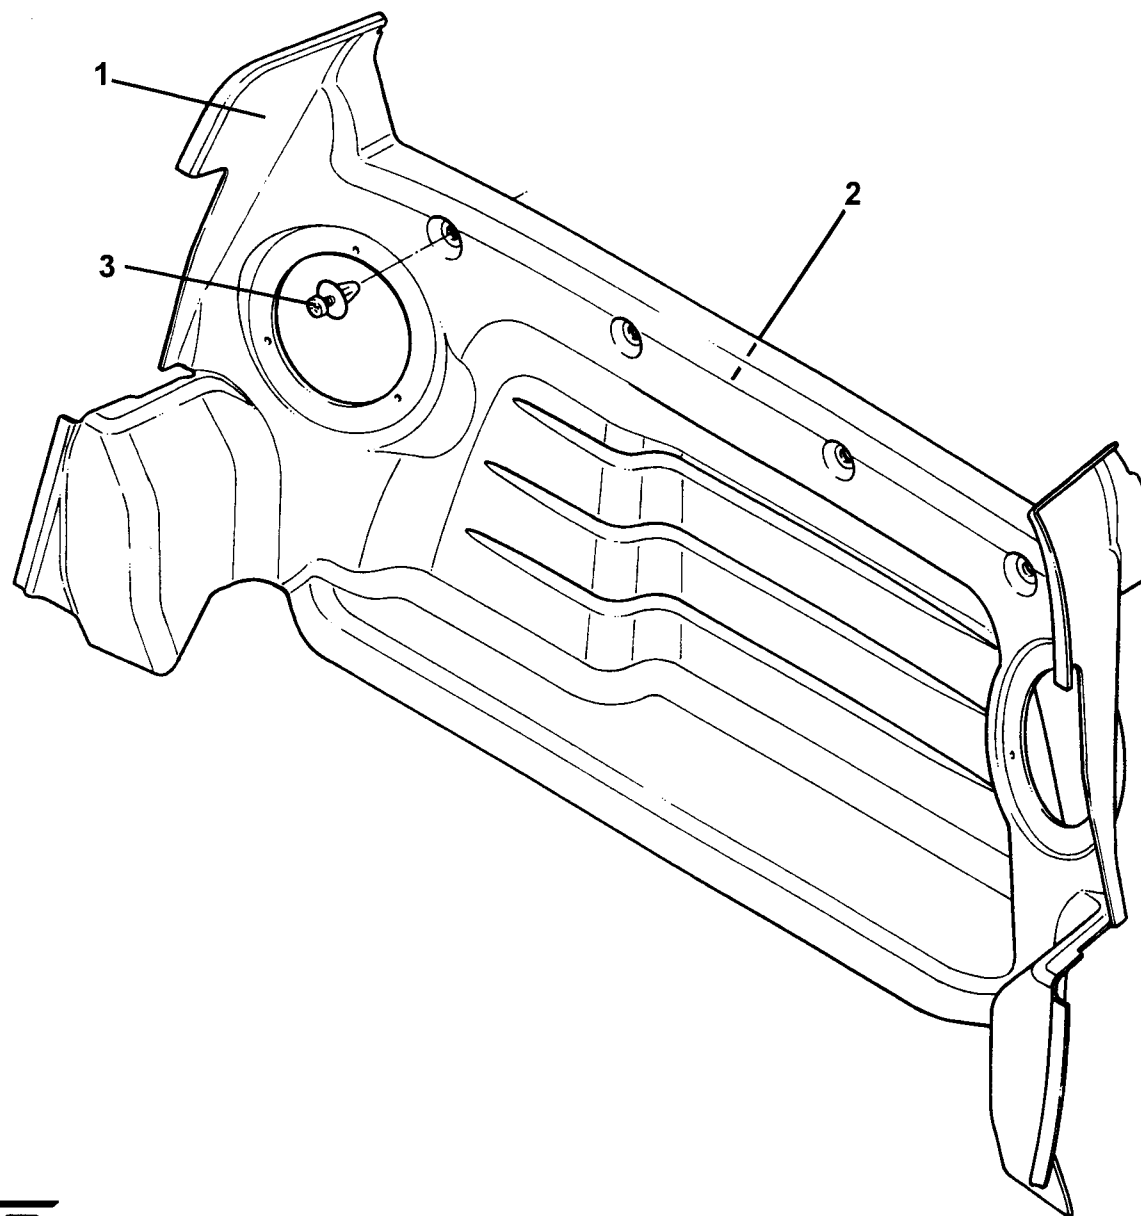


**ELISE**  
15.11

# Service Parts List **ELISE**



## Function Code 15.11 Interior Trim & Stowage Provision

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Rear Bulkhead Trim Panel, speakers		Audio options	<b>B117U0041F</b>	1
01a	Rear Bulkhead Trim Panel, no speakers		Standard	<b>A117U0251F</b>	1
02	Reinforcing Panel, panel rear			<b>A117U0164F</b>	1
03	Plastic Fastener, trim panel fix.			<b>A100W6391F</b>	6

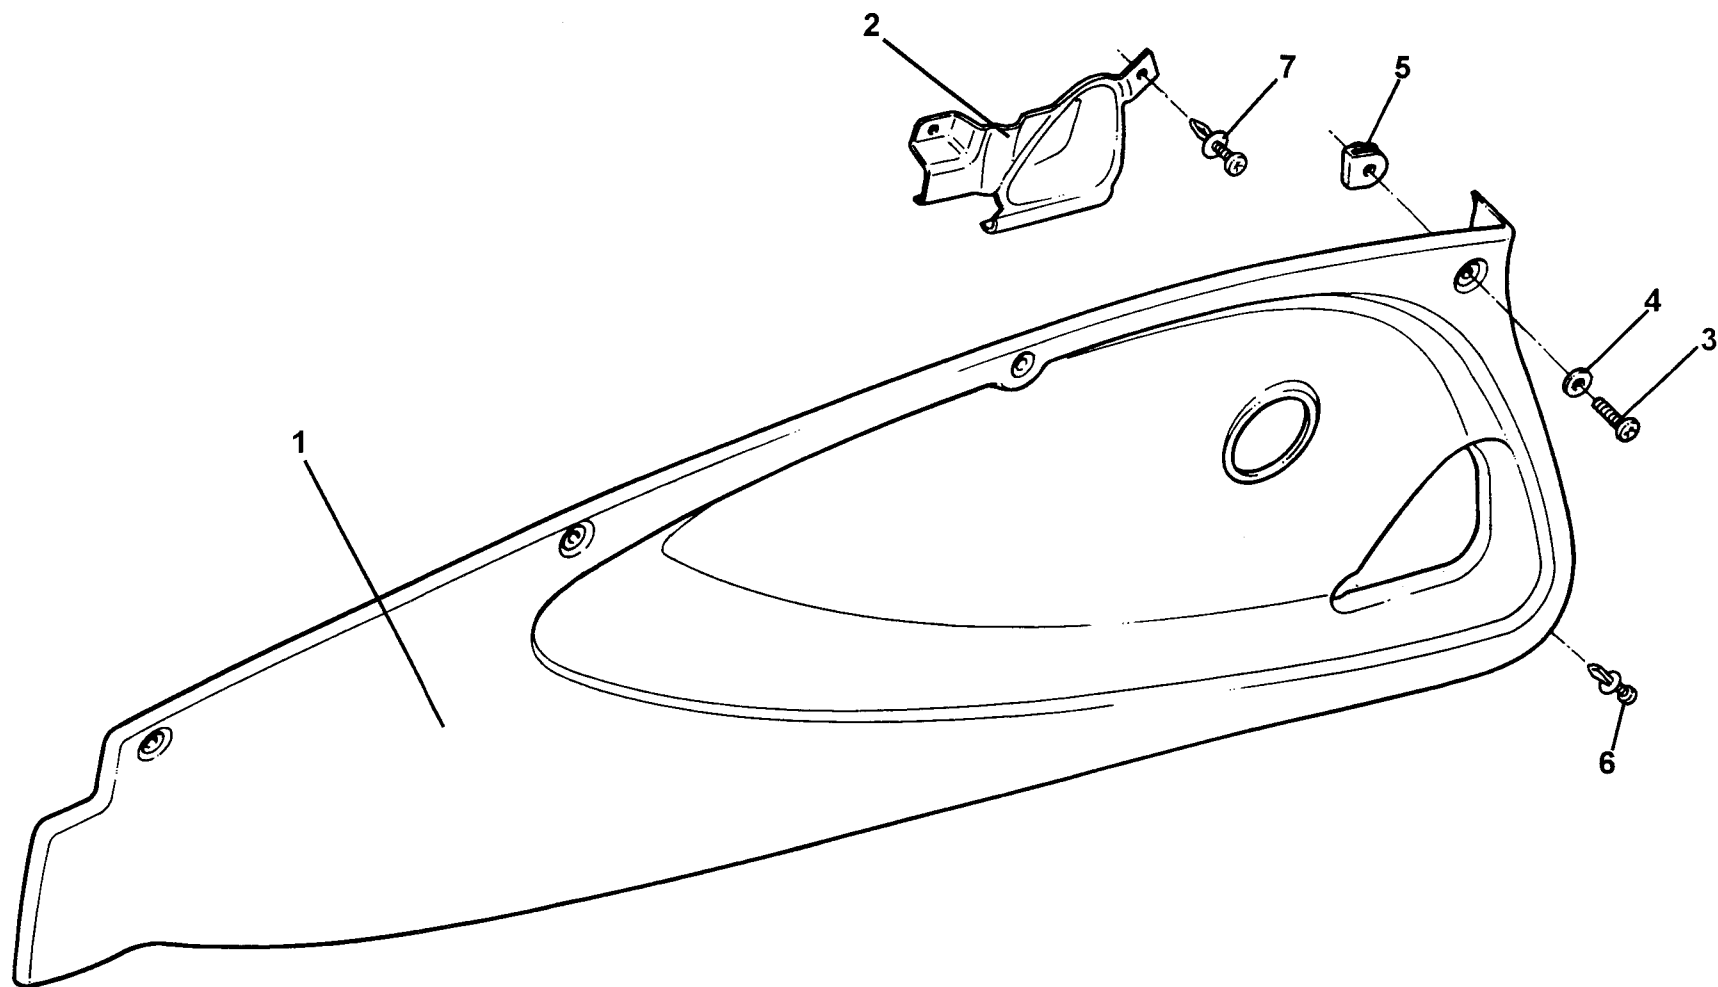

**ELISE**  
15.13


# Service Parts List **ELISE**



## Function Code 15.13 Front Door Trims

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Door Trim, silver, senosoft, LH		Standard	A117U0043F	1
01a	Door Trim, silver, senosoft, RH		Standard	A117U0044F	1
01b	Door Trim, silver, alcantara, LH		Race Tech Pack	B117U0203J	1
01c	Door Trim, silver, alcantara, RH		Race Tech Pack	B117U0202J	1
01d	Door Trim, black, alcantara, LH		Race Tech Pack	B117U0046J	1
01e	Door Trim, black, alcantara, RH		Race Tech Pack	B117U0045J	1
01f	Door Trim, red, alcantara, LH		Race Tech Pack	B117U0206J	1
01g	Door Trim, red, alcantara, RH		Race Tech Pack	B117U0207J	1
01h	Door Trim, blue, alcantara, LH		Race Tech Pack	B117U0204J	1
01i	Door Trim, blue, alcantara, RH		Race Tech Pack	B117U0205J	1
01j	Door Trim, black, leather, LH		Sports Tourer Pack	B117U0047J	1
01k	Door Trim, black, leather, RH		Sports Tourer Pack	B117U0048J	1
01l	Door Trim, silver, leather, LH		Sports Tourer Pack	B117U0208J	1
01m	Door Trim, silver, leather, RH		Sports Tourer Pack	B117U0209J	1
01n	Door Trim, red, leather, LH		Sports Tourer Pack	B117U0210J	1
01p	Door Trim, red, leather, RH		Sports Tourer Pack	B117U0211J	1
01q	Door Trim, green, leather, LH		Sports Tourer Pack	B117U0212J	1
01r	Door Trim, green, leather, RH		Sports Tourer Pack	B117U0211J	1

**ELISE**

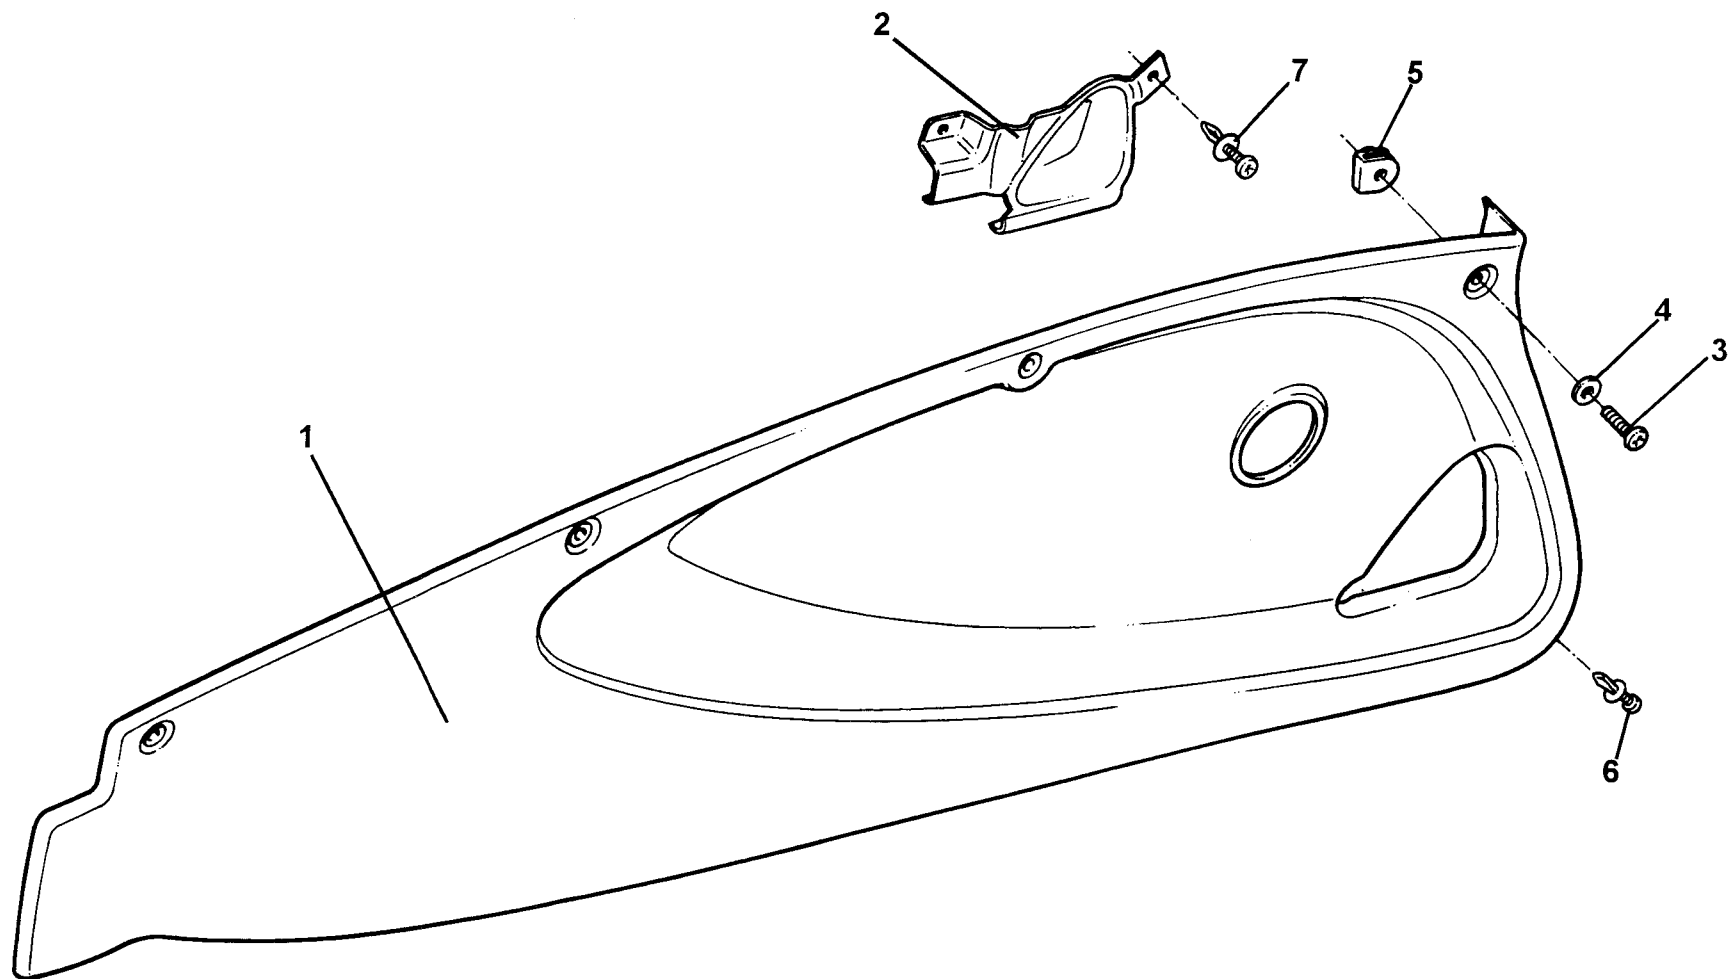


**ELISE**  
15.13



**Function Code 15.13 Front Door Trims**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01s	Door Trim, blue, leather, LH		Sports Tourer Pack	B117U0214J	1
01t	Door Trim, blue, leather, RH		Sports Tourer Pack	B117U0215J	1
01u	Door Trim, stone, leather, LH		Sports Tourer Pack	B117U0216J	1
01v	Door Trim, stone, leather, RH		Sports Tourer Pack	B117U0217J	1
01w	Door Trim, tan, leather, LH		Sports Tourer Pack	B117U0218J	1
01x	Door Trim, tan, leather, RH		Sports Tourer Pack	B117U0219J	1
02	Trim Panel, interior release handle, LH			A117U0049F	1
02a	Trim Panel, interior release handle, RH			A117U0050F	1
03	Screw, Ejot, trim to door			A117F6001F	8
04	Washer, flat, M4 x 9 x 0.3, SS			A082W4136F	8
05	Spirenut, plastic			A117F6001F	8
06	Plastic Fastener, trim to door lower			A100W6479F	8
07	Plastic Fastener, escutcheon to door			A100W6479F	2

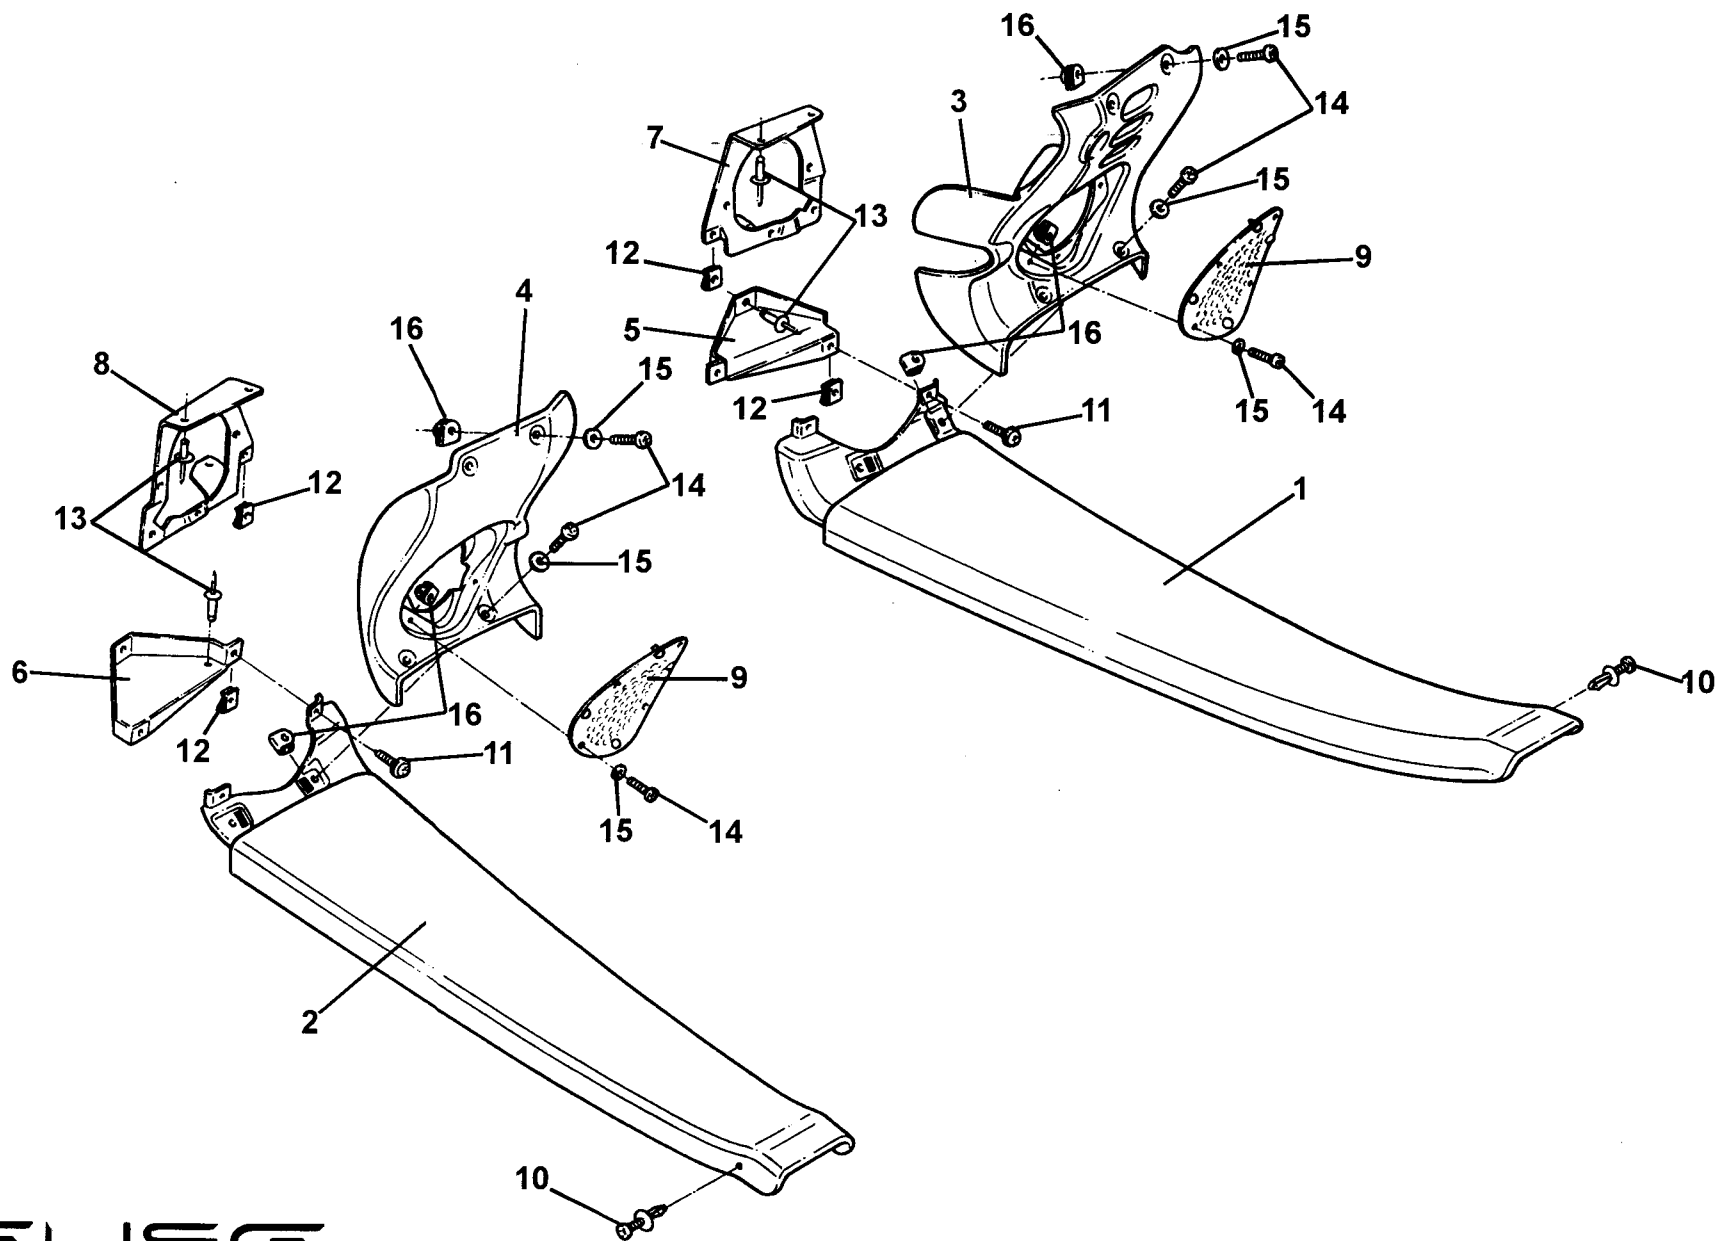

**ELISE**  
15.18


# Service Parts List **ELISE**



## Function Code 15.18 Interior Trim, Chassis Trim Panels

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Sill Trim Panel, RH			A117U0112F	1
02	Sill Trim Panel, LH			A117U0117F	1
03	'A' Post Trim Panel/Speaker Housing, RH, RHD	With switch apertures	4 speaker audio system	A117U0068F	1
03a	'A' Post Trim Panel/Speaker Housing, RH, LHD		4 speaker audio system	A117U0067	1
03b	'A' Post Trim Panel, RH, RHD	With switch apertures		A117U0066F	1
03c	'A' Post Trim Panel, RH, LHD			A117U0069F	1
04	'A' Post Trim Panel/Speaker Housing, LH, RHD		4 speaker audio system	A117U0072F	1
04a	'A' Post Trim Panel/Speaker Housing, LH, LHD	With switch apertures	4 speaker audio system	A117U0071F	1
04b	'A' Post Trim Panel, LH, RHD			A117U0070F	1
04c	'A' Post Trim Panel, LH, LHD	With switch apertures		A117U0065F	1
05	Bracket, trim support, RH		Standard car	A117U0144F	1
06	Bracket, trim support, LH		Standard car	A117U0145F	1
07	Bracket, speaker retention, RH		4 speaker audio system	A117U0074F	1
08	Bracket, speaker retention, LH		4 speaker audio system	A117U0073F	1
09	Speaker Grille		4 speaker audio system		2
10	Plastic fastener, trim to body			A111W6534F	2
11	Screw, self tapping, No.8 x 3/4", flg, hd., pozi			A075W5074Z	4
12	Spirenut, No.8			A075W6016Z	4

**ELISE**

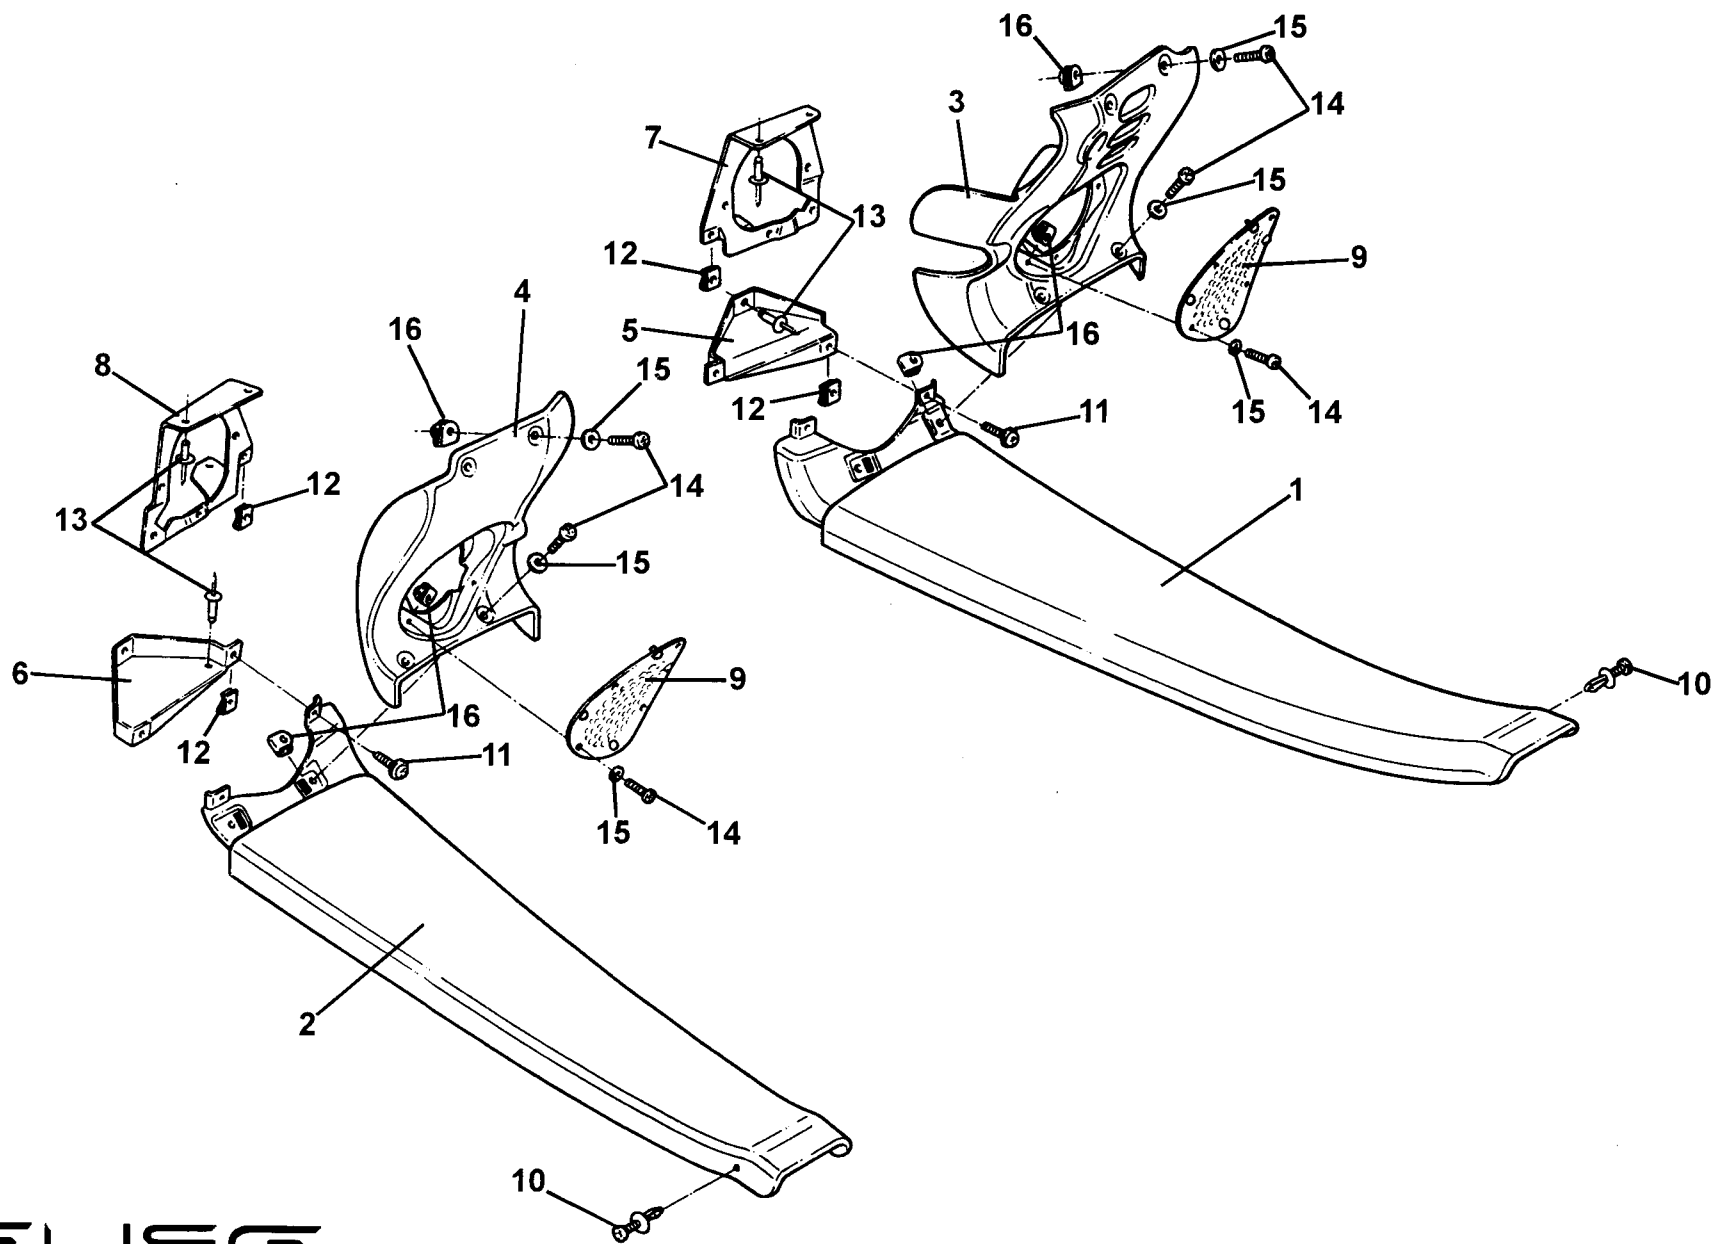


**ELISE**  
15.18

---

**Function Code 15.18 Interior Trim, Chassis Trim Panels**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
13	Pop Rivet		6 for speaker brackets	<b>A075W6069Z</b>	4
14	Screw, pan hd.				16
15	Washer, flat				16
16	Spirenut, plastic				16

---

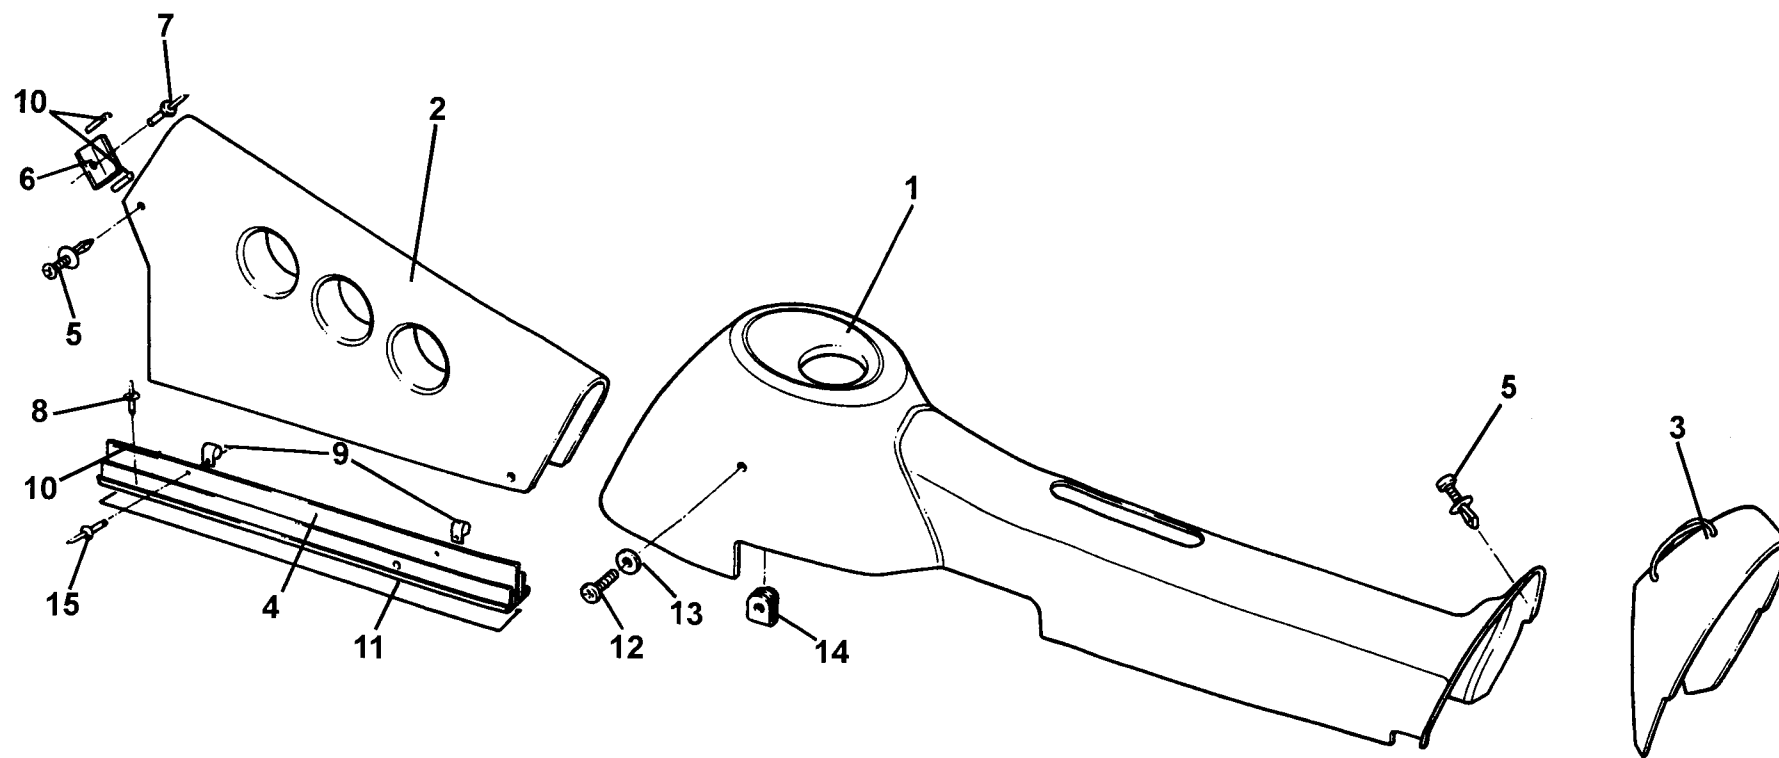

ELISE

15.19


# Service Parts List **ELISE**



## Function Code 15.19 Centre Tunnel Trim, Gear Lever Gaiters/Shrouds

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Cover, gear lever/parking brake, RHD			<b>B117U0062F</b>	1
01a	Cover, gear lever/parking brake, LHD			<b>B117U0061F</b>	1
02	Cover, tunnel front, RHD	Alloy, perforated	Sports Tourer/Race Tech	<b>A117U0166F</b>	1
02a	Cover, tunnel front, LHD	Alloy, perforated	Sports Tourer/Race Tech	<b>A117U0165F</b>	1
02b	Cover, tunnel front, RHD	Alloy	Standard	<b>B111A0068F</b>	1
02c	Cover, tunnel front, RHD	Alloy	Standard	<b>A111A0106F</b>	1
03	Holder, phone/cup		Sports Tourer Pack	<b>A117U0064F</b>	1
04	Mounting Bracket, front tunnel to floor			<b>C111A0067F</b>	1
05	Plastic Fastener, tunnel fix.			<b>A082W6505F</b>	5
06	Mounting Bracket, front tunnel to toeboard			<b>B111A0069F</b>	1
07	Pop Rivet, 3/16" x 9/16", bracket fix.			<b>A082W6243F</b>	1
08	Blind Rivet, tunnel mount fix.			<b>A111W6613F</b>	4
09	'P' Clip, harness retention			<b>A082W5457F</b>	2
10	Edging Strip, harness protection			<b>B075U6054V</b>	0.16M
11	Tape, double sided, tunnel mount to floor			<b>B075U6070V</b>	0.55M
12	Screw, pan hd., pozi.				2
13	Washer, flat				2
14	Spire Nut, plastic				2

**ELISE**

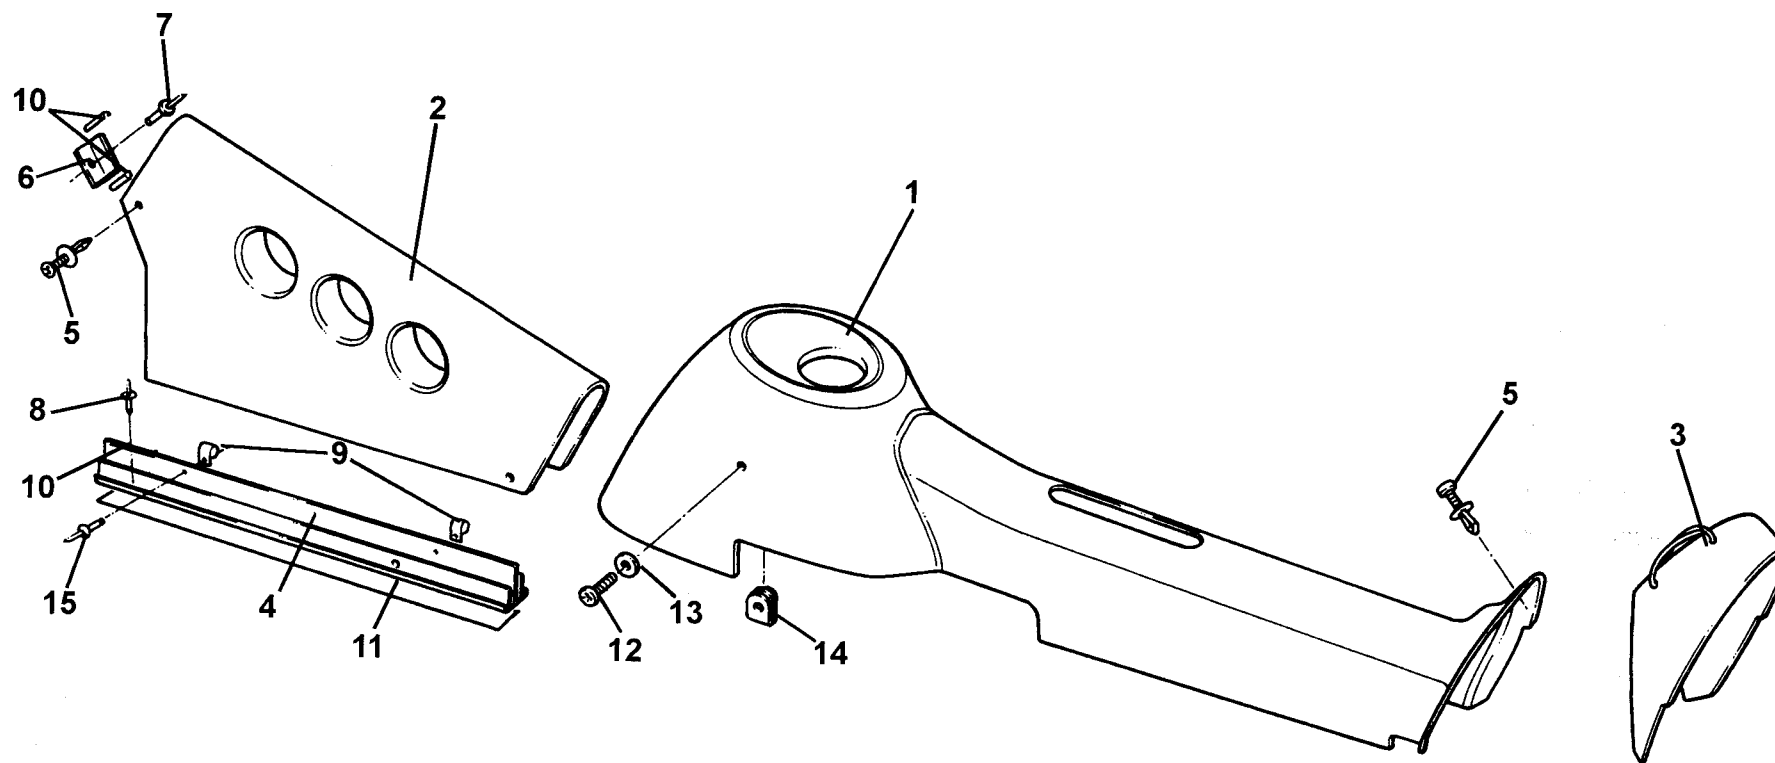

ELISE

15.19




---

**Function Code 15.19 Centre Tunnel Trim, Gear Lever Gaiters/Shrouds**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
15	Pop Rivet, 'P' clip fix.				2

---

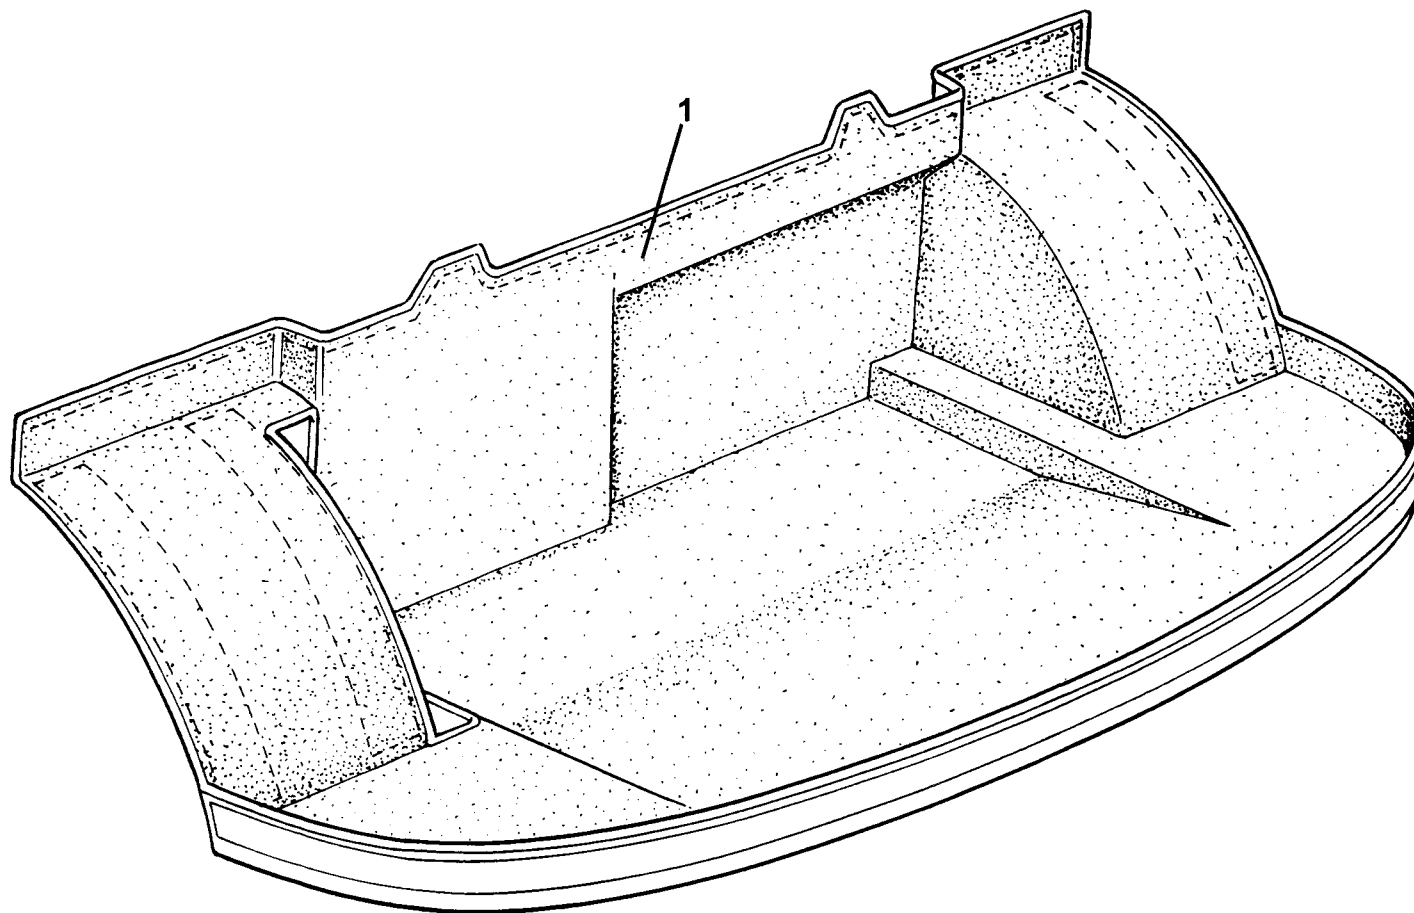

ELISE


15.24

# Service Parts List **ELISE**



## Function Code 15.24 Luggage Compartment Carpet

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Carpet Assembly, luggage compartment			A117V0052J	1

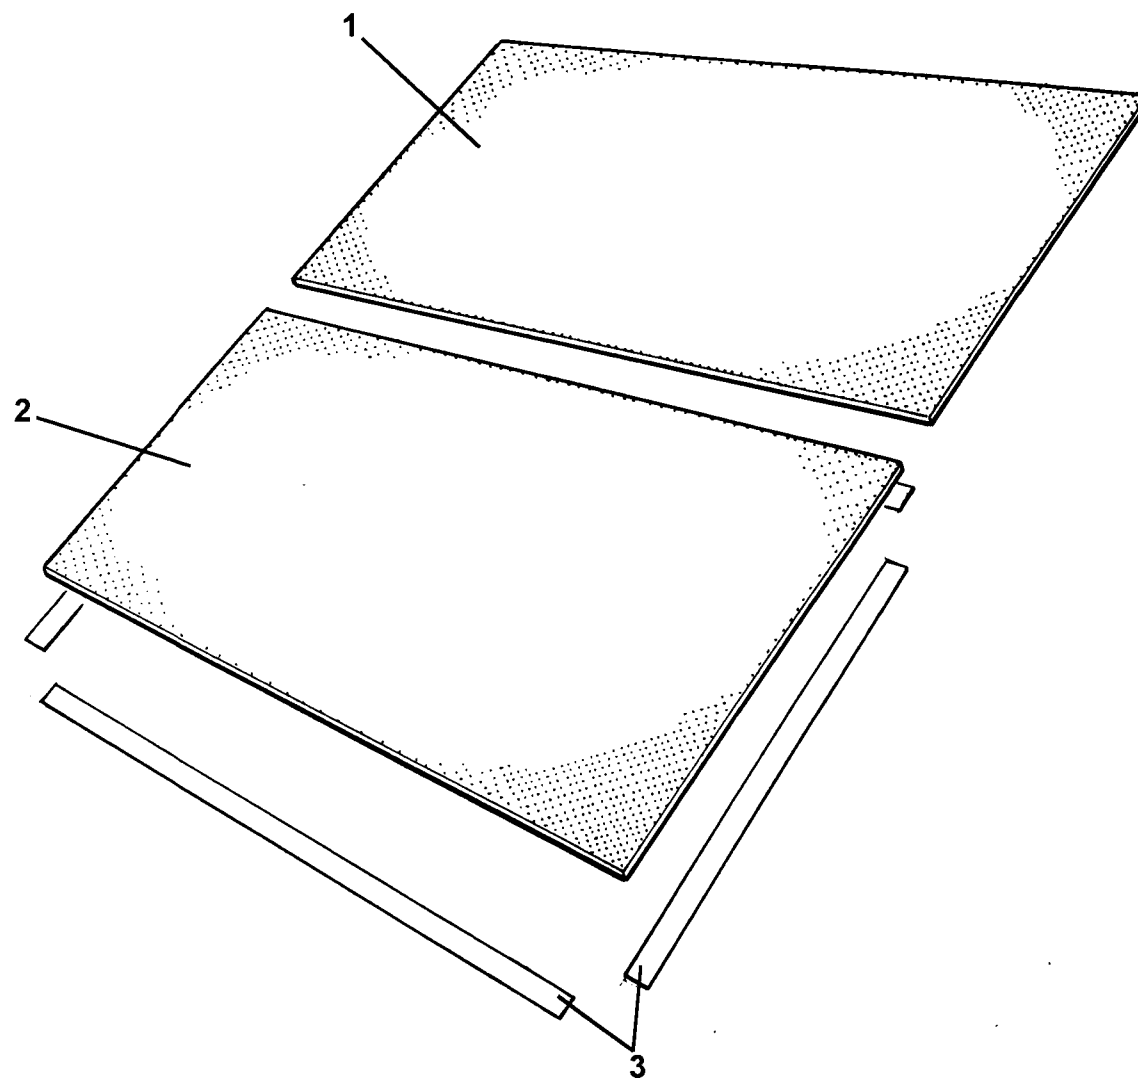

**ELISE**  
**15.30**


# Service Parts List **ELISE**



## Function Code 15.30 Carpeting & Mats

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Floor Mat, rubber, RH, RHD		Standard	A111V0046K	1
01a	Floor Mat, rubber, RH, LHD		Standard	A111V0048K	1
01b	Floor Mat, alloy effect, RH, RHD		Race Tech Pack	B117V0042	1
01c	Floor Mat, alloy effect, RH, LHD		Race Tech Pack	B117V0044	1
02	Floor Mat, rubber, LH, RHD		Standard	A111V0047K	1
02a	Floor Mat, rubber, LH, LHD		Standard	A111V0049K	1
02b	Floor Mat, alloy effect, LH, RHD		Race Tech Pack	B117V0041	1
02c	Floor Mat, alloy effect, LH, LHD		Race Tech Pack	B117V0043	1
03	Double sided tape. 25mm width			B075U6070V	7.5m

**ELISE**

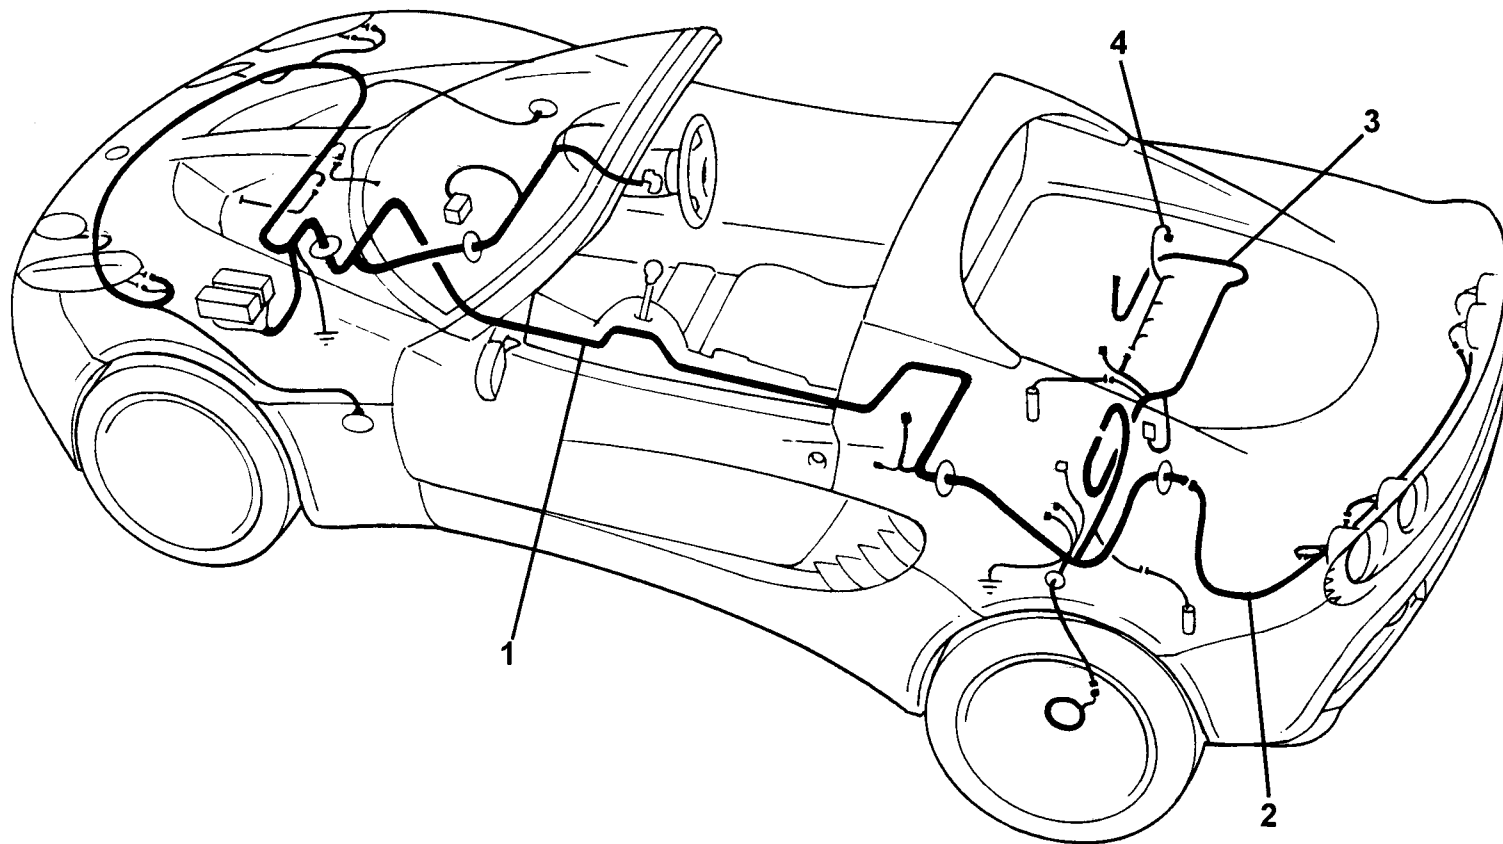


**ELISE**  
17.01

# Service Parts List **ELISE**



## Function Code 17.01 Harnesses, Leads

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Harness, main			F117M0042F	1
02	Harness, rear			C117M0004F	1
03	Harness, engine			A117E6008F	1
04	Harness, fuel injectors/CMP sensor				1

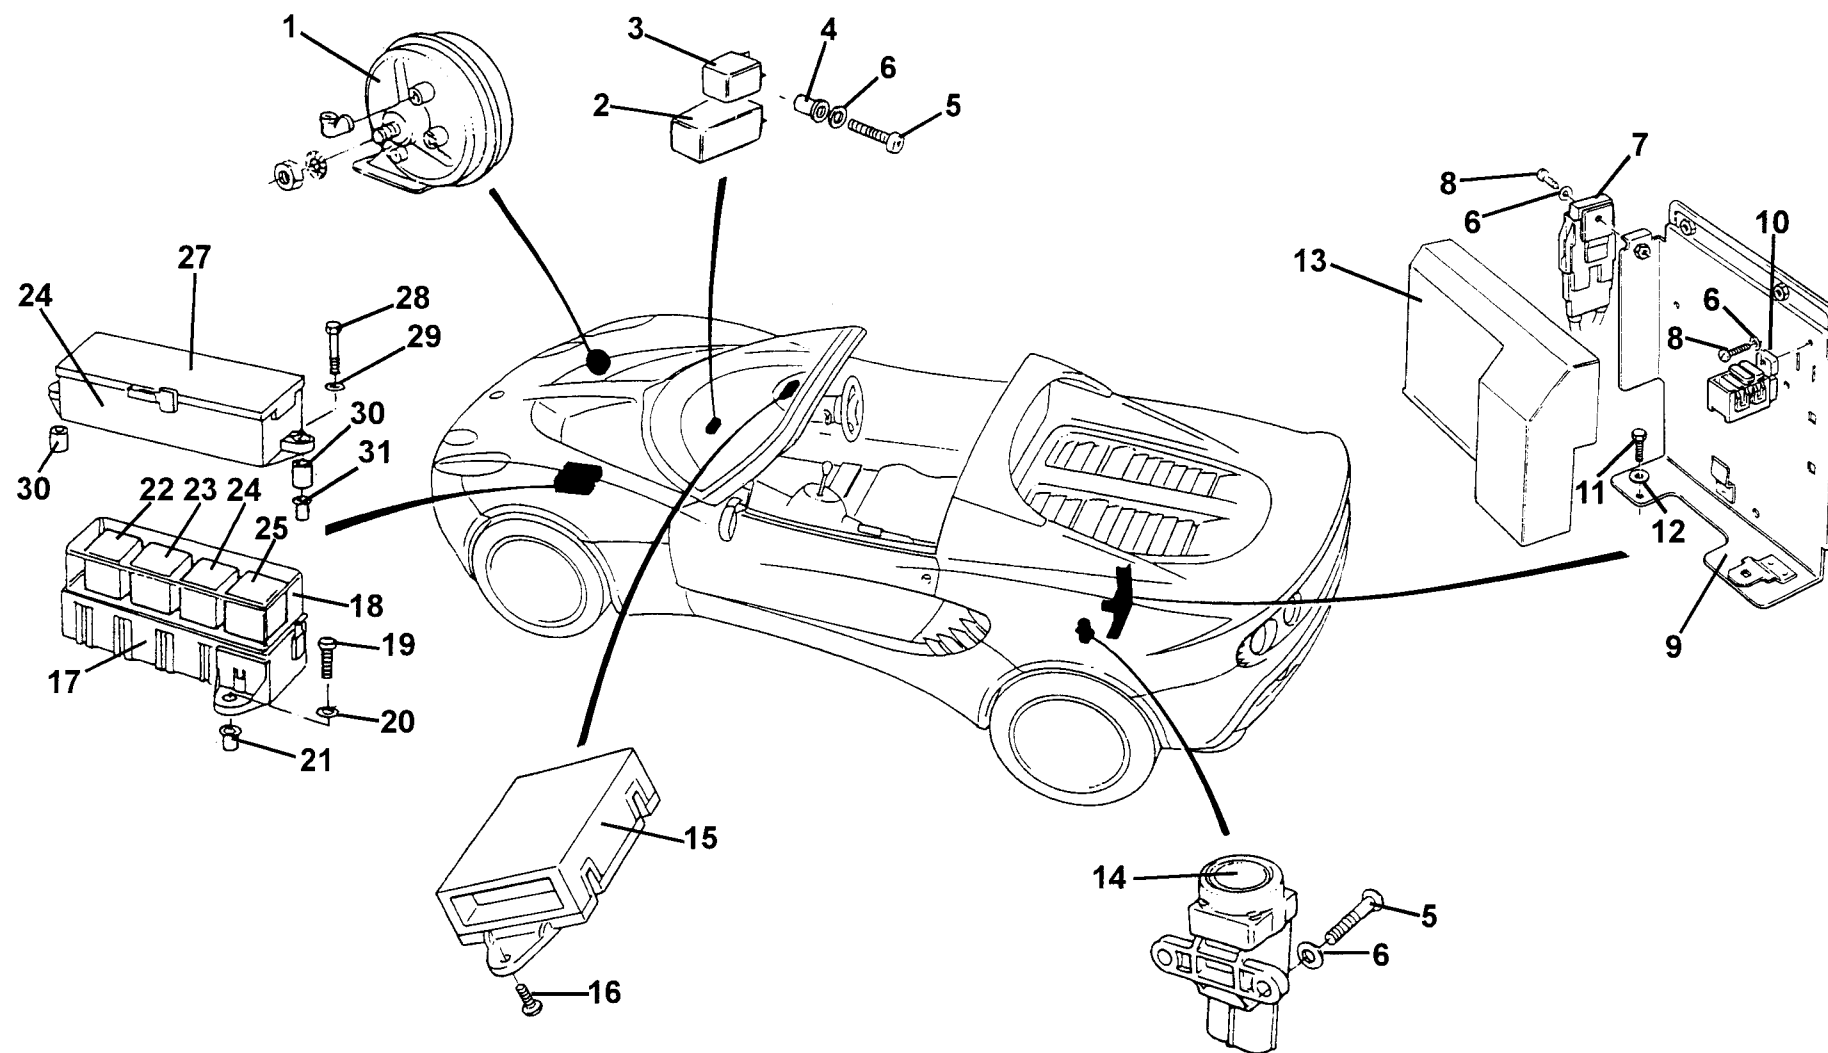

**ELISE**  
17.03




# Service Parts List **ELISE**



## Function Code 17.03 Horn, Inertia Switch, Fuses & Relays

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Horn 'Low ' Note			A100M6031F	1
02	Module, wiper delay			A082M6457F	1
03	Module, flasher Unit			A083M6303F	1
04	Pulsert, M5			A111W6539F	2
05	Screw, M5 x 16, pan hd. pozi.			A082W5107F	2
06	Washer, flat, M5 x 10 x 1.0			A075W4011Z	7
07	Maxi Fuse, 80A			A117M6023F	1
08	Screw, M5 x 12, pan hd., fuse holders fix.			A075W5085Z	2
09	Electrics/ECM Mounting Plate	For ECM & fixings see 17.06		A117M0051F	1
10	Plastic Clip, fuse holder retention			A111M6020F	1
11	Screw, M8 x 16, hex. hd. plate fix.			A075W1028Z	4
12	Washer, flat, M8 x 15			A075W4015Z	4
13	Cover, ECM/Electrics protection			B117M0025F	1
14	Inertia switch			A082M6598F	1
15	Switch Controller			A117M0008F	1
16	Screw, pan hd. pozi., controller to bracket				2
17	Relay Station	Incl., brackets, terminals		A111M6112J	1
18	Cover, relay station			A111M6077S	1


**ELISE**

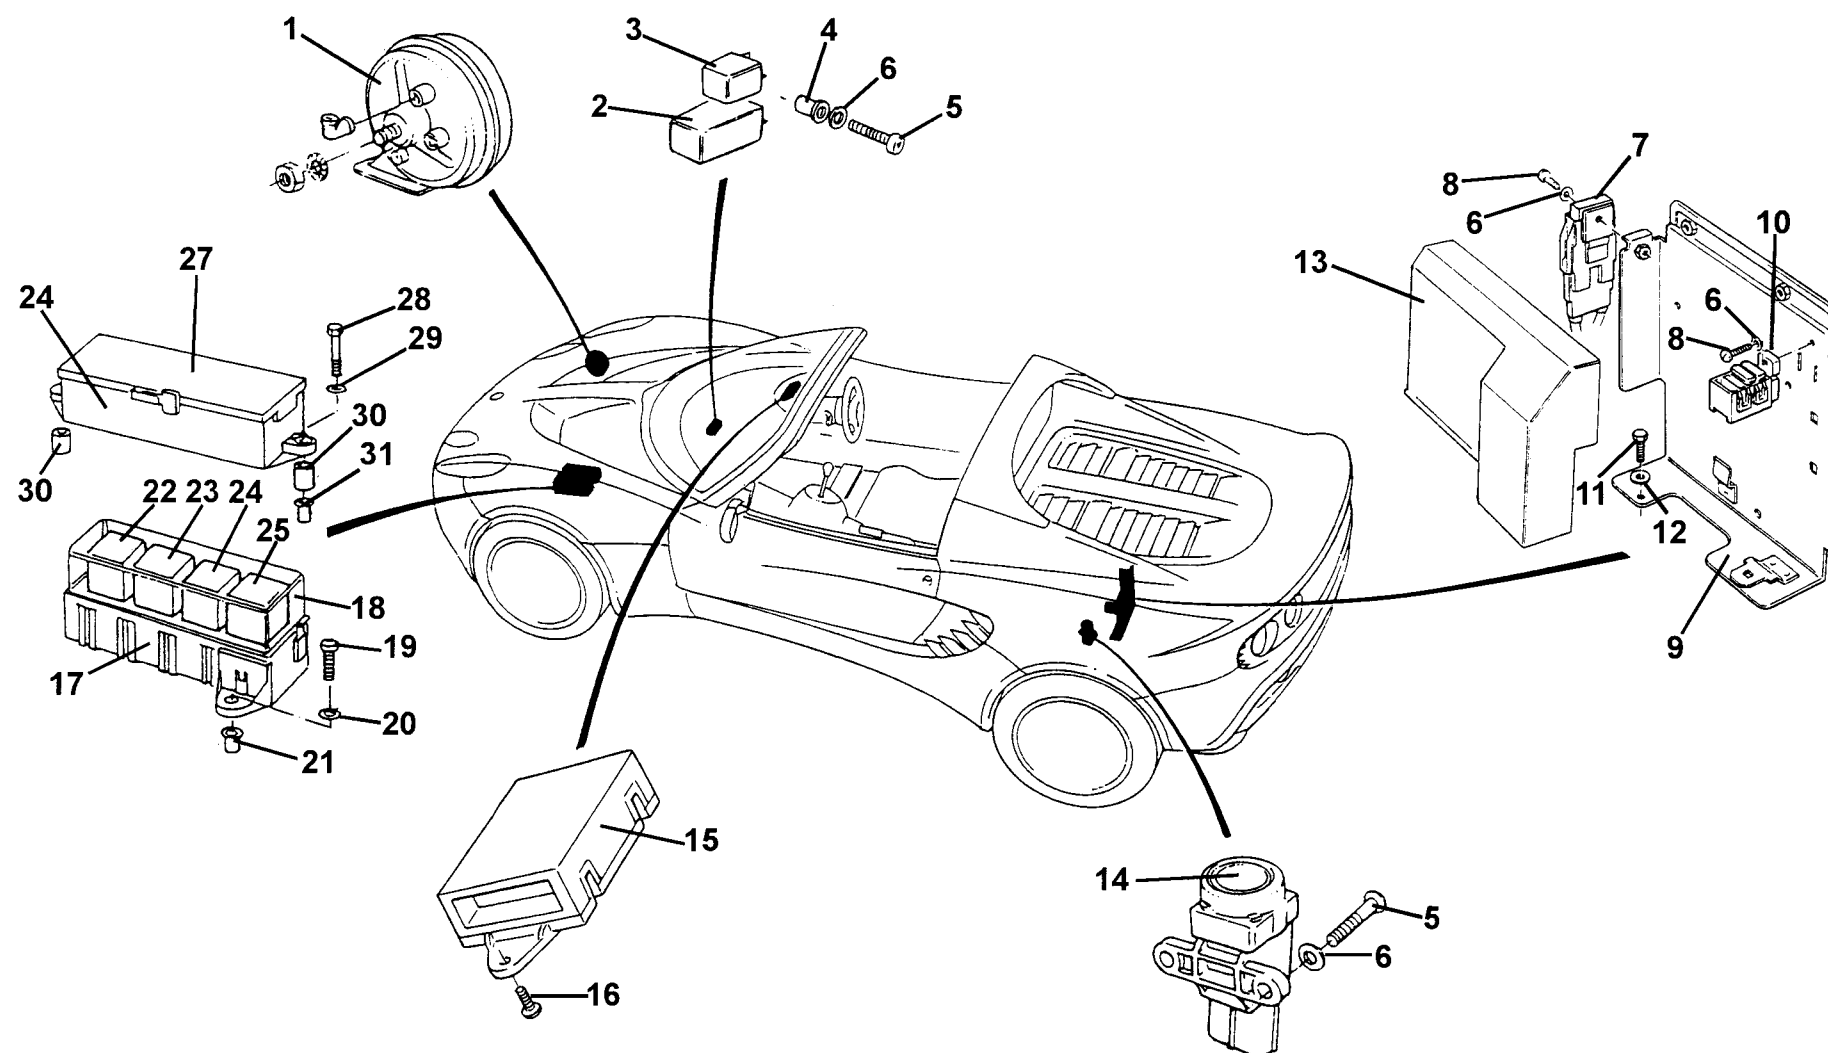

**ELISE**  
17.03

**Function Code 17.03 Horn, Inertia Switch, Fuses & Relays**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
19	Screw, M6 pozi, relay box to wheelarch			A075W5089Z	4
20	Washer, flat, M6, relay boxes to wheelarch			A075W4015Z	4
21	Rawlnut, M6, relay boxes to wheelarch			A075W6140F	4
22	Relay Single Contact Changeover 30A	Horn		C079M6141F	1
23	Relay Single Contact Changeover 30A	Cooling fan		C079M6141F	1
24	Relay Single Contact Changeover 30A	Dip beam		C079M6141F	1
25	Relay Double Contact 2 x 15A	Main beam		B082M6182F	1
26	Fusebox Assembly	Incl., fuses, brackets, terminals		A111M6112J	1
27	Cover, fusebox			A111M6115S	1
28	Bolt, M5 x 45, fuse box to wheelarch			A082W2106F	2
29	Washer flat, M5, fuse box to wheelarch			A075W4011Z	2
30	Spacer, fitted to fuse box			A111U0368F	2
31	Rawlnut, M5, fuse box to wheelarch			A075W6074F	2
32	Module, seat belt buzzer	Not illustrated	Japan, Australia only	A082M4866F	1

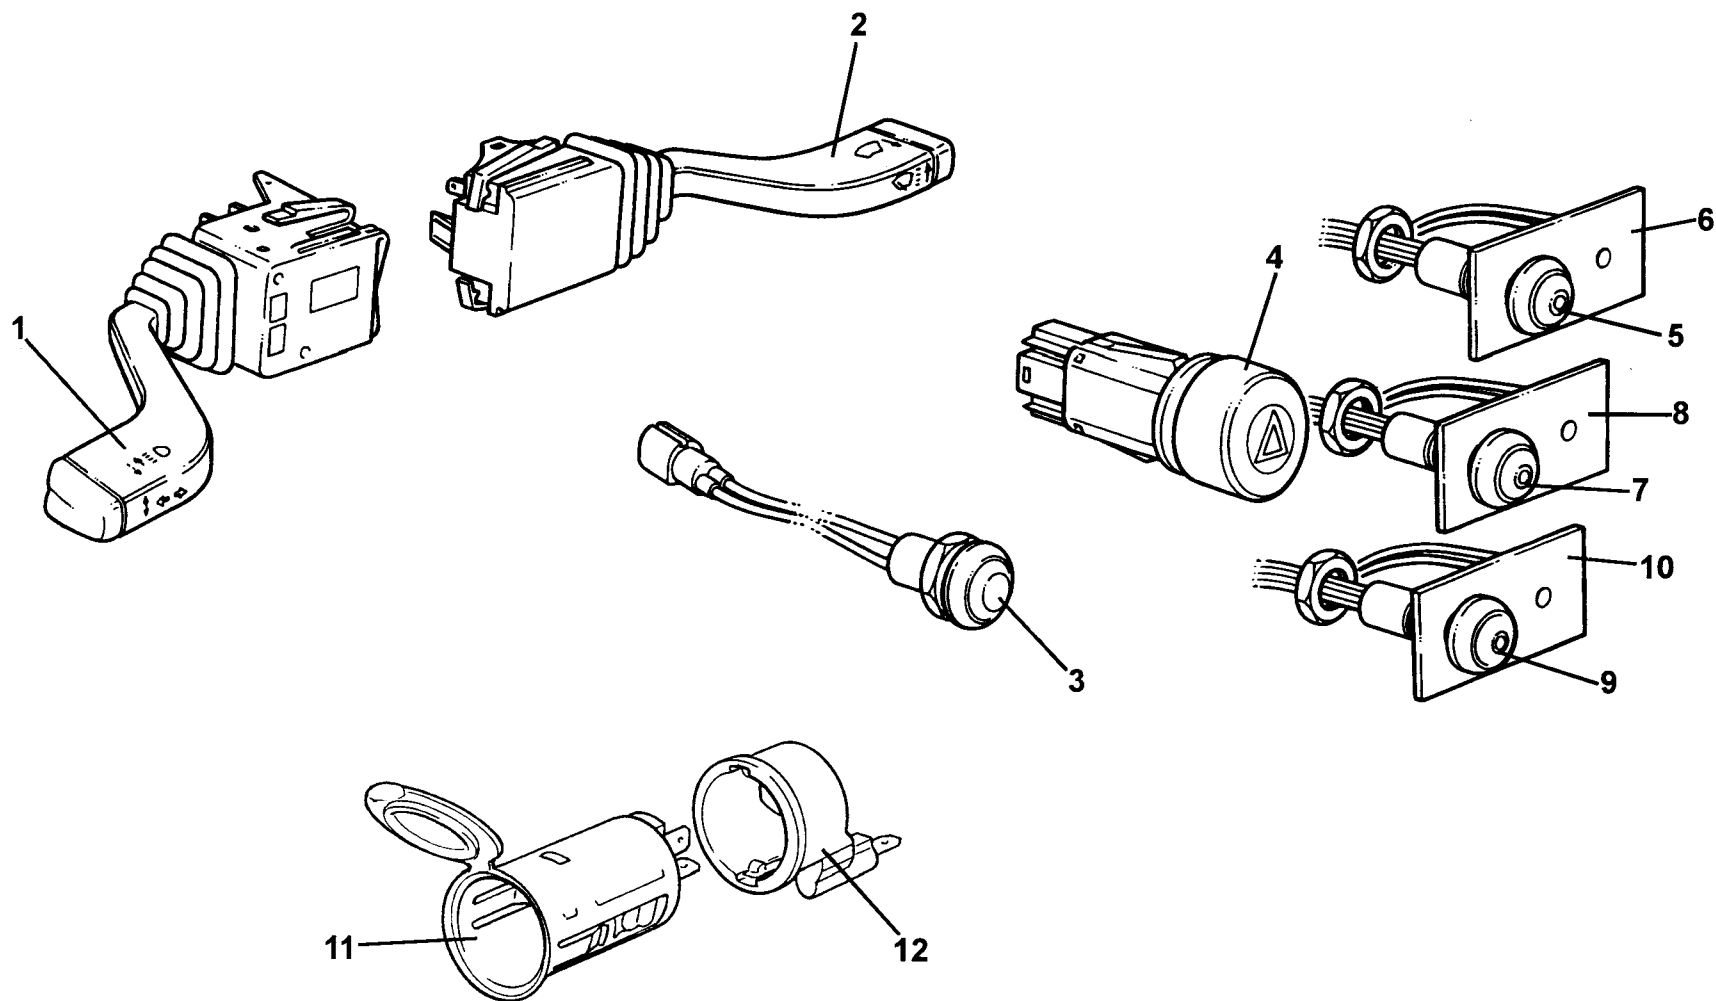

**ELISE**  
17.05


# Service Parts List **ELISE**



## Function Code 17.05 Interior Switches, Cigar Lighter

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Column Switch, LH, indicators/dip/flash			A100M6048F	1
02	Column Switch, RH, windscreen wipe/wash			A100M6049F	1
03	Switch, panel light dimmer/trip reset			A116M0015F	1
04	Switch, hazard			A340M6016F	1
05	Switch, sidelamps, green tell-tale			A117M0055F	1
06	Decal, sidelamps graphic, RHD/LHD			A117M0005F	1
07	Switch, headlamps, green tell-tale			A117M0055F	1
08	Decal, headlamps graphic, RHD			A117M0006F	1
08a	Decal, headlamps graphic, LHD			A117M0045F	1
09	Switch, rear fog lamp, yellow tell-tale			A117M0056F	1
10	Decal, rear fog lamp graphic, RHD			A117M0007F	1
10a	Decal, rear fog lamp graphic, LHD			A117M0046F	1
11	Auxiliary Power Socket			A340M6013F	1
12	Bezel, power socket			B100M6052F	1
13	Ignition Switch	Not illustrated, part of upper steering colmn		A111M6108S	1

**ELISE**

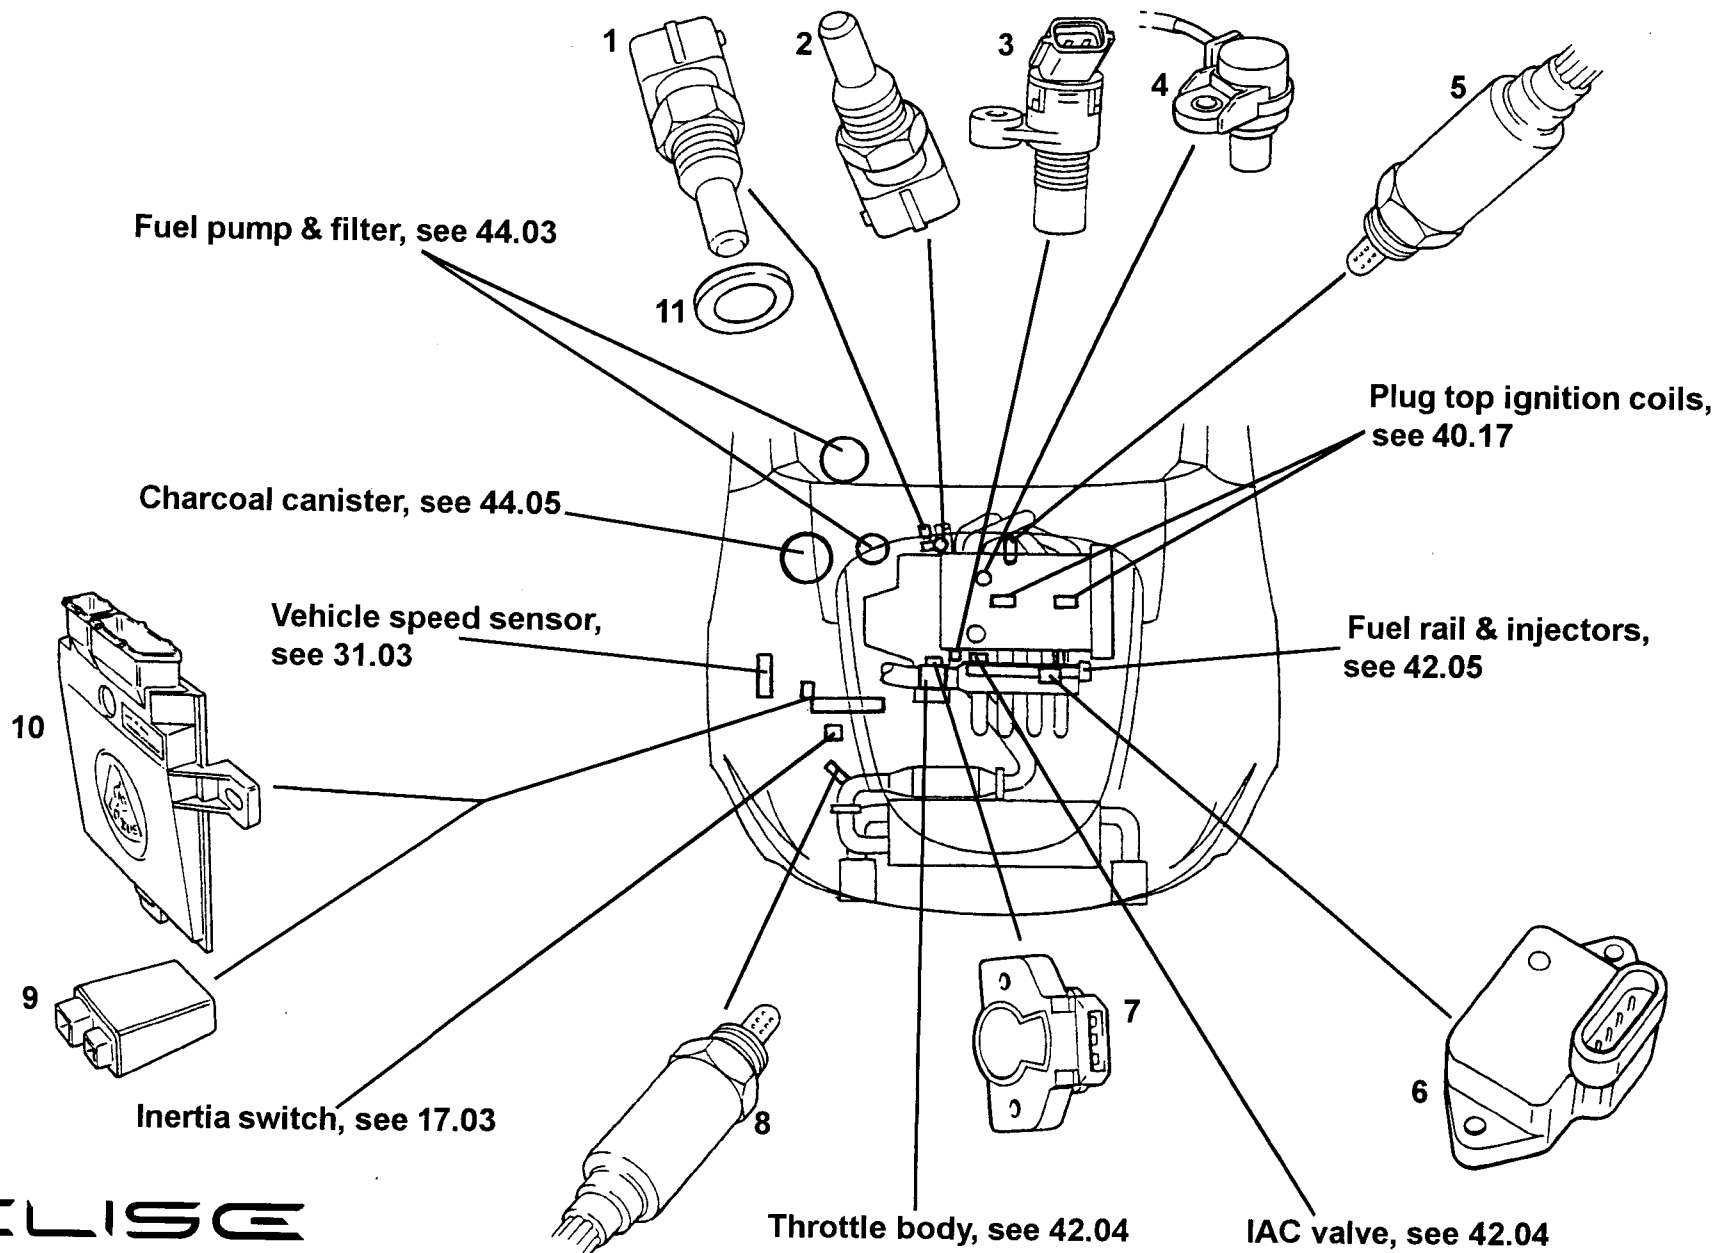

**ELISE**  
**17.06**


# Service Parts List **ELISE**



## Function Code 17.06 Engine Management & Sensors

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Engine Coolant Temperature Sensor, ECM (horizontal)	Black housing		A117E6017S	1
02	Engine Coolant Temperature Sensor, gauge (vertical)	Blue housing		A111E6047S	1
03	Crankshaft Position Sensor			A117E6037S	1
04	Camshaft Position (CMP) Sensor,			A117E6027S	1
05	Oxygen Sensor ( O2 sensor ) pre catalyst			A117E6007F	1
06	Manifold Absolute Pressure/Inlet Air Temp. (MAP) Sensor				1
07	Throttle Position Sensor			A111E6064S	1
08	Oxygen Sensor ( O2 sensor ) post catalyst			A117E6007F	1
09	Multi-Function Relay Unit			A111M6024F	1
10	Electronic Control Module (ECM)			A117M0039F	1
11	Washer, coolant sensor			A111E6058S	1
12	Screw, M8 x 18, hex. hd., ECM to plate	Not Illustrated		A075W4015Z	2
13	Washer, flat, M8 x 15, ECM to plate	Not Illustrated		A075W1029Z	2
14	Clip, O2 sensor connector fix.	Not Illustrated		A117E6058F	1
15	'O Ring, CMP sensor to head	Not Illustrated		A117E6028S	1
16	Screw, CMP sensor to head	Not Illustrated		A117E6029S	2

**ELISE**

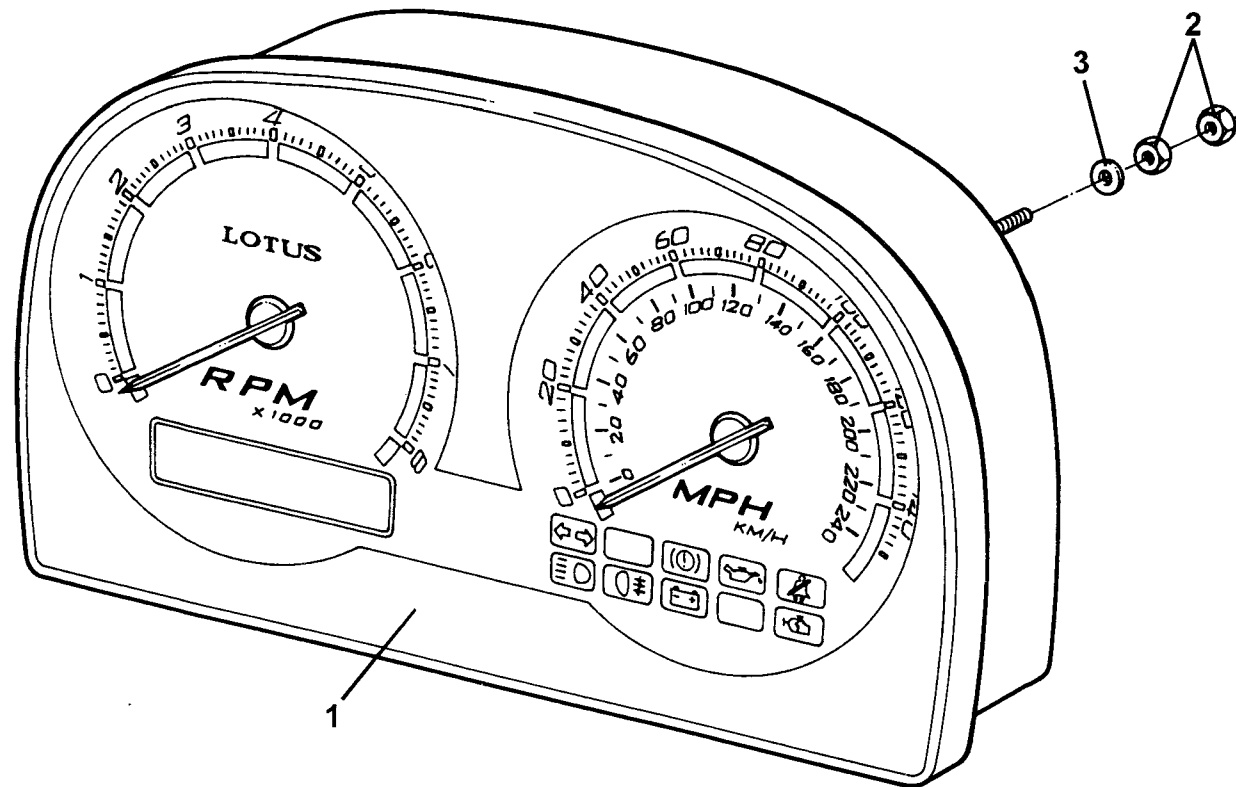

**ELISE**  
17.07




# Service Parts List **ELISE**



## Function Code 17.07 Instruments, Tell Tales, & Displays

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Instrument Pack, Km/h			A117M0010F	1
01a	Instrument Pack, MPH			A117M0009F	1
02	Nut, M4, pack to brackets	Also see 14.10		A075W3019F	8
03	Washer, flat, M4	Also see 14.10		A082W4099F	4

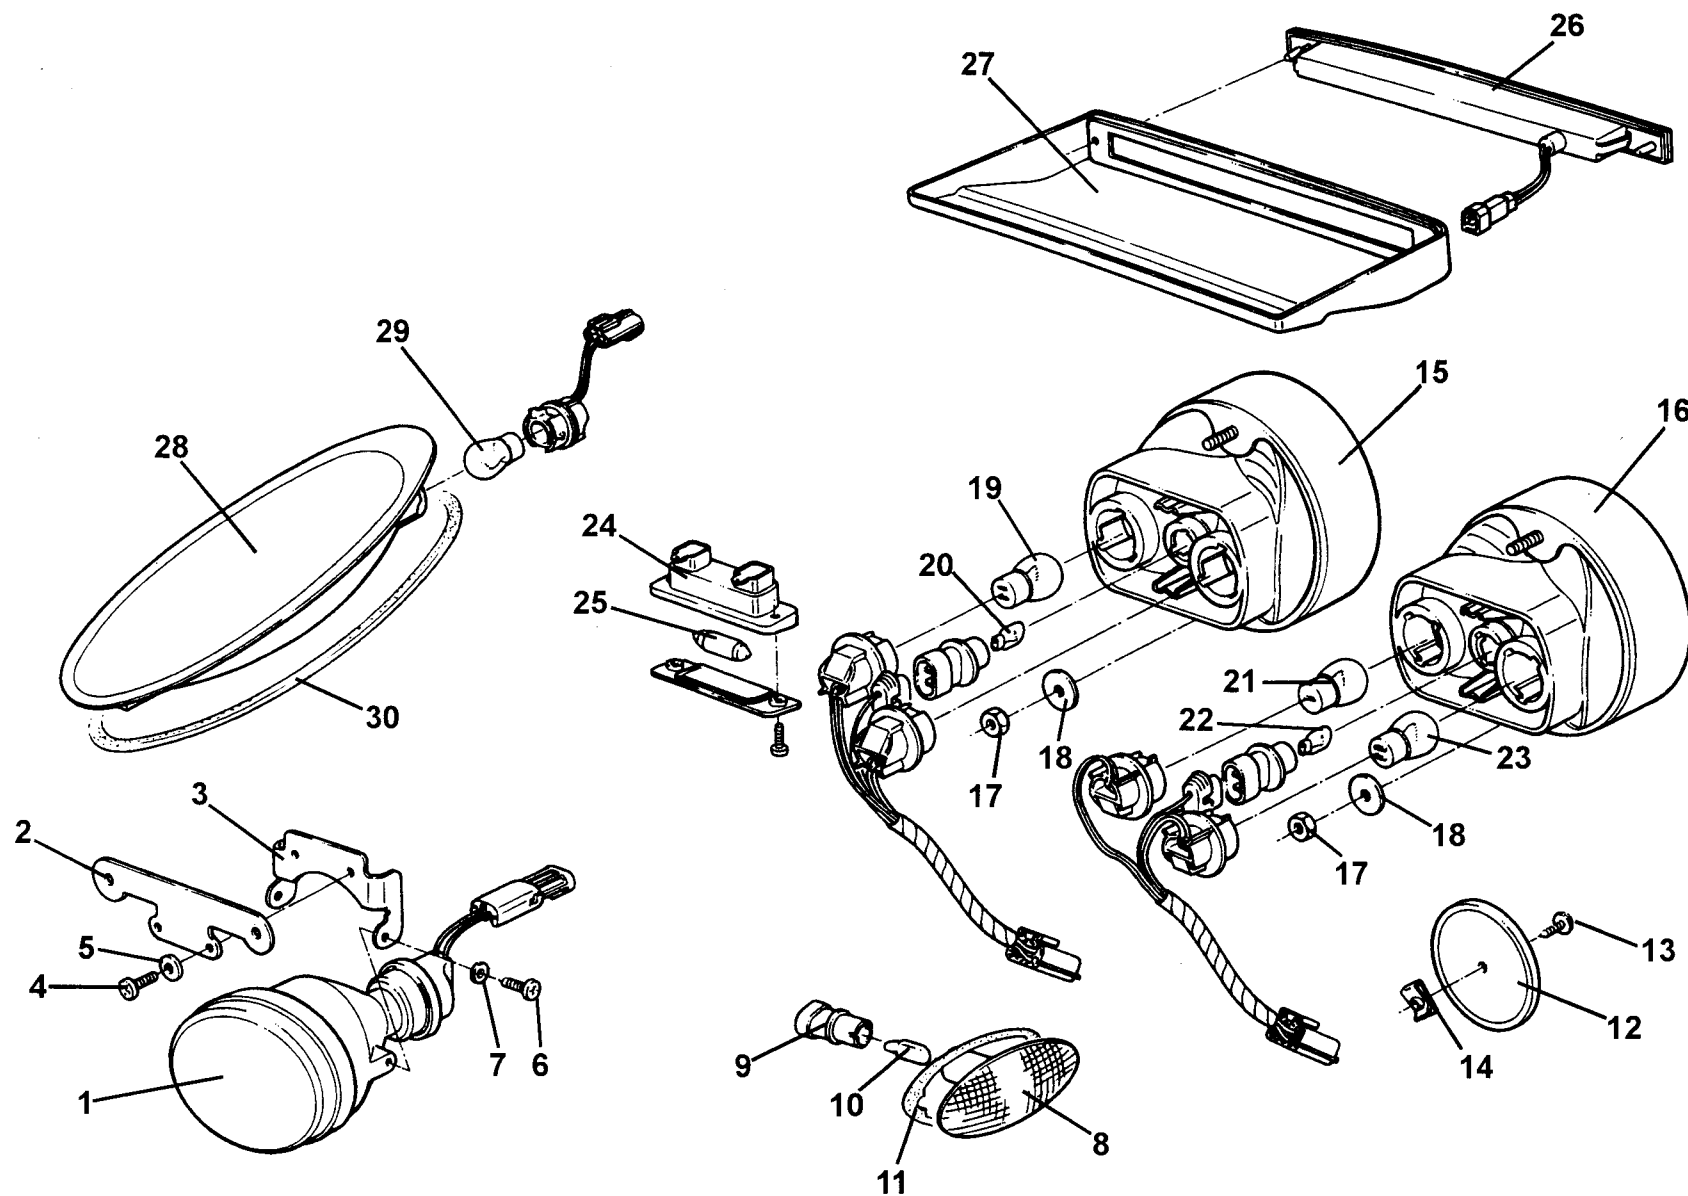

**ELISE**  
17.11


# Service Parts List **ELISE**



## Function Code 17.11 Exterior Lamps, Except Headlamps

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Driving Lamp				2
02	Bracket, driving lamp mounting to crash structure				2
03	Bracket, driving lamp to crash structure bracket				2
04	Screw, pan hd. pozi., brackets fix.				4
05	Washer, flat				4
06	Screw, pan hd. pozi., bracket to lamp				4
07	Washer, flat				4
08	Lamp, side repeater			<b>A117M6003F</b>	2
09	Bulb Holder, side repeater			<b>A111M6009F</b>	2
10	Bulb, 12v 5w, amber, side repeater				2
11	Gasket, side repeater			<b>A111U0074F</b>	2
12	Reflector			<b>A117B6026F</b>	2
13	Screw, reflector fix.				2
14	Spirenut				2
15	Lamp, inner, tail, rear fog, reverse			<b>A117M0012F</b>	2
16	Lamp, outer, stop/tail, direction indicator			<b>A117M0011F</b>	2
17	Nut, lamp retention				8
18	Washer, flat				8


**ELISE**

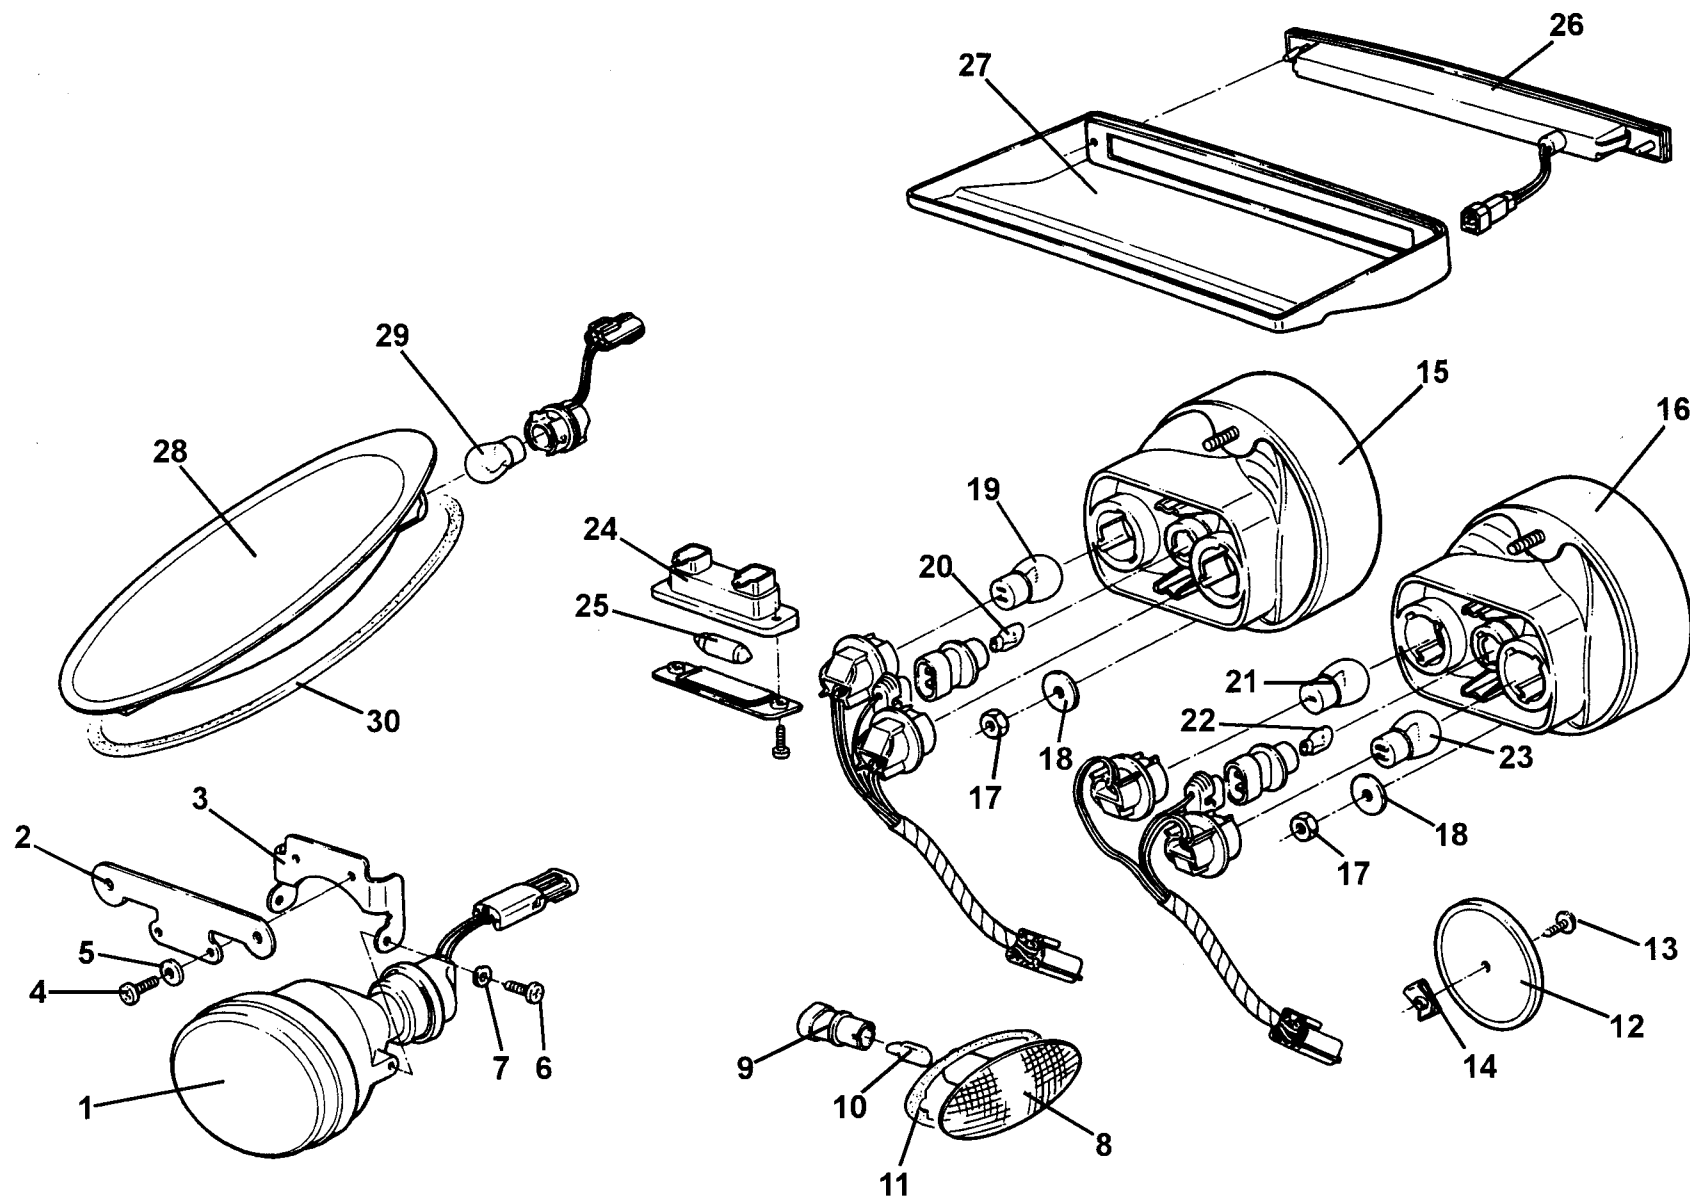

**ELISE**  
17.11

**Function Code 17.11 Exterior Lamps, Except Headlamps**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
19	Bulb, 12v 4/21w, tail/rear fog				1
20	Bulb,12v 21w, reverse				1
21	Bulb, 12v 5w, tail				2
22	Bulb, 12v 21w, direction indicator				1
23	Bulb, 12v 4/21w, stop/tail				1
24	Lamp, license plate			<b>A117M6028F</b>	2
25	Bulb, 12v 5w, license plate			<b>A083M6292F</b>	2
26	Lamp, CHMSL			<b>A116M0016F</b>	1
26	Lamp, front direction indicator, LH				1
27	Housing, CHMSL	Bonded to cabin bulkhead		<b>A117M0076F</b>	1
28	Lamp, front direction indicator, LH			<b>A117M0017F</b>	
28a	Lamp, front direction indicator, RH			<b>A117M0018F</b>	1
29	Bulb, 12v 21w, amber, front direction indicator			<b>A111M6091S</b>	2
30	Seal, lamp to clamshell				2

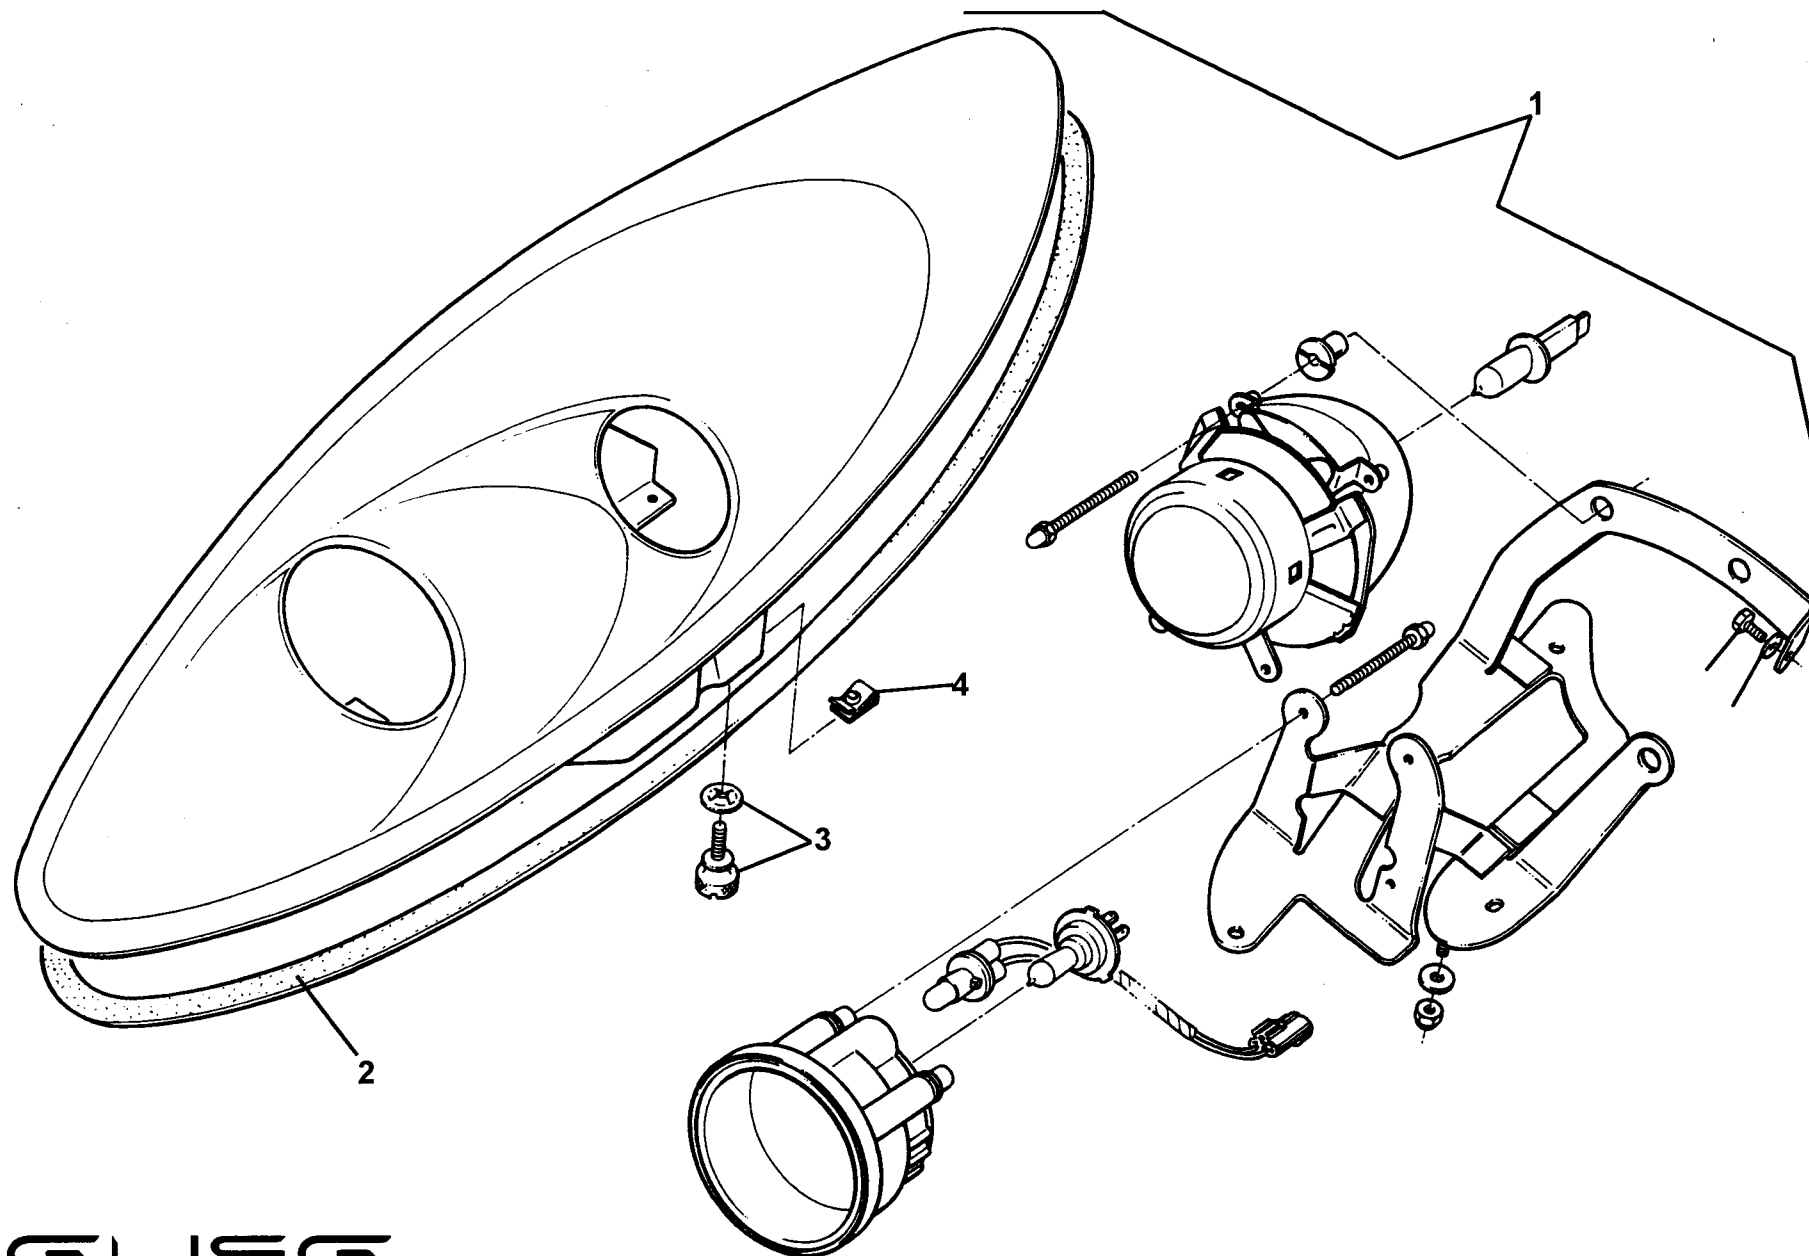

**ELISE**  
17.13


# Service Parts List **ELISE**



## Function Code 17.13 Headlamps

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Headlamp Assembly, RH, RHD	Includes cover, lamps & bracket		A117M0014F	1
01a	Headlamp Assembly, LH, RHD	Includes cover, lamps & bracket		A117M0013F	1
01b	Headlamp Assembly, RH, LHD	Includes cover, lamps & bracket		A117M0014F	1
01c	Headlamp Assembly, LH, LHD	Includes cover, lamps & bracket		A117M0015F	1
02	Seal, cover to clamshell				2
03	Screw/Retainer Assy, ch, hd. nurlled, cover fix.				6
04	Spirenut				6
05	Bulb, main beam, 55w, H7				2
06	Bulb, dip beam, 55w, H1				2
07	Bulb, side/park, 5w, W5W, amber				2

**ELISE**

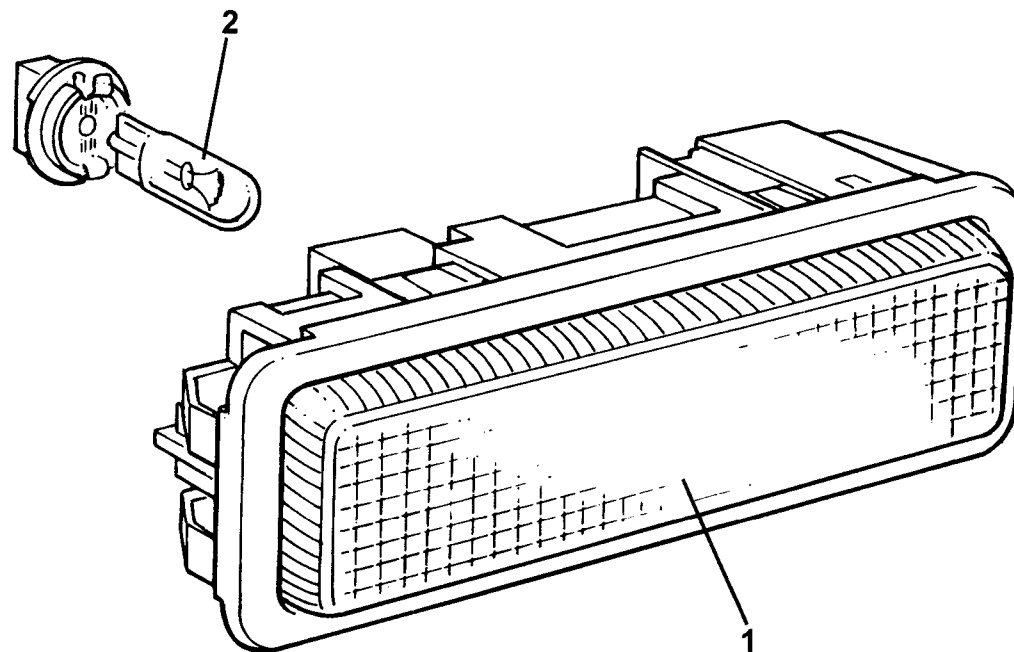

ELISE  
17.17




# Service Parts List **ELISE**



## Function Code 17.17 Interior Lamps

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Interior Lamp			A082M6644F	1
02	Bulb, interior lamp				1

**ELISE**

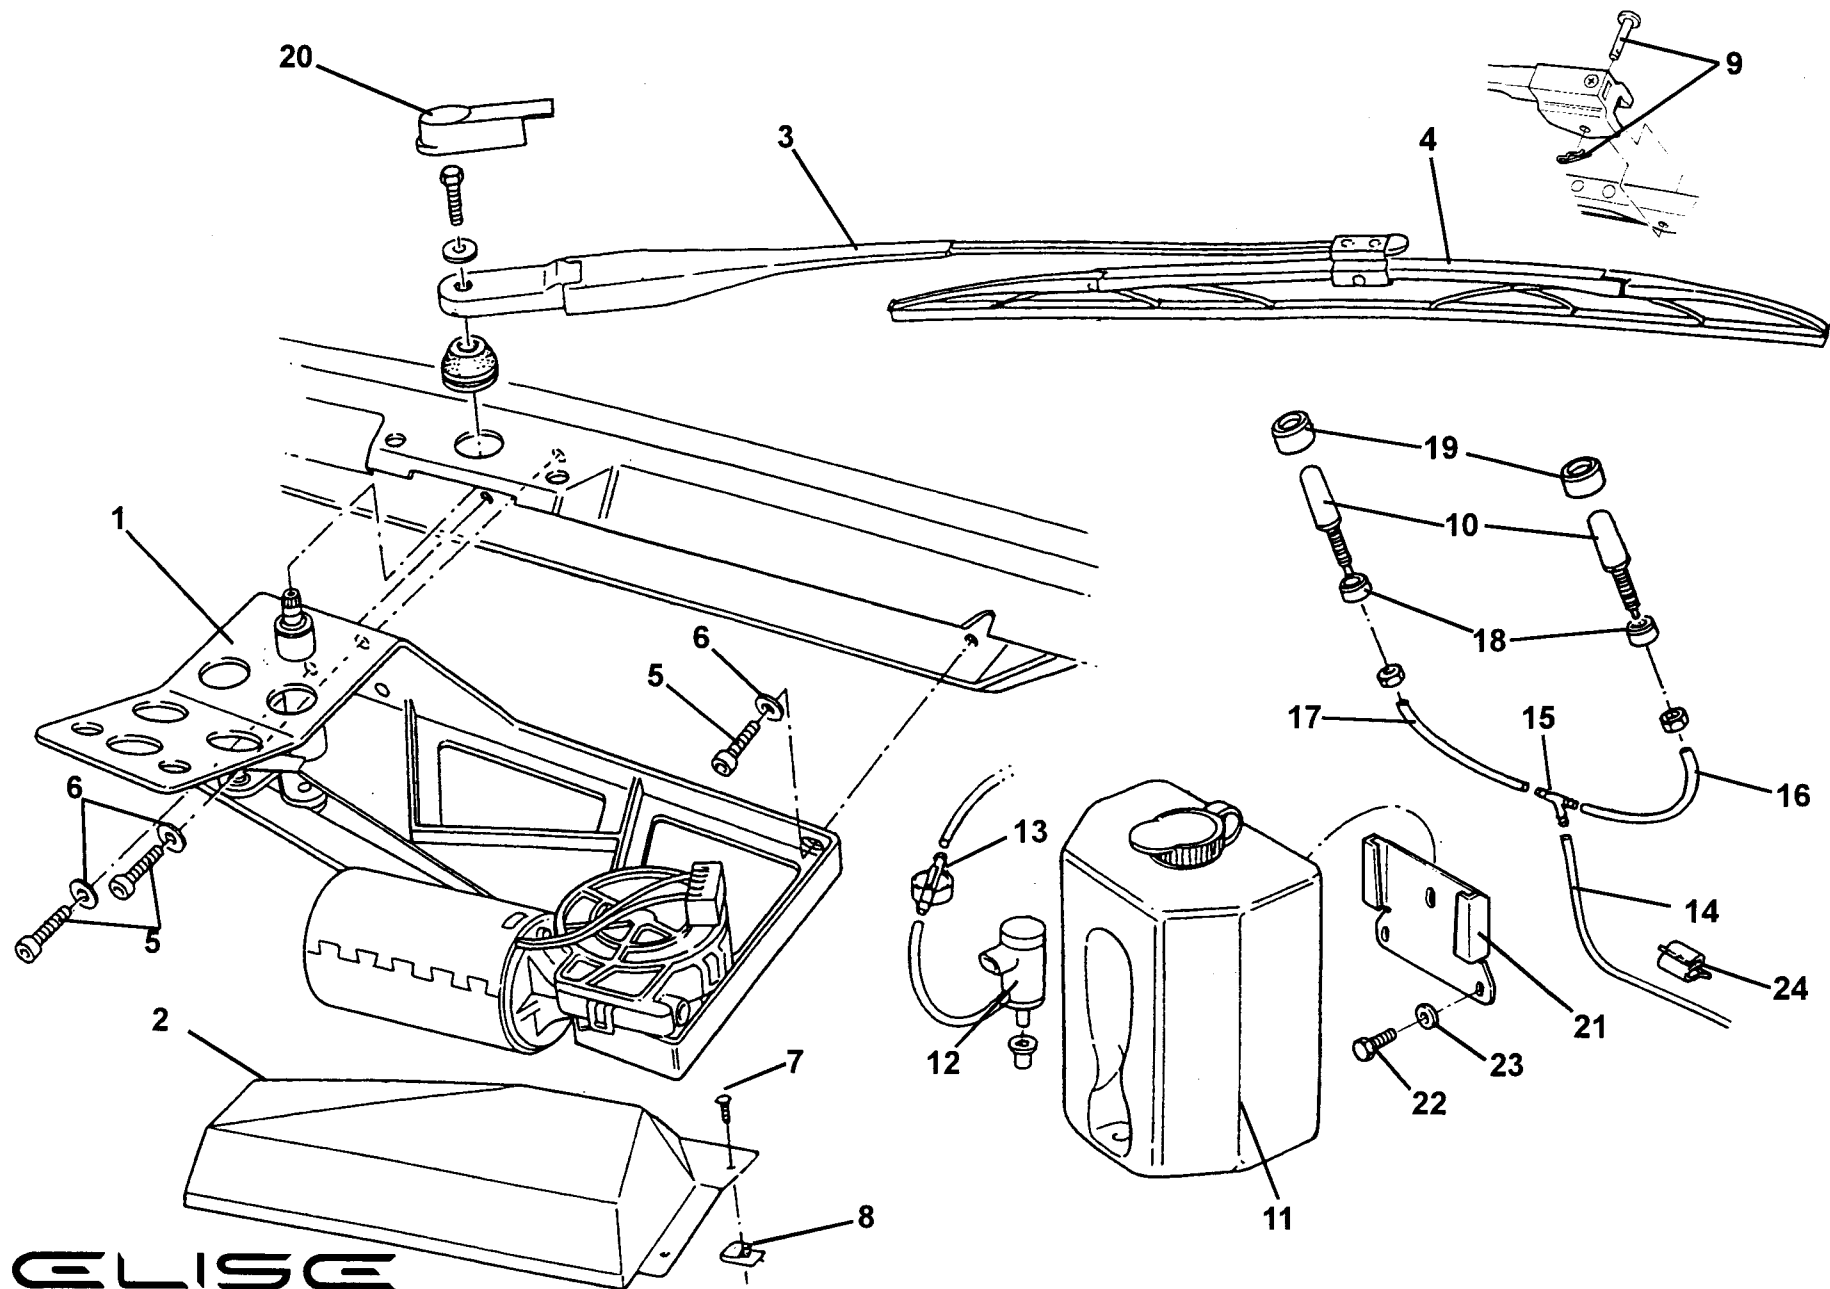

**ELISE**  
17.21


# Service Parts List **ELISE**



## Function Code 17.21 Windscreen Wiper Motor, Wipers & Washers

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Wiper Drive Assembly, RHD			C111M0034F	1
01a	Wiper Drive Assembly, LHD			B111M0033F	1
02	Cover, wiper motor, RHD			A111U0172K	1
02a	Cover, wiper motor, LHD			A111U0173K	1
03	Wiper Arm Assembly			A116M0038F	1
04	Wiper Blade Assembly, 24"			A111M6031F	1
05	Screw, M8 x 20, cap hd., bracket to scuttle			A111W7141F	3
06	Washer, M8, spring S/C light			A075W4036Z	3
07	Screw, No.10 x 1/2", pozi., cover fix.			A075W5040Z	2
08	Spire Nut No. 8, cover, wiper motor fix.			A075W6016Z	2
09	Pin and Clip Set, wiper blade to arm			A111M6107S	1
10	Windscreen Washer Jet			A082M6369F	2
11	Washer Bottle and Pump Assembly			A111M6029F	1
12	Washer Pump			A111M6047S	1
13	Non Return Valve, washer fluid			A100M6062H	1
14	Hose, bottle to 'T' piece			B111M0054K	1
15	'T' piece, washers			A111M6045K	1
16	Tube, 'T' piece to jet			B111M0056K	1


**ELISE**

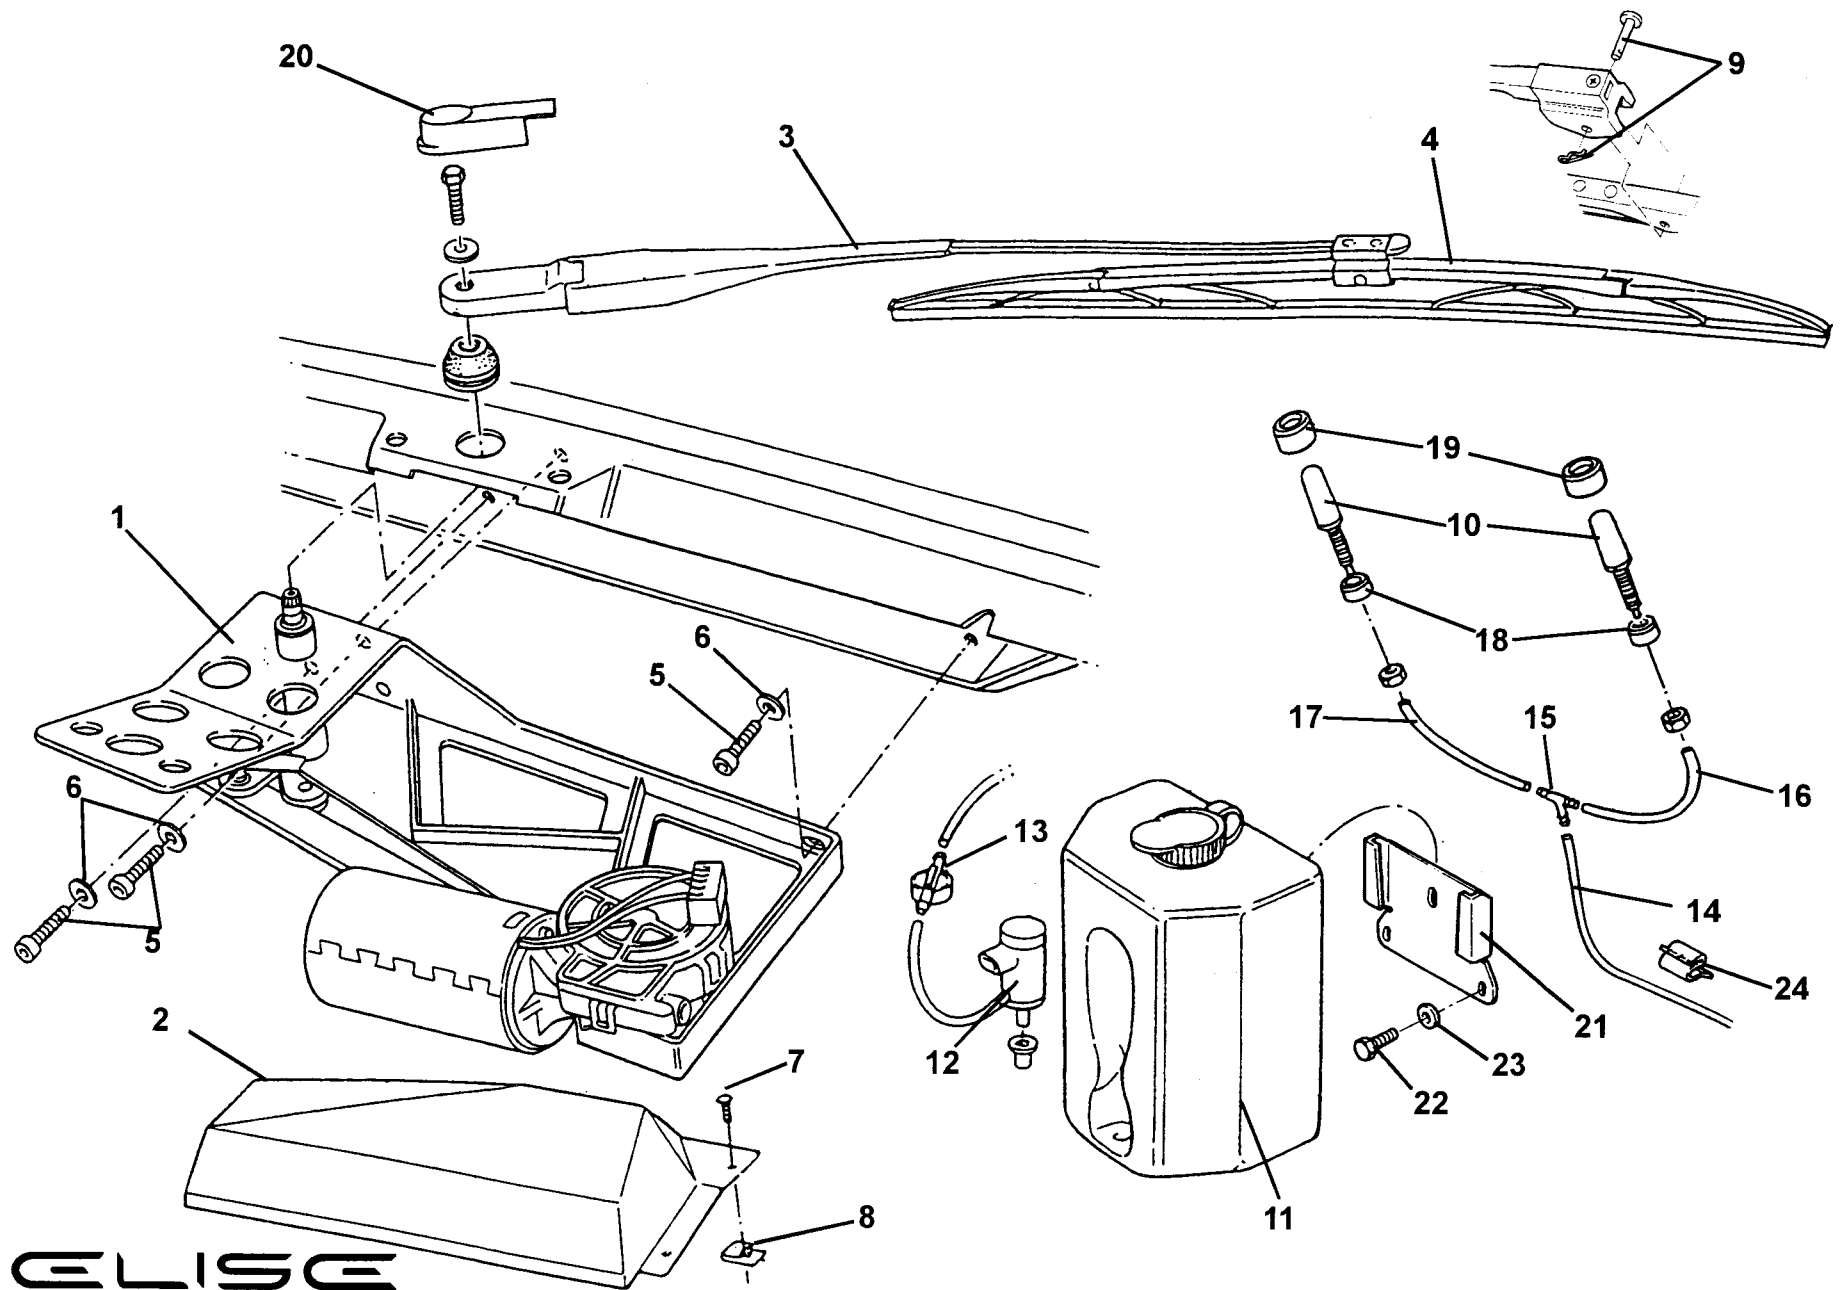

**ELISE**  
17.21

**Function Code 17.21 Windscreen Wiper Motor, Wipers & Washers**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
17	Tube, 'T' piece to jet			B111M0055K	1
18	Spacer, washer jet			A111M6046K	2
19	Sleeve, washer jet	Bonded over jet & spacer		A111M0065F	1
20	Pivot Cover, wiper arm			A082M6380F	1
21	Bracket, washer bottle			A117M0019F	1
22	Setscrew, M6 x 16, hex. hd., bracket to chassis			A075W1028Z	3
23	Washer, flat, M6 x 18			B082W4018F	3
24	Clip, hose to wiper motor bracket			A079W6185F	1

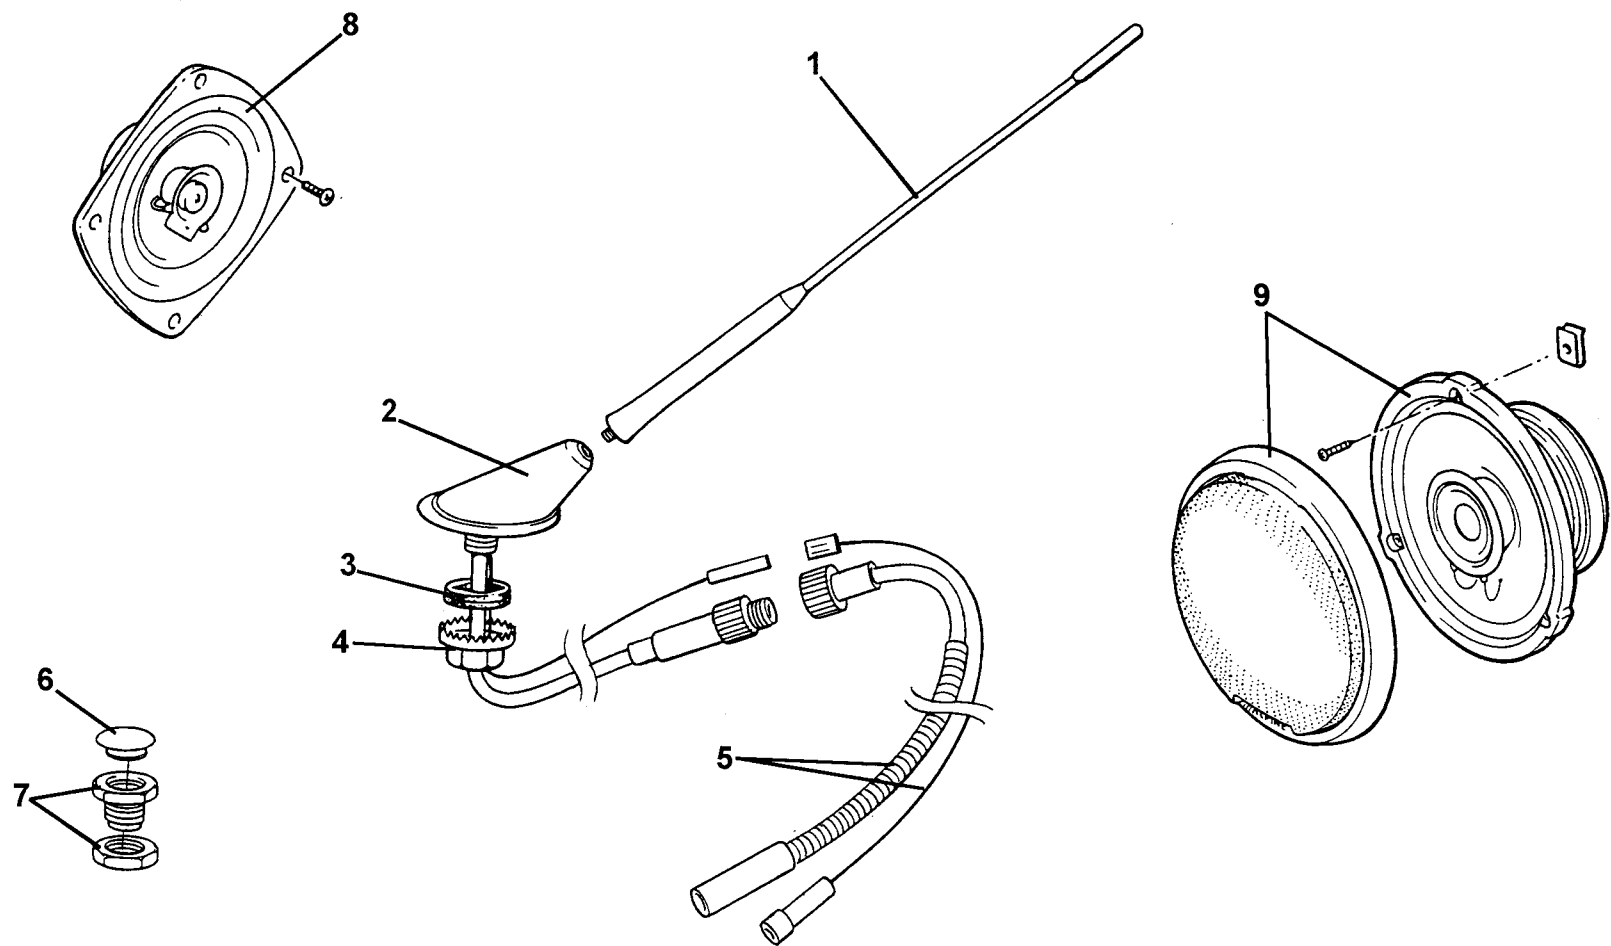

**ELISE**  
17.27



# Service Parts List **ELISE**



## Function Code 17.27 In Car Entertainment

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Aerial Mast		Sports Tourer/Race Tech	<b>A082M6533F</b>	1
02	Aerial Base		Sports Tourer/Race Tech	<b>A082M6534F</b>	1
03	Rubber Washer, mounting nut		Sports Tourer/Race Tech	<b>A111M6033F</b>	1
04	Nut, aerial base to engine cover		Sports Tourer/Race Tech	<b>A082M6555F</b>	1
05	Cable, aerial co-axial extension		Sports Tourer/Race Tech	<b>A117M0073F</b>	1
06	Blanking Plug	When aerial not fitted	Base car	<b>A111B6037F</b>	1
07	Nut, blanking plug	When aerial not fitted	Base car	<b>A111B6038F</b>	1
08	Speaker Kit, front, Alpine SPS 1029		4 speaker audio system	<b>A117M6006F</b>	1
09	Speaker Kit, rear, Alpine SPS 1329		2 & 4 speaker audio system	<b>A117M6007F</b>	1
10	Radio/CD Player, VDO Dayton CD3200	Not illustrated	Sports Tourer/Race Tech	<b>B117M6009F</b>	1

**ELISE**

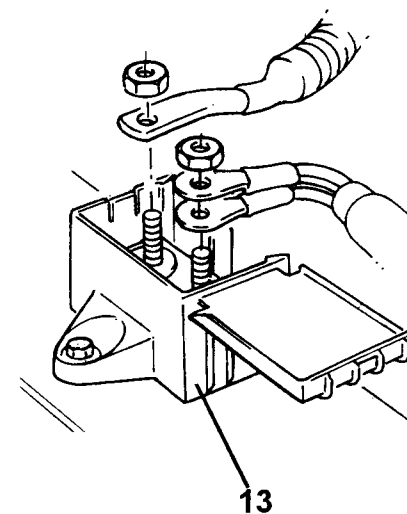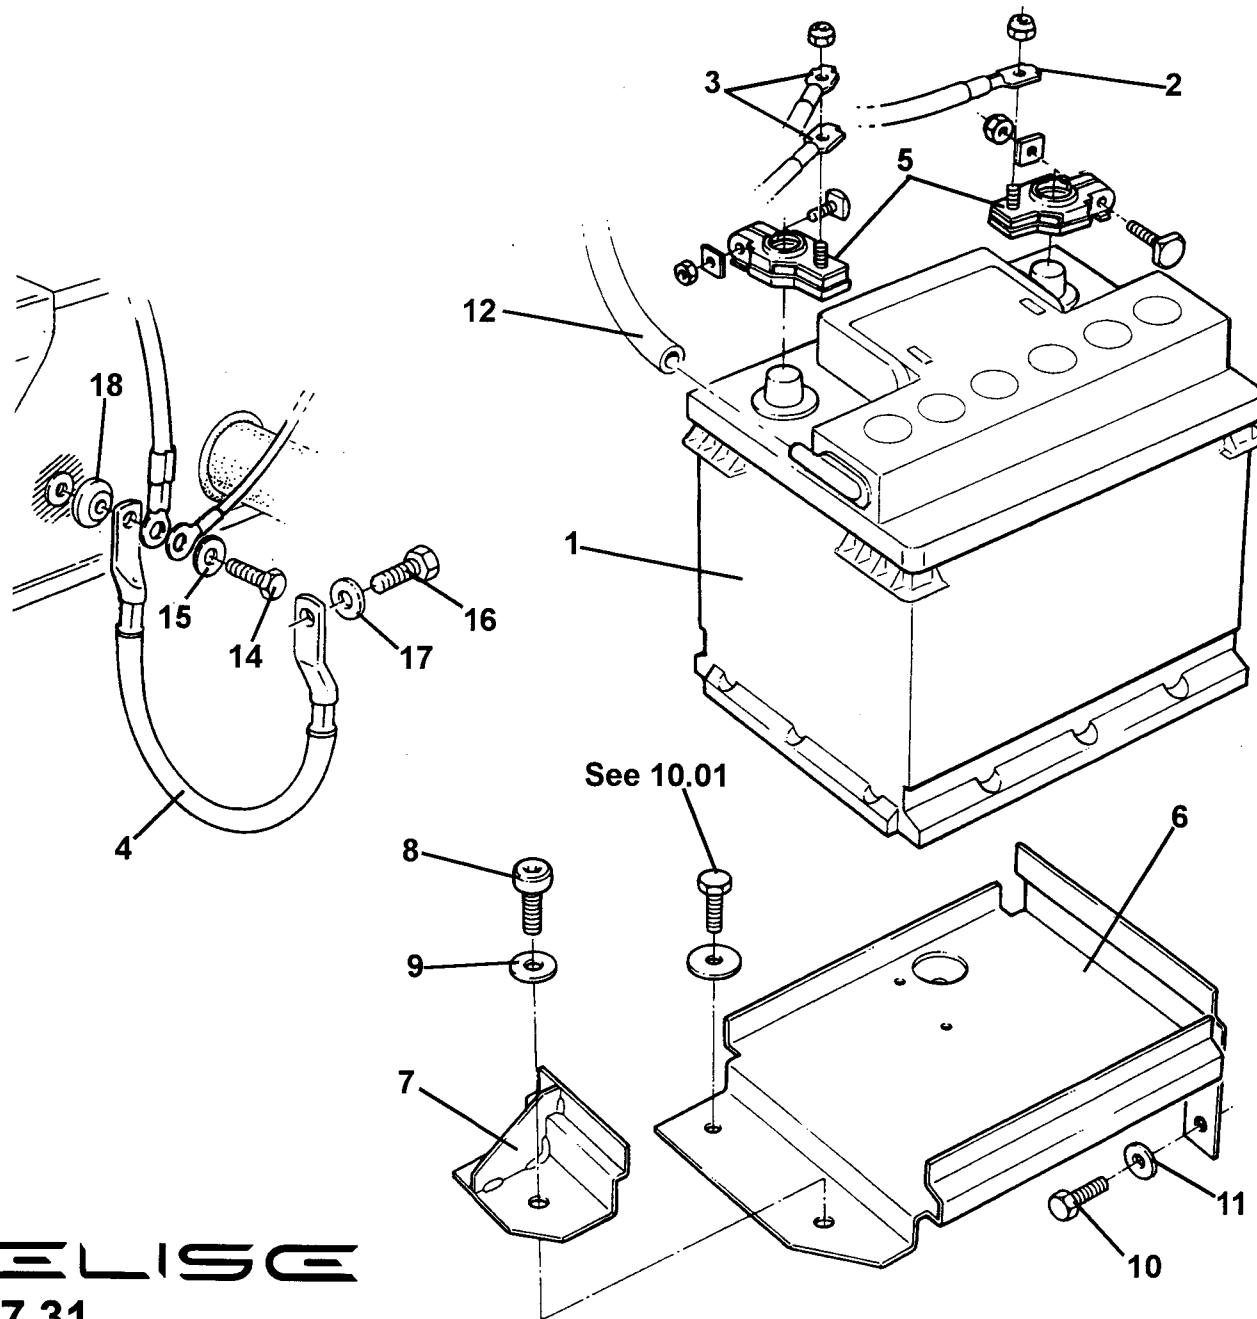

**ELISE**  
17.31



# Service Parts List **ELISE**



## Function Code 17.31 Battery, Clamps, & Cables


<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Battery, Tungstone UN 2794		Standard	A117M6017F	1
01a	Battery, heavy duty		Accessory	A117M6022F	
01b	Battery, competition		MOTORSPORT	A111M6020F	1
02	Battery Cable, negative, to chassis				1
03	Battery Cables, positive, to starter motor & binding post			B117M0020F	1
04	Cable, chassis to engine			A111M0023F	1
05	Clamp Assembly, cables to battery				2
06	Battery Tray			A117M0033F	1
07	Retainng Clamp, battery to tray			A117M0036F	1
07a	Retainng Clamp, battery, competion to tray	Used with items: 19 to 23			1
08	Screw, M8 x 16, cap hd., clamp fix.			A111W7125F	1
09	Washer, spring, M8			A075W4036Z	1
10	Screw, hex. hd., tray to bulkhead				1
11	Washer, flat				1
12	Vent, battery fumes			A117M6029K	1
13	Binding Post Assembly			A340M6007F	1
14	Screw, M8 x 20, hex hd., cable to chassis	Front & rear earth points		A075W2038Z	2
15	Washer, flat, M8 x 16.6 x 1.4			A075W4020Z	2

**ELISE**



**Function Code 17.31 Battery, Clamps, & Cables**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
16	Bolt, M10 x 20, hex. hd., cable to engine			A075W1079F	1
17	Washer, flat, M10 x 20.5 x 1.8			A075W4024Z	1
18	Cup Washer, cable to chassis	Front & rear earth points		A111M0039F	2
19	Stud, M6, battery clamp fixing	Not illustrated, for competition battery	MOTORSPORT	B085M4167F	2
20	Spacer, alloy, battery clamp fixing	Not illustrated, for competition battery	MOTORSPORT	A907E0696K	2
21	Washer, flat, M6, battery clamp fixing	Not illustrated, for competition battery	MOTORSPORT	A075W4015Z	2
22	Washer, spring, M6, battery clamp fixing	Not illustrated, for competition battery	MOTORSPORT	A075W4035Z	2
23	Nut, M6, , battery clamp fixing	Not illustrated, for competition battery	MOTORSPORT	A075W3020Z	2

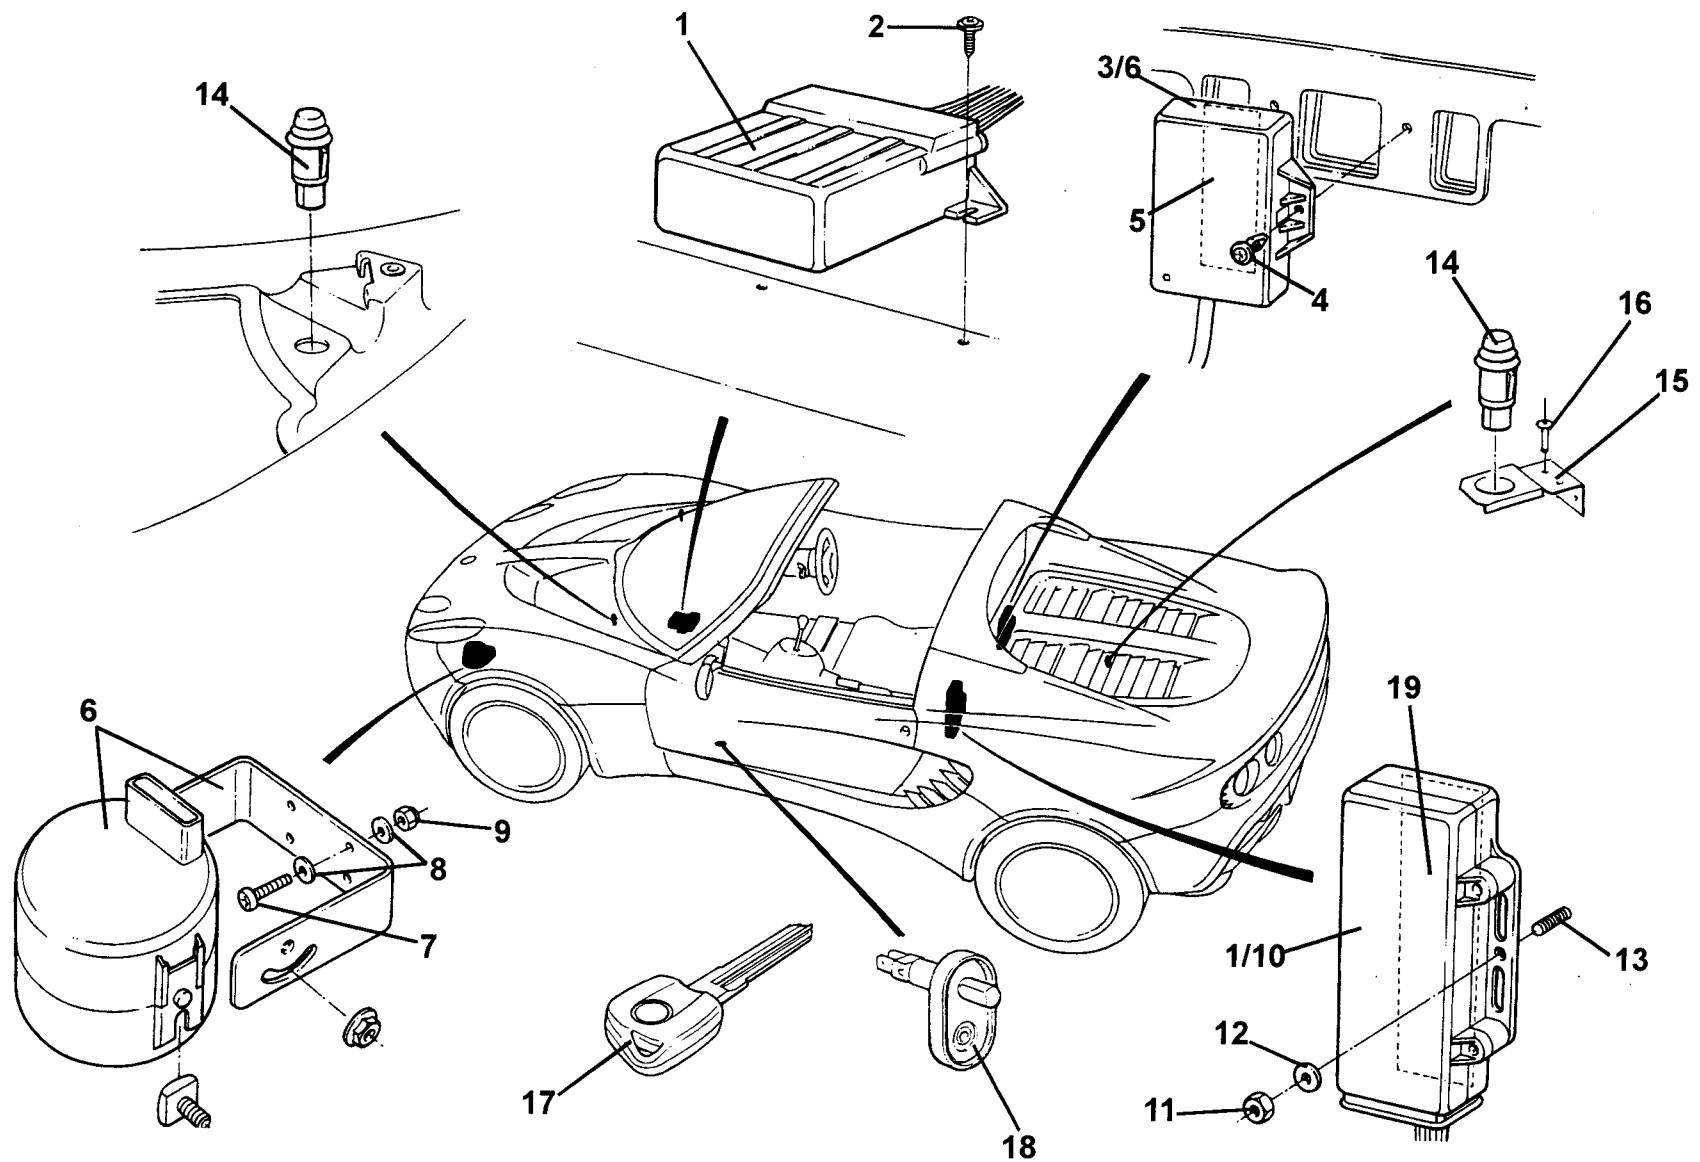

**ELISE**

**17.33**


# Service Parts List **ELISE**



## Function Code 17.33 Security Alarm System

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Alarm Controller/Immobiliser Kit	Includes keys		A117M6016F	1
02	Screw, controller to chassis				2
03	Microwave Sensor			A117U0223F	1
04	Plastic fastener, sensor to bulkhead			A111W6534F	2
05	Double Sided Tape, sensor to bulkhead				As req.
06	Microwave Sensor & Siren Kit			A111M6121F	1
07	Setscrew. M6 x 16, pan hd. pozi., bracket fix.				4
08	Washer, flat, M6			A075W4015Z	8
09	Nyloc Nut, M6			A075W3009Z	4
10	Immobiliser			A117M6013F	1
11	Nut, immobiliser to bulkhead			A340M6032F	2
12	Washer, flat				2
13	Stud Plate, immobiliser to bulkhead	Bonded to bulkhead		A117M0052F	1
14	Microswitch, alarm activation, front/rear lids			A111M6037F	2
15	Bracket, rear switch mounting				1
16	Pop Rivet, bracket to clamshell gutter				4
17	Transmitter Key, programmed, blank blade			A340M6041S	1
18	Microswitch, alarm activation, doors			A111M6035F	2

**ELISE**

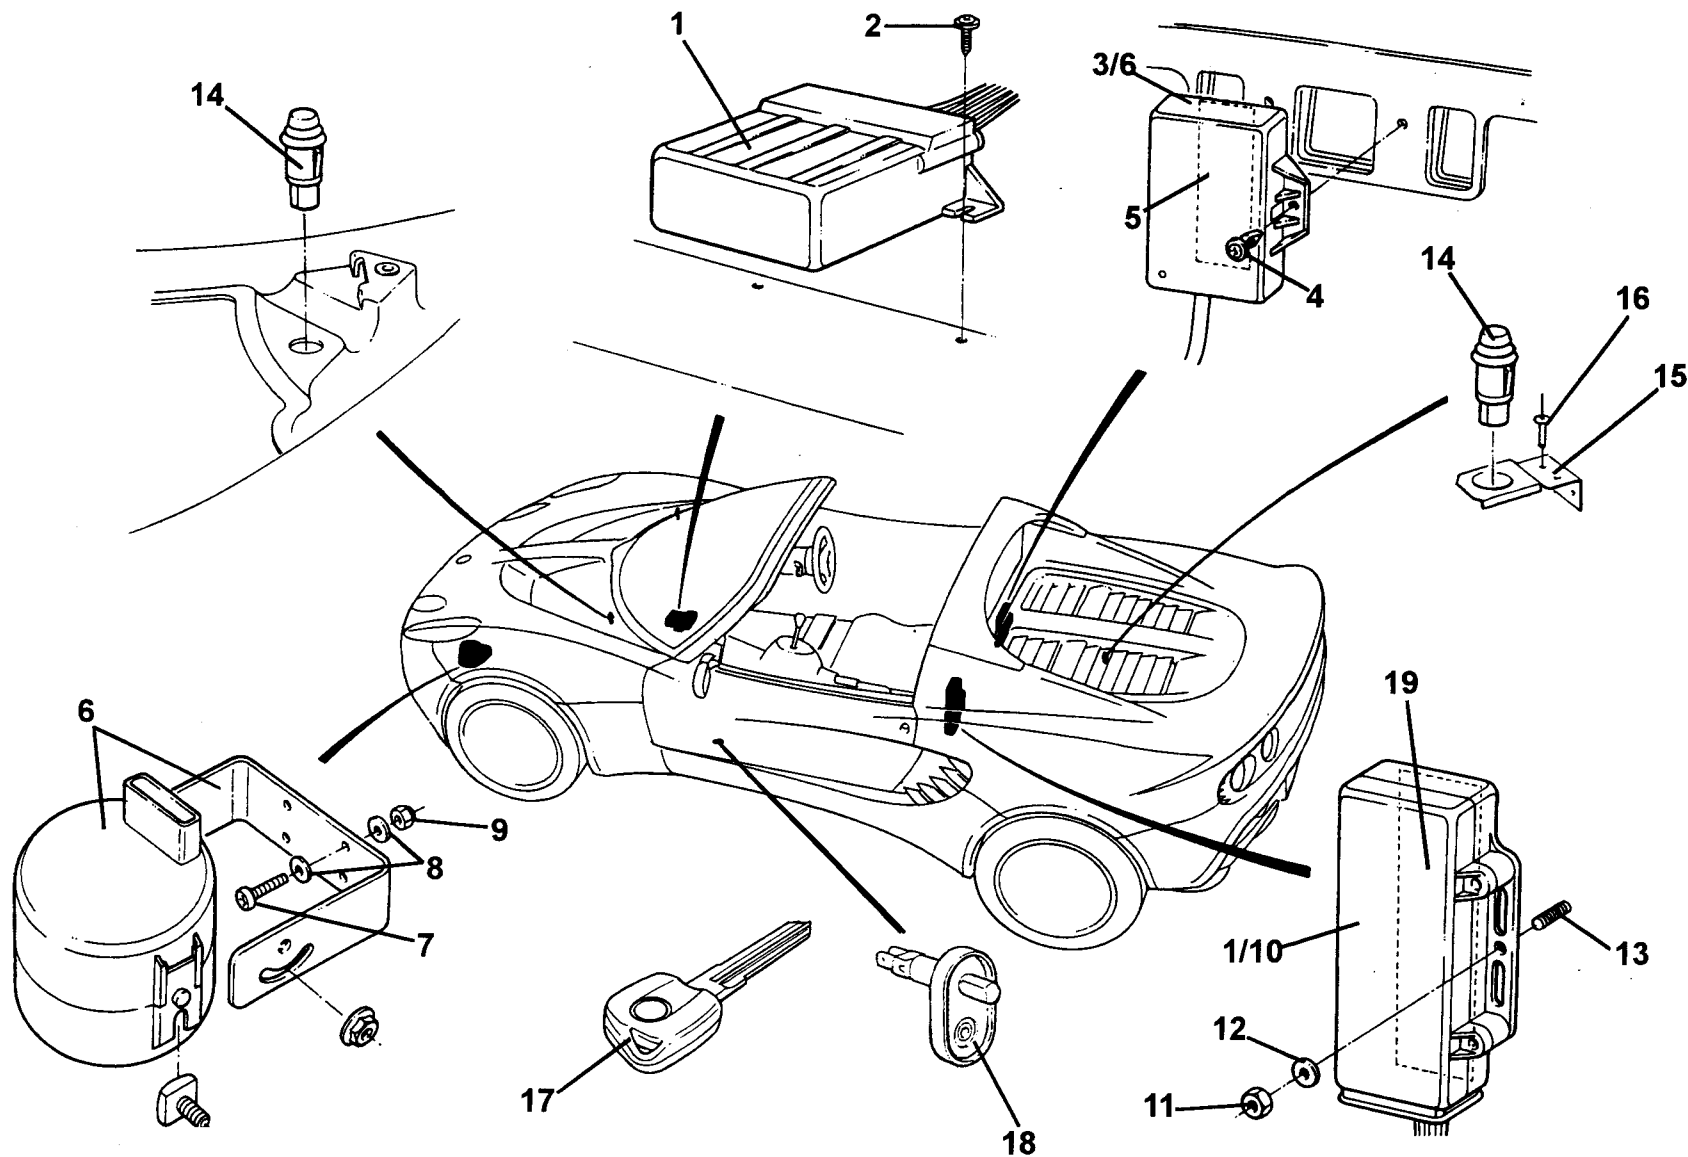


**ELISE**  
17.33

---

**Function Code 17.33 Security Alarm System**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
19	Double Sided Tape, immobiliser to bulkhead				As req.

---

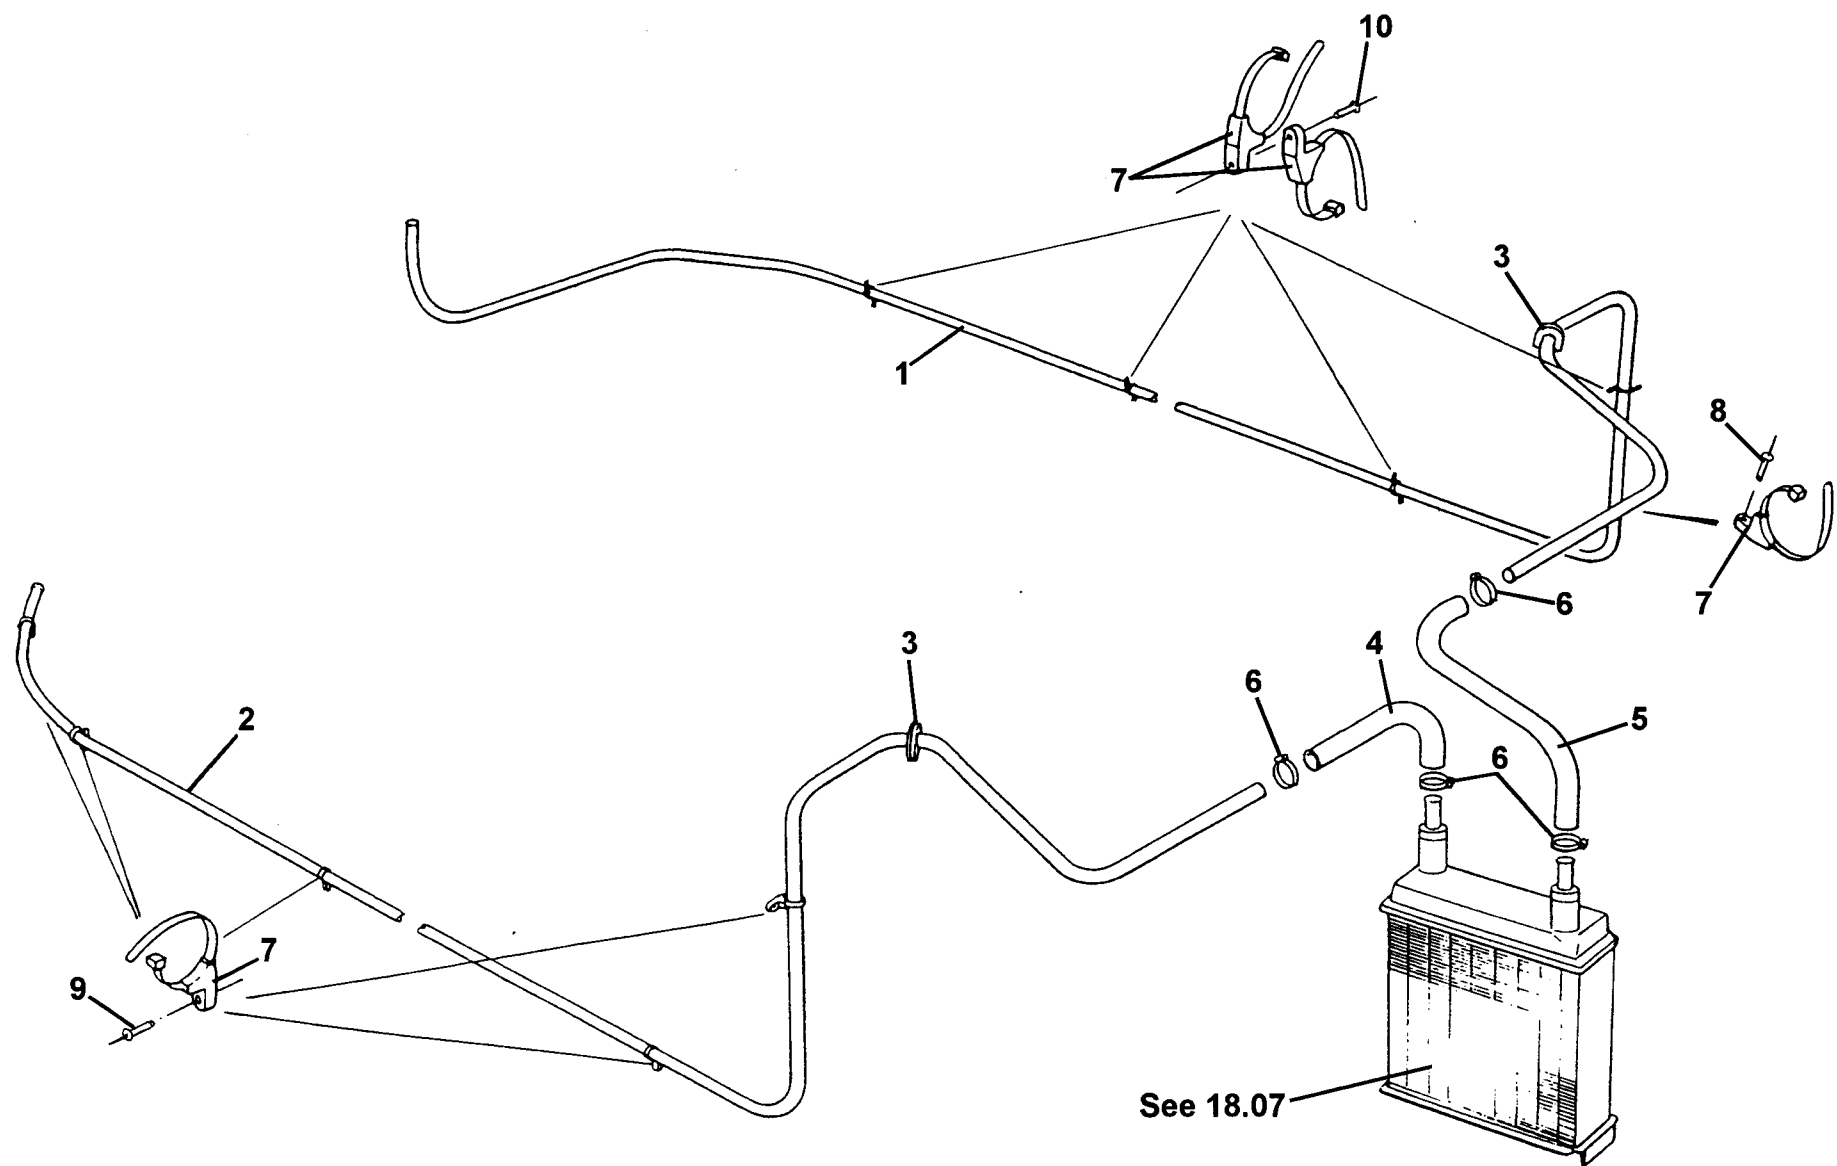

**ELISE**  
**18.05**




# Service Parts List **ELISE**



## Function Code 18.05 Heater, Pipes, Hoses

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Pipe, heater return			B111P0001F	1
02	Pipe, heater feed			B111P0002F	1
03	Grommet, heater pipes	In scuttle baffle		A111P0003K	2
04	Hose, heater inlet, RHD			A116P0010F	1
04a	Hose, heater inlet, LHD			A116P0007F	1
05	Hose, heater outlet, RHD			A116P0008F	1
05a	Hose, heater outlet, LHD			A116P0009F	1
06	Hose Clip			A079K6018Z	4
07	Saddle Clip, cable tie	Heater pipe to chassis		A082W6324F	14
08	Cable Tie			A075W6038F	14
09	Blind Rivet, saddle clamp to chassis			A085W6259F	4
10	Blind Rivet, saddle clamp to chassis			A111W6613F	6
11	Blind Rivet, saddle clamps to chassis			A111W6614F	4
12	Foam Strip, self adhesive, pipe protection			A082U6067F	As req.

**ELISE**

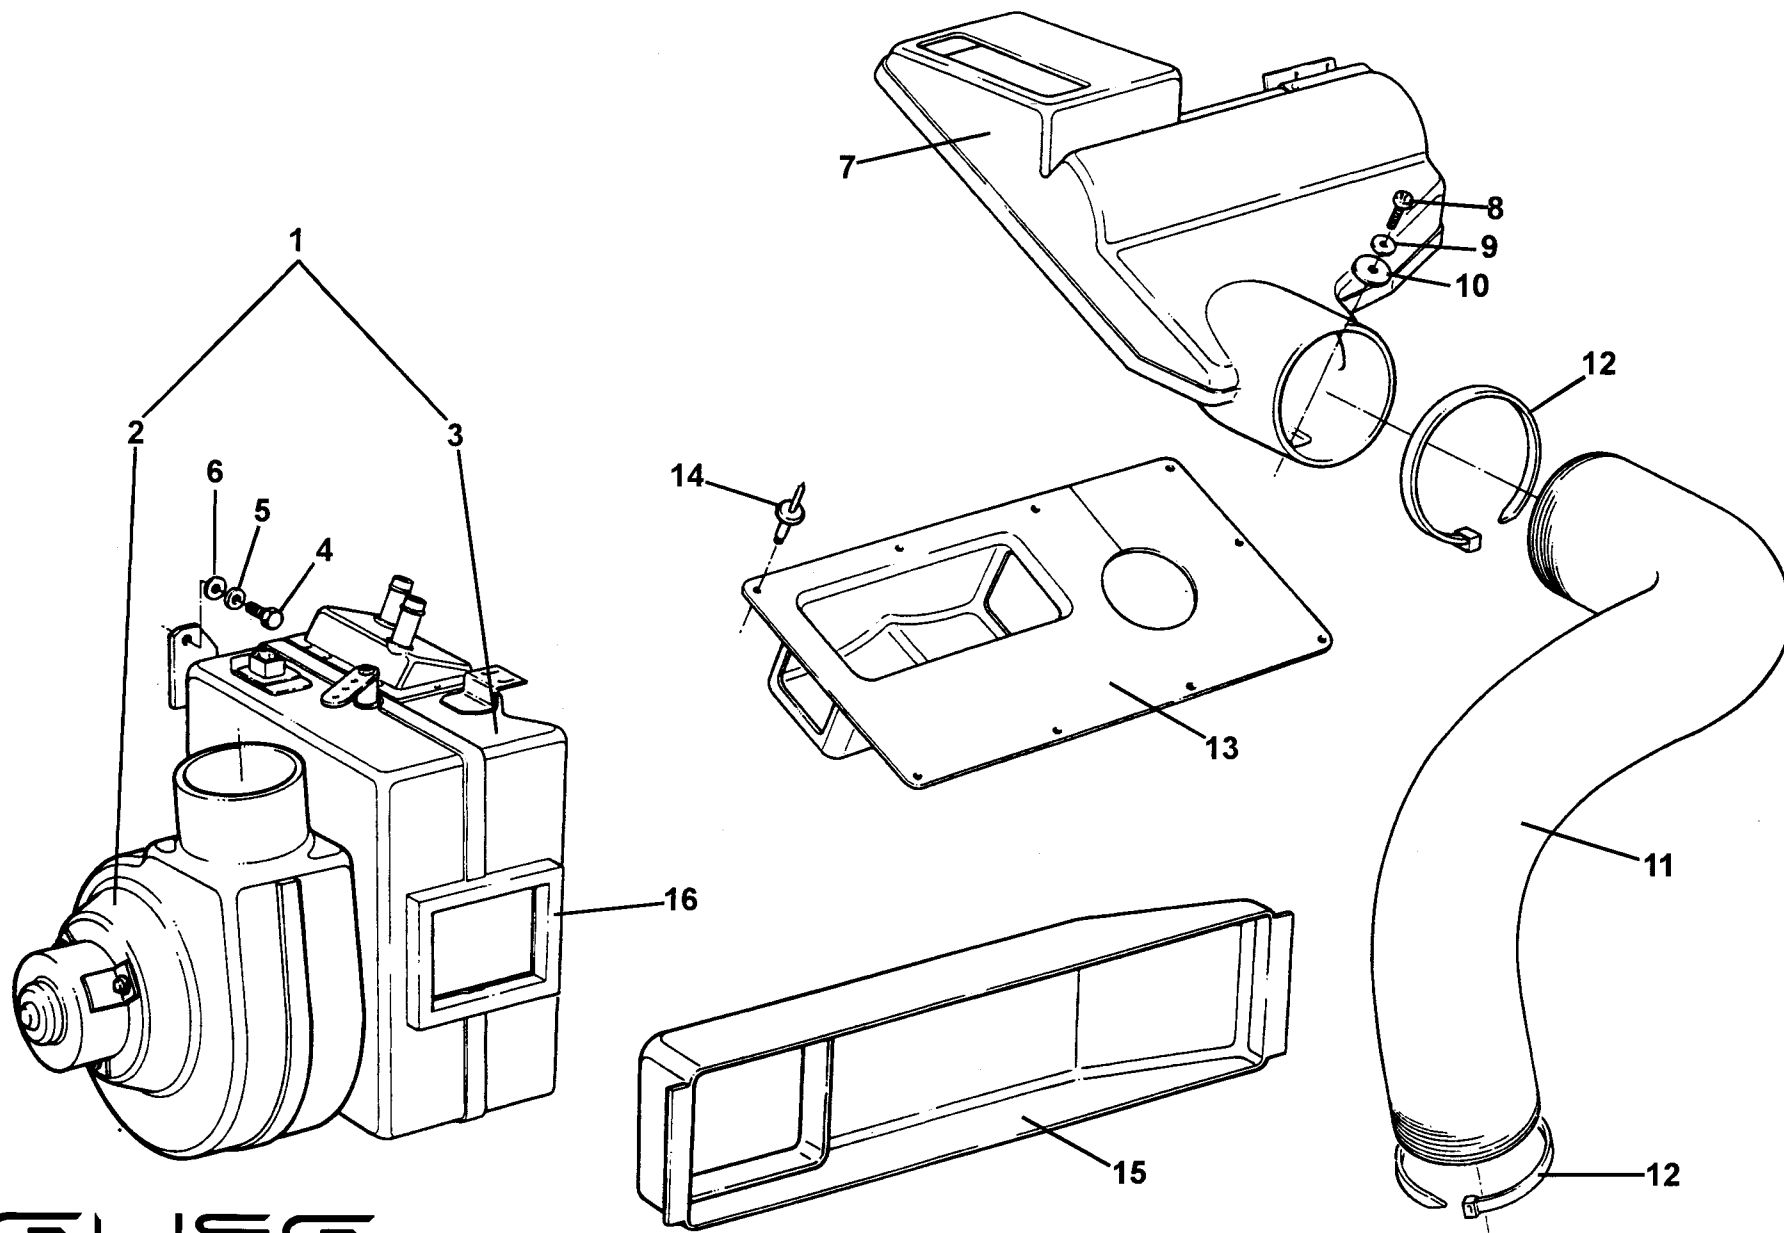

**ELISE**  
18.07


# Service Parts List **ELISE**



## Function Code 18.07 Interior Blower Motor. Heater Matrix, Intakes & Ducting

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Heater Assembly, RHD			B116P0002F	1
01a	Heater Assembly, LHD			B116P0001F	1
02	Blower & Motor Assembly				1
03	Heater Matrix/Housing Assembly, RHD				1
03a	Heater Matrix/Housing Assembly, LHD				1
04	Screw				1
05	Washer, spring				1
06	Washer, flat				1
07	Distribution Plenum, RHD			B116P0004F	1
07a	Distribution Plenum, LHD			B116P0003F	1
08	Screw				1
09	Washer, spring				1
10	Washer, flat				1
11	Hose, heater to plenum			A111P0024F	1
12	Cable Tie, hose fix.				2
13	Deflector, footwell, RHD			A117U0222F	1
13a	Deflector, footwell, LHD			A117U0221F	1
14	Pop Rivet			A082W6512Z	10

**ELISE**

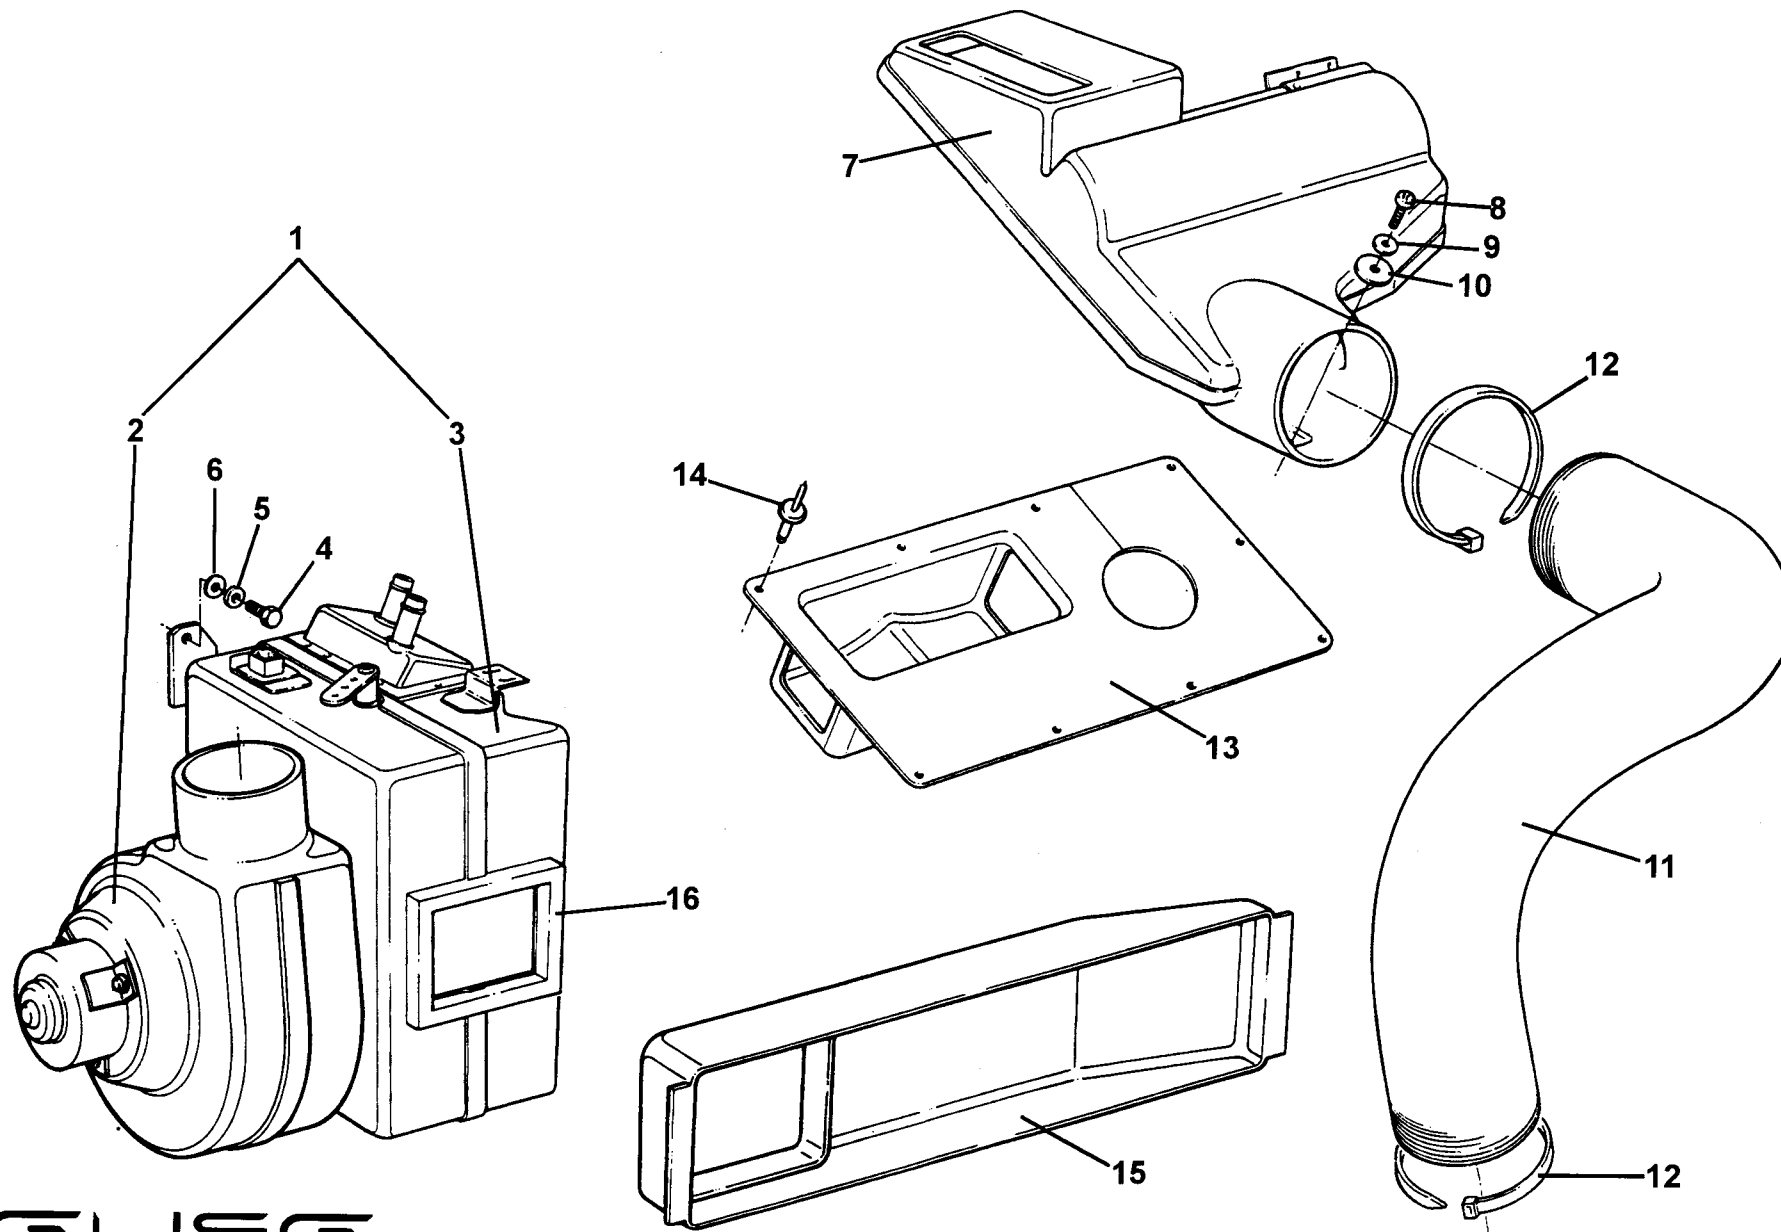

**ELISE**


**18.07**

---

**Function Code 18.07 Interior Blower Motor. Heater Matrix, Intakes & Ducting**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
15	Air Intake Duct			A116P0005F	1
16	Foam Gasket, duct to heater			A116P0020F	1

---

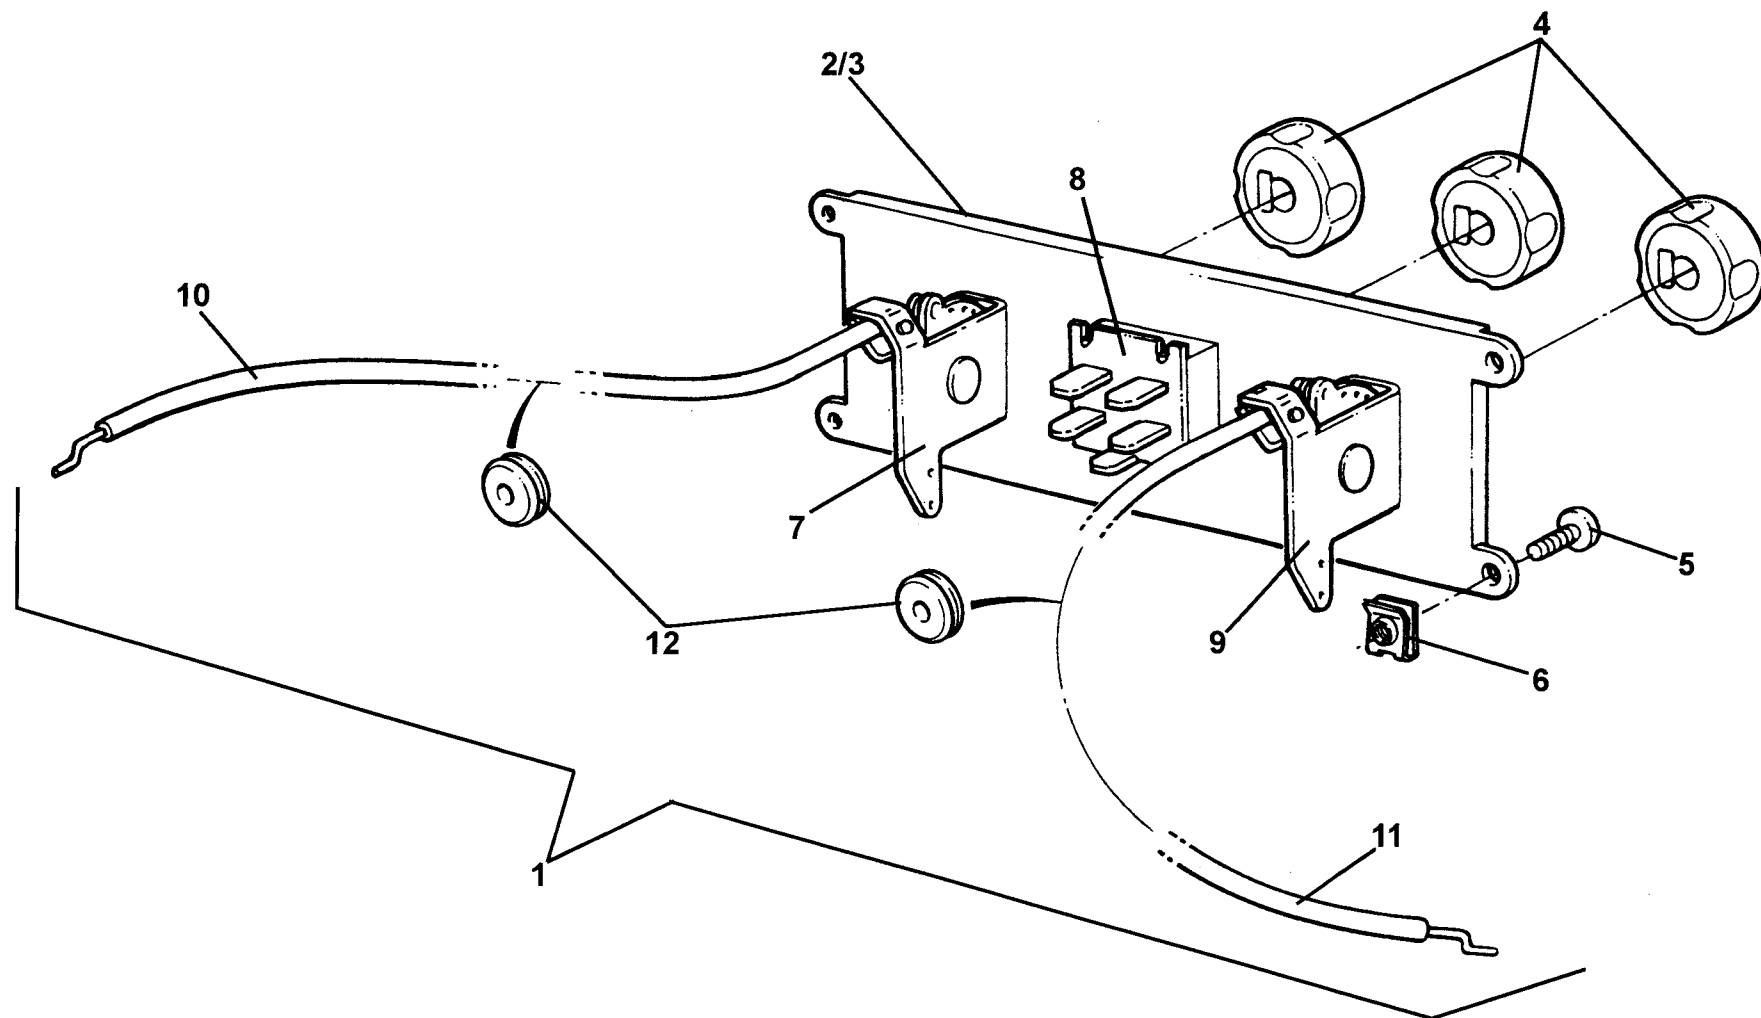


**ELISE**  
18.09

# Service Parts List **ELISE**



## Function Code 18.09 Driver Operated Controls

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Climate Control Panel Assembly, RHD	Includes switches & cables		<b>A117P0006F</b>	1
01a	Climate Control Panel Assembly, LHD	Includes switches & cables		<b>A117P0007F</b>	1
02	Mounting Panel, climate controls				1
03	Graphics Panel			<b>B117U0037F</b>	1
04	Knob, brushed/polished, climate controls		Standard & Race Tech	<b>A117U0036F</b>	3
04a	Knob, polished, climate controls		Sports Tourer	<b>A117U0201F</b>	3
05	Screw, panel fix.				4
06	Nyloc Nut				4
07	Rotary Control, temperature				1
08	Switch, fan speed control				1
09	Rotary Control, distribution				1
10	Cable, temperature control				1
11	Cable, distribution control				1
12	Grommet, cables through bulkhead				2

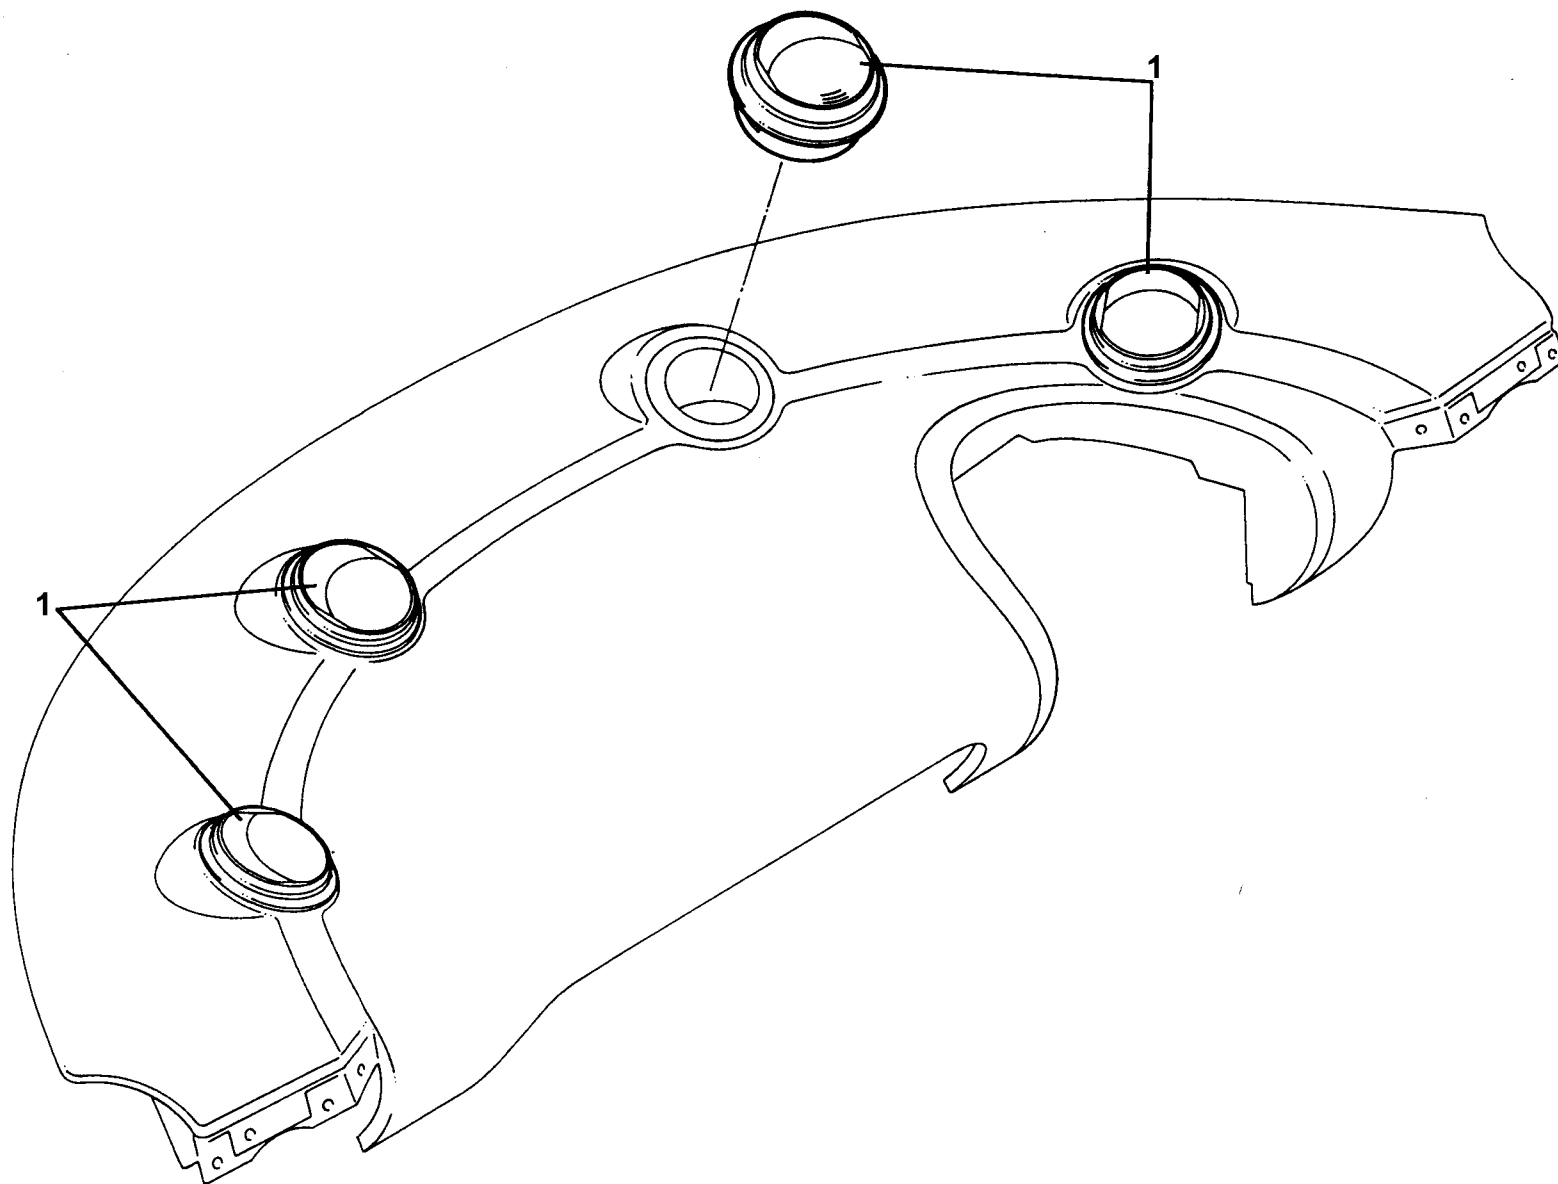

**ELISE**

**18.13**




# Service Parts List **ELISE**



## Function Code 18.13 Air Trunking & Ventilators

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Fascia Top Ventilator/Demister			A111P6001F	4

**ELISE**

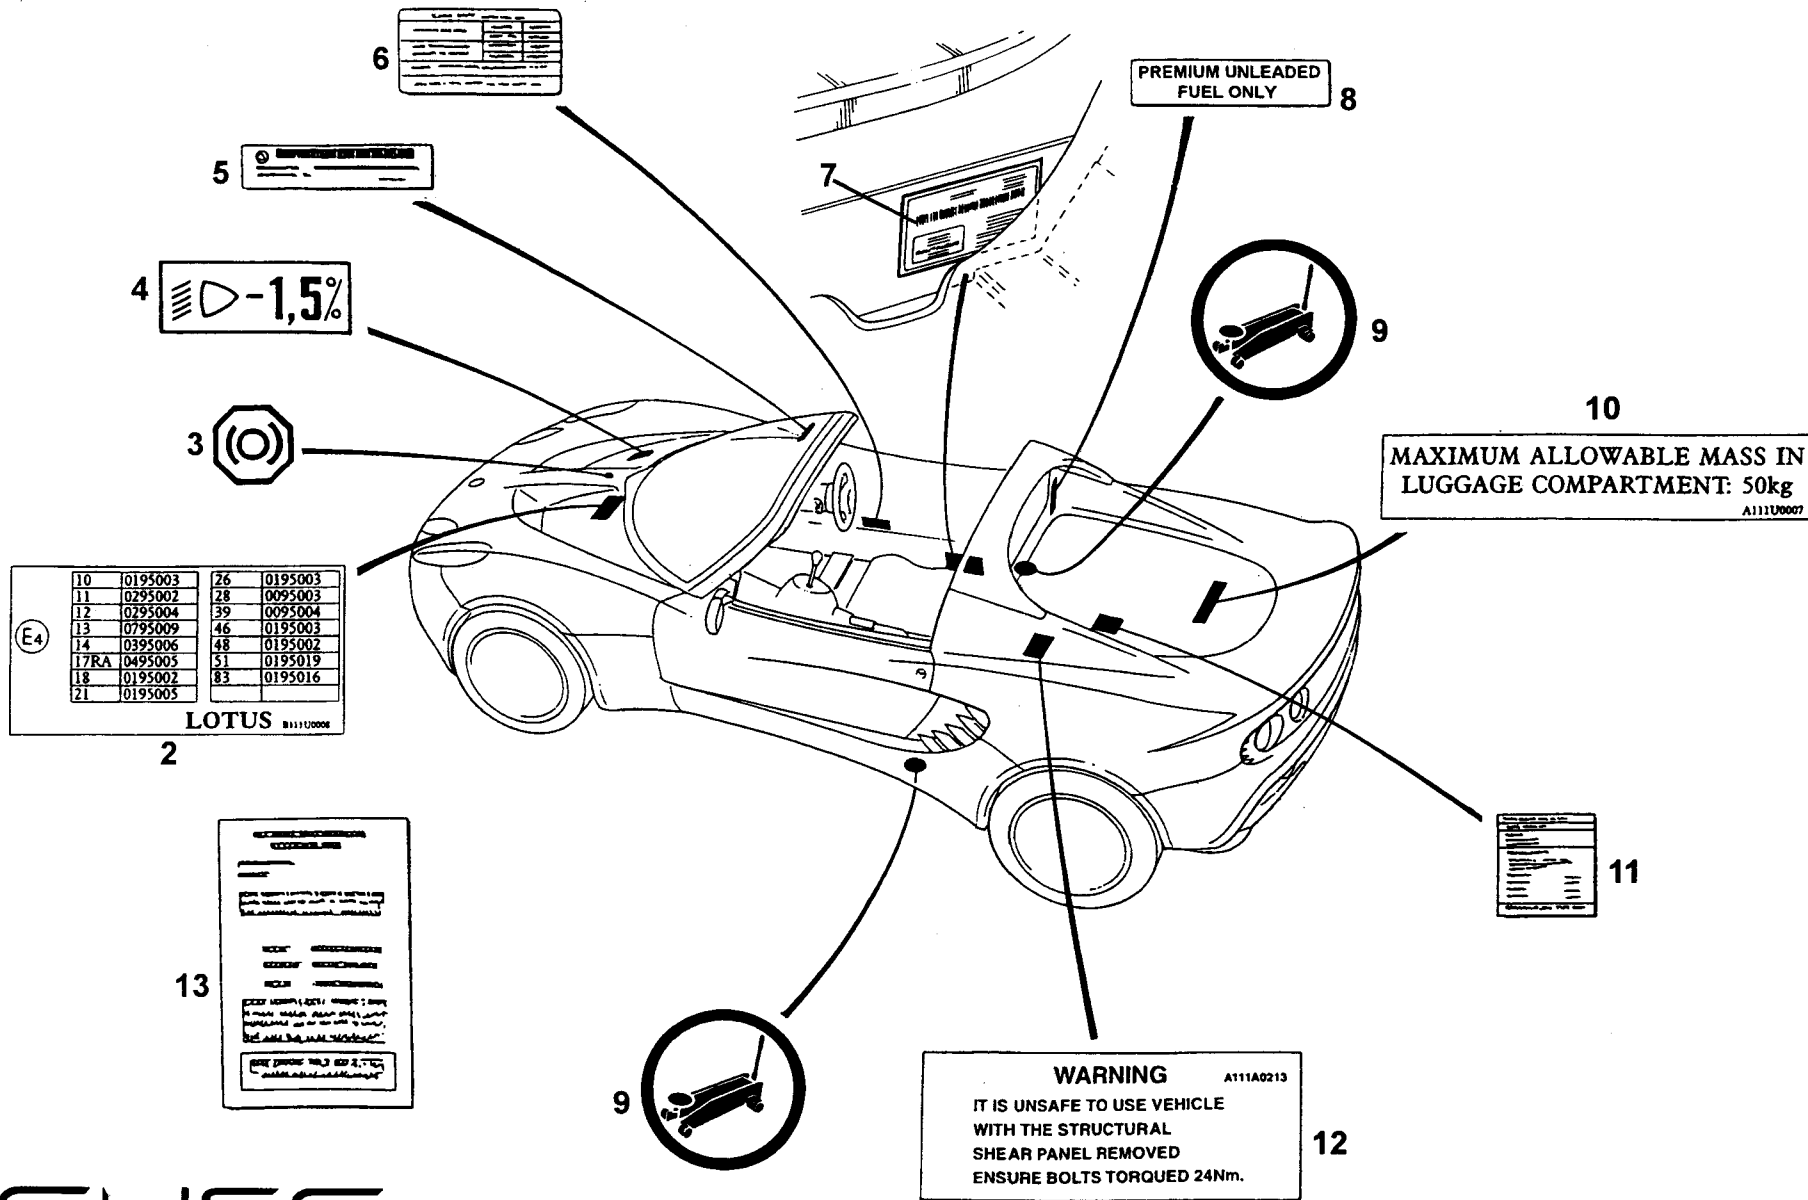

**ELISE**  
 19.01


# Service Parts List **ELISE**



## Function Code 19.01 Labels, Certificates, Literature etc.

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Certificate of Conformity	Not illustrated	English	A111U0150A	1
01a	Certificate of Conformity	Not illustrated	French	A111U0151A	1
01b	Certificate of Conformity	Not illustrated	Dutch	A111U0152A	1
01c	Certificate of Conformity	Not illustrated	German	A111U0153A	1
01d	Certificate of Conformity	Not illustrated	Italian	A111U0154A	1
02	Label, 'E' mark			D111U0008F	1
03	Label, brake fluid warning			A082U7623F	1
04	Label, headlamp levelling, 1.5%			B082U7039F	1
05	VIN Label, base	Top of windscreen		A082U7400F	1
05a	VIN Label, overlay	Used with item 5		A082U7401F	1
06	Label, tyre loading, (225/45 ZR16 rear tyre)		Australia only	A111U0274F	1
07	Label, VIN (special order only)			C111U0005K	1
08	Label, premium unleaded fuel			A082U7800F	1
09	Label, jacking point			A111U0239F	2
10	Label, luggage loading			A111U0007F	1
11	Label, vehicle emissions			A111U0318F	1
12	Label, shear panel warning	Also on fuel tank		A111A0213F	2
13	Label, fuel consumption			A111U0006K	1

**ELISE**

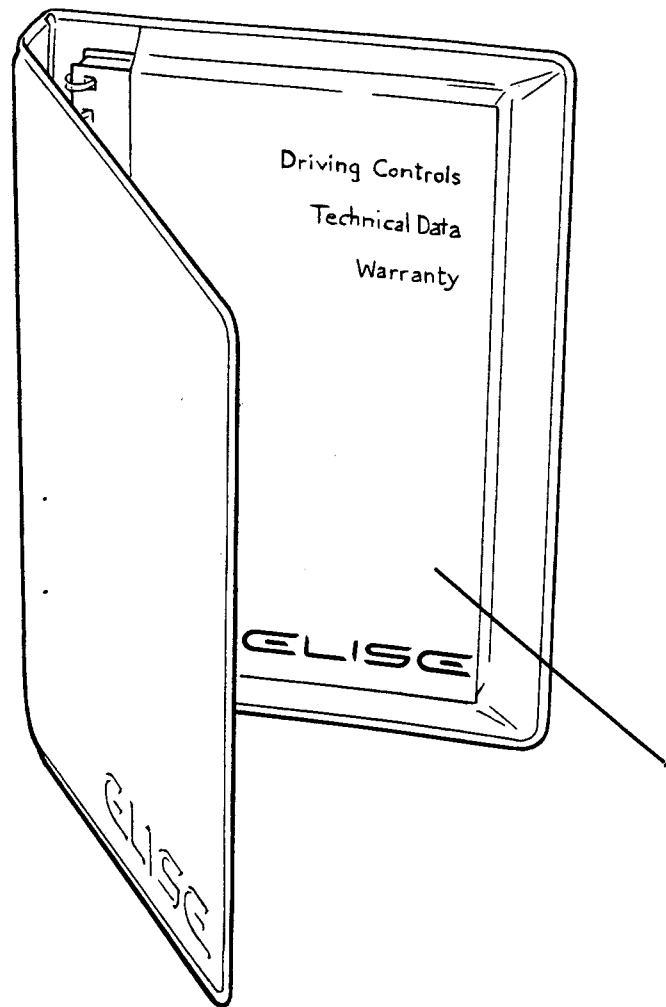


**ELISE**  
**19.03**

# Service Parts List **ELISE**



## Function Code 19.03 Owner's Handbooks & Service Notes Manuals

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Owners Handbook	Includes maintenance record/dealer directory	All models	A117T0324J	1
02	Service Notes	Not illustrated		A117T0327J	1
03	Service Parts List	Not illustrated		A117T0325J	1
06	Service Labour Times	Not illustrated		A117T0328J	1

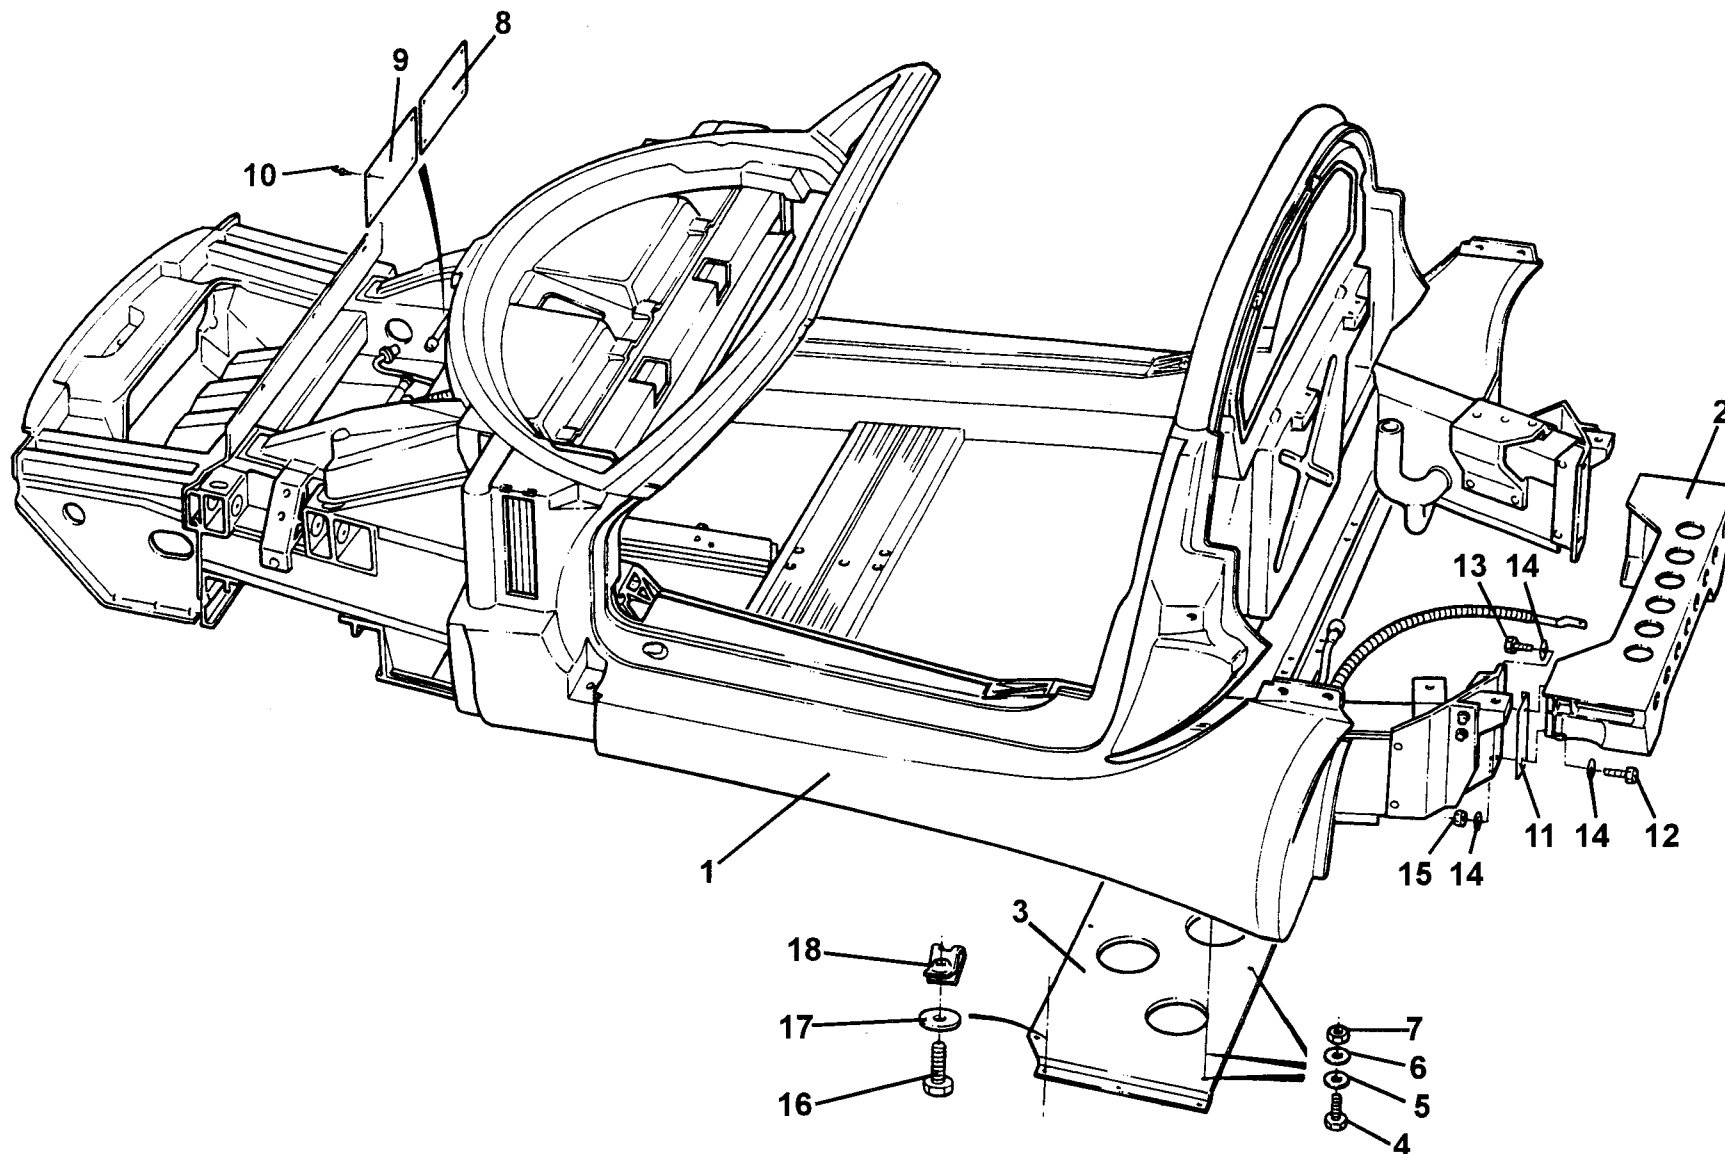

**ELISE**  
30.01


# Service Parts List **ELISE**



## Function Code 30.01 Chassis, Subframe

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Partial Body Assembly		RHD		1
01a	Partial Body Assembly		LHD		1
02	Rear Sub Frame, galvanised	Order rear longerons also, see 30.19		F111A0057F	1
03	Shear Panel, fuel tank bay closing panel			B117A0055F	1
04	Screw, M8 x 25, hex. hd., shear panel fix			A111W1156F	10
05	Washer, flat, M8 x 21 x 1.6			A111W4159F	10
06	Washer, flat, M8 x 16.6 x 1.4			A111W4164F	5
07	Nut, nyloc, M8			A907E62844F	5
08	Blanking Panel, RH, toe board air vents			A111B0489K	1
09	Blanking Panel, LH, toe board air vents			A111B0490K	1
10	Pop Rivet, blanking panel fix			A085W6259F	8
11	Shim, chassis to subframe, LH			B111A0217F	1
11a	Shim, chassis to subframe, RH			B111A0216F	1
12	Bolt, M10 x 55, hex. hd.			A111W2181F	2
13	Screw, M10 x 25, hex. hd.			A111W1157F	2
14	Washer, flat, M10 x 20.5 x 1.8			A075W4024Z	8
15	Nut, M10, flg. hd.			A111W3151F	4
16	Setscrew, M5 x 16, hex. hd., shear panel to chassis/sill	Also see 10.25		A111W1163F	6

**ELISE**

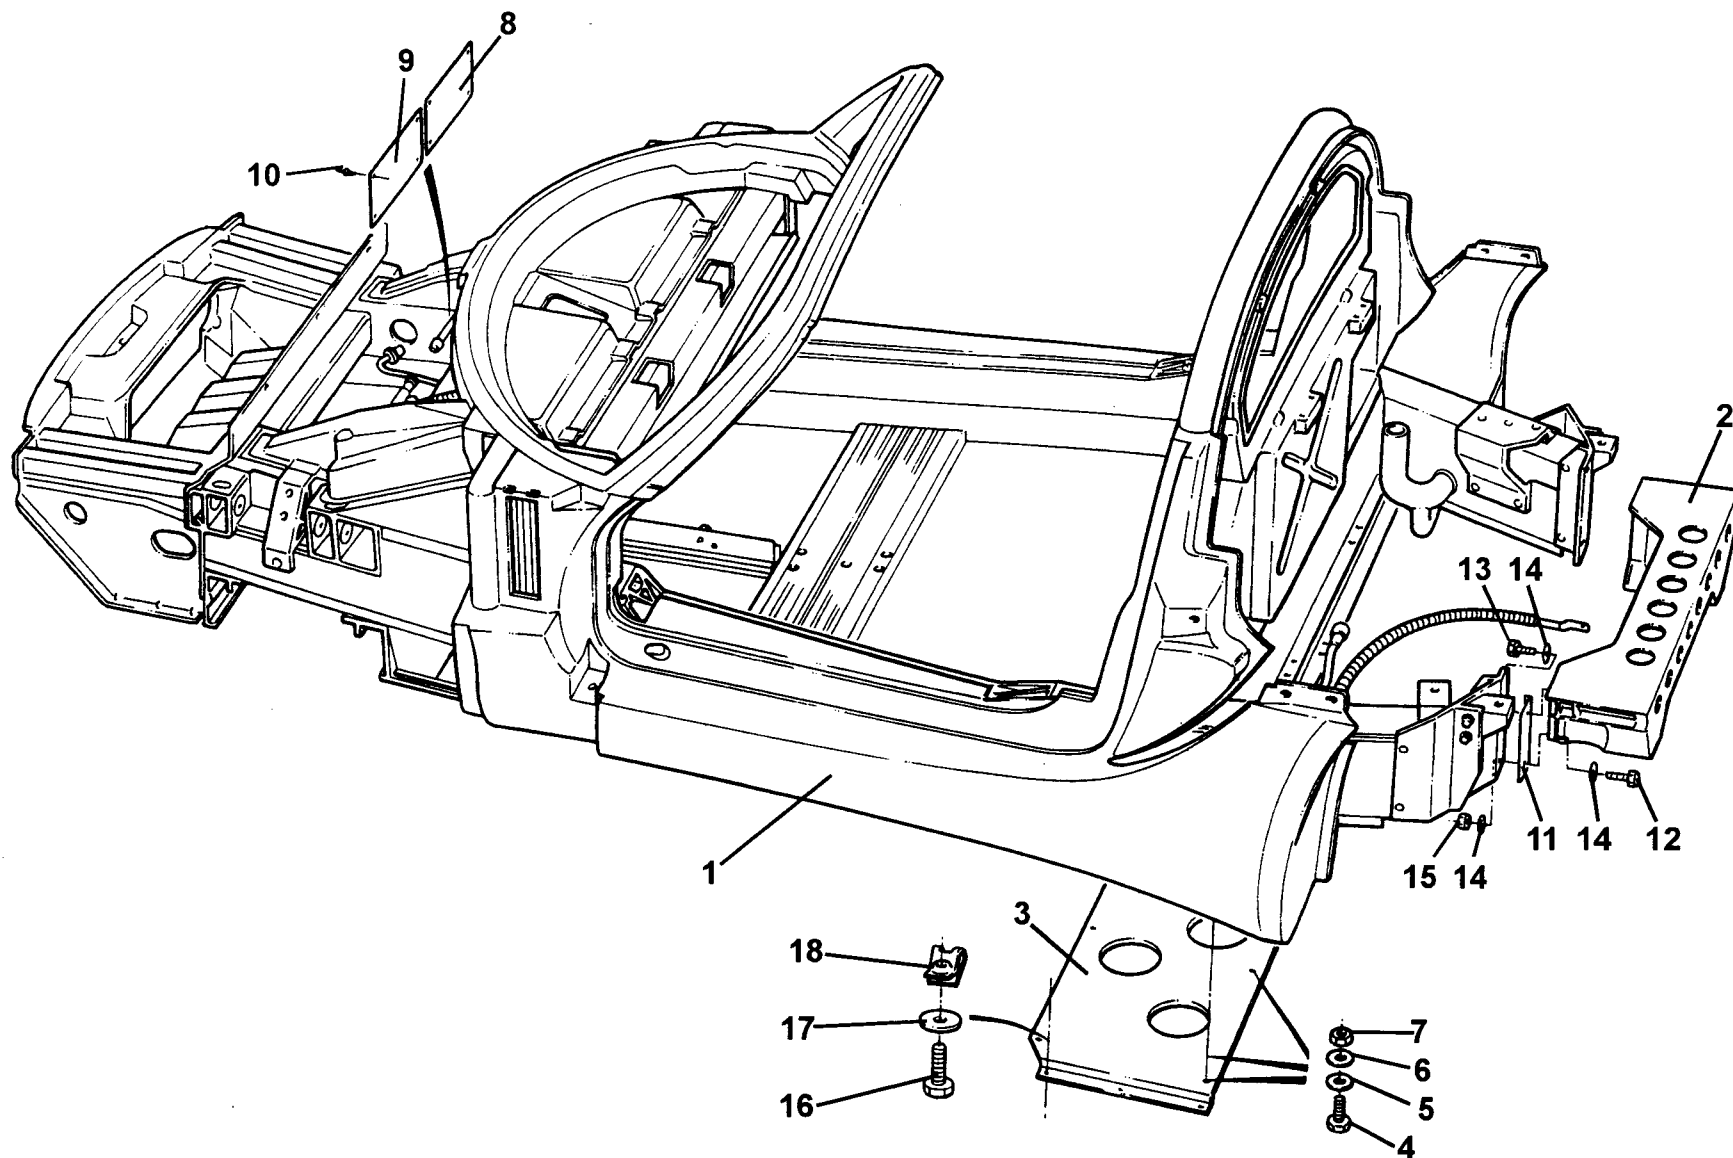


**ELISE**  
30.01



**Function Code 30.01 Chassis, Subframe**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
17	Washer, flat, M5 x 25 x 1.4	Also see 10.25		A082W4098F	6
18	Spirenut, M5	Also see 10.25		B100W6372F	6

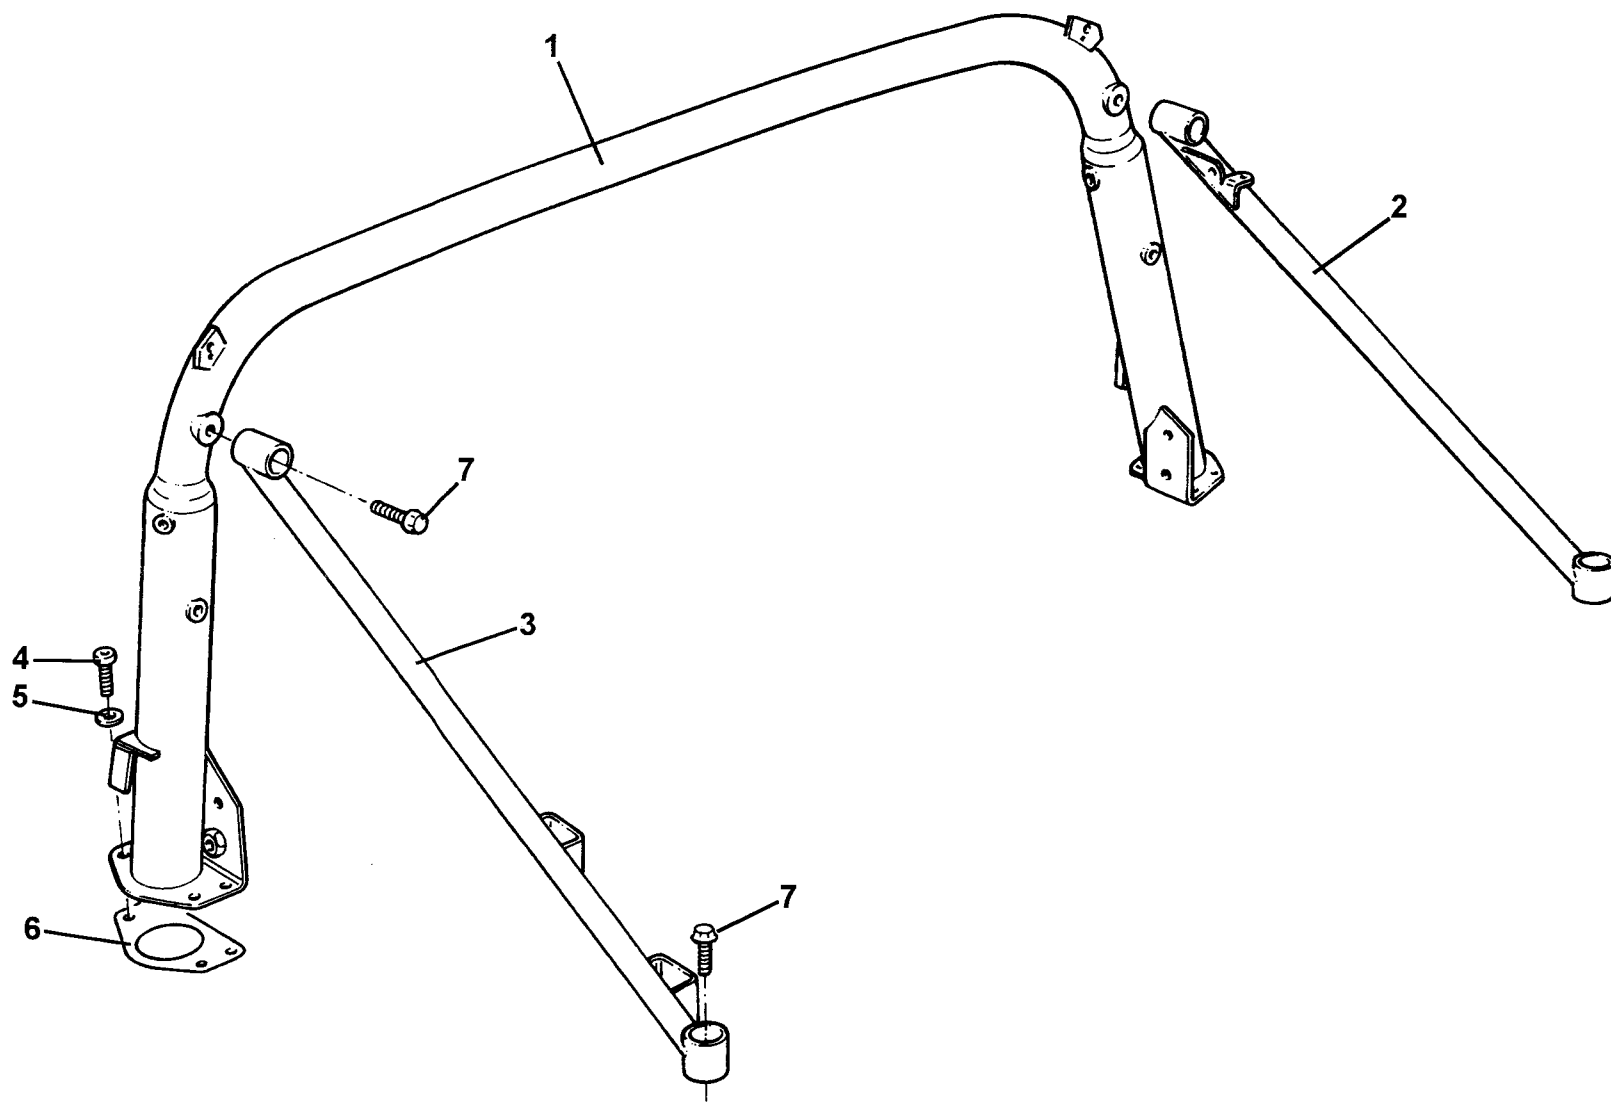

**ELISE**  
30.02


# Service Parts List **ELISE**



## Function Code 30.02 Roll-Over Bar

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Roll-Over Bar			A117A0058F	1
02	Backstay, roll-over bar, RH			A117A0064F	1
03	Backstay, roll-over bar, LH			A117A0069F	1
04	Screw, M8 x 25, cap hd.			A111W7132F	8
05	Washer, flat, M8 x 16.6 x 1.4			A075W4020Z	8
06	Shim, base plate			B111A0071F	2
07	Screw, M10 x 35, flg. hd.			A117W2196F	4
08	Permabond A130	not illustrated, for use with screws, item: 4		A912E7034F	As req.

**ELISE**

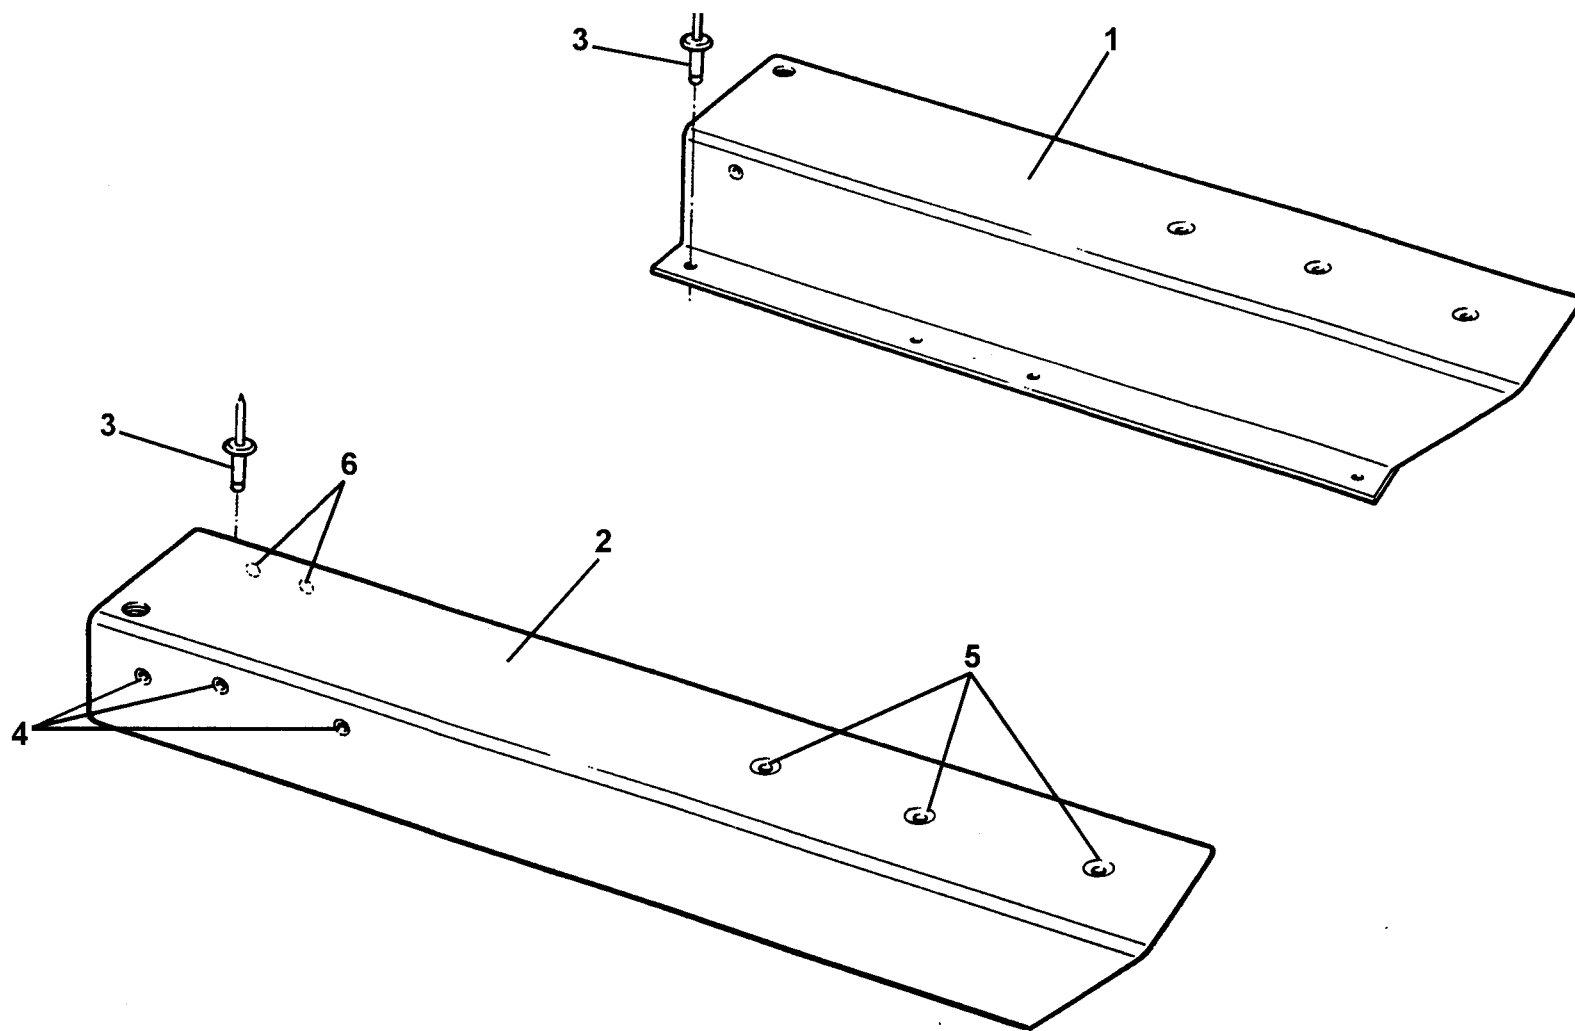

ELISE

30.19


# Service Parts List **ELISE**



## Function Code 30.19 Longerons

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Longeron, LH	Required with new subframe		E117A0033F	1
02	Longeron, RH	Required with new subframe		D117A0034F	1
03	Pop Rivet, 6.4 x 20,			A6593F111W	6
04	Rivnut, M6 x 1, countersunk hd.			A111W6536H	8
05	Pulsert, M6 flat hd.			A079W6191F	6
06	Rivnut, M5 x 0.8 countersunk hd			A111W6566H	2

**ELISE**

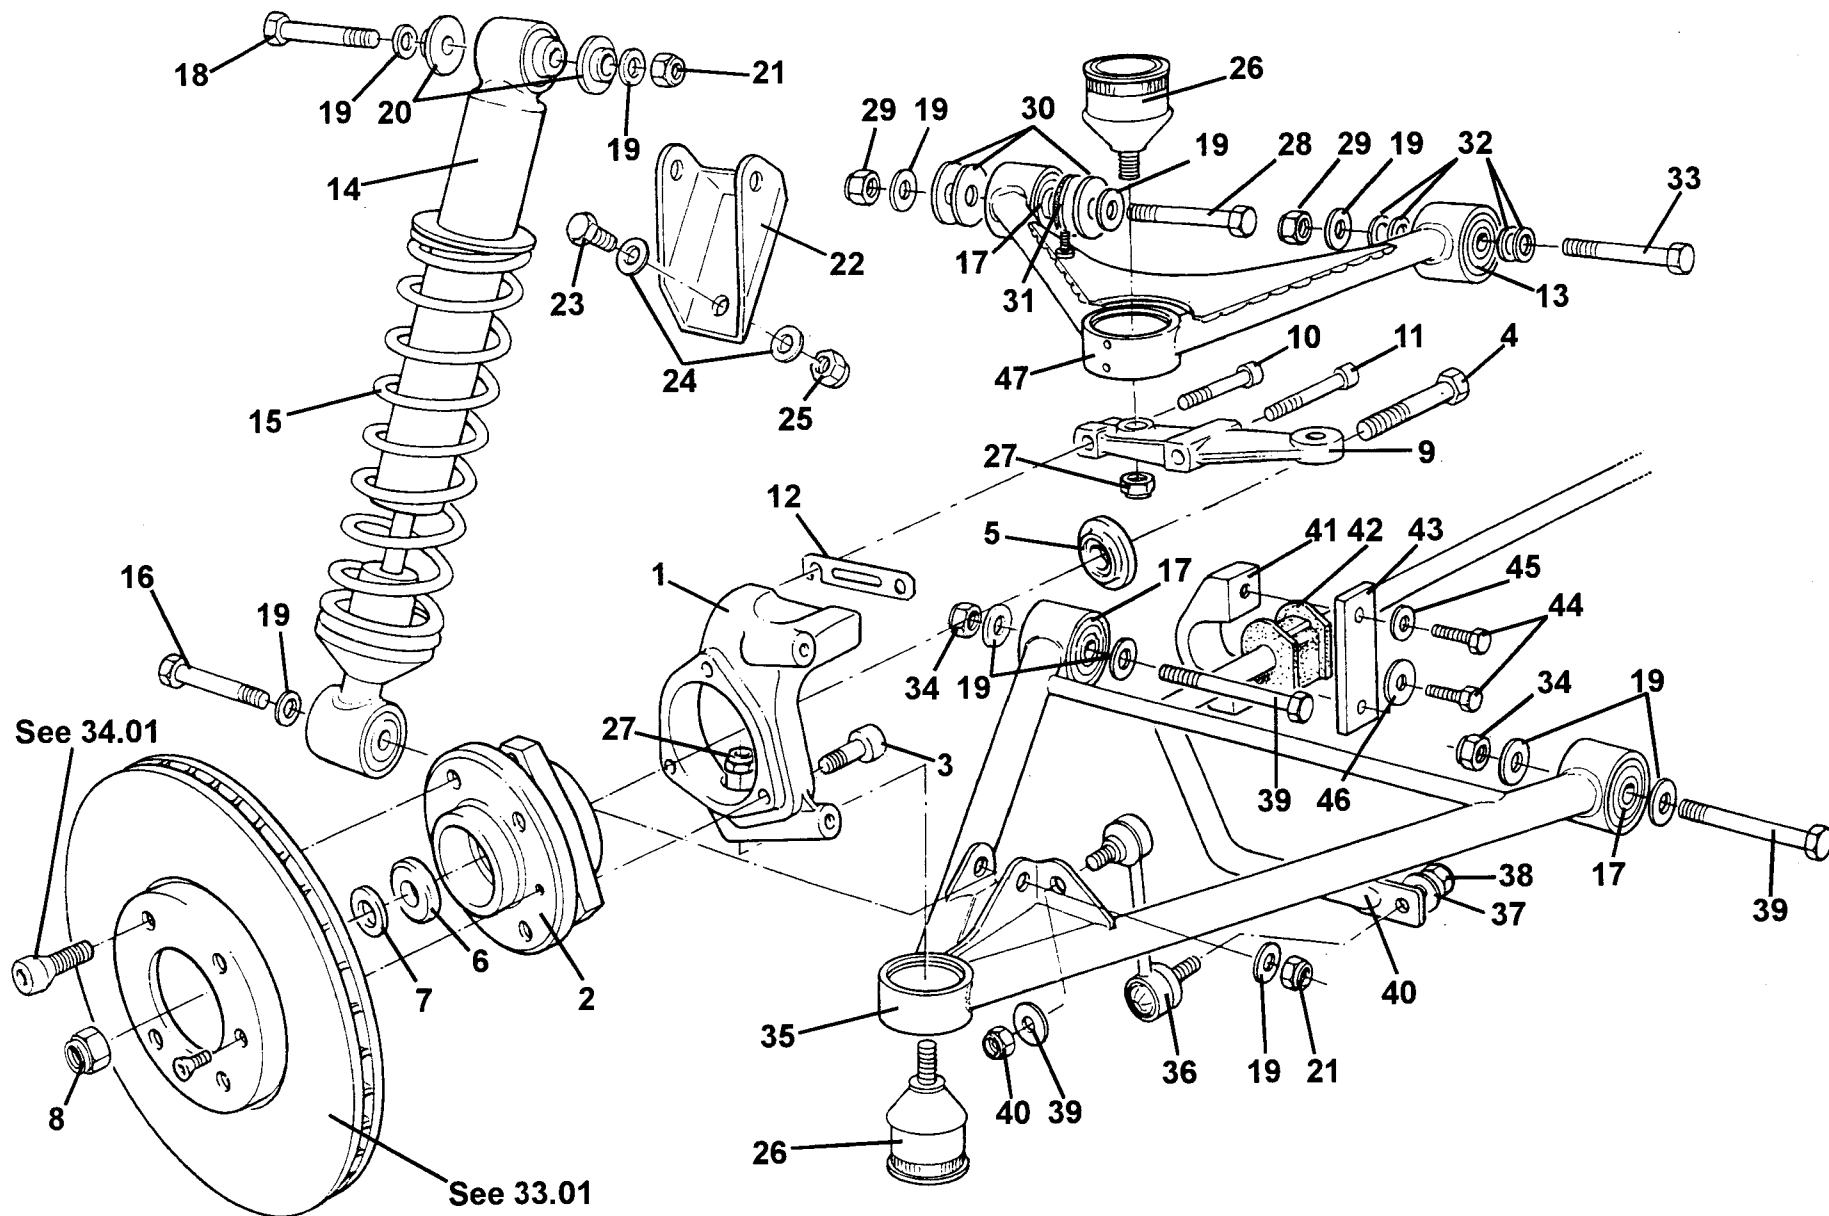

**ELISE**  
31.01


# Service Parts List **ELISE**



## Function Code 31.01 Front Suspension Incl. Hubs

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Hub Carrier, forged steel, LH			A116C0001F	1
01a	Hub Carrier, forged steel, RH			A116C0002F	1
02	Hub/Bearing Assembly			A117C6002F	2
03	Screw, M12 x 40, cap hd., hub assy. to hub carrier			A116W1170F	6
04	Bolt, M16 x 100, hex. hd., hub retention			A111W2185F	2
05	Thrust Washer, inner, hub retention			A111C0118F	2
06	Thrust Washer, outer, hub retention			A111C0117F	2
07	Washer, flat, M16 x 30			A111W4171F	2
08	Nyloc Nut, M16, hub retention			A111W3159F	2
09	Steering Arm, LH			A116C0003F	1
09a	Steering Arm, RH			A116C0004F	1
10	Bolt, M10 x 45, cap hd., steering arm to hub carrier			A111W7155F	2
11	Bolt, M10 x 65, cap hd., steering arm to hub carrier			A111W7144F	2
12	Shim, 1mm, camber adjustment			A111C0062F	As req.
12a	Shim, 3mm, camber adjustment			C111C0064F	As req.
13	Bush, upper wishbone rear pivot			A111C0108F	2
14	Damper			D117C0007H	2
15	Road Spring			A117C0006H	2

**ELISE**

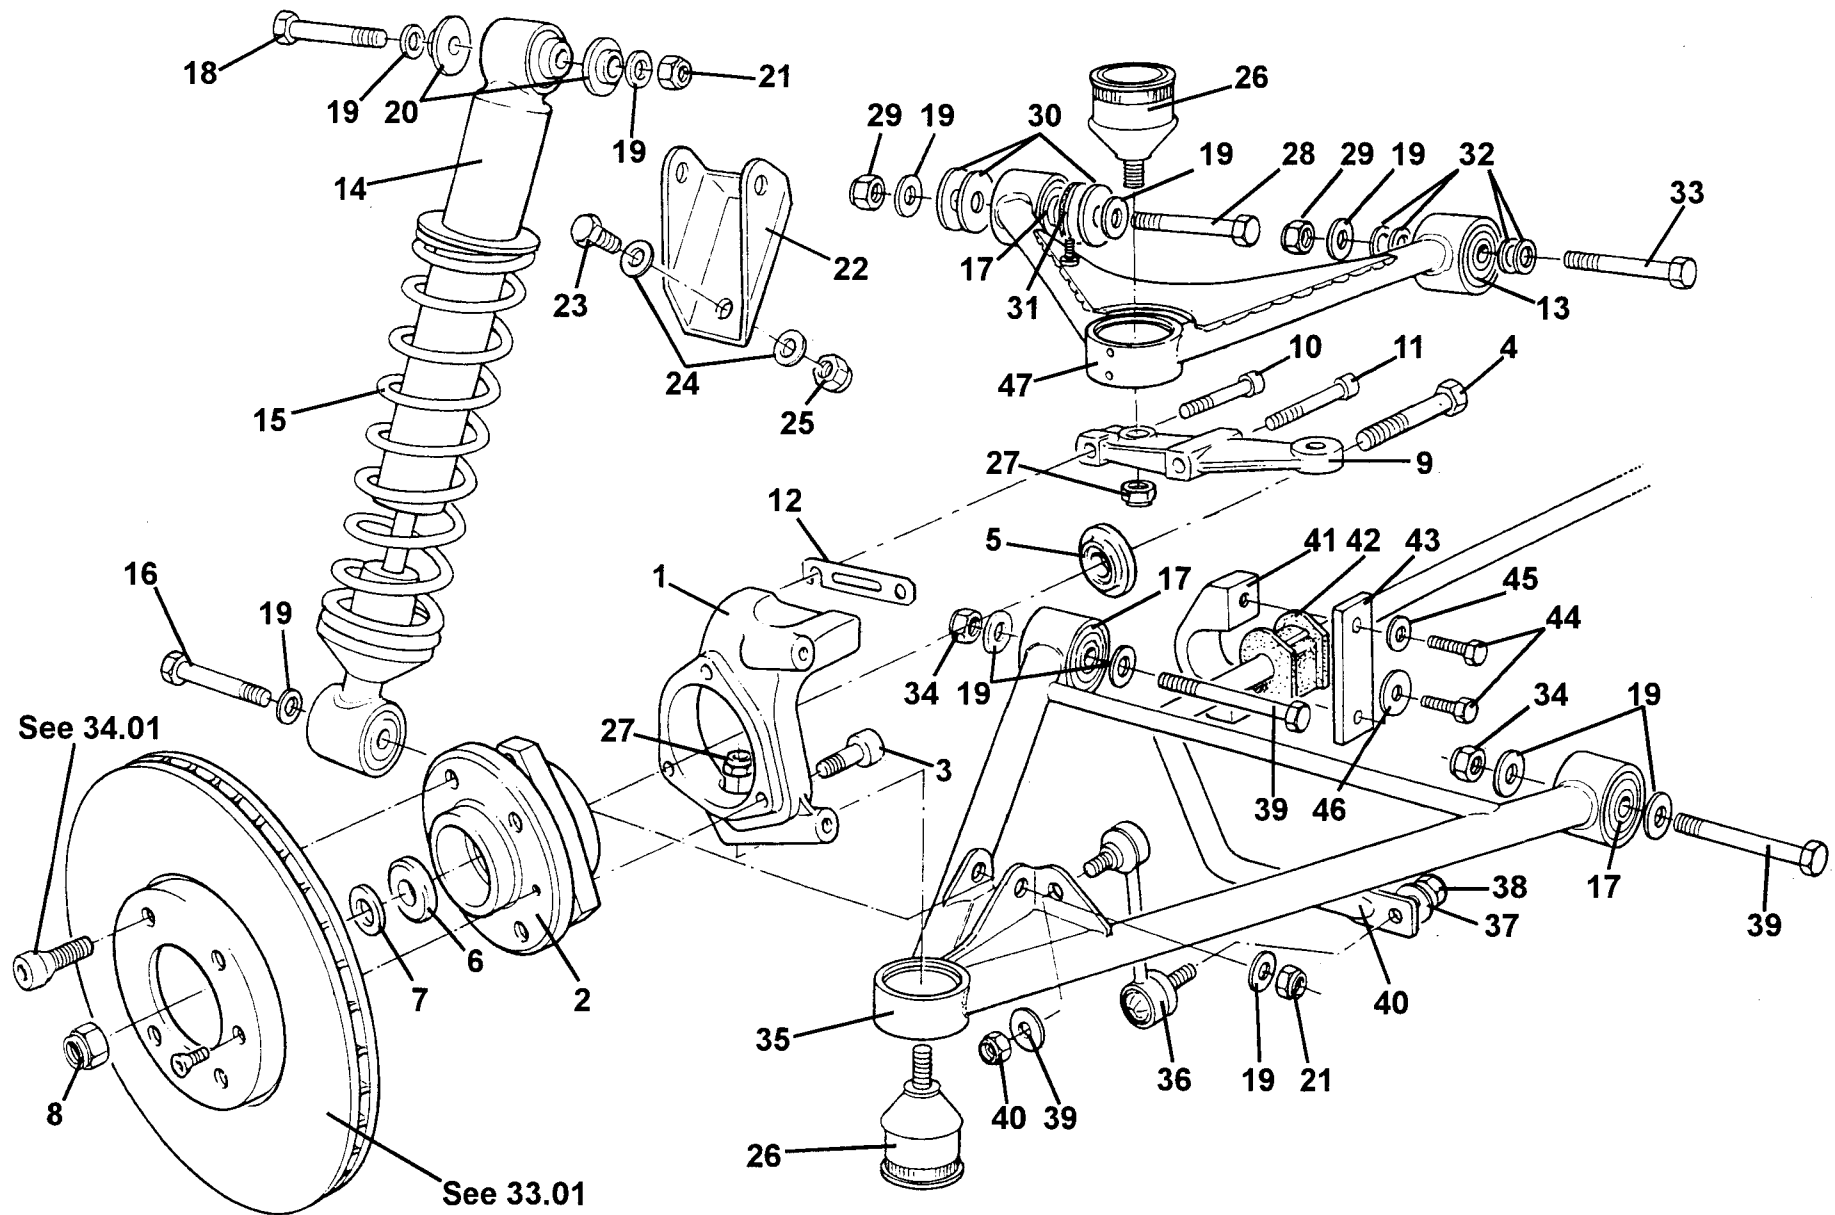


**ELISE**  
31.01



**Function Code 31.01 Front Suspension Incl. Hubs**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
16	Bolt, M10 x 55, hex. hd., damper bottom fix.			A079W2057F	2
17	Bush, lower wishbone/upper wishbone front pivots			A111C0075F	6
18	Bolt, M10 x 70, hex. hd., damper top fix.			A075W2058Z	2
19	Washer, flat, M10 x 20 5 x 1.8			A075W4024Z	22
20	Spacer, damper to top mounting bracket			A111C0061F	4
21	Nyloc Nut, M10, damper fixings			A100W3112F	4
22	Damper Mounting Bracket, LH			B111C0033F	1
22a	Damper Mounting Bracket, RH			B111C0034F	1
23	Bolt, M8 x 25, hex. hd., bracket to chassis			A111W1156F	4
24	Washer, flat, M8 x 16.6, bracket to chassis			A111W4164F	4
25	Nyloc Nut, M8, bracket to chassis			A075W3010Z	4
26	Ball Joint	Includes nyloc nut		B111C6012F	4
27	Nyloc Nut, ball joint fix			A111C6019S	2
28	Pivot Bolt, M10 x 80, hex. hd., wishbone upper front			A075W2061Z	2
29	Nut, nyloc, M10, wishbone upper to chassis			A100W3112F	4
30	Shim, castor adjustment			A111C0077F	6
31	Snubber Washer, rubber coated, upper wishbone			A111C0081F	2
32	Shim, castor adjustment, small			A111C0080F	8
33	Pivot Bolt, M10 x 75mm, hex. hd., wishbone upper rear			A075W2059Z	2
34	Nut, nyloc, M10, wishbone lower to chassis fix			A100W3112F	4
35	Wishbone Assembly, lower, LH	Includes balljoint & bushes		A117C0035J	1

**ELISE**

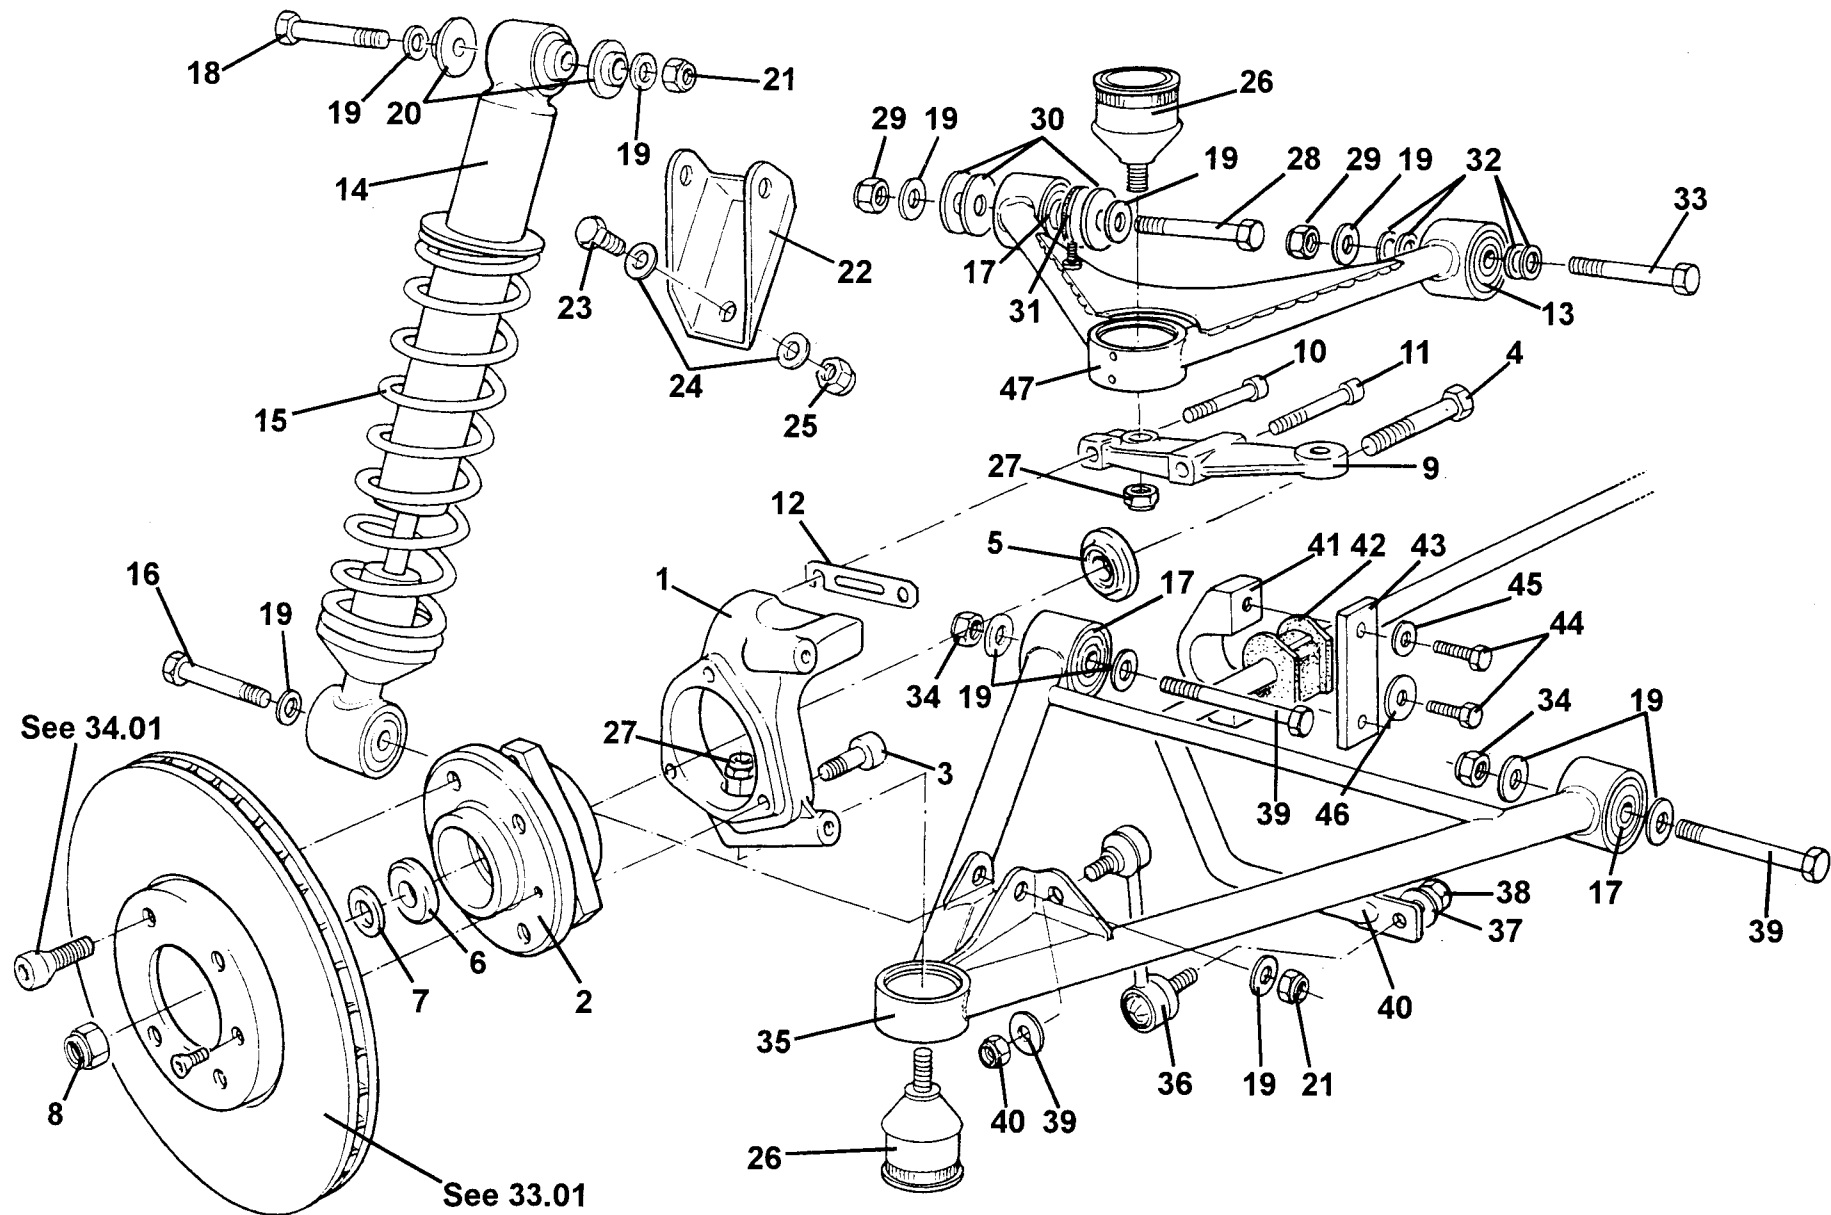

**ELISE**  
31.01

**Function Code 31.01 Front Suspension Incl. Hubs**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
35a	Wishbone Assembly, lower, RH	Includes balljoint & bushes		A117C0034J	1
36	Anti-Roll Bar Drop Link			A111C0063F	2
37	Washer, flat, M10 x 24 x 1.5, drop link fix			A075W4023F	4
38	Nyloc Nut, M10 x 1.25, drop link fix			A111W3152F	4
39	Pivot Bolt, M10 x 85, hex. hd., wishbone lower			A079W2063F	4
40	Anti-Roll Bar			A111C0111F	1
41	Clamp Bracket, A/R bar			A111C0107F	2
42	Pivot Bush, rubber, A/R bar.			A111C0094F	2
43	Spacer Plate, A/R bar fixing			A111C0109F	2
44	Screw, M8 x 30, A/R bar clamp bracket fixing			A111W1161F	4
45	Washer, flat, M8			A111W4169F	2
46	Washer, flat, M8 x 25 x 1.4			A111W4156F	2
47	Wishbone assembly, upper LH	Includes balljoint & bushes		A117C0029J	1
47a	Wishbone assembly, upper RH	Includes balljoint & bushes		A117C0030J	1



# Service Parts List **ELISE**



## Function Code 31.03 Rear Suspension Incl. Hubs

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Hub Carrier, forged steel, LH			A116D0001F	1
01a	Hub Carrier, forged steel, RH			A116D0002F	1
02	Hub/Bearing Assembly	Includes wheel speed sensor		A117D6005F	2
03	Screw, M12 x 40, cap hd., hub assy. to hub carrier			A116W1170F	6
04	Ball Joint Carrier			B111D0055F	2
05	Bolt, M10 x 50, cap hd., ball joint carrier to hub carrier			A111W1745F	4
06	Shim, camber adjustment			B111D0052F	As req.
07	Pivot Bolt, M10 x 55, hex. hd., upper wishbone F & R			A079W2057F	4
08	Washer, flat, M10 x 20.5			A075W4024Z	22
09	Lower Wishbone Assembly, LH	Includes balljoint & bushes		A117D0047J	1
09a	Lower Wishbone Assembly, RH	Includes balljoint & bushes		A117D0048J	1
10	Bolt, M10 x 55, hex. hd., spring/damper fixing			A079W2057F	4
11	Nyloc Nut, M10			A100W3112F	14
12	Ball Joint	Includes nyloc nut		B111C6012F	4
13	Nyloc Nut, balljoint			A111C6019S	4
14	Bracket, lower wishbone to chassis, LH			A117D0059F	1
14a	Bracket, lower wishbone to chassis, RH			A117D0060F	1
15	Bolt, M8, bracket to chassis			A111W1156F	4


**ELISE**



# Function Code 31.03 Rear Suspension Incl. Hubs

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
16	Washer, flat, lower, M8 x 16.6 x1.4			A111W4164F	4
17	Washer, flat, upper, M8 x 20.5 x 1.5 S/S			A111W4176F	4
18	Nyloc Nut, M8			A907E6284F	4
19	Screw, M10 x 25, hex. hd., bracket to chassis			A111W1157F	4
20	Washer, flat, M10			A111W4163F	4
21	Road Spring			A117D0056H	2
22	Damper			D117D0009H	2
23	Pivot Bolt, M10 x 65, hex. hd., lower wishbone front			A075W2056F	2
24	Upper Wishbone Assembly, LH	Includes balljoint & bushes		A117D0033J	1
24a	Upper Wishbone Assembly, RH	Includes balljoint & bushes		A117D0034J	1
25	Bush, lower wishbone front pivot (short)			A111D0061F	2
26	Bush, lower wishbone rear/upper wishbones			A111C0075F	6
27	Bracket, damper top mount			A117D0058F	2
28	Screw, M10 x 30, hex. hd., damper bracket to chassis			A111W1158F	4
29	Spreader Plate, damper bracket			A117D0065F	2
30	Adaptor Block, bracket to chassis, LH			A111A0003F	1
30a	Adaptor Block, bracket to chassis, RH			A111A0002F	1
31	Nut, castellated, shaft to hub			A116D6001F	2
32	Washer, flat, nut to shaft			A116D6002F	2
33	Nut, flange, M10, 8.8 grade			A111W3151F	2
34	Ball Joint, outer, RH thread			A116D0034F	2

**ELISE**

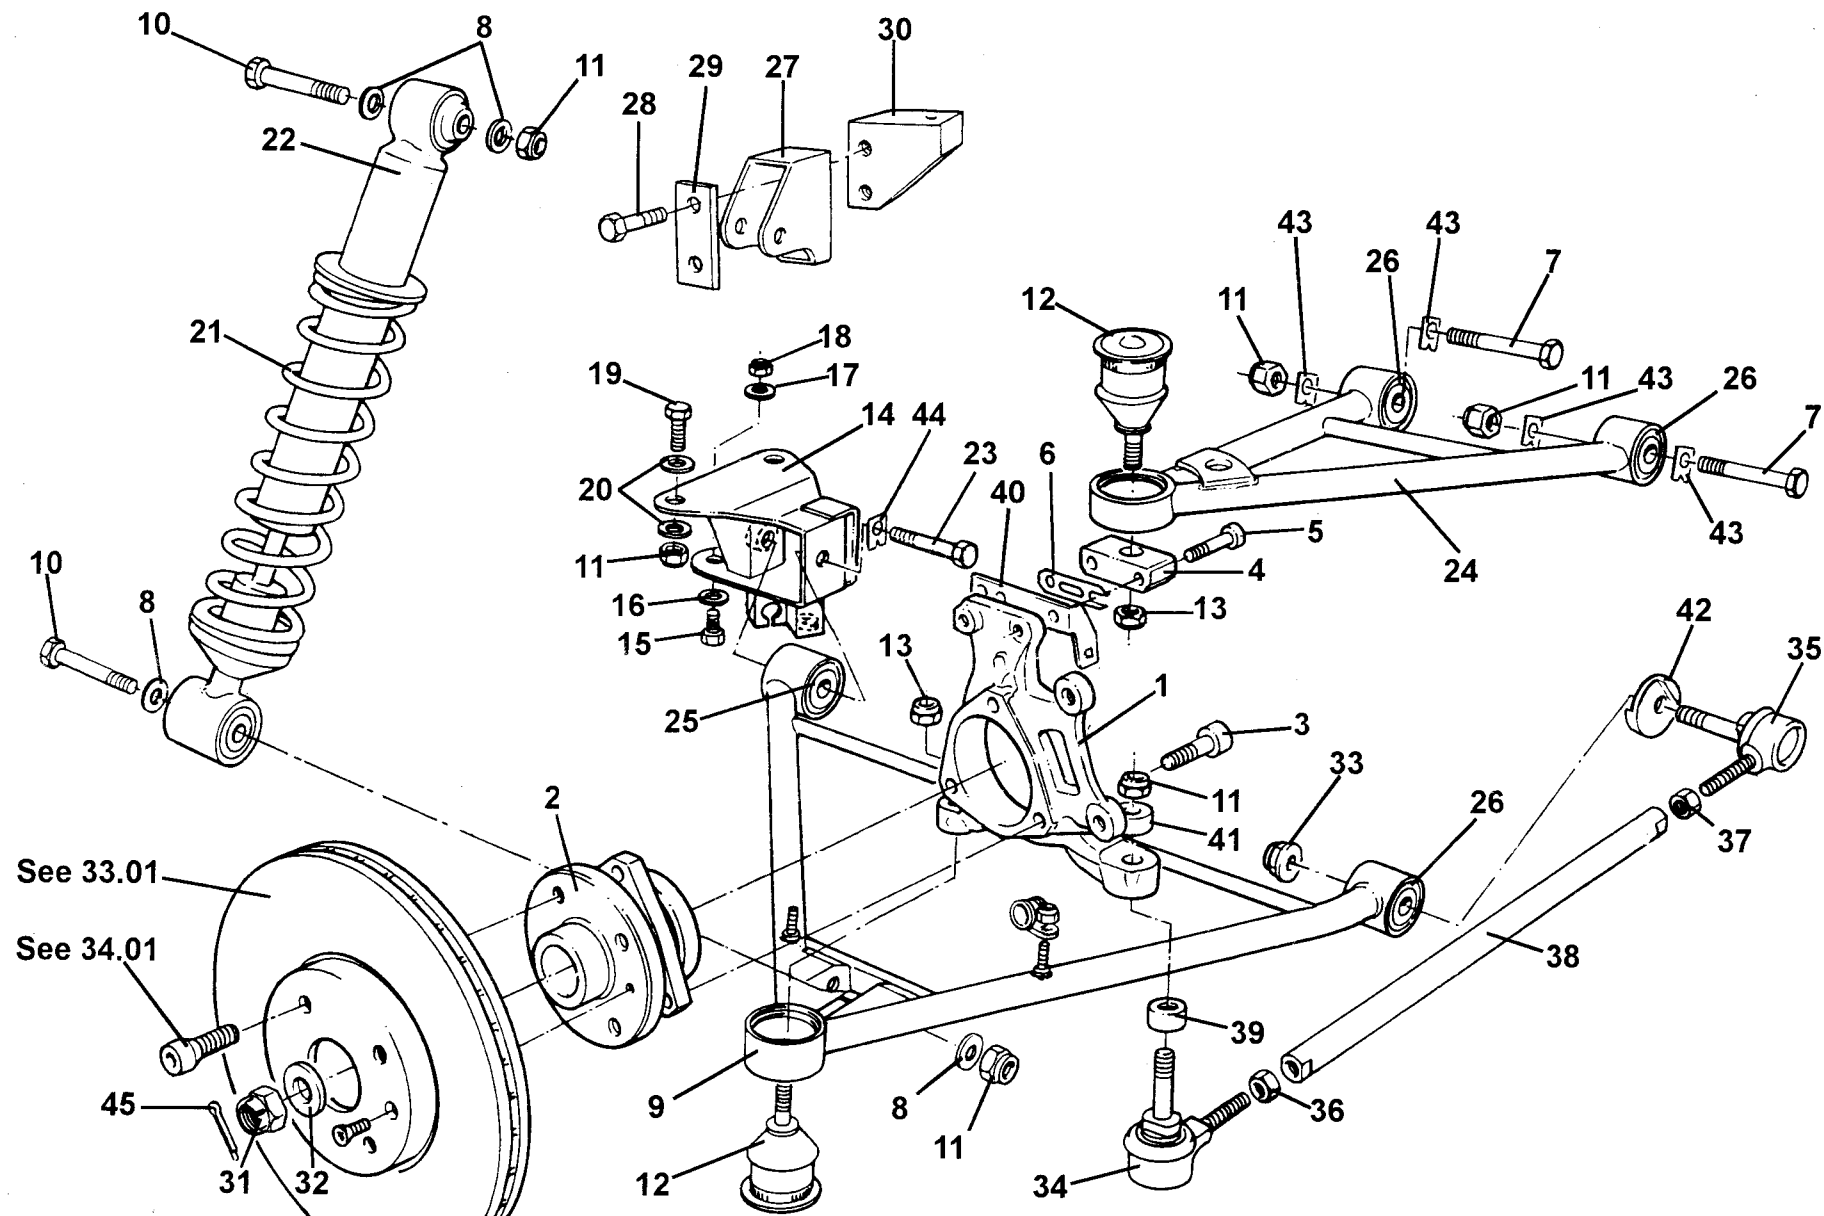


**ELISE**  
31.03



**Function Code 31.03 Rear Suspension Incl. Hubs**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
35	Ball Joint, inner, LH thread			A116D0035F	2
36	Locknut, M12, RH thread, ball joint to rod			A111W3150F	2
37	Locknut, M12, LH thread, ball joint to rod			A111W3149F	2
38	Toe Link Rod			A111D0137F	2
39	Selective Spacer, 6mm, bump steer adjusting			A116D0036F	2
39a	Selective Spacer, 7mm, bump steer adjusting			A116D0037F	2
39b	Selective Spacer, 8mm, bump steer adjusting	Factory fitted		A116D0038F	2
39c	Selective Spacer, 9mm, bump steer adjusting			A116D0039F	2
39d	Selective Spacer, 10mm, bump steer adjusting			A116D0040F	2
39e	Selective Spacer, 11mm, bump steer adjusting			A116D0041F	2
40	Shim/Bracket, connector retaining, LH			A116C0013F	1
40a	Shim/Bracket, connector retaining, RH			A116C0012F	1
41	Spacer, 10mm, balljoint stud to nut			A111D0147F	2
42	Anti-rotation Washer, ball joint to subframe			A117A0106F	2
43	Tab Washer, upper pivot bolts			A116D0031F	8
44	Tab Washer, lower front pivot bolt			A116D0032F	2
45	Split Pin, nut to shaft			A116D6003F	2

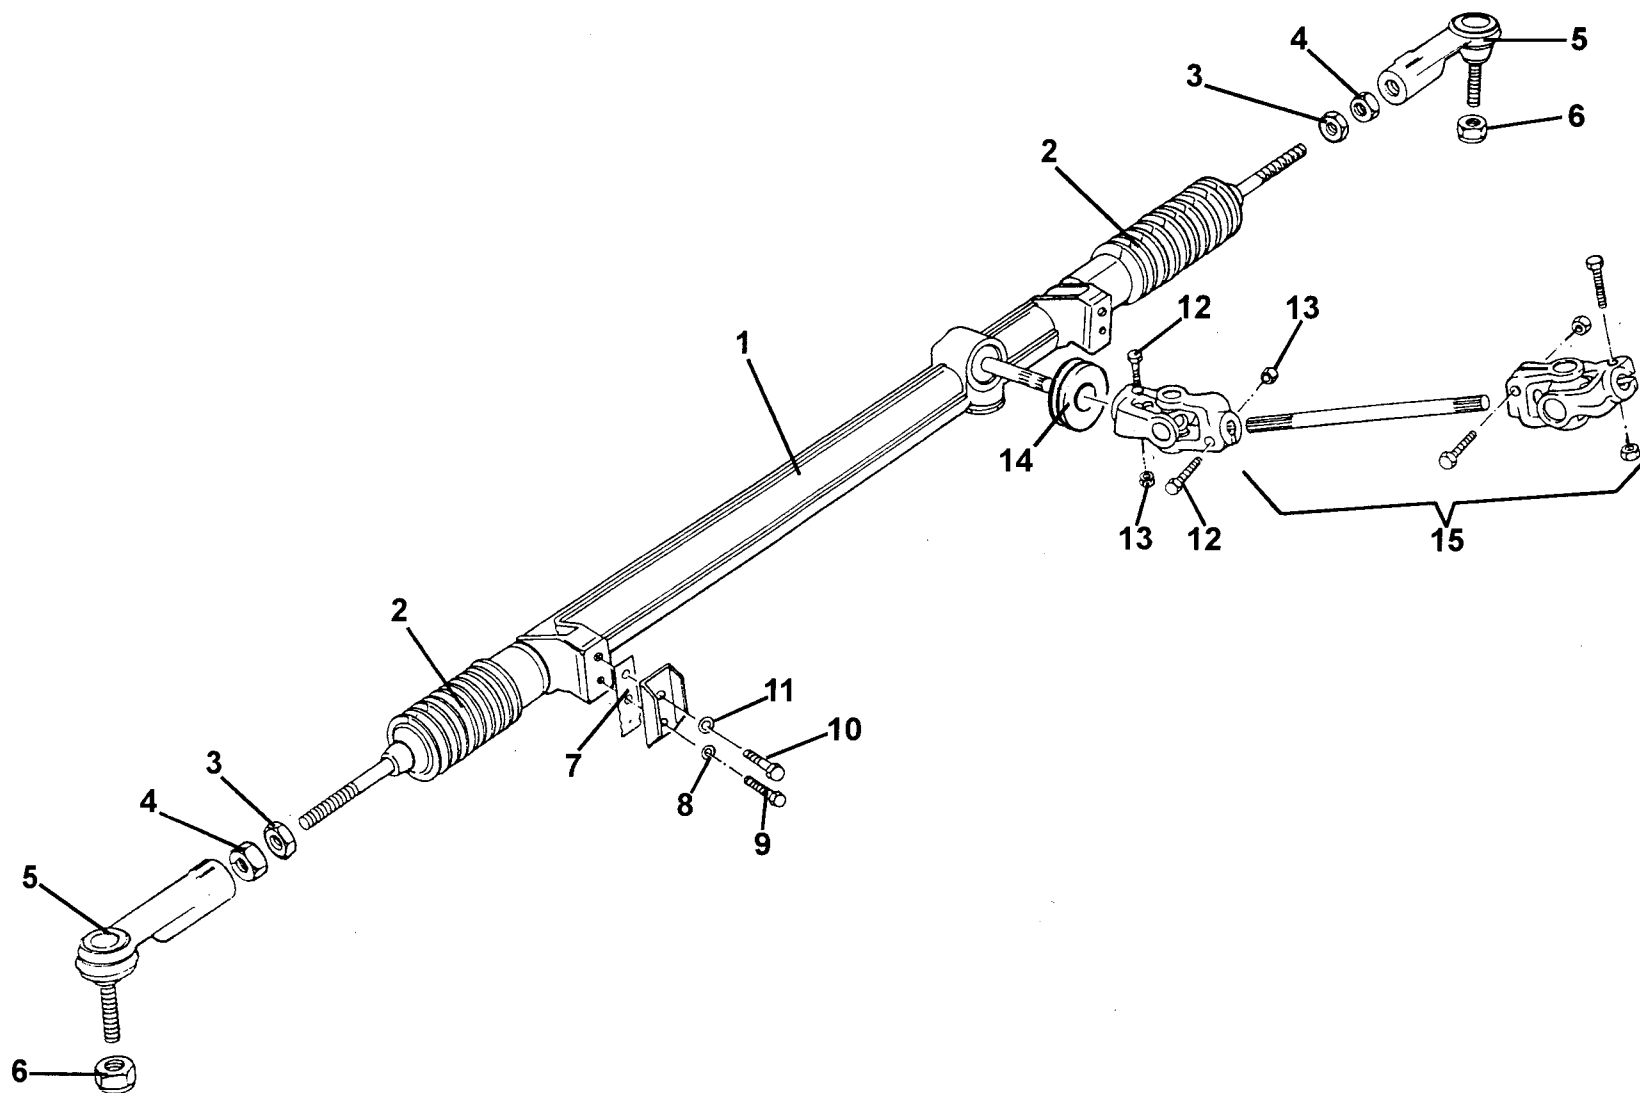

**ELISE**  
**32.01**


# Service Parts List **ELISE**



## Function Code 32.01 Rack & Pinion, & Lower Column

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Steering Rack Assembly, RHD			D117H0002	1
01a	Steering Rack Assembly, LHD			D111H0009F	1
02	Gaiter, steering rack			B111H6016F	2
03	Lock Nut, half nut, M12 , track rod end to track rod			A111W3150F	2
04	Lock Nut, M12 , track rod end to track rod			A111W3124F	2
05	Track Rod End/Ball Joint			A111H6015F	2
06	Nyloc Nut, M10, track rod end to steering arm			A111W3157F	2
07	Adjuster Plate, rack height setting			A111H0016F	2
08	Washer, flat, M8, rack mounting			A075W4020Z	2
09	Setscrew, M8 x 25, hex. hd., rack mounting			A082W1110F	2
10	Setscrew, M10 x 30, hex. hd., rack mounting			A100A6028F	2
11	Washer, flat, M10, rack mounting			A075W4024Z	2
12	Bolt, M8 x 40, hex. hd., 10.9 grade, steering shaft to U/J			A918E2171F	4
13	Nyloc Nut, M8, steering shaft to U/J			A075W3010Z	4
14	Grommet, steering shaft thro' bulkhead			A082H6046F	1
15	Intermediate Steering Shaft Assembly			B111H0003F	1

**ELISE**

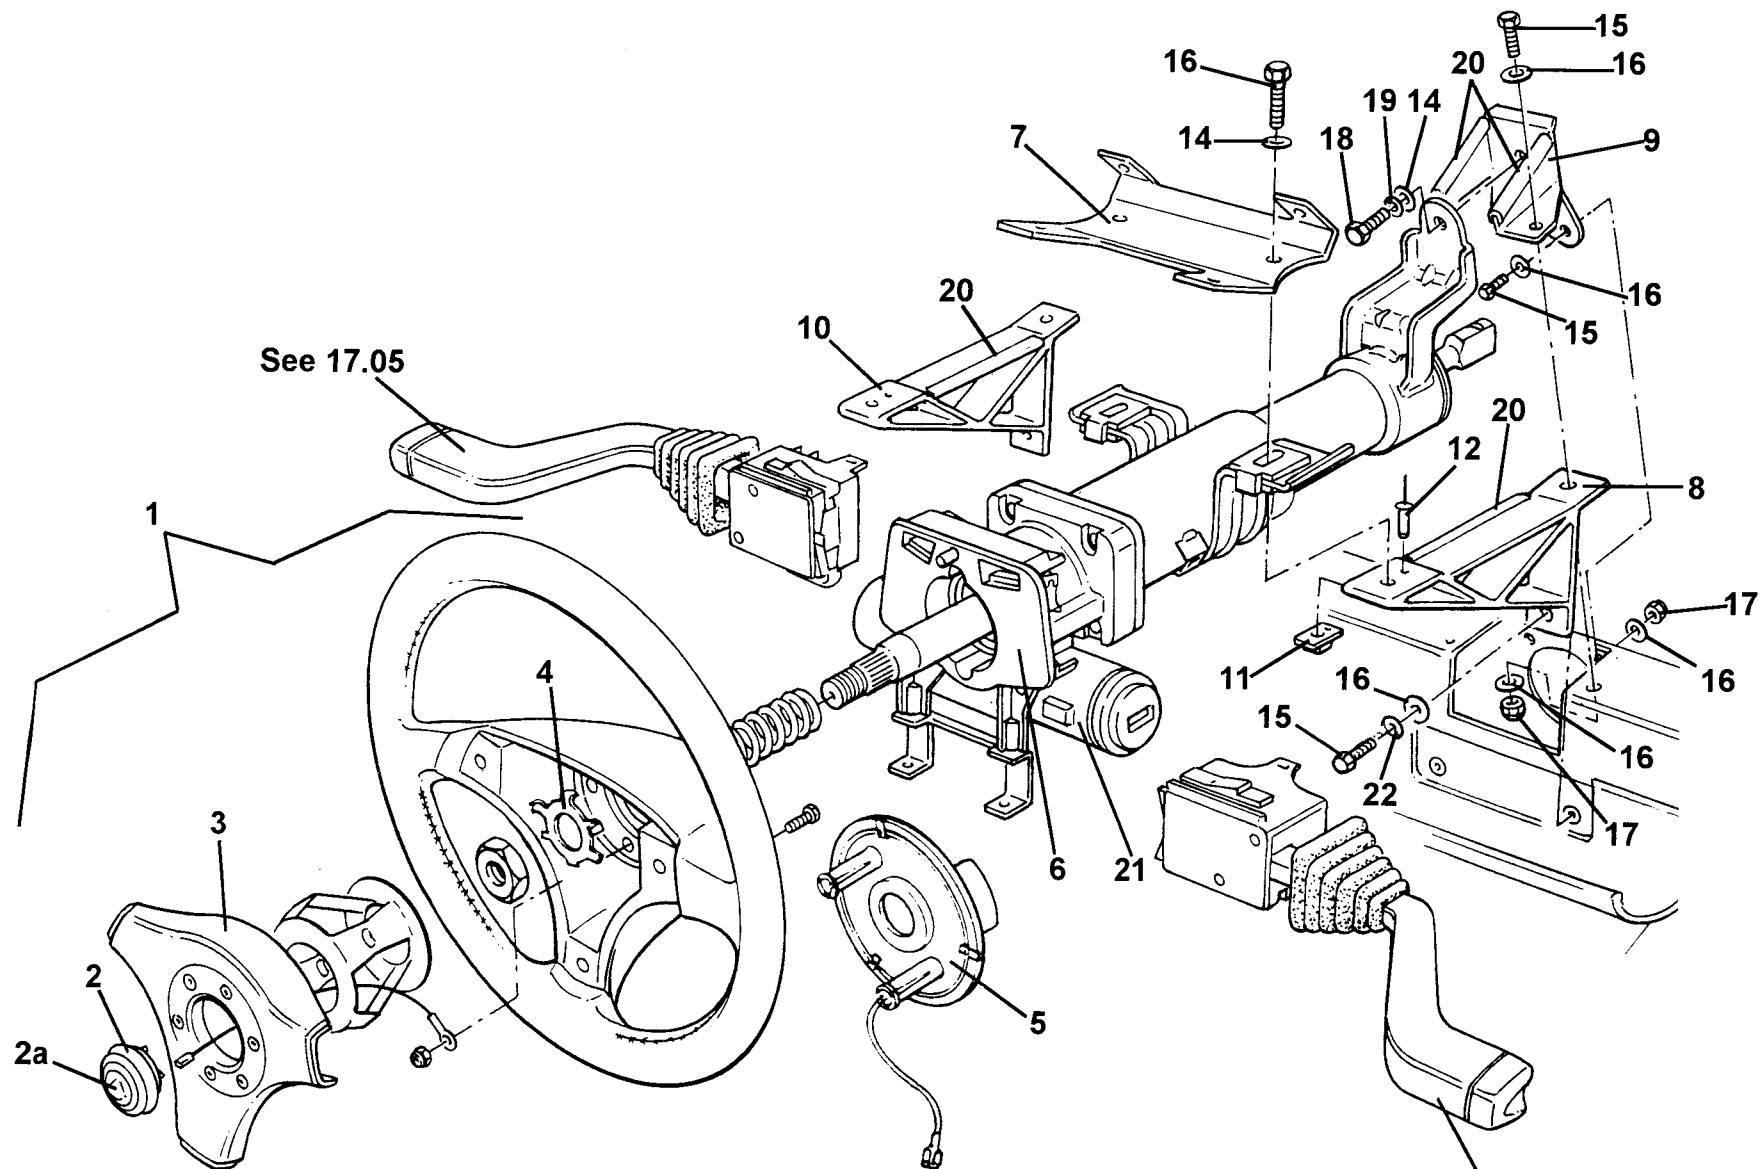

**ELISE**  
32.05


# Service Parts List **ELISE**



## Function Code 32.05 Upper Column, Wheel, Steering Lock

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Steering Wheel Assembly	Silver crash pad	Standard	A117U0077F	1
01a	Steering Wheel Assembly	Alcantara crash pad	Race Teck Pack	A117U0082J	1
01b	Steering Wheel Assembly	Leather crash pad	Sports Tourer Pack	A117U0083J	1
02	Horn Push, ( less badge )			A111H6021H	1
02a	Horn Badge			A111H6023H	1
03	Crash Pad, silver		Standard		1
03a	Crash Pad, alcantara		Race Teck Pack		1
03b	Crash Pad, leather		Sports Tourer Pack		1
04	Lock Plate, steering wheel			A111H6009F	1
05	Horn Contact Plate			A111H6008F	1
06	Upper Steering Column	Includes ign. switch/steering lock		A111H6007F	1
07	Bracket, upper steering column			B111H0006F	1
08	Column Mounting Bracket, RH			B117U0016F	1
09	Bracket, forward column mounting			B111H0004F	1
10	Column Mounting Bracket, LH			B117U0135F	1
11	Nutplate, upper column support			B111H0007F	2
12	Pop Rivet, nutplate to bracket			A111W6586F	2
13	Bolt, M8 x 35, hex. hd., column to bracket			A075W2038D	2



**ELISE**

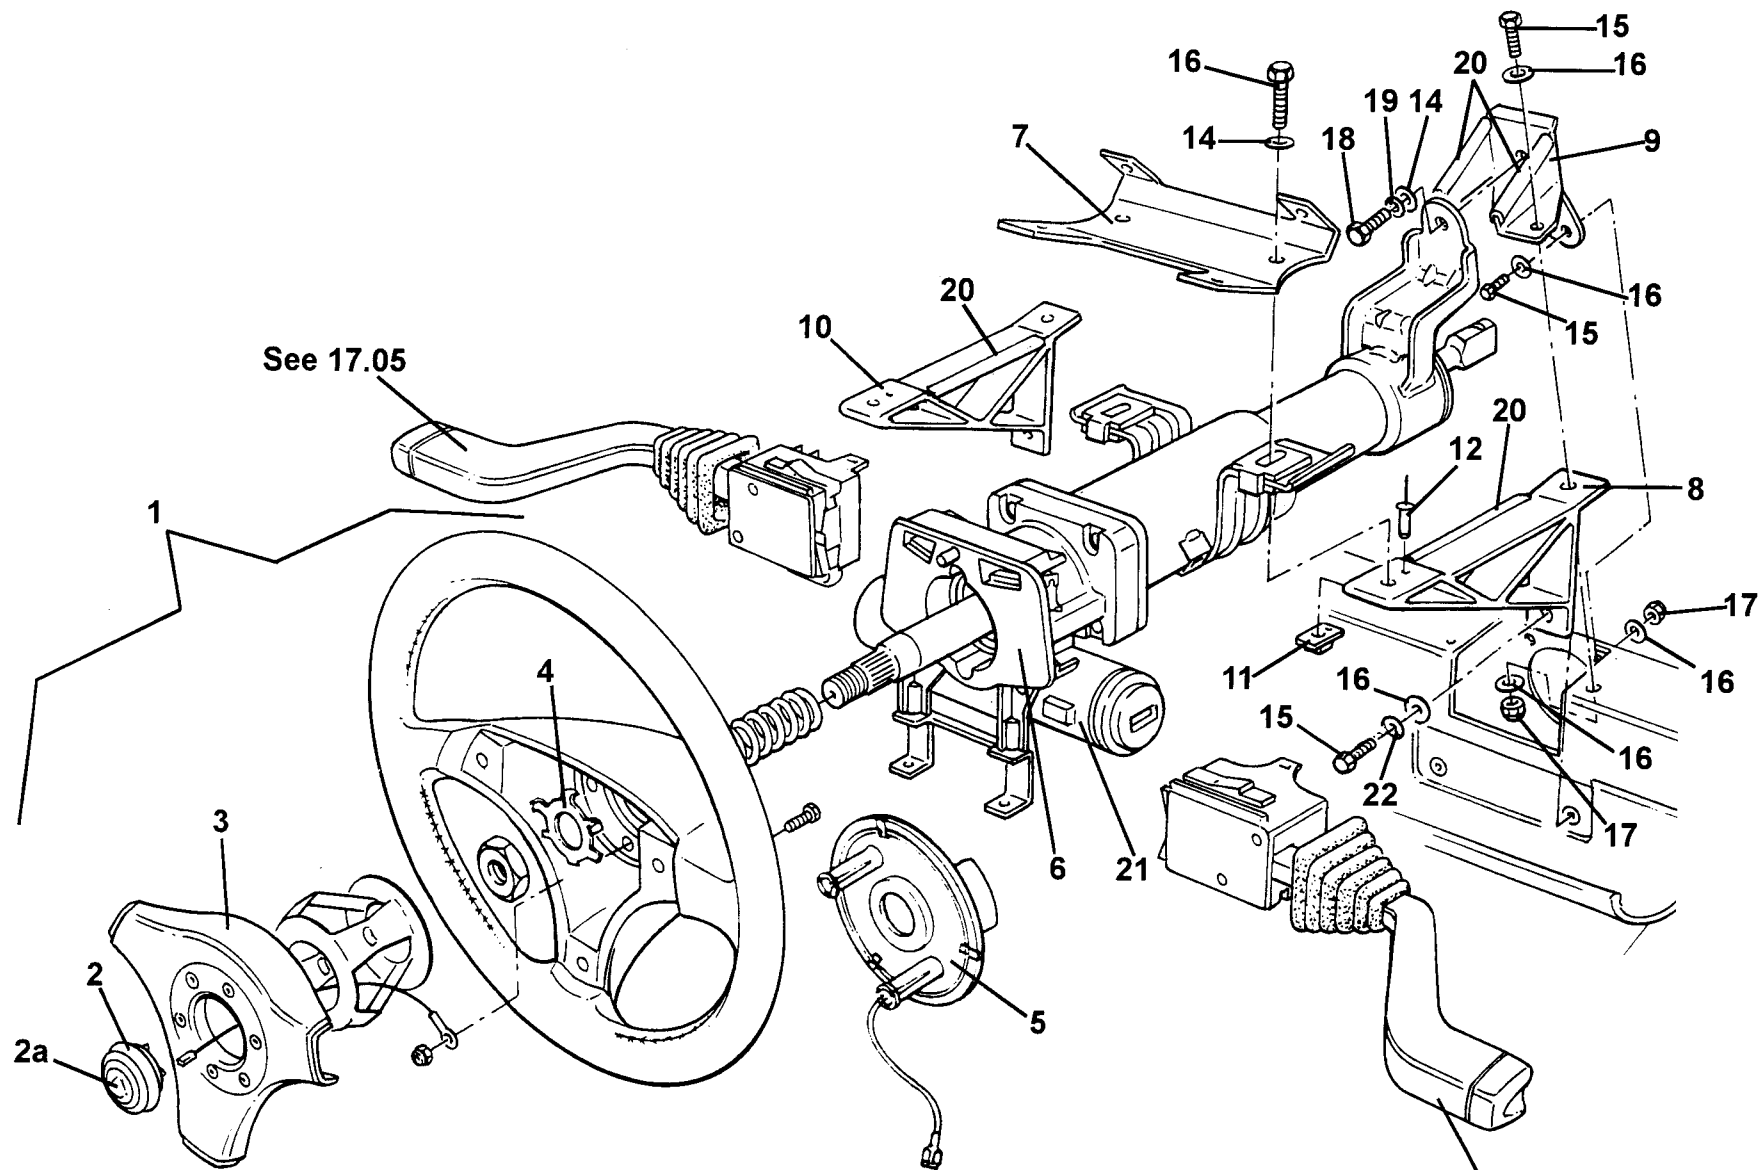

**ELISE**  
**32.05**

**Function Code 32.05 Upper Column, Wheel, Steering Lock**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
14	Washer, flat, M8 x 20 x 2.5			A079W4019F	3
15	Setscrew, M6 x 16, side to forward brk/chassis			A075W1028Z	4
16	Washer, flat, M6 x 12.1 x 1.4			A075W4013Z	8
17	Nyloc Nut, M6			A907E6258F	4
18	Setscrew, M8 x 16 hex. hd., front mounting			A075W1036Z	1
19	Washer, spring, M8			A075W4036Z	1
20	Rubber Beading, bracket edge protection			B075U6054V	0.3M
21	Steering Lock Housing	Excluding lock barrel, see 10.17, item 1		A111H6003S	1
22	Washer, spring, M6			A075W4035F	2
23	Shear Bolt, steering lock	Not illustrated		A111H6026S	2
24	Splined Hub, steering wheel	Not illustrated, part of wheel assy., item 1		A111H6018S	1

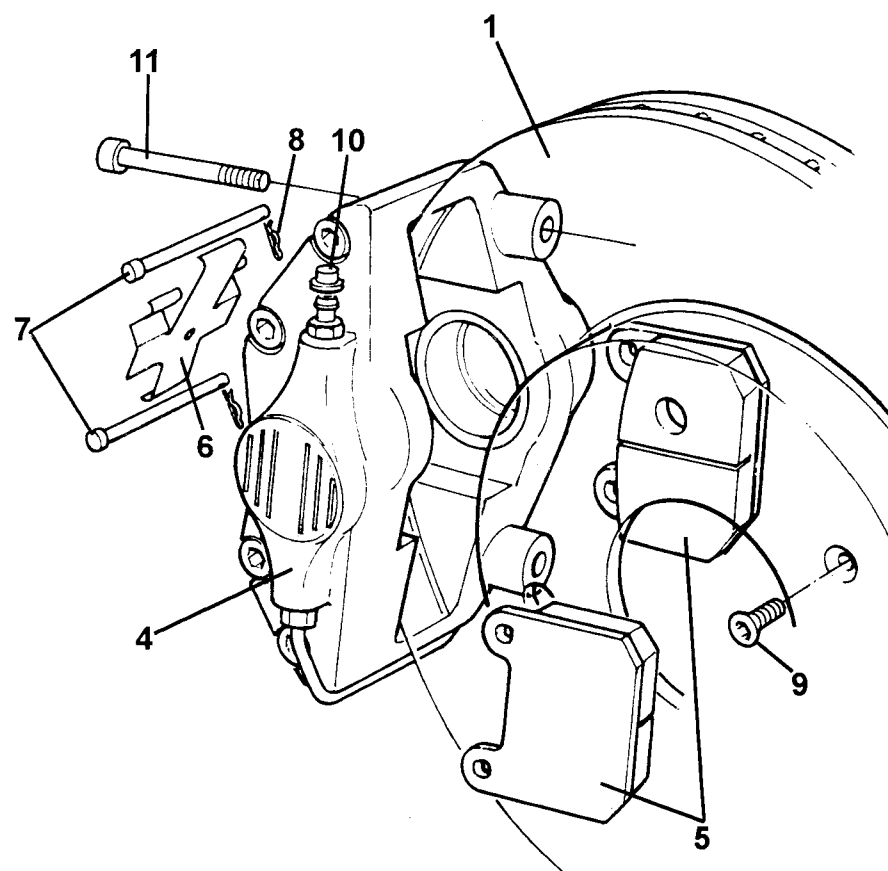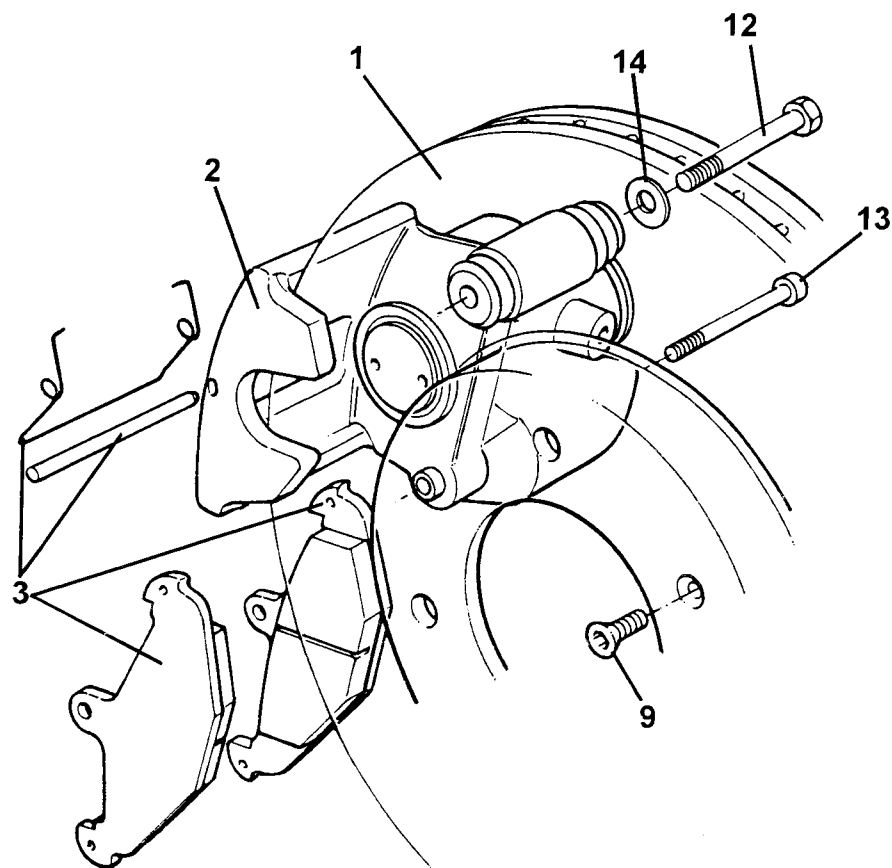

**ELISE**  
33.01





# Service Parts List **ELISE**



## Function Code 33.01 Brake Discs & Calipers

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Brake Disc		Standard	B117J0028F	4
01a	Brake Disc, cross drilled		Sports Tourer/Race Tech	A117J0031F	4
02	Brake Caliper, rear, RH	Includes brake pads		A117J0014F	1
02a	Brake Caliper, rear, LH	Includes brake pads		A117J0013F	1
03	Brake Pad , rear			B116J0009H	4
04	Brake Caliper, front RH	Includes brake pads	Standard	A117J0012F	1
04a	Brake Caliper, front LH	Includes brake pads	Standard	A117J0011F	1
04b	Brake Caliper, front, black, RH	Includes brake pads	Sports Tourer/Race Tech	A117J0034F	1
04c	Brake Caliper, front, black, LH	Includes brake pads	Sports Tourer/Race Tech	A117J0035F	1
05	Brake Pad, front			A116J0008H	4
06	Anti-Rattle Spring, front brake pads			A111J0098F	2
07	Pin, front pad retaining			A111J0101S	4
08	' R' clip, pin retention			A075W6175F	4
09	Screw, M6 x 16, csk., skt., hd., disc to hub			A918W7120F	4
10	Nipple Cover, front brake bleed			A111J6029F	2
11	Bolt, M10 x 65, cap hd., front caliper fixing			A111W7144F	4
12	Bolt, M10 x 80, hex. hd., rear caliper fixing			B082W1113F	2
13	Bolt, M8 x 60, cap hd., rear caliper fixing			B082W1114F	2

**ELISE**

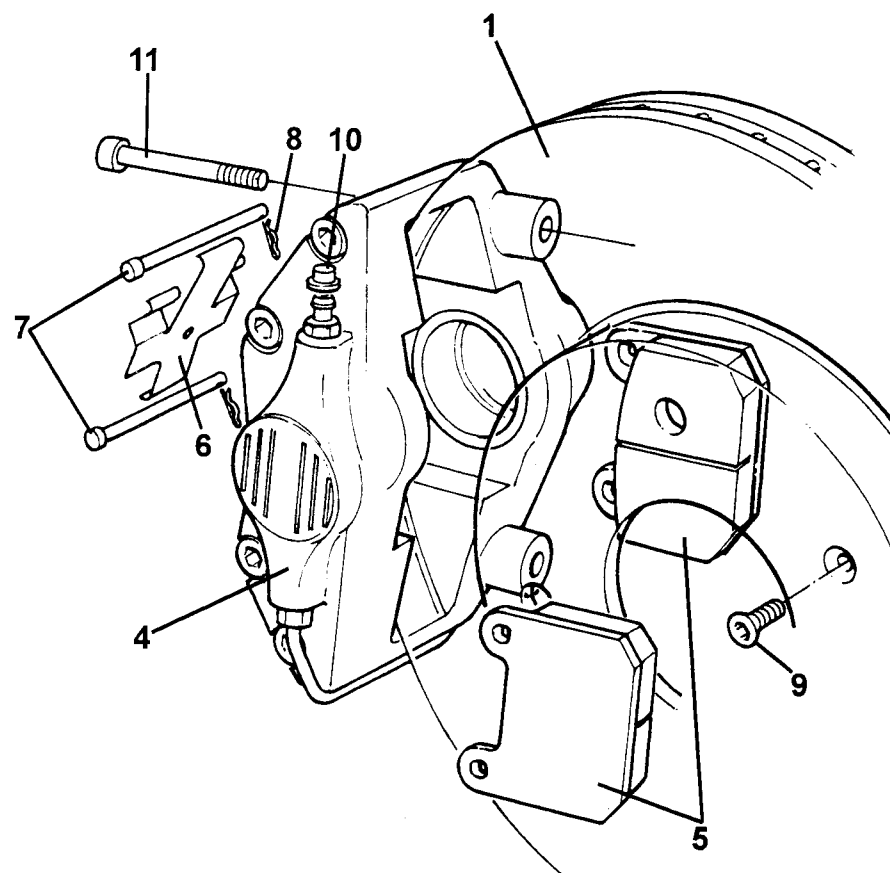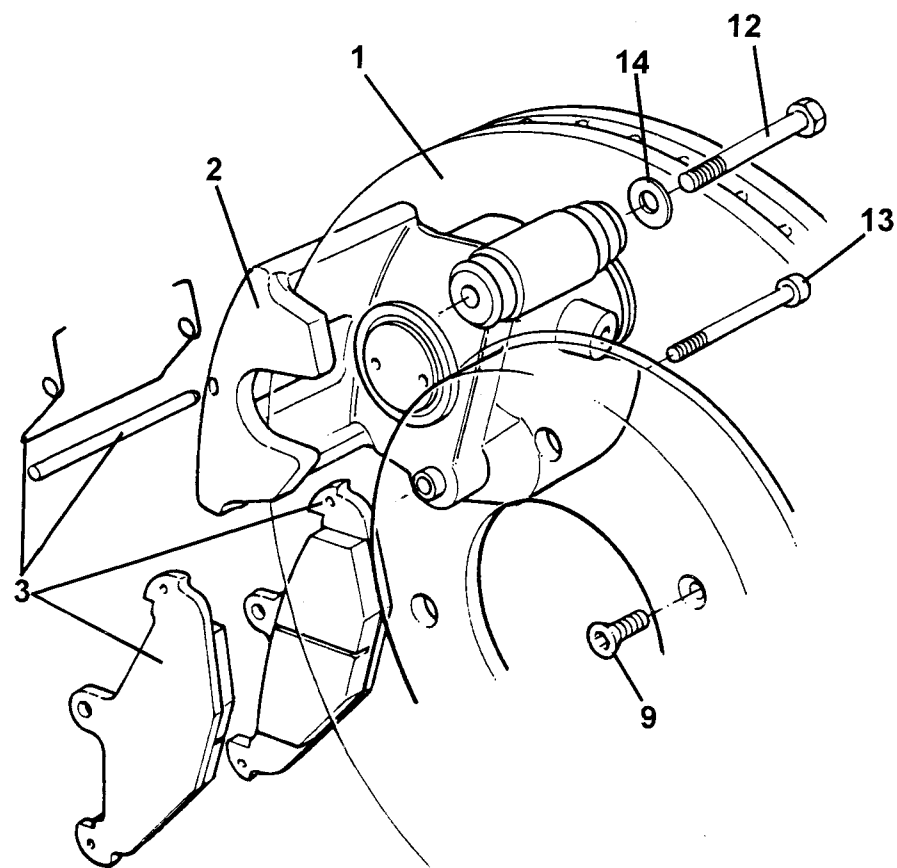

**ELISE**  
33.01

---

**Function Code 33.01 Brake Discs & Calipers**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
14	Washer, flat, M10 x 20.5, rear caliper upper fixing bolt			A075W4024Z	2
15	Sliding Pin Bush Kit, rear calipers	Includes sleeves, boots & seals		A082J6162S	2
16	Piston Retraction Tool, rear calipers	Not illustrated		T000T1242F	1




# Service Parts List **ELISE**



## Function Code 33.03 Master Cylinder, Hoses & Pipes

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Tandem Master Cylinder			A111J0079F	1
02	Reservoir			A111J6002F	1
03	Bulkhead Connector			A089J6013F	1
04	Nut, M10 x 1.0, thin Zn			A075J6017Z	4
05	Washer, M10, internal shakeproof			A075W4049Z	4
06	Brake Hose, front			A082J4390F	4
07	Connector Three Way, brakepipes			B075J6019F	1
08	Clip, 10dia. x 15 wide, hose retention	Upper front, lower rear wishbones		A111W6595F	4
09	Nyloc Nut, M6, thin Zn			A907E6285F	4
10	Setscrew, M8 x 25, master cylinder to pedal box			A075W1039Z	1
11	Setscrew, M8 x 20, master cylinder to pedal Box			A075W1038Z	1
12	Nyloc Nut, M8 , master cylinder to pedal pox			A111W3126F	1
13	Washer, flat, M8			A075W4020Z	3
14	Spirathene Protector, front to rear pipe			A111J6023V	800mm
15	Washer, spring, M6			A075W4035Z	1
16	Washer, flat M6 x 12.1 x 1.4			A075W4013Z	2
17	Bolt, M6 x 30, long hex. hd.			A075W2028Z	1
18	Nylon Clip			A075J6027Z	11

**ELISE**

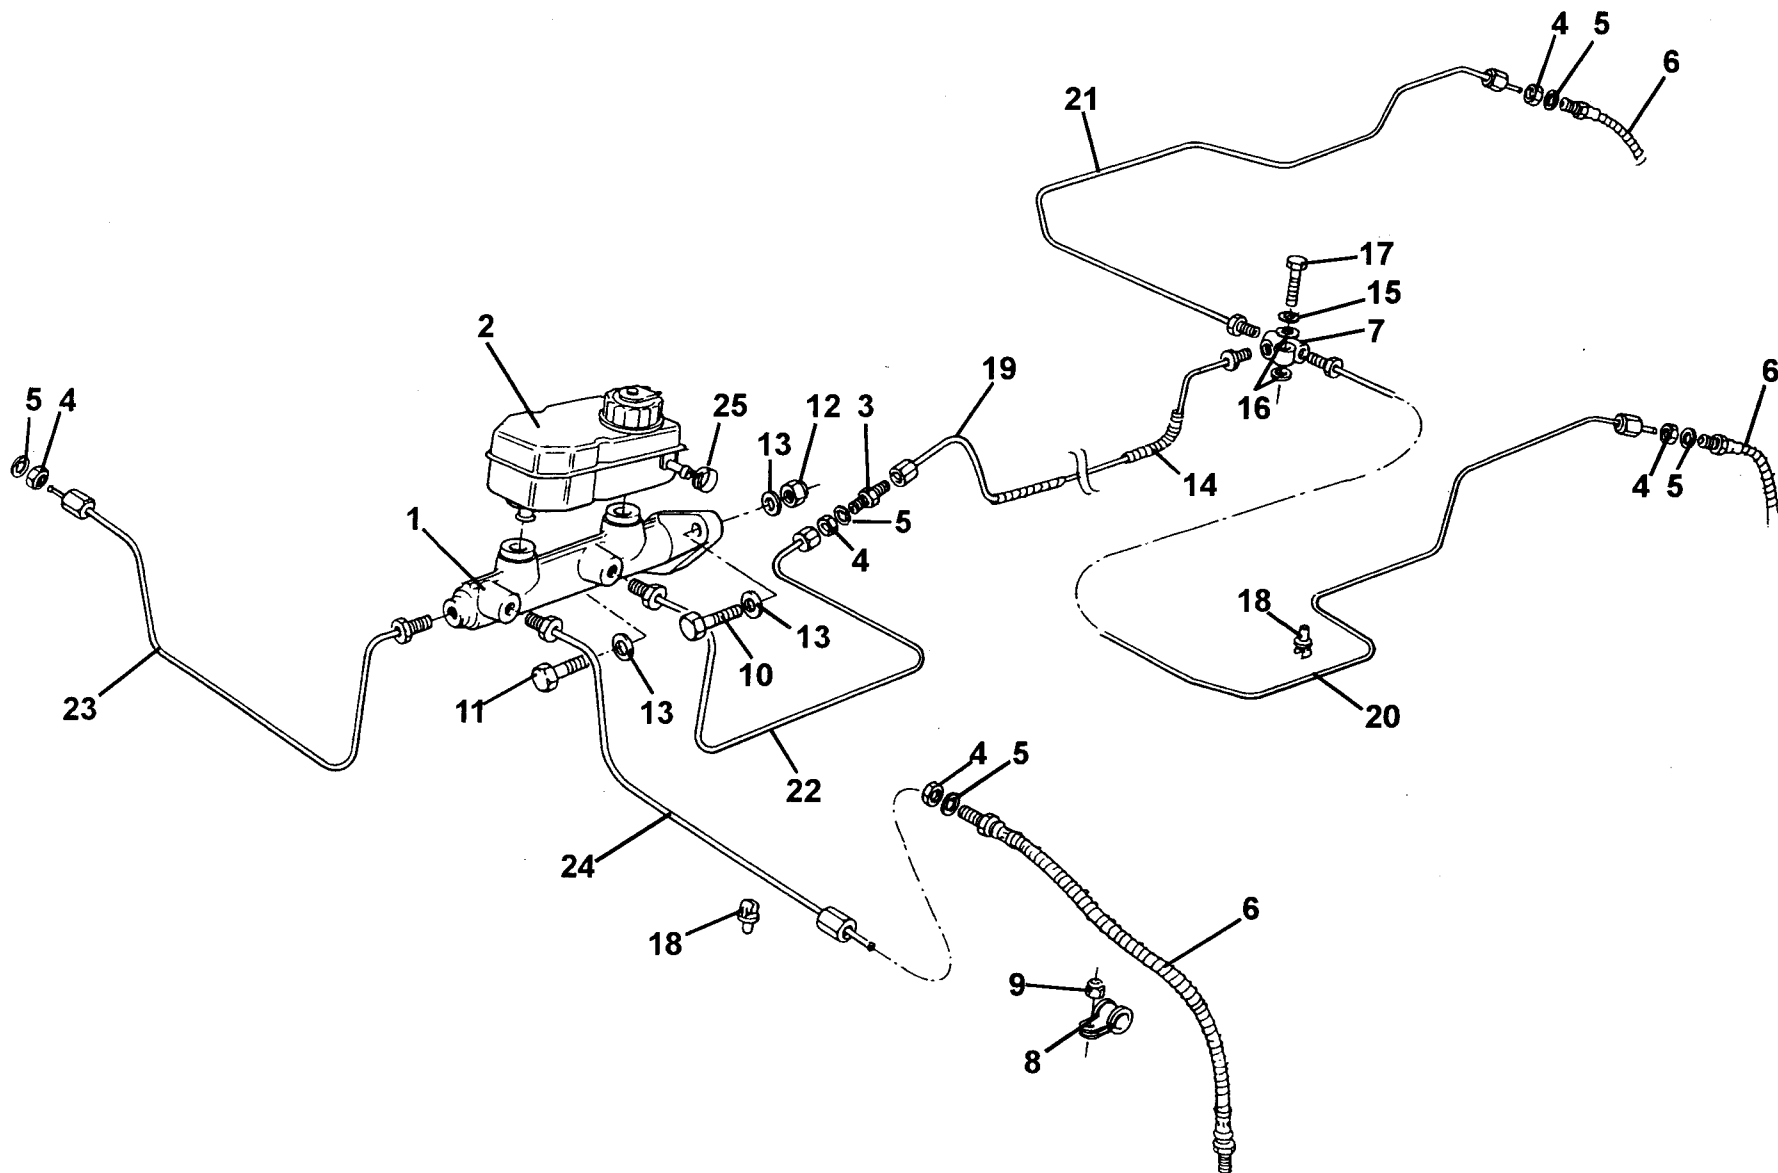

**ELISE**  
33.03

---

**Function Code 33.03 Master Cylinder, Hoses & Pipes**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
19	Brake Pipe, front to rear			A111J0059F	1
20	Brake Pipe, rear LH			B117J0015F	1
21	Brake Pipe, rear RH			B117J0014F	1
22	Brake Pipe, front main RHD			B111J0060K	1
22a	Brake Pipe, front main LHD			B111J0061K	1
23	Brake Pipe, front RH, RHD			A111J0062F	1
23a	Brake Pipe, front RH, LHD			A111J0064F	1
24	Brake Pipe, front LH,RHD			A111J0063F	1
24a	Brake Pipe, front LH, LHD			B111J0065F	1
25	Hose Clip, reservoir to clutch master cyl. pipe			TBA	1






# Service Parts List **ELISE**



## Function Code 33.05 Parking Brake Mechanism

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Parking Brake Assembly			A111J0002J	1
02	Cable, parking brake primary			B111J0025F	1
03	Cable, parking brake secondary			B111J0024F	1
04	Equaliser, handbrake			A111J6014H	1
05	Clevis Pin, dia 8 x 10.5			A111W6674F	2
06	'R' Clip			A075W6175F	2
07	Bumper, self adhesive			A111J6025F	2
08	Bumper, self adhesive			A111J6027F	2
09	Mounting Channel, parking brake assembly			C111J0027F	1
10	Screw, M8 x 30, cap hd.			A089W7052F	2
11	Washer, spring M8			A075W4036Z	2
12	Washer, flat M8 x 16.6 x 1.4			A075W4020Z	2
13	Spacer, parking brake channel to floor			A111J0030K	2
14	Switch, parking brake tell tale			A111M6025F	1
15	Screw, M3 x 16 pan hd. pozi.			A082W5110F	1
16	Screw, M3 x 20 pan hd. pozi.			A082W5163F	1
17	Washer, flat M3 x 7			A100W4125F	2
18	Nyloc Nut, M3			A079W3060F	2


**ELISE**

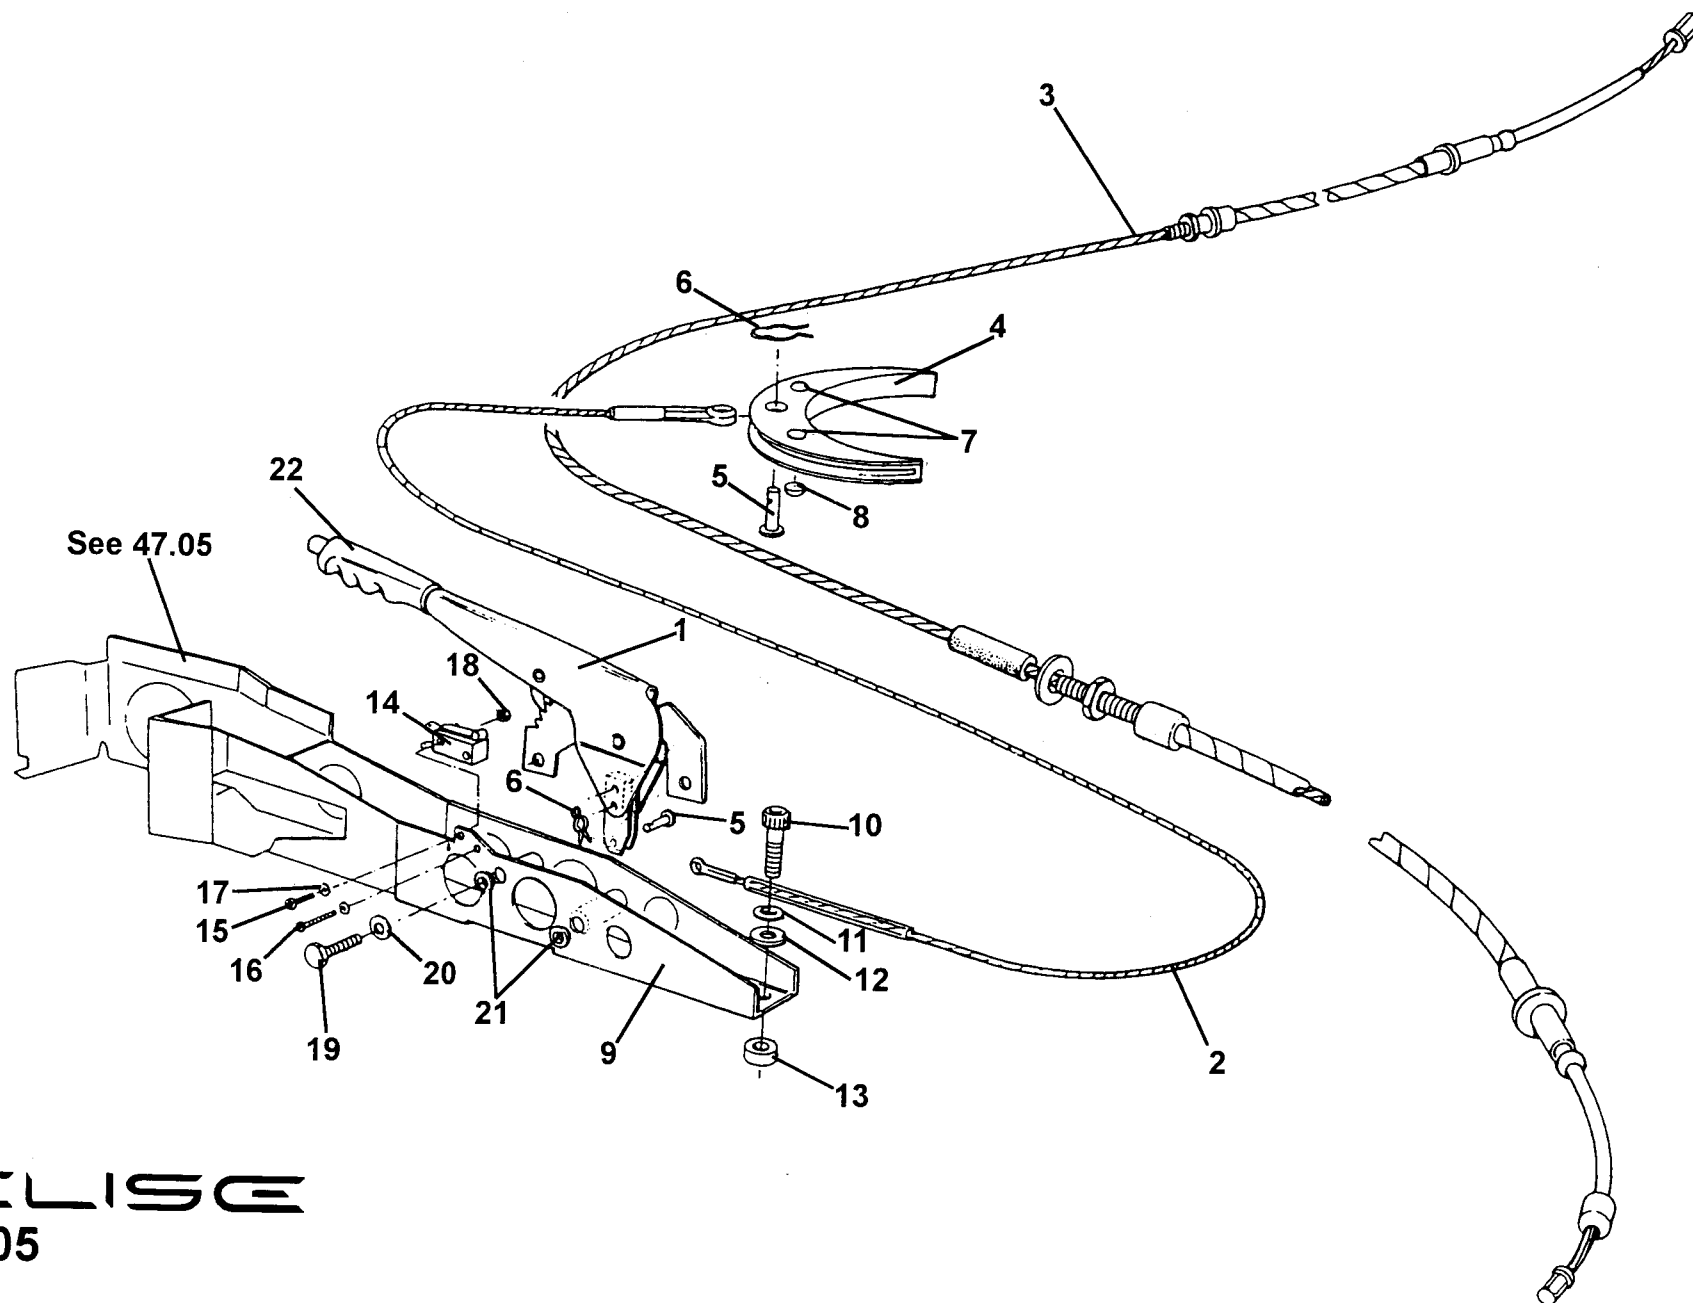

**ELISE**  
33.05

**Function Code 33.05 Parking Brake Mechanism**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
19	Screw, M8 x 25 hex. thn. hd.			A075W1081Z	2
20	Washer, spring, M8			A075W4036Z	2
21	Bush, parking brake			A111J0028K	2
22	Hand-Grip, plastic, parking brake lever		Standard	A111J6037S	1
22a	Hand-Grip, alloy, parking brake lever		Sports Tourer/Race Tech	A117U0084F	1

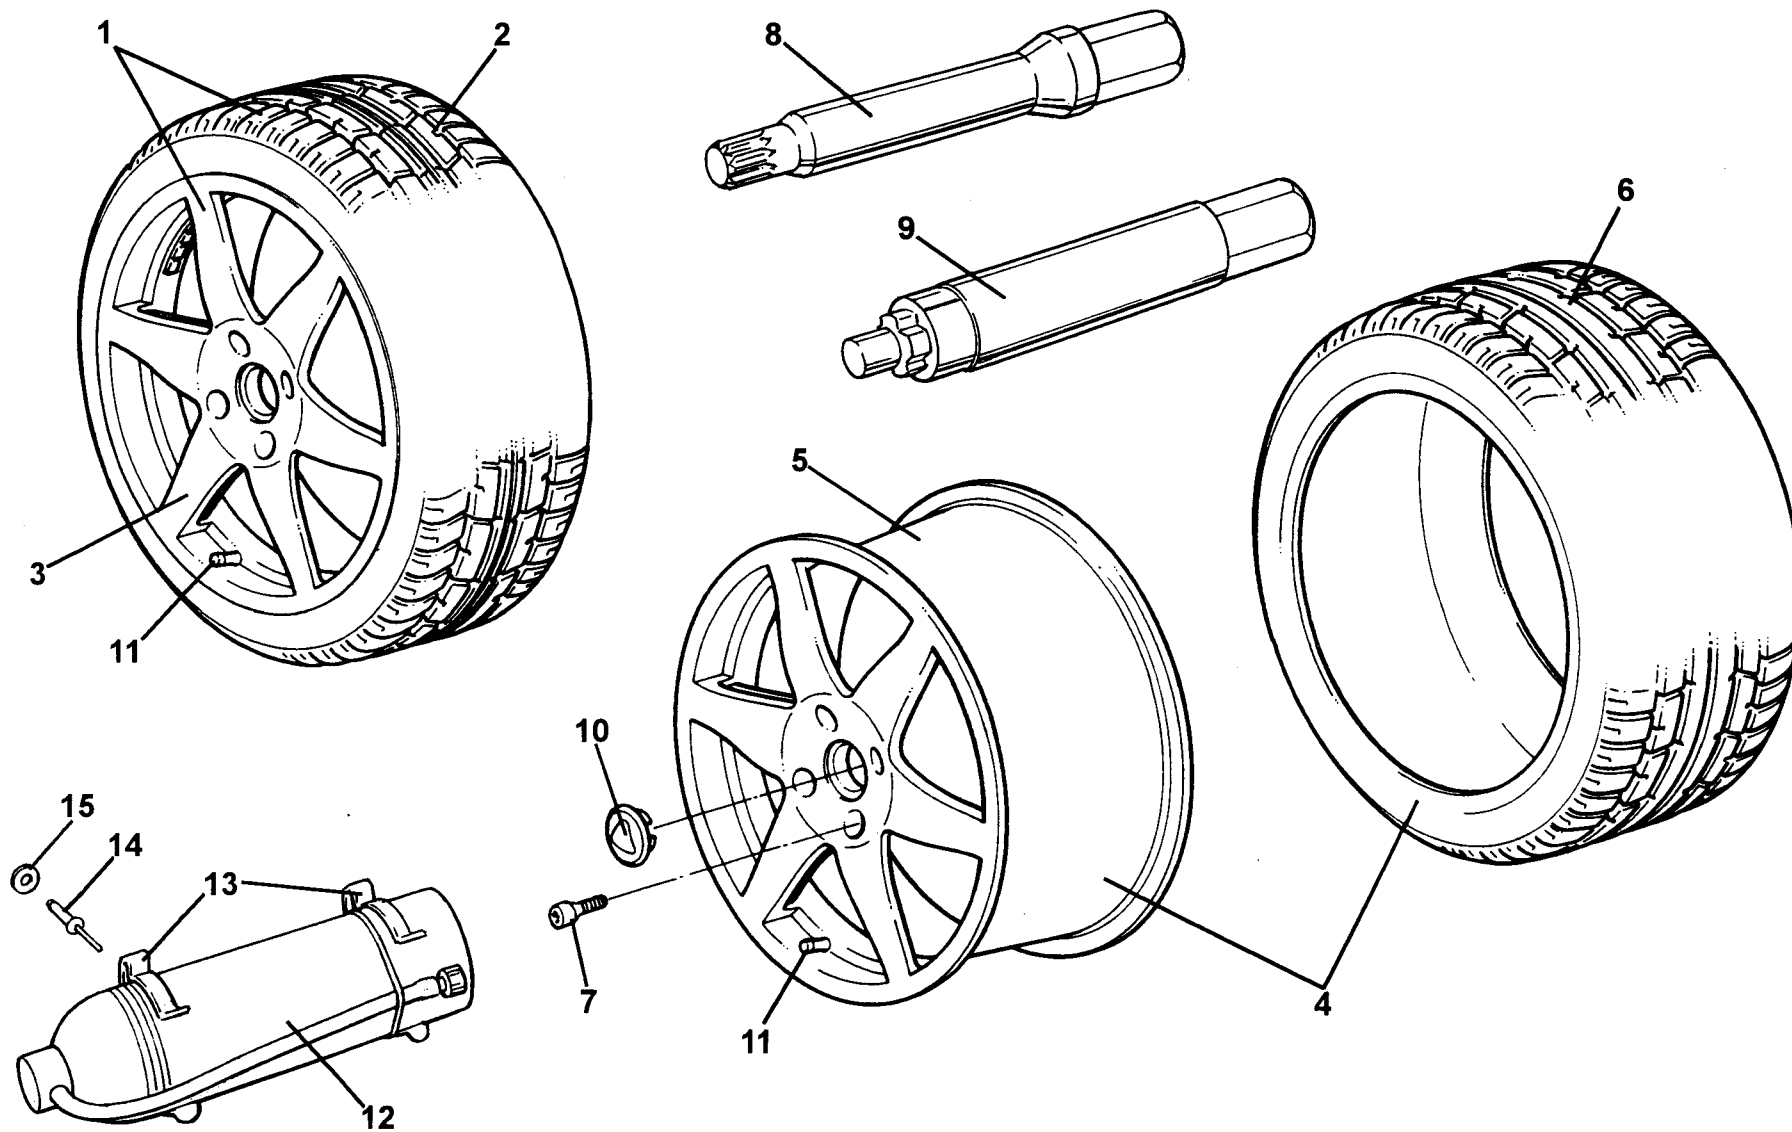

**ELISE**  
**34.01**

# Service Parts List **ELISE**




## Function Code 34.01 Wheels, Tyres & Valves

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Wheel & Tyre Assy., front, silver wheel, LH		Standard	C117G0019F	1
01a	Wheel & Tyre Assy., front, silver wheel RH		Standard	C117G0020F	1
01b	Wheel & Tyre Assy., front, black wheel LH		Optional	A117G0067F	1
01c	Wheel & Tyre Assy., front, black wheel RH		Optional	A117G0068F	1
02	Tyre, front, 175/55 R16, Bridgestone Potenza			A117G0005L	2
03	Road Wheel, front, silver 5.5J x 16		Standard	D117G0014H	2
03a	Road Wheel, front, black 5.5J x 16		Optional	D117G0024H	2
04	Wheel & Tyre Assy., rear, LH		Standard	C117G0021F	1
04a	Wheel & Tyre Assy., rear, RH		Standard	C117G0022F	1
04b	Wheel & Tyre Assy., rear, LH		Optional	A117G0069F	1
04c	Wheel & Tyre Assy., rear, RH		Optional	A117G0070F	1
05	Road Wheel, rear, silver 7.5J x 17		Standard	D117G0015H	2
05a	Road Wheel, rear, black 7.5J x 17		Optional	D117G0025H	1
06	Tyre, rear, 225/45 R17, Bridgestone Potenza			A117G0018L	2
07	Wheel Bolt			B117G6000F	12
08	Wheel Bolt Adaptor, standard bolt			A117G0036F	1
09	Security Wheelbolt Kit	Incl. ID strip & instruction card		A117G0043F	1
10	Wheel Centre Cover, Lotus logo			A082G4112F	4

**ELISE**

2001 / 01


Function Code: 34.01, Page: 1

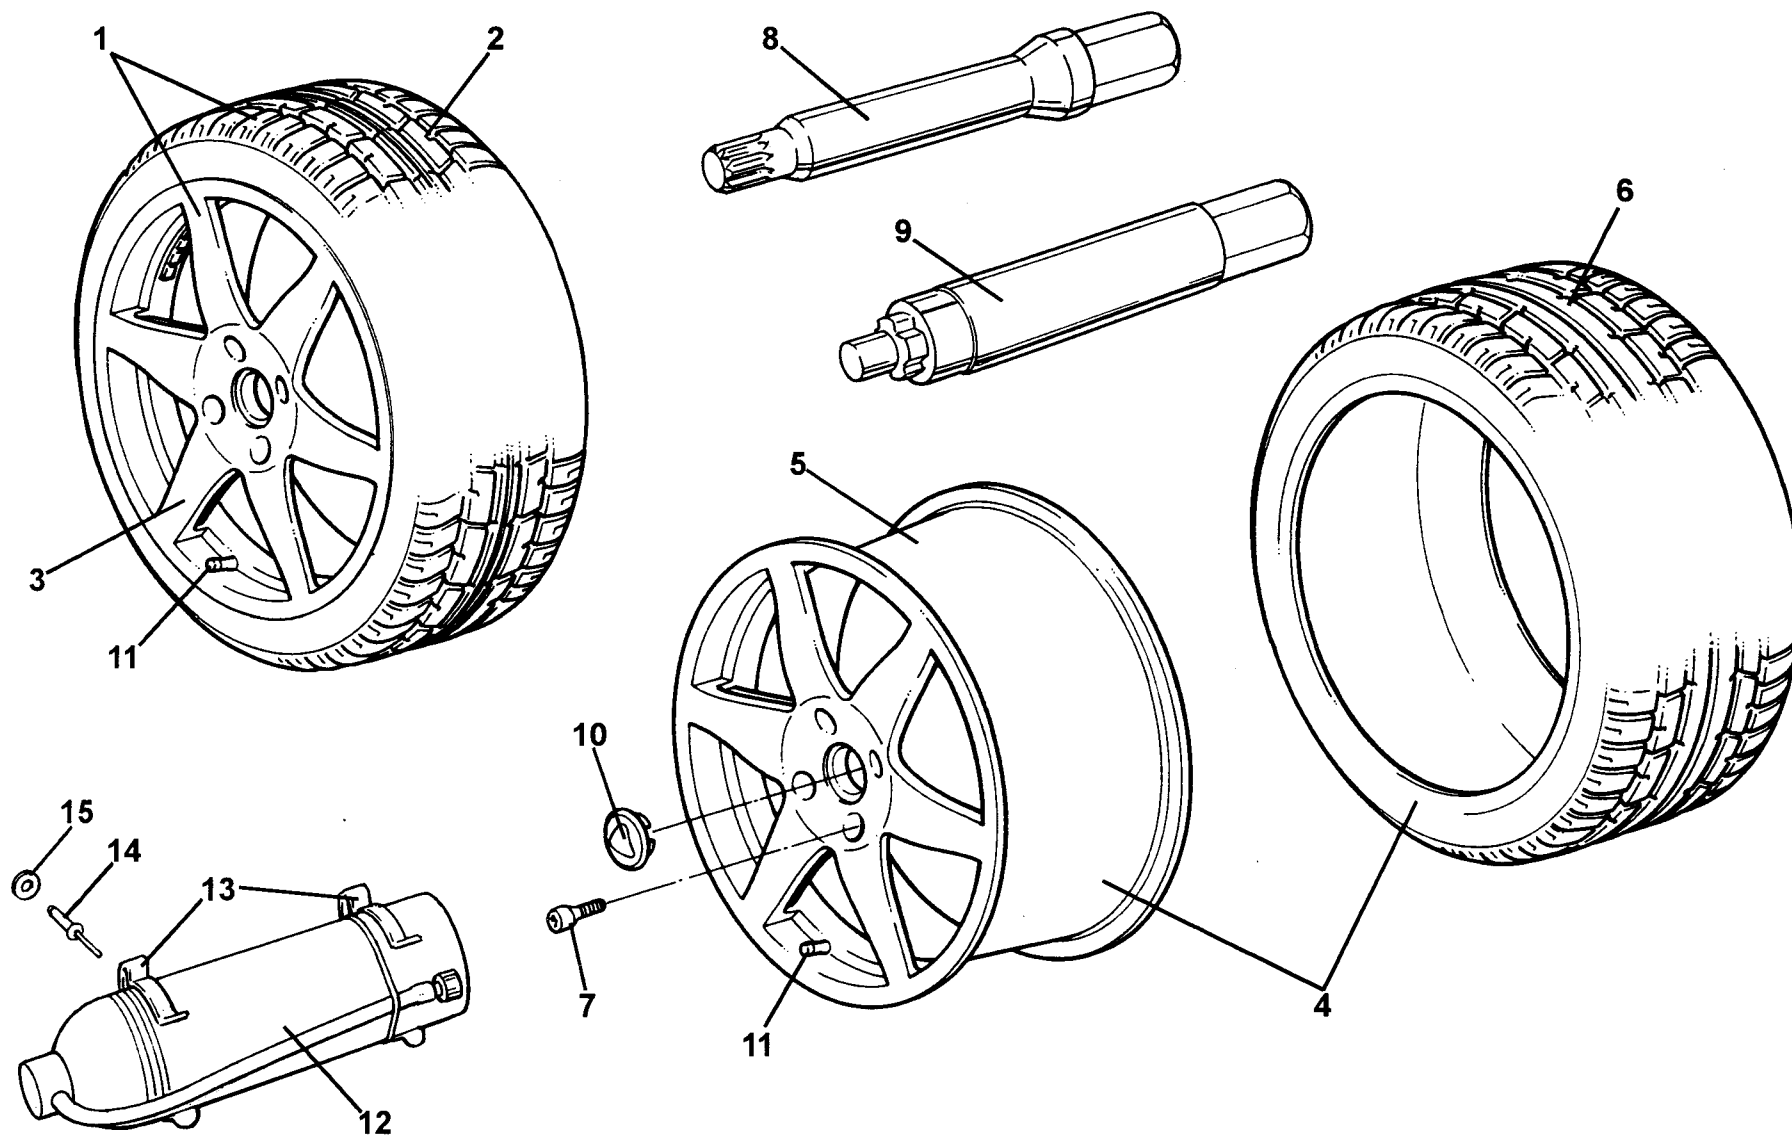

**ELISE**  
**34.01**

**Function Code 34.01 Wheels, Tyres & Valves**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
11	Tyre Valve			A117G6007H	4
12	Tyre Weld, repair canister			A116G6009F	1
13	Terry Clip, cannister retaining			A111W6590F	2
14	Pop Rivet, clip to bulkhead			A075W6090Z	4
15	Washer, flat, clip to bulkhead			A075W4084F	4
16	Adhesive Foam	Not illustrated		A111P6044V	200mm

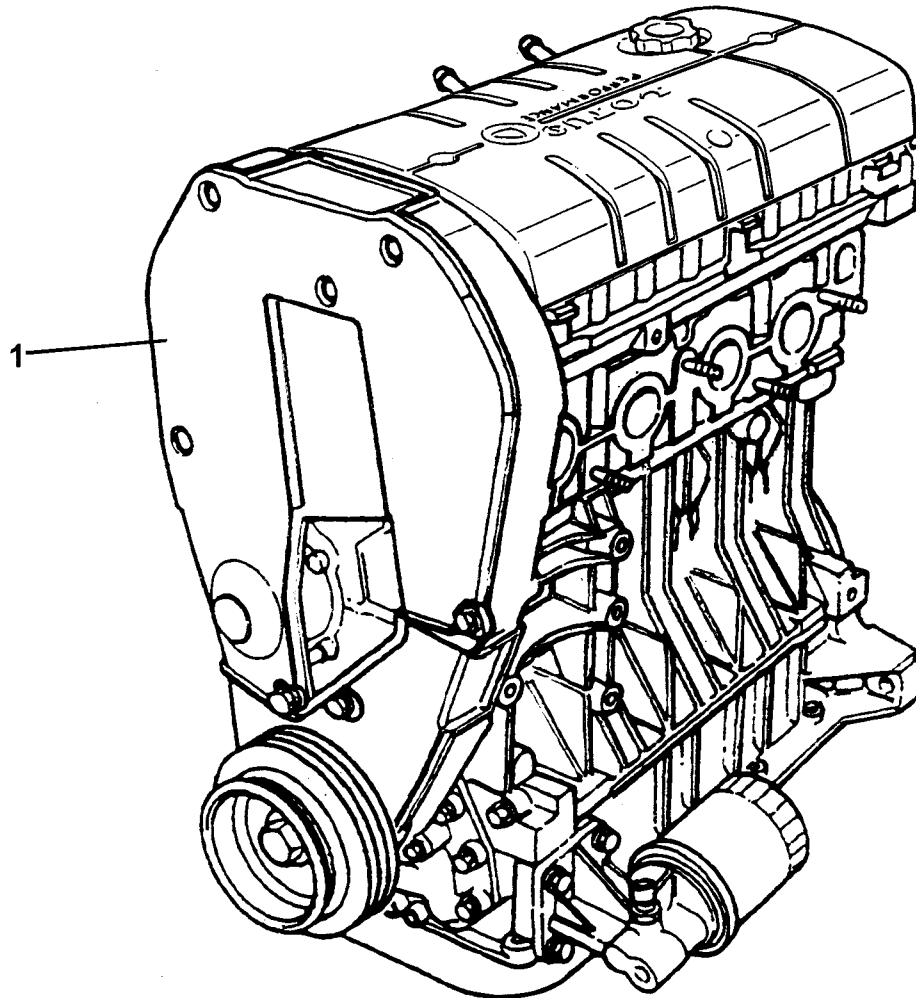

ELISE

40.00




# Service Parts List **ELISE**



## Function Code 40.00 Engine Assemblies

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Engine Assembly, 1.8, undressed	Less ancillaries			1

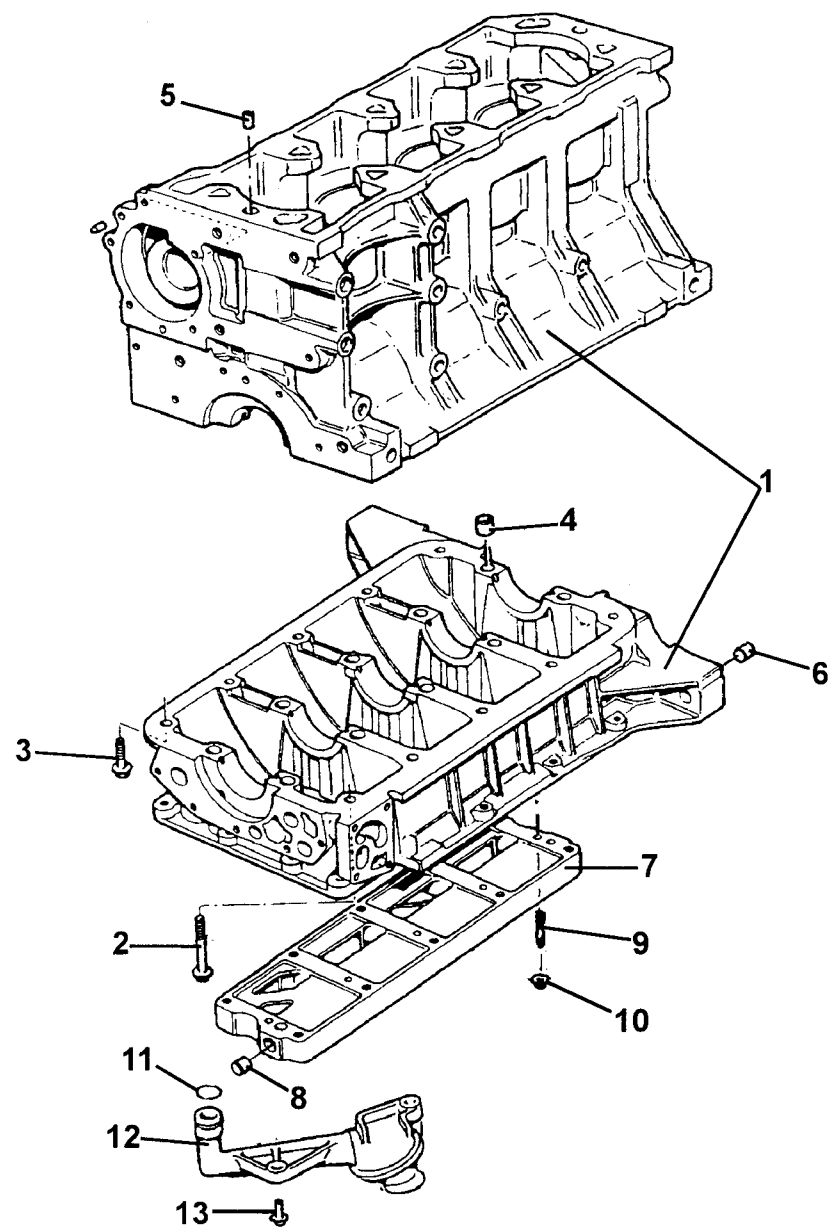

**ELISE**  
40.01


# Service Parts List **ELISE**



## Function Code 40.01 Engine Block, Oil Pick-up

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Cylinder Block Assembly	Includes bearing ladder		A117E6014S	1
02	Bolt, ladder to Block			A111E6186S	1
03	Screw, ladder to block			A111E6187S	9
04	Dowel, ladder to block			A111E6188S	2
05	Dowel, block to head			A111E6175S	2
06	Dowel, block to gearbox			A111E6189S	2
07	Rail, oil feed			A111E6190S	1
08	Core Plug			A111E6191S	2
09	Stud, rail to ladder			A111E6192S	2
10	Nut, rail fixing			A111E6193S	2
11	'O' Ring. oil pick-up pipe seal	Also see 40.02		A111E6066S	1
12	Oil Pick-Up Pipe			A111E6167S	1
13	Bolt, oil pick-up pipe fix.			A111E6168S	1

**ELISE**

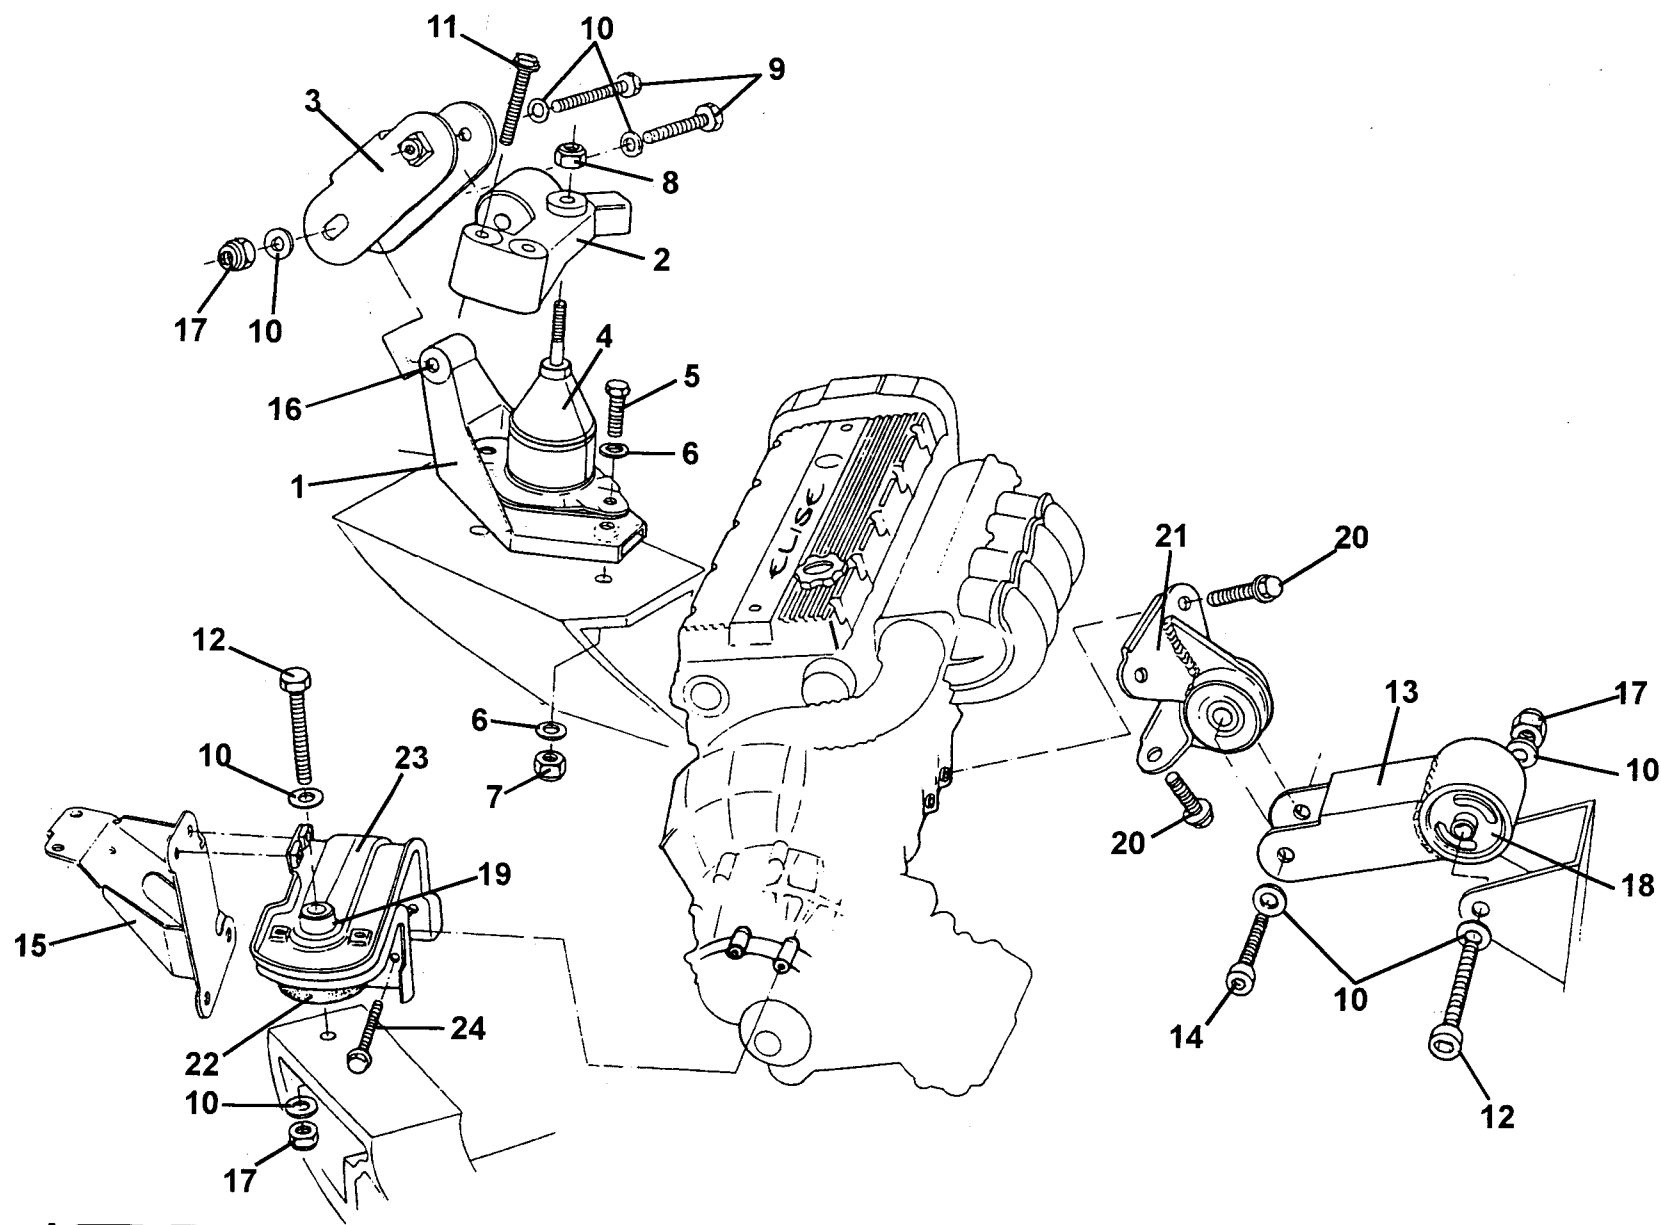


**ELISE**

40.01a

**Function Code 40.01a Engine Mounts**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Bracket, engine upper mount, chassis RH			D111E0004F	1
02	Bracket, engine upper mount, engine RH			A111E6027F	1
03	Engine Steady Arm, upper			A111E6014F	1
04	Hydromount Assembly			A111E6002F	1
05	Bolt, M10 x 45			A111W2175F	2
06	Washer, M10 x 20.5			A111W4163F	4
07	Nyloc Nut, M10			A100W3112F	2
08	Nut, M12 x 1.75			A111W3155F	1
09	Bolt, M12 x 70			A100D6023F	2
10	Washer, flat, M12			A075W4028Z	9
11	Bolt, M14 x 2 x 80			A111E6008Z	2
12	Bolt, M12 x 90			A075W2073F	2
13	Engine Steady Arm, lower			A111E6029F	1
14	Bolt, M12 x 60			A075W2070Z	1
15	Mounting Leg, clutch slave cylinder			A111E6139S	1
16	Bush, steady arm to mount			A111E6016F	1
17	Nyloc Nut, M12			A075W3012Z	4
18	Bush, steady arm to chassis			A111E6025S	1
19	Spacer, engine mounting to chassis			A111F6002F	1
20	Screw, flanged head			A111E6134S	4
21	Bracket, steady arm to engine			A111E6133S	1

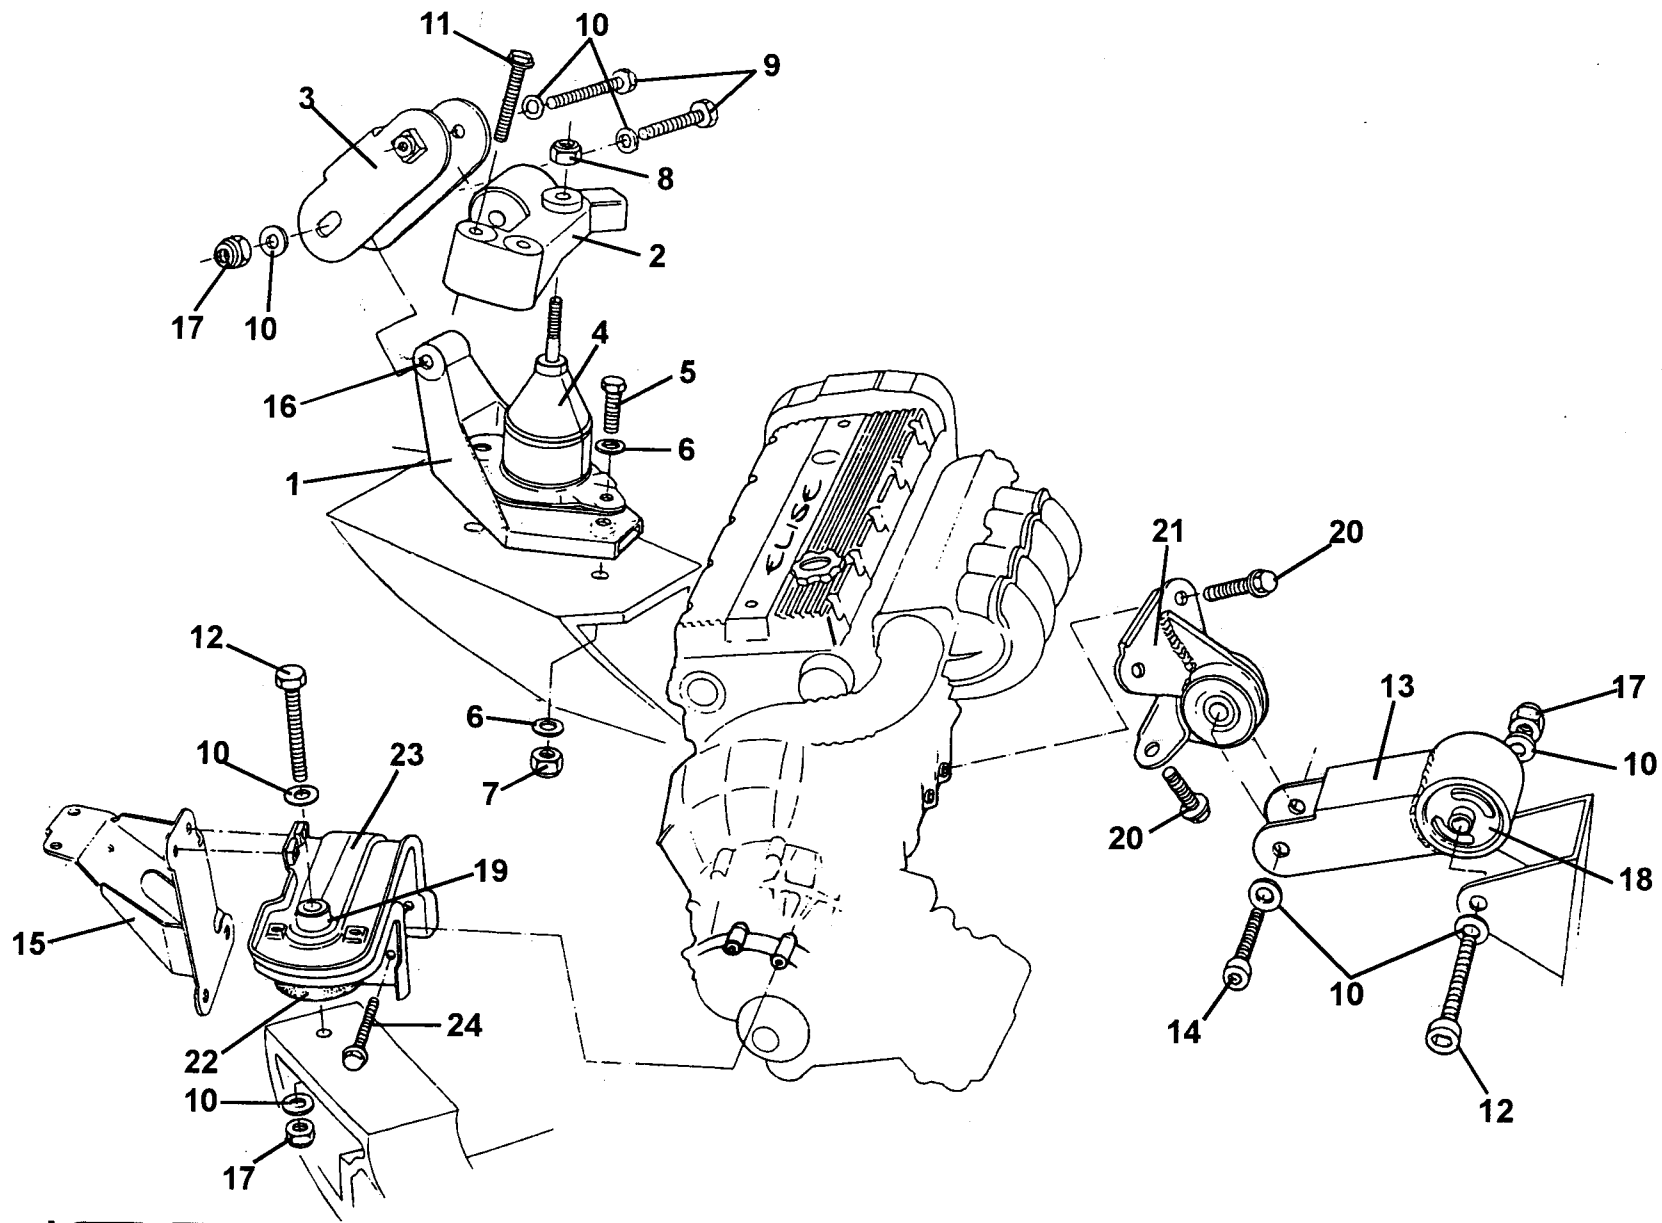


**ELISE**

40.01a

**Function Code 40.01a Engine Mounts**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
22	Engine/Transmission Mounting, LH		A111E6135S R/B	A111F6186F	1
23	Bracket, engine/transmission mounting, LH			A111E6136S	1
24	Bolt, M10, flg. hd.			A111E6137S	2

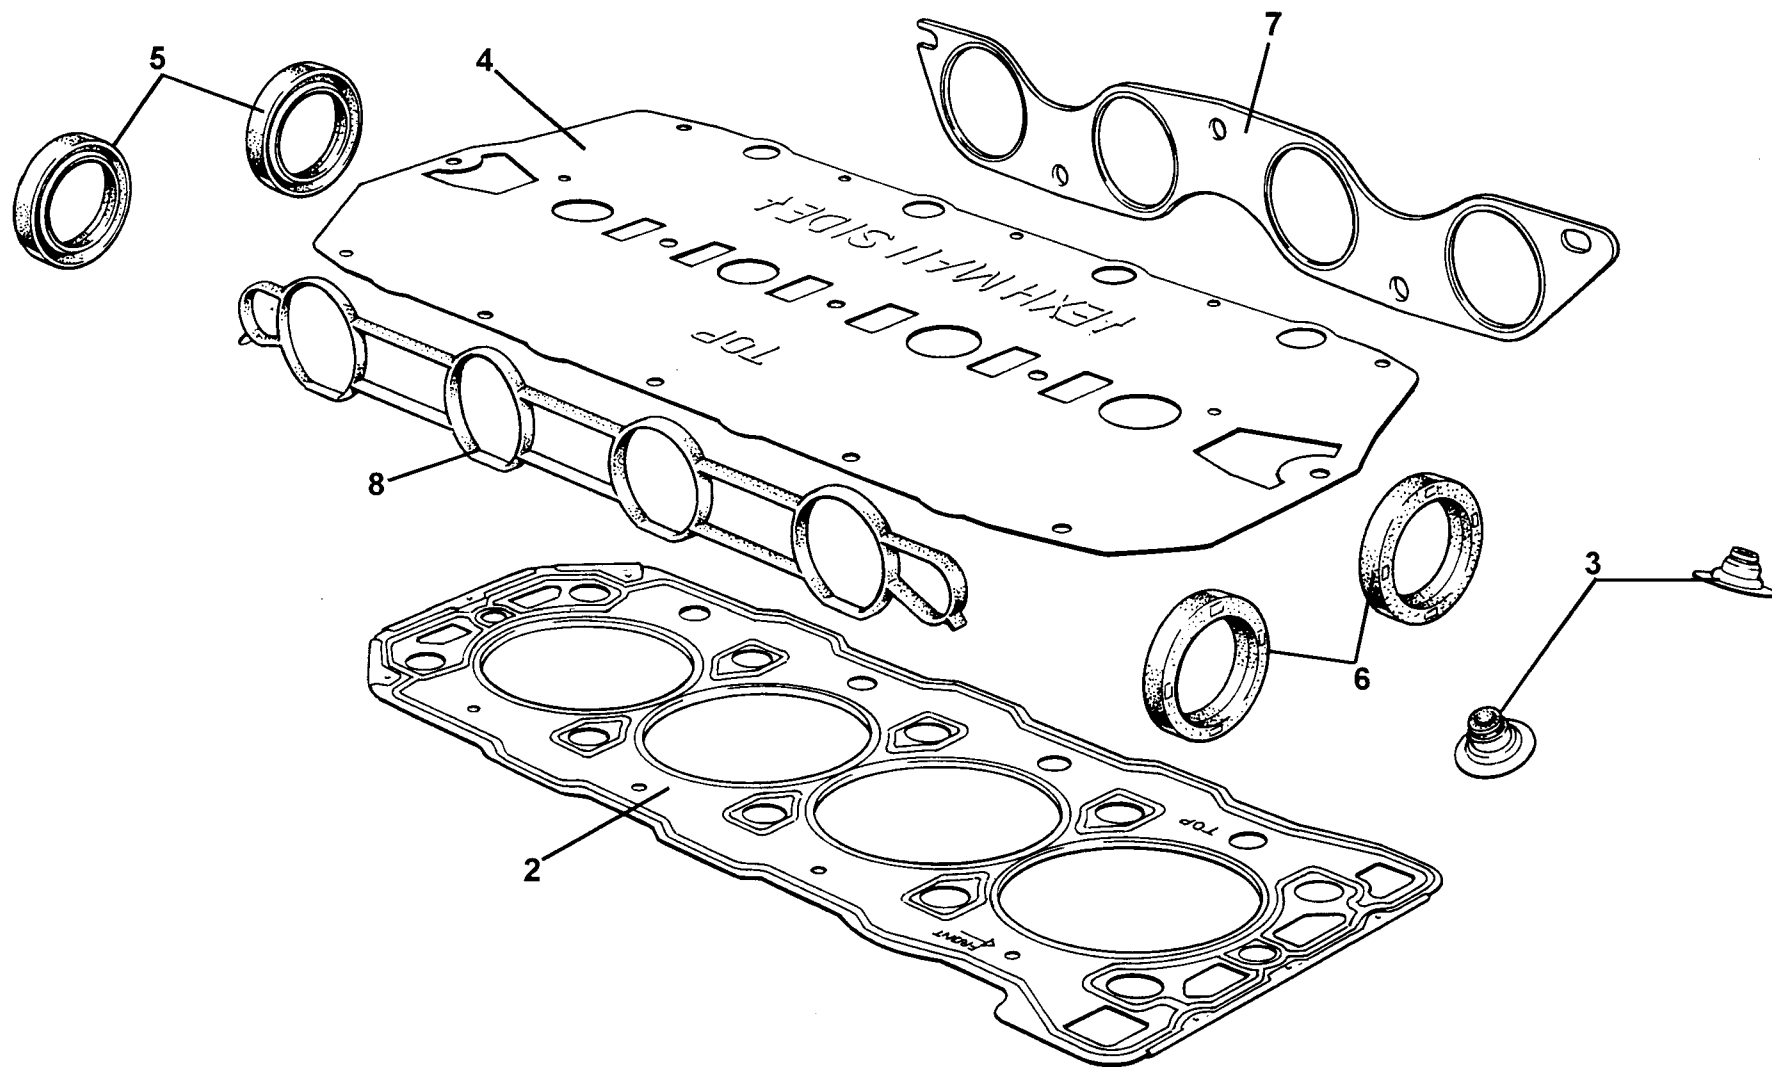

**ELISE**  
40.02




# Service Parts List **ELISE**



## Function Code 40.02 Gaskets & Sealants, Top Overhaul Set


<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Top Overhaul Gasket Set	Comprises items 2 to 9		<b>A111E6049S</b>	1
02	Gasket, cylinder head	Also see 40.05		<b>A111E6103S</b>	1
03	Oil seal, valve stem	Also see 40.05		<b>A111E6171S</b>	16
04	Gasket, cam cover	Also see 40.07		<b>A111E6052S</b>	1
05	Oil Seal, camshaft, rear, red	Also see 40.07		<b>A111E6271S</b>	2
06	Oil Seal, camshaft, front, black	Also see 40.07		<b>A111E6272S</b>	2
07	Gasket, exhaust manifold	Also see 40.21		<b>A111E6051S</b>	1
08	Gasket, inlet manifold (green)	Also see 42.07		<b>B111E6086S</b>	1
09	Liquid Sealant, cam carrier to head	Not illustrated		<b>A111E6172S</b>	1

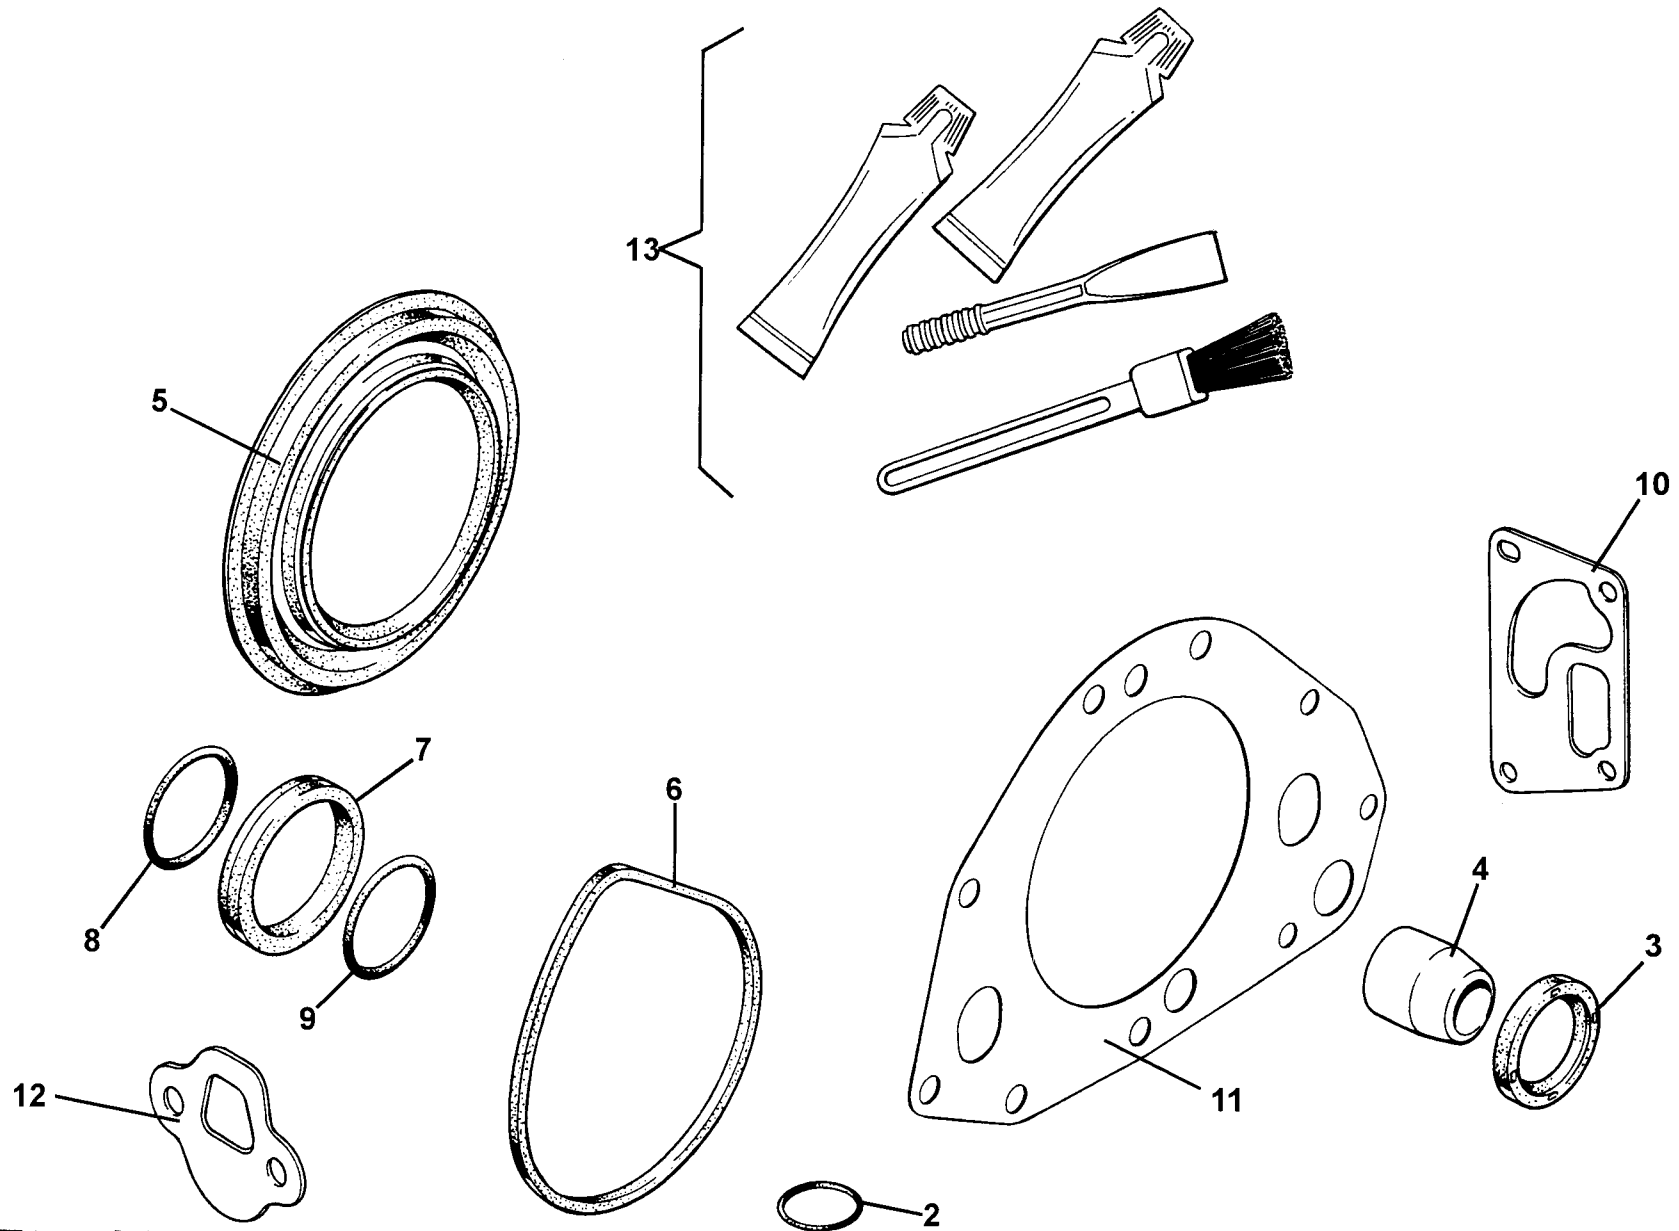

**ELISE**  
40.02a

**Function Code 40.02a Gaskets & Sealants, Bottom Overhaul Set**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Bottom Overhaul Gasket Set	Comprises items 2 to 12		A111E6050S	1
02	"O" Ring, oil pick-up pipe	Also see 40.01		A111E6066S	1
03	Oil Seal, crankshaft front	Also see 40.11		A111E6054S	1
04	Fitting Tool, oil seal	Supplied with seal		not listed	1
05	Oil seal, crankshaft rear	Also see 40.11		A111E6057S	1
06	Gasket, water pump	Also see 40.13		A111E6080S	1
07	'O' Ring, thermostat housing	Also see 40.13		A111E6084S	1
08	'O' Ring, thermostat housing	Also see 40.13		A111E6067S	2
09	Gasket, oil filter housing	Also see 40.15		A111E6101S	1
10	Gasket, oil pump	Also see 40.15		A111E6053S	1
11	Gasket, dip stick tube	Also see 40.15		A111E6009F	1
12	Liquid Gasket Kit, for sump			A111E6048S	1

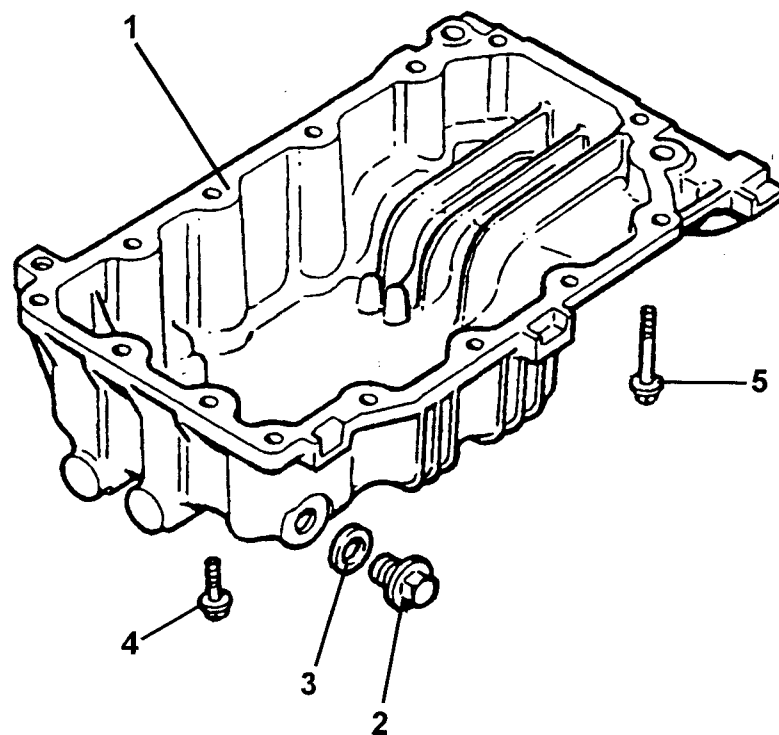


ELISE  
40.03

# Service Parts List **ELISE**



## Function Code 40.03 Sump Assembly

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Oil Sump			A111E6089S	1
02	Sump Plug			A111E6077S	1
03	Washer, sump plug			A111E6035S	1
04	Fixing Bolt (short)			A111E6187S	12
05	Fixing Bolt (long)			A111E6343S	2

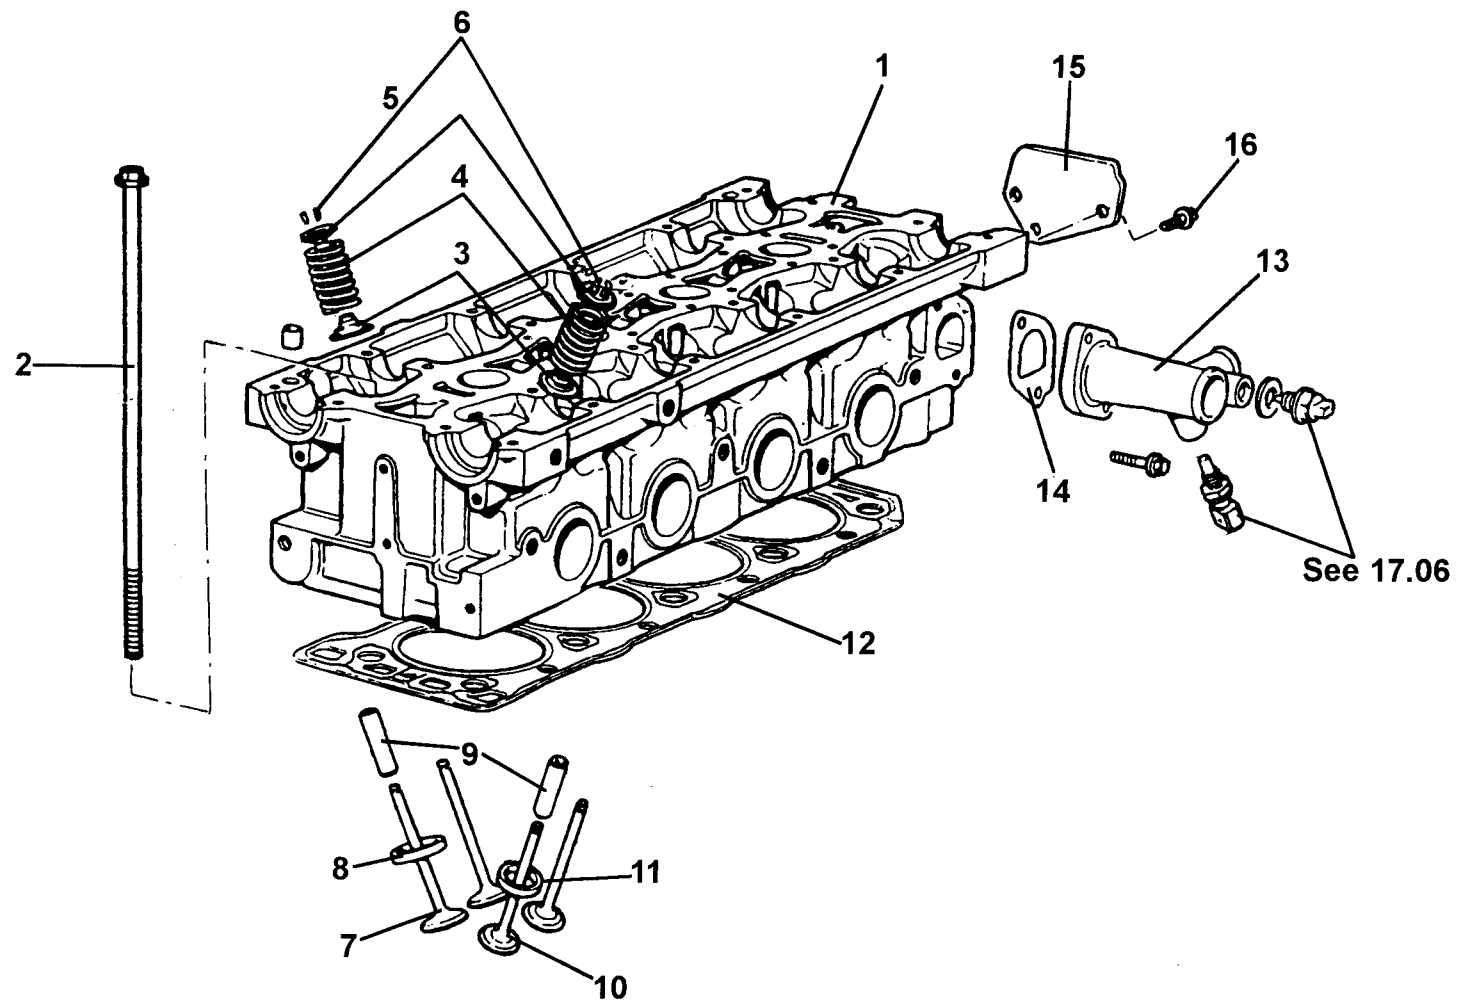

**ELISE**  
40.05


# Service Parts List **ELISE**



## Function Code 40.05 Cylinder Head , Valves, Springs

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Cylinder Head, bare	Includes cam carrier		A111E6242S	1
02	Bolt, cylinder head fixing			A111E6111S	10
03	Spring Seat/Stem Seal			A111E6171S	16
04	Valve Spring			A111E6096S	16
05	Valve Spring Cap			A111E6211S	16
06	Valve Collet			A111E6110S	32
07	Inlet Valve			A111E6094S	8
08	Valve Seat Insert, inlet			A111E6333S	8
09	Valve Guide, standard, plain,			A111E6306S	16
09a	Valve Guide, oversize, grooved/stepped			A111E6307S	16
10	Exhaust Valve			A111E6095S	8
11	Valve Seat Insert, exhaust			A111E6334S	8
12	Gasket, cylinder head	Also see 40.02		A111E6103S	1
13	Outlet Spout			A111E6407S	1
14	Gasket, outlet spout			A111E6087S	1
15	Camshaft Blanking Plate			A117E6020S	1
16	Screw, plate to head			A117E6021S	2

**ELISE**

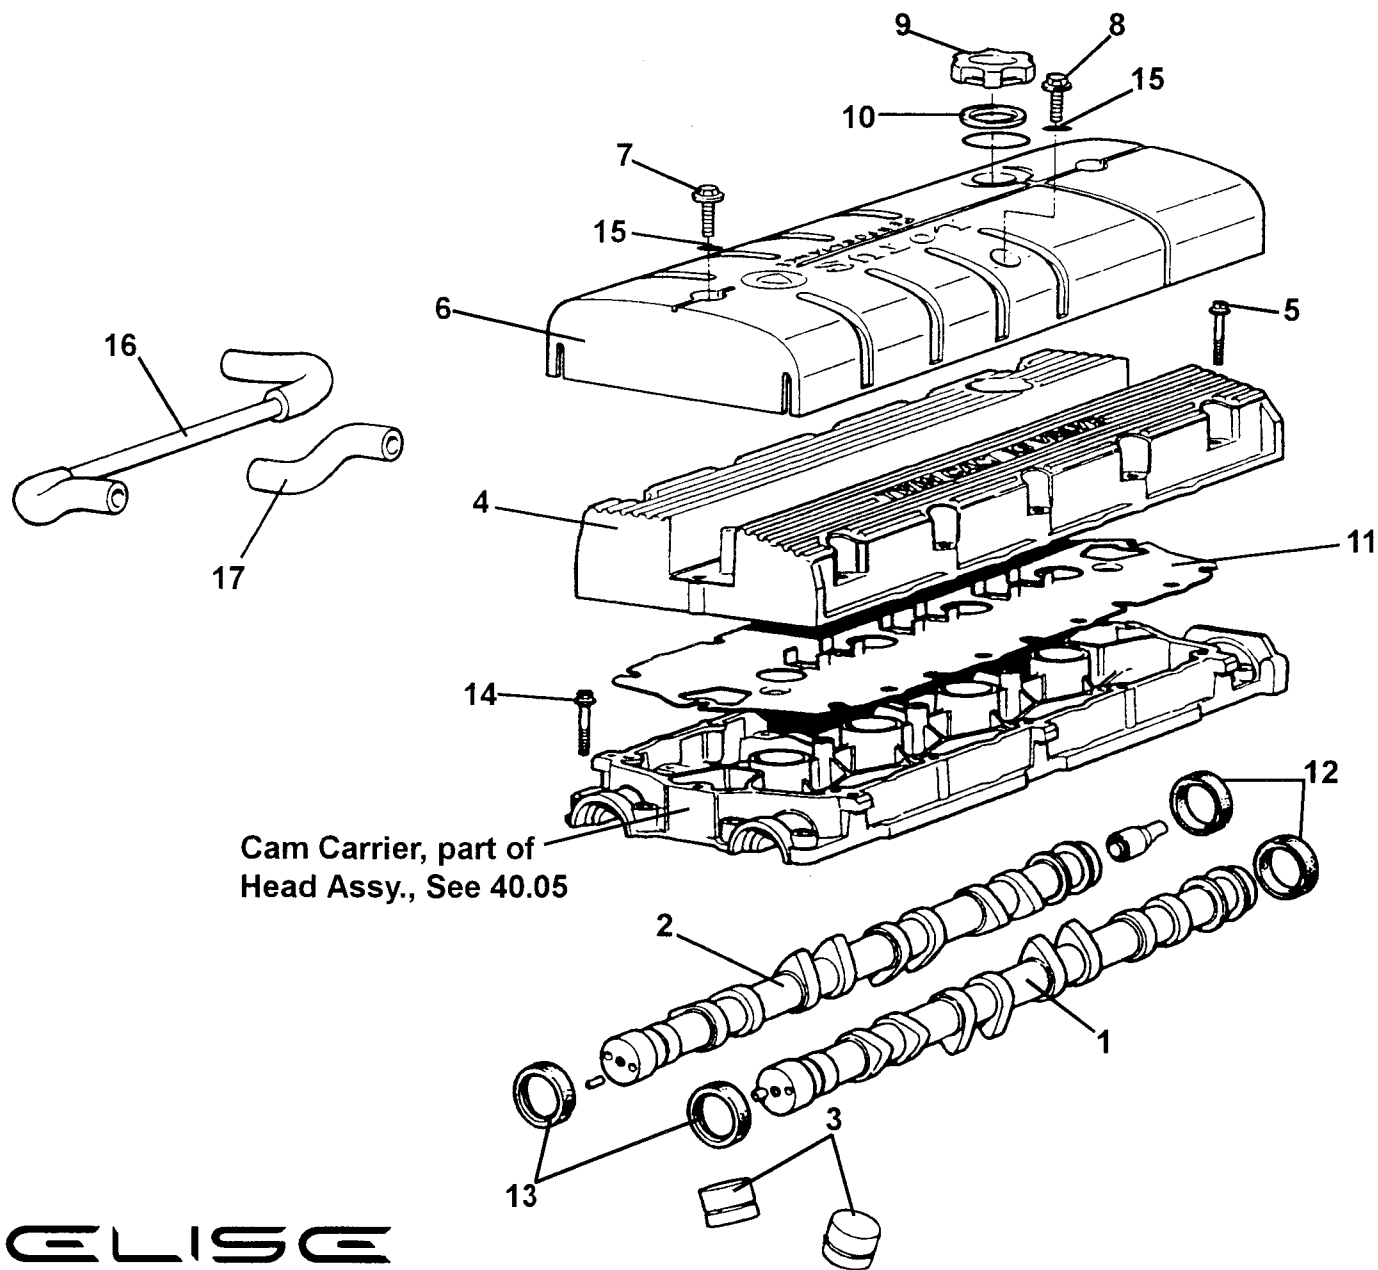

**ELISE**  
40.07




# Service Parts List **ELISE**



## Function Code 40.07 Camshafts, Tappets, Cam Cover

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Exhaust Camshaft			A111E6206S	1
02	Inlet Camshaft			A111E6207S	1
03	Tappet			A111E6097S	16
04	Camshaft Cover			A117E6024S	1
05	Bolt, cam cover to head			A111E6160S	15
06	Spark Plug/Coils Cover			B117E0013F	1
07	Screw, cover to head			A117E6033S	2
08	Screw, cover to head			A117E6034S	1
09	Oil Filler Cap			A111E6039S	1
10	Seal, oil filler cap			A111E6056S	1
11	Gasket, camshaft cover	Also see 40.02		A117E6025S	1
12	Oil Seal, camshaft, rear, red	Also see 40.02		A111E6271S	2
13	Oil Seal, camshaft, front, black	Also see 40.02		A111E6272S	2
14	Bolt, flg. hd., cam carrier to head			A111E6311S	20
15	'O' Ring			A117E6011F	3
16	Breather Hose, cam cover to throttle body			A117E6053S	1
17	Breather Hose, cam cover to intake plenum			A117E6052S	1
18	Bolt, flg. hd., cam carrier to head	Not illustrated		A111E6312S	4

**ELISE**

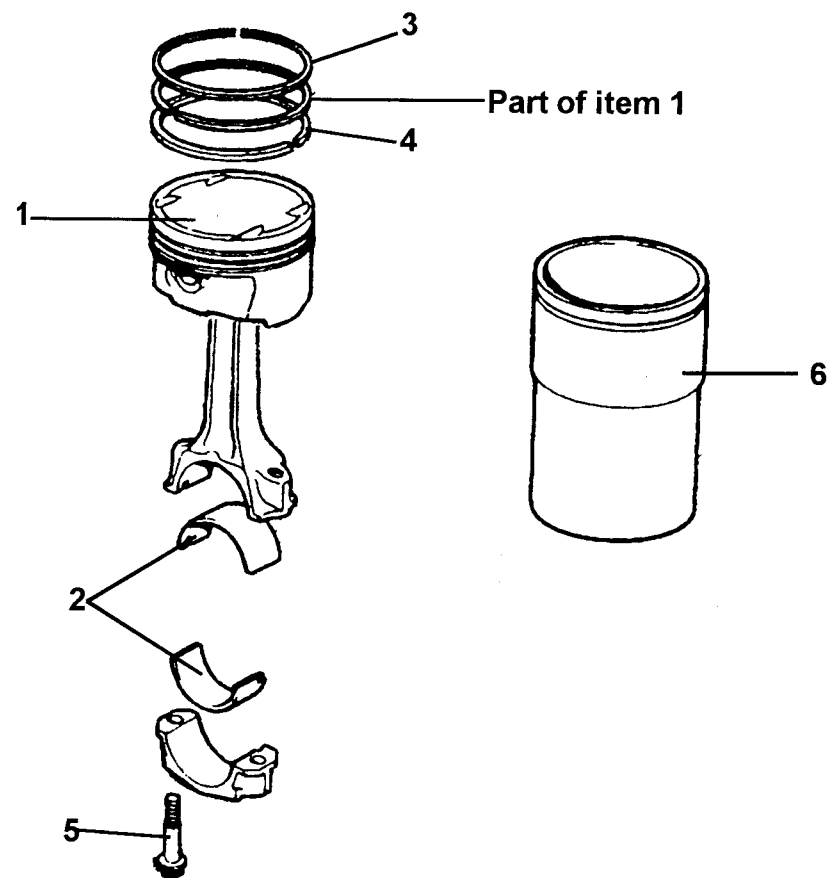


ELISE  
40.09

# Service Parts List **ELISE**



## Function Code 40.09 Pistons, Con-rods, Liners

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Piston & Con-rod Assembly, grade A	Stamped on piston crown		A111E6114S	4
01a	Piston & Con-rod Assembly, grade B	Stamped on piston crown		A111E6115S	4
02	Con-rod Bearings, blue			A111E6203S	8
02a	Con-rod Bearings, red			A111E6204S	8
02b	Con-rod Bearings, yellow			A111E6205S	8
03	Piston Ring Set	Piston set		A111E6166S	4
04	Cap Screw, big end fix.			A111E6116S	8
05	Liner, grade A			A111E6112S	4
05a	Liner, grade B			A111E6113S	4

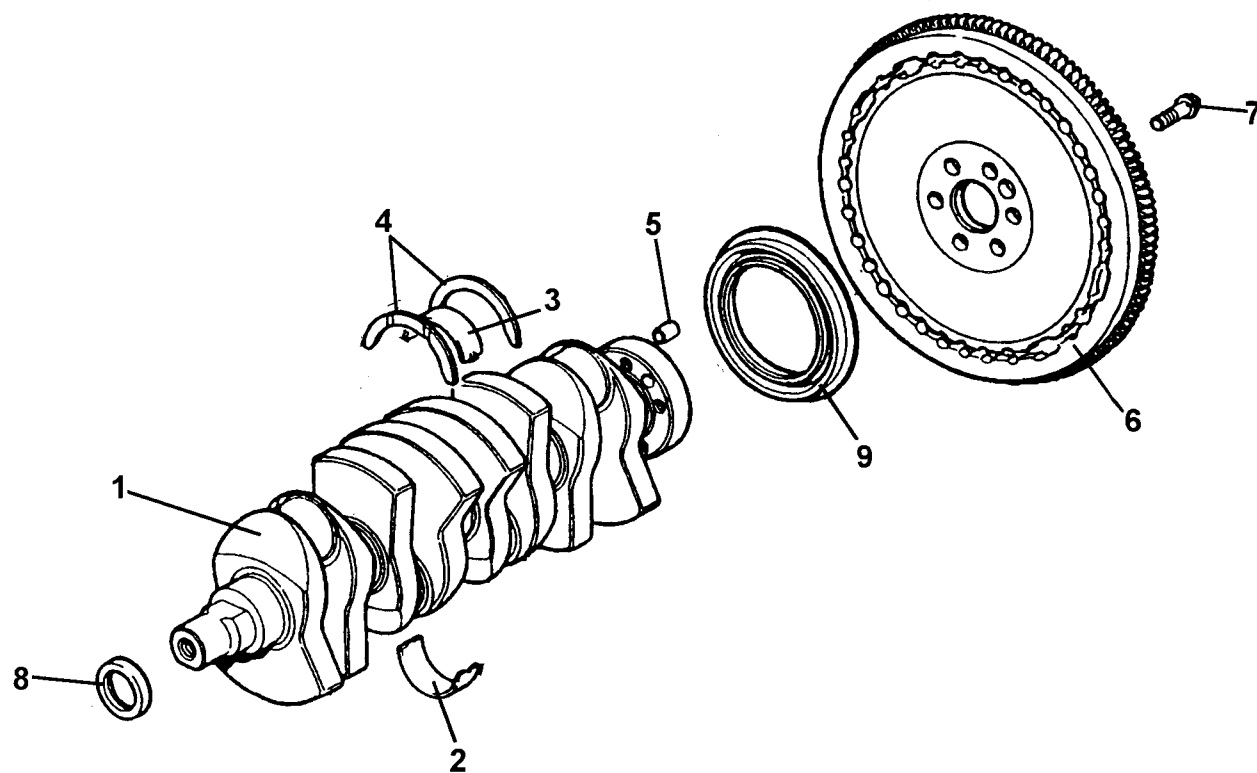

**ELISE**  
40.11



# Service Parts List **ELISE**



## Function Code 40.11 Crankshaft, Bearings, Flywheel

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Crankshaft			A111E6194S	1
02	Main Bearing, plain, blue			A111E6196S	7
02a	Main Bearing, plain, red			A111E6197S	7
02b	Main Bearing, plain green			A111E6198S	7
03	Main Bearing, grooved, blue			A111E6199S	3
03a	Main Bearing, grooved, red			A111E6200S	3
03b	Main Bearing, grooved, green			A111E6201S	3
04	Thrust Washer			A111E6202S	2
05	Ring Dowel, crank to flywheel			A111E6195S	1
06	Flywheel			A111E6131S	1
07	Bolt, flywheel fix.			A111E6129S	6
08	Oil Seal, crankshaft front	Also see 40.02		A111E6054S	1
09	Oil Seal, crankshaft rear	Also see 40.02		A111E6057S	1

**ELISE**

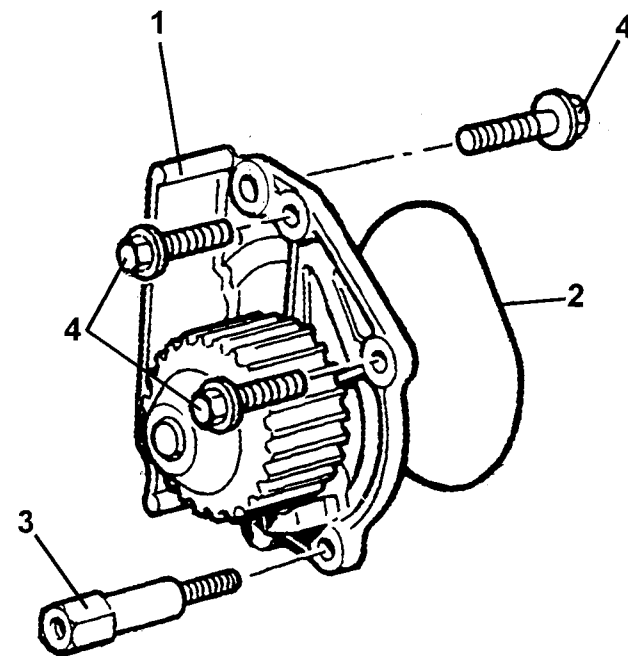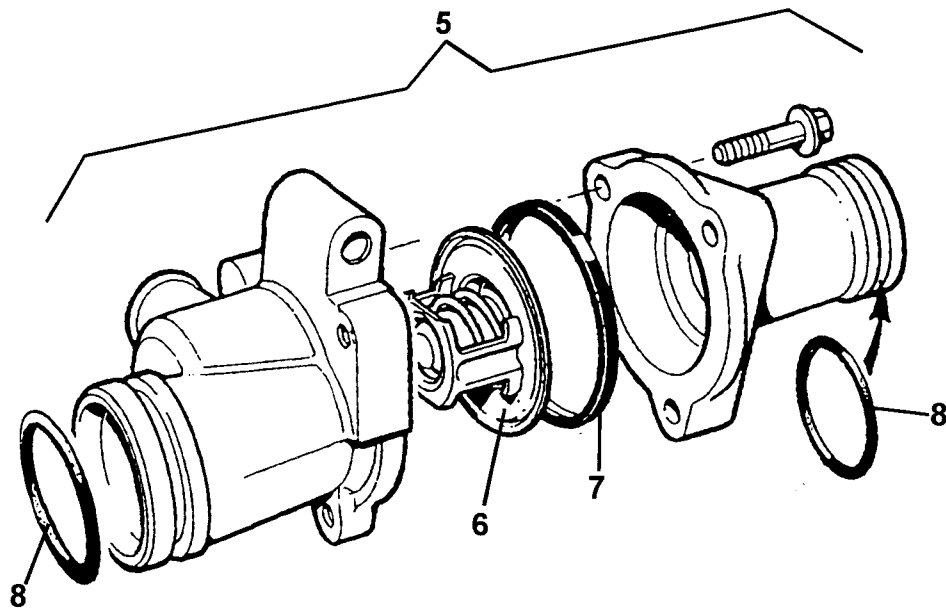




**ELISE**  
40.13

# Service Parts List **ELISE**



## Function Code 40.13 Water Pump Assembly, Thermostat

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Water Pump Assembly	Includes 'O' ring		A111E6088S	1
02	'O' Ring, water pump	Also see 40.02a		A111E6080S	1
03	Pillar Bolt			A111E6361S	1
04	Bolt, water pump fix.			A111E6341S	5
05	Thermostat Housing Assembly	Includes items 6, 7, 8		A111E6182S	1
06	Thermostat			A111E6085S	1
07	'O' Ring, thermostat	Also see 40.02		A111E6084S	1
08	'O' Ring, thermostat	Also see 40.02		A111E6067S	2

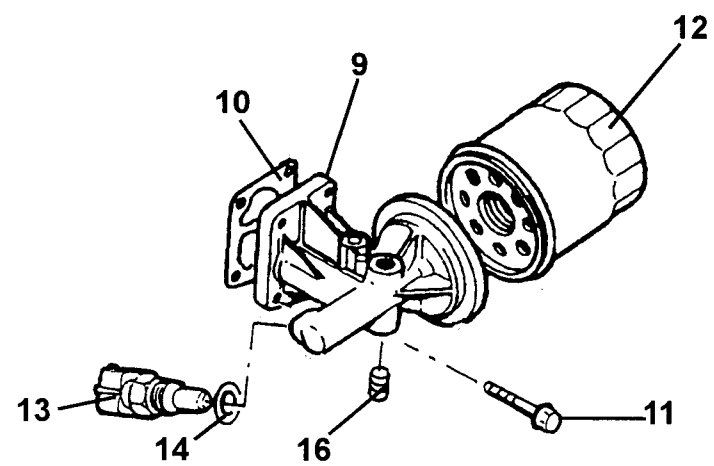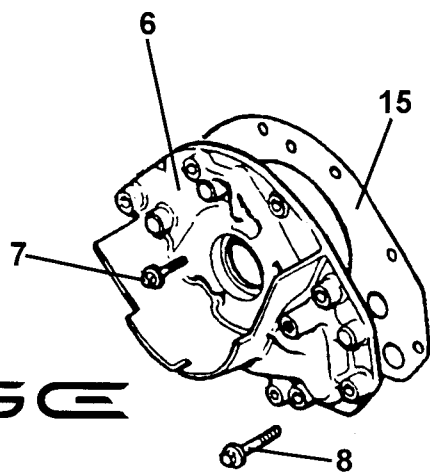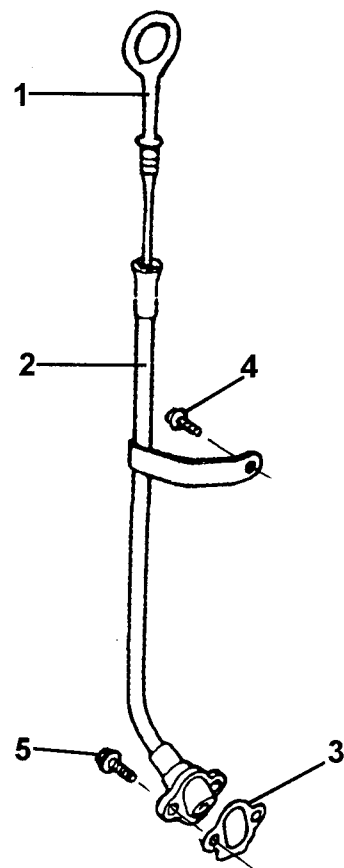

**ELISE**  
40.15




# Service Parts List **ELISE**



## Function Code 40.15 Lubrication System

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Dipstick			A111E6004F	1
02	Dipstick Tube			B111E0001F	1
03	Gasket, dipstick tube	Also see 40.02		A111E6009F	1
04	Bolt, dipstick tube bracket to block			A111E6006F	1
05	Bolt, dipstick tube flange to block			A111E6007F	2
06	Oil Pump Assembly			A111E6122S	1
06a	Oil Pump Repair Kit	Not illustrated		A111E6346S	1
07	Bolt, flg. hd., oil pump to block			A111E6289S	1
08	Bolt, flg. hd., oil pump to block			A111E6360S	8
09	Oil Filter Housing			A117E6177S	1
10	Gasket, oil filter housing	Also see 40.02		A111E6101S	1
11	Bolt, oil filter housing to block			A111E6168S	4
12	Engine Oil Filter			A117E6019S	1
13	Oil Pressure Switch, M12 x 1.5mm			A111E6179S	1
14	Washer, oil pressure switch			A111E6180S	1
15	Gasket, oil pump	Also see 40.02		A111E6053S	1
16	Blanking Plug, oil filter housing			A111E6181S	1

**ELISE**

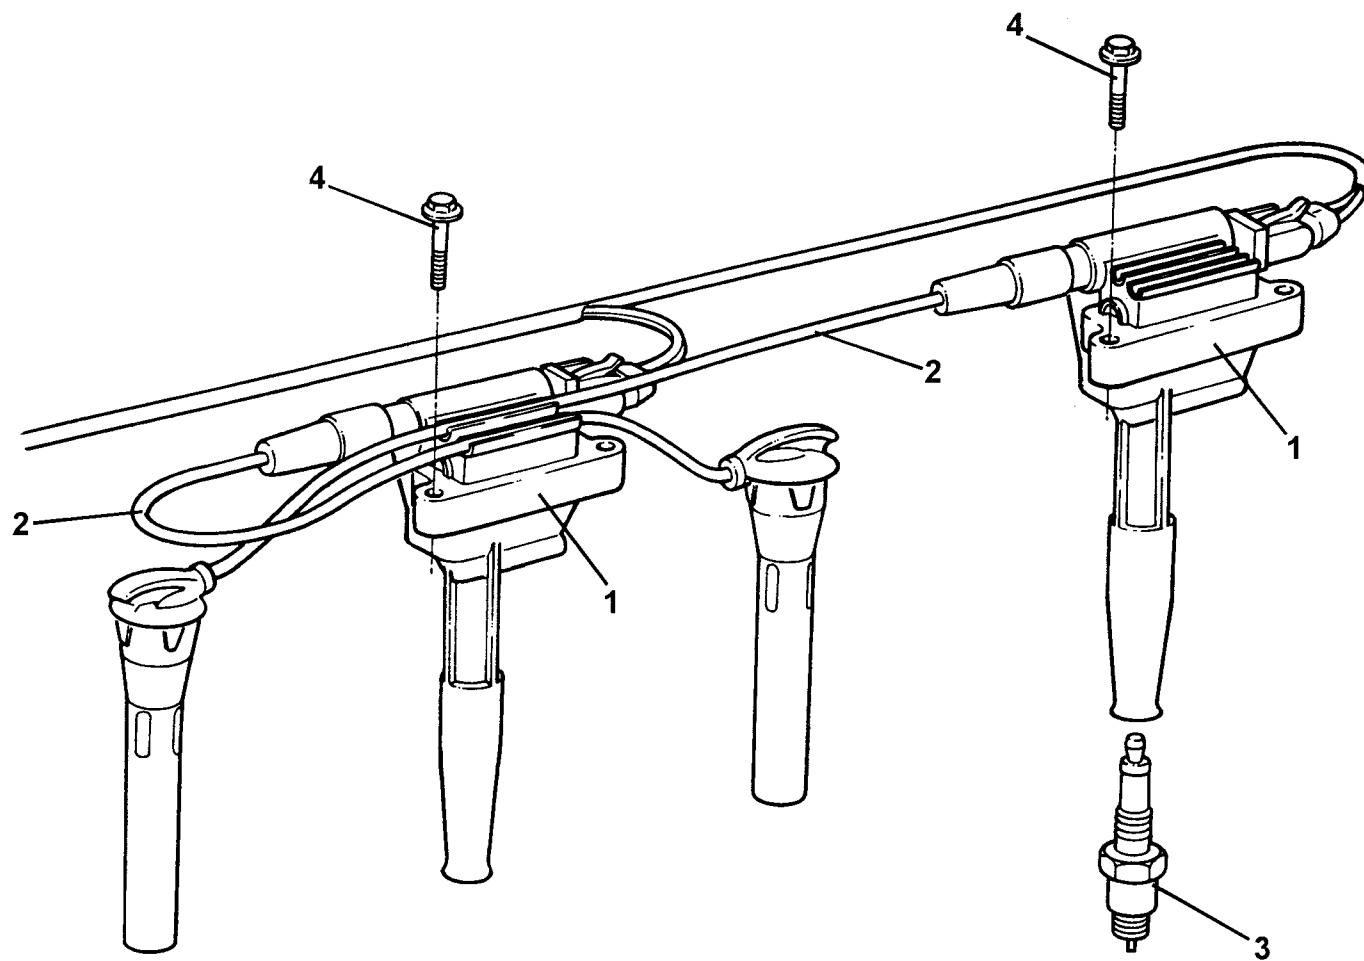


ELISE  
40.17

# Service Parts List **ELISE**



## Function Code 40.17 Ignition System, Spark plugs, Leads

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Plug Top Ignition Coil			A117E6030S	2
02	Plug Lead			A117E6032S	2
03	Spark Plug			A117E6023S	4
04	Screw, coils to cam cover			A117E6031S	4

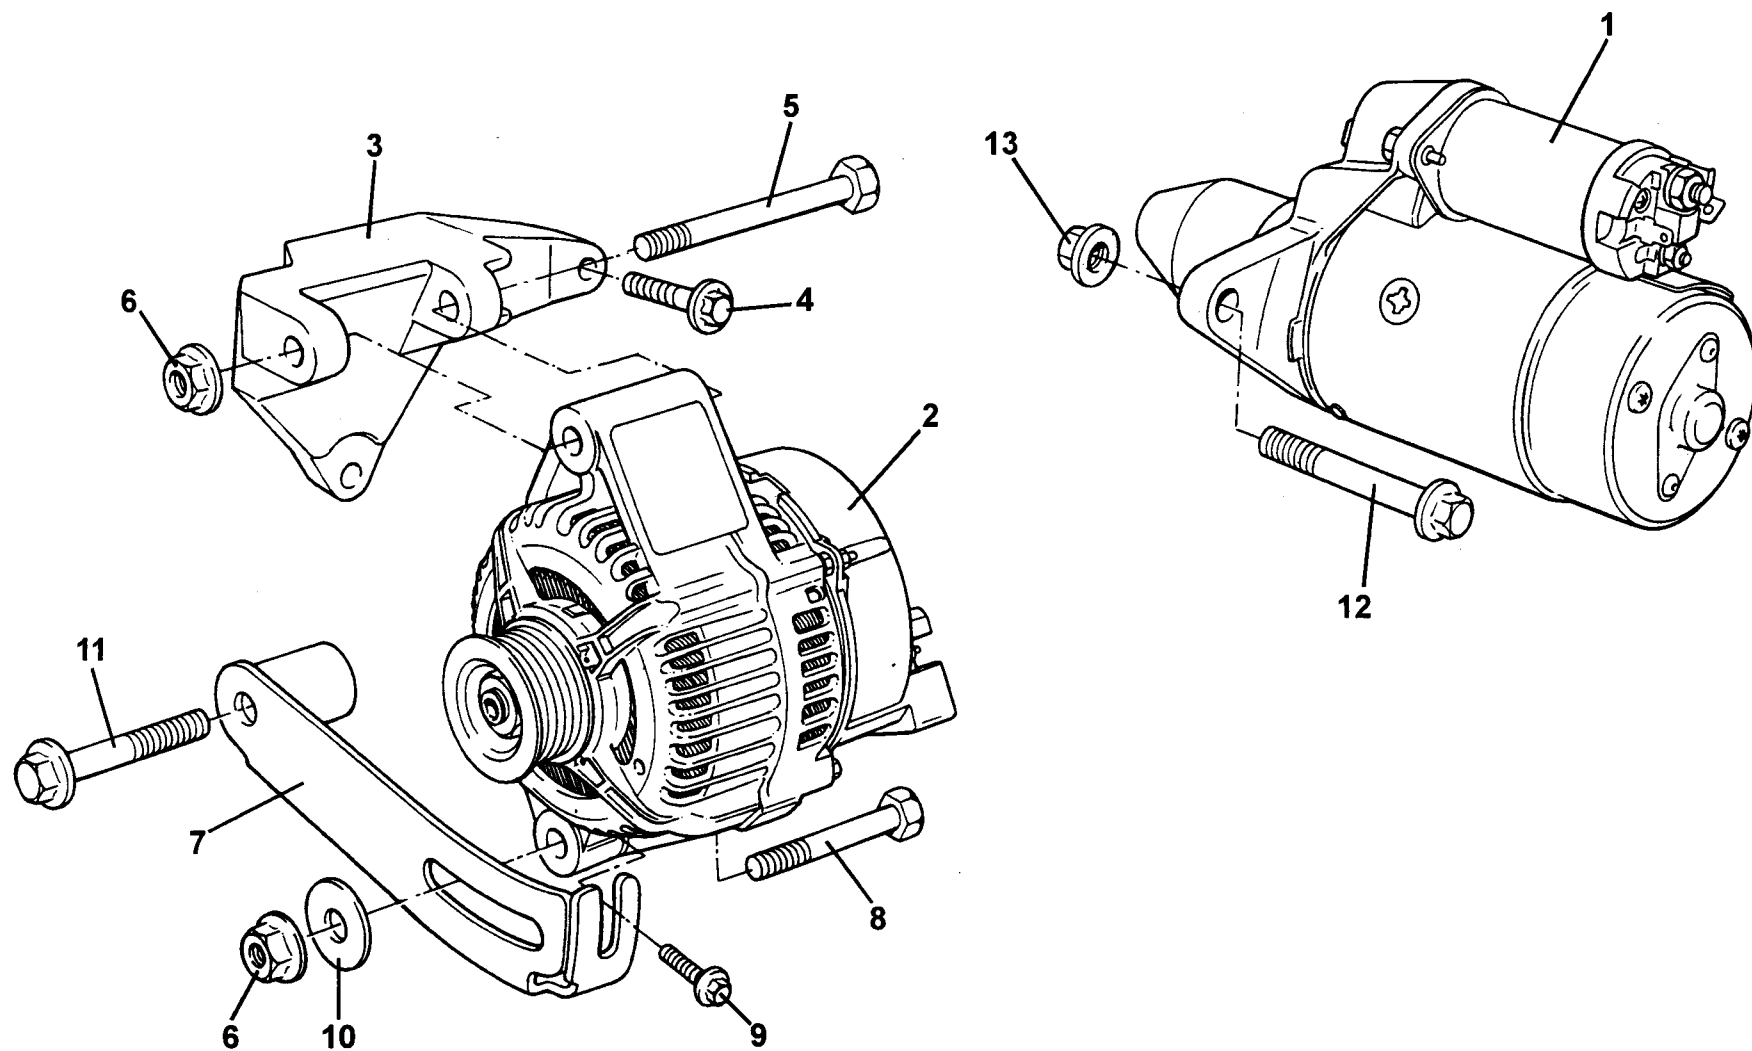

**ELISE**  
**40.19**

# Service Parts List

# ELISE




## Function Code 40.19 Alternator and Starter Motor

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Starter Motor, 1.4KW			A117E6054S	1
02	Alternator			A117E6008F	1
03	Alternator Bracket			A111E6236S	1
04	Bolt, flg. hd., bracket to block			A111E6241S	3
05	Bolt, hex. hd., alternator to bracket			A111E6104F	1
06	Nut, flg. hd., alternator to bracket			A111E6183S	2
07	Alternator Adjustment Link			A111E6238S	1
08	Bolt, hex. hd., alternator to link			A111E6239S	1
09	Setscrew, flg. hd., alternator adjustment			A111E6241S	1
10	Washer, flat			A111E6240S	1
11	Bolt, flg. hd., link to block			A111E6237F	1
12	Bolt. M12 x 90, flg. hd. starter motor fix.			A111E6176S	2
13	Flange Nut, M12, starter motor fix.			A111E6178S	2

# ELISE

Function Code: 40.19, Page: 1

2001 / 01

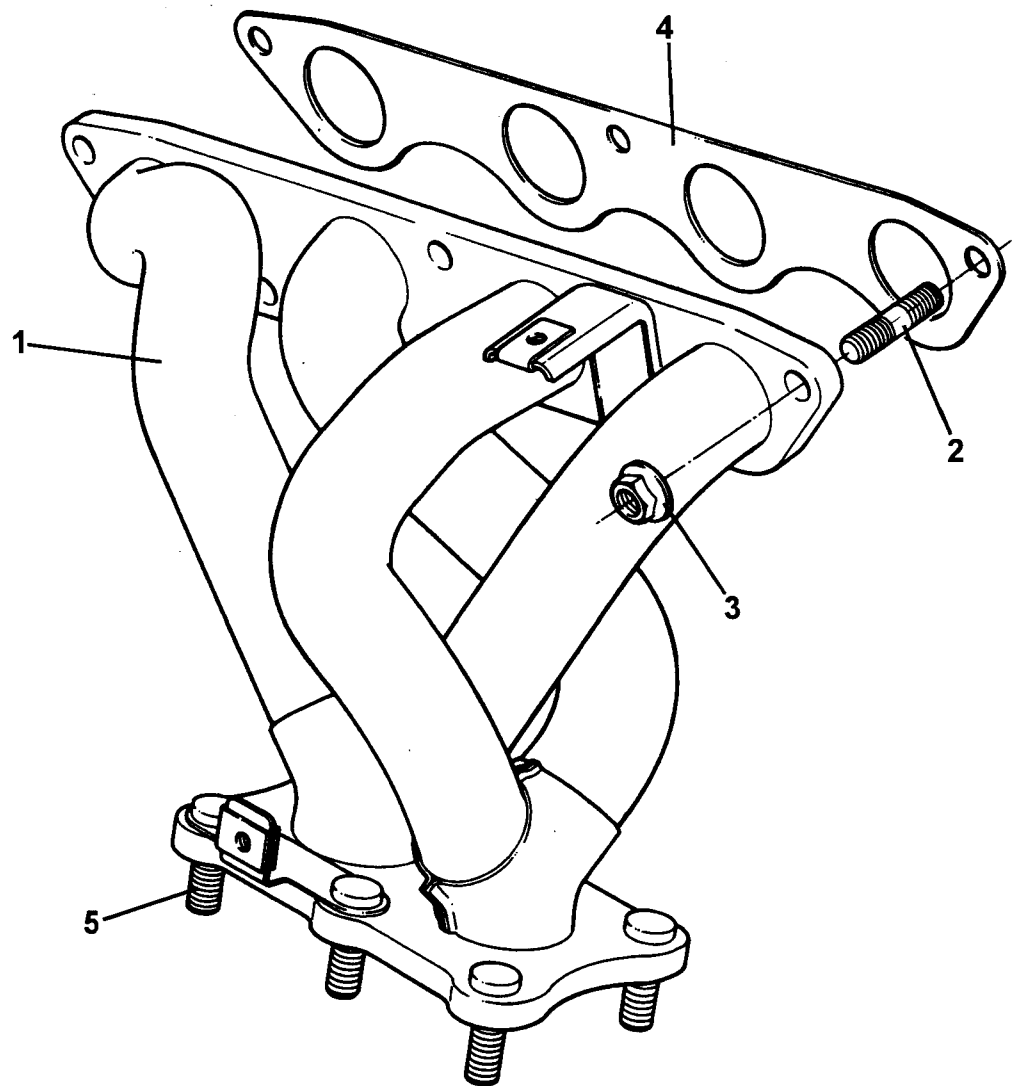


**ELISE**  
40.21

# Service Parts List **ELISE**



## Function Code 40.21 Exhaust Manifold

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Manifold, exhaust			A117E6038S	1
02	Stud, manifold to cylinder head			A111E6148S	5
03	Nut, manifold to cylinder head			A111E6149S	5
04	Gasket, manifold to head	Also see section 40.02		A117E6039S	1
05	Stud, manifold to downpipe			A111E6065S	4

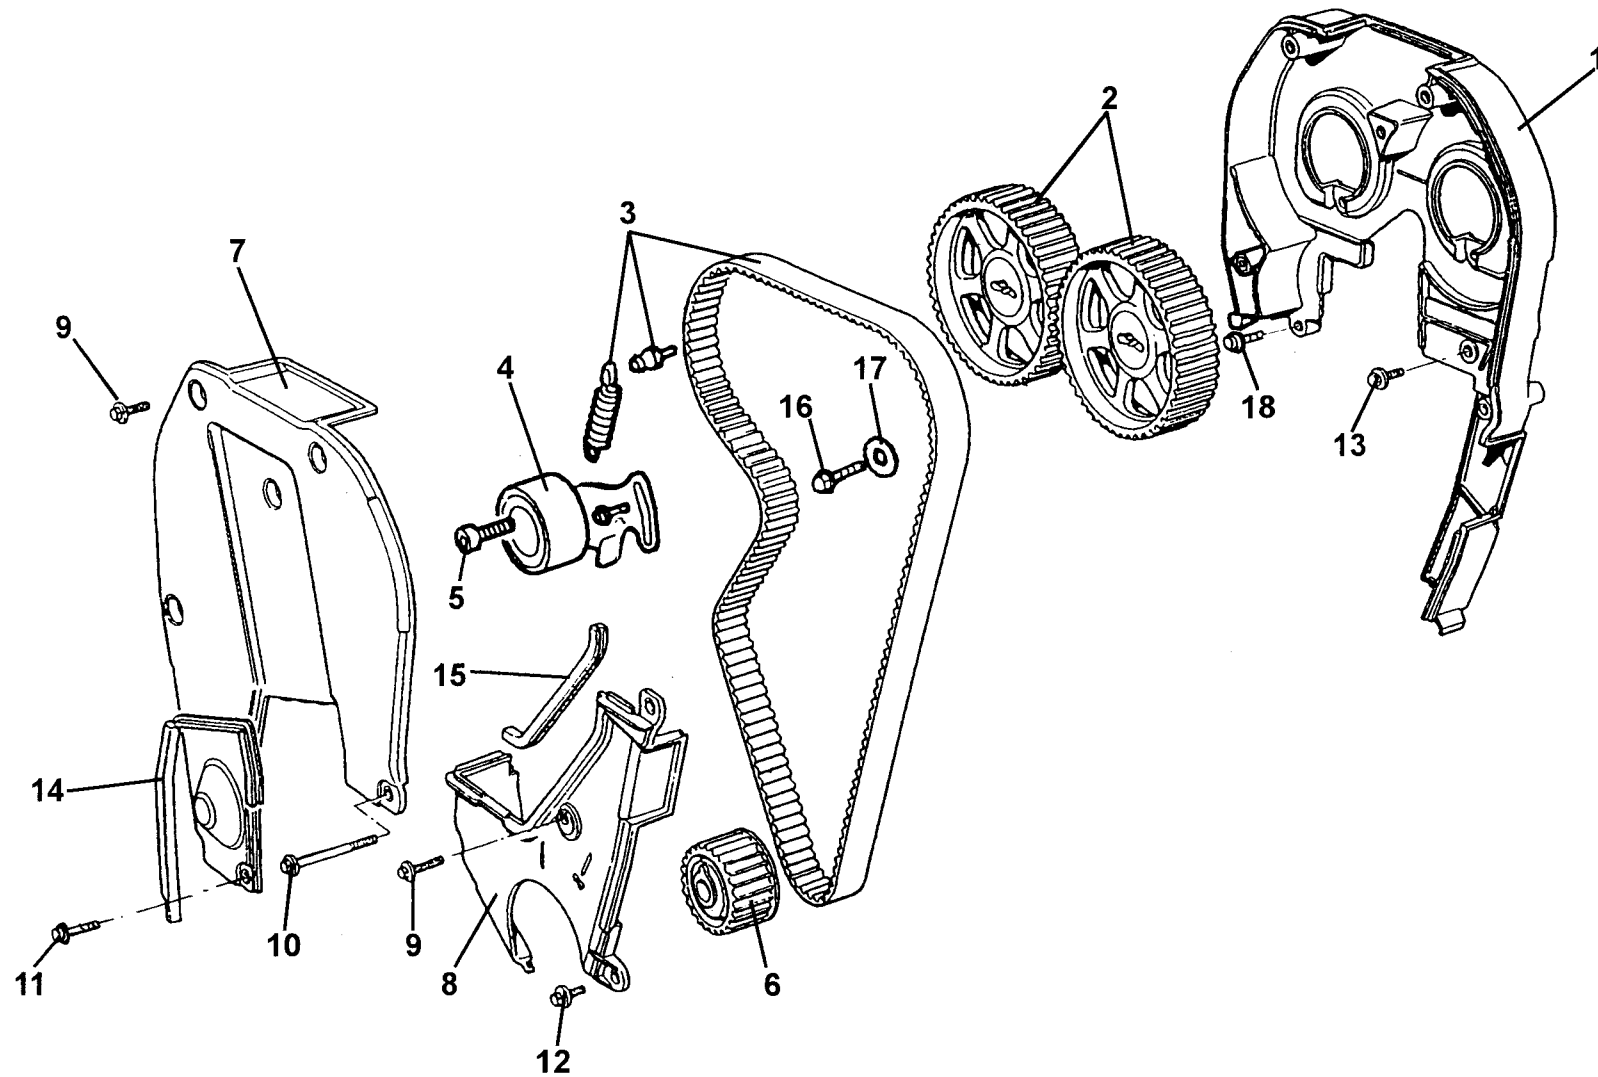

**ELISE**  
41.01




# Service Parts List **ELISE**



## Function Code 41.01 Camshaft Belts, Guards & Pulleys

Dep	Part Description	Remarks	Option	Part Number	Qty
01	Cover, rear, timing belt			A117E6022S	1
02	Camshaft Pulley, inlet and exhaust			A111E6156S	2
03	Timing Belt Kit	Includes spring & pedestal bolt		A111E6246S	1
04	Tensioner Assembly, dynamic			A111E6243S	1
05	Clamp Screw, M8, belt tensioner			A111E6244S	1
06	Crankshaft Pulley, timing belt			A111E6157S	1
07	Cover, upper front, timing belt	Includes seals		A117E6036S	1
08	Cover, lower front, timing belt	Includes seals		A117E6035S	1
09	Screw, M6 x 35, flg. hd., upper cover fix.			A111E6386S	1
10	Bolt, M6, upper cover fix.			A111E6348S	1
11	Bolt, M6, lower cover fix.			A111E6068S	1
12	Screw, M6 x 16, lower cover fix.			A111E6351S	1
13	Screw, M6 x 16, rear cover fix.			A111E6339S	3
14	Seal, upper cover			A111E6071S	1
15	Seal, lower cover			A111E6070S	1
16	Screw, cam pulley fix.			A111E6386S	2
17	Washer, flat			A111E6279S	2
18	Screw, rear cover fix.			A111E6039S	1

**ELISE**

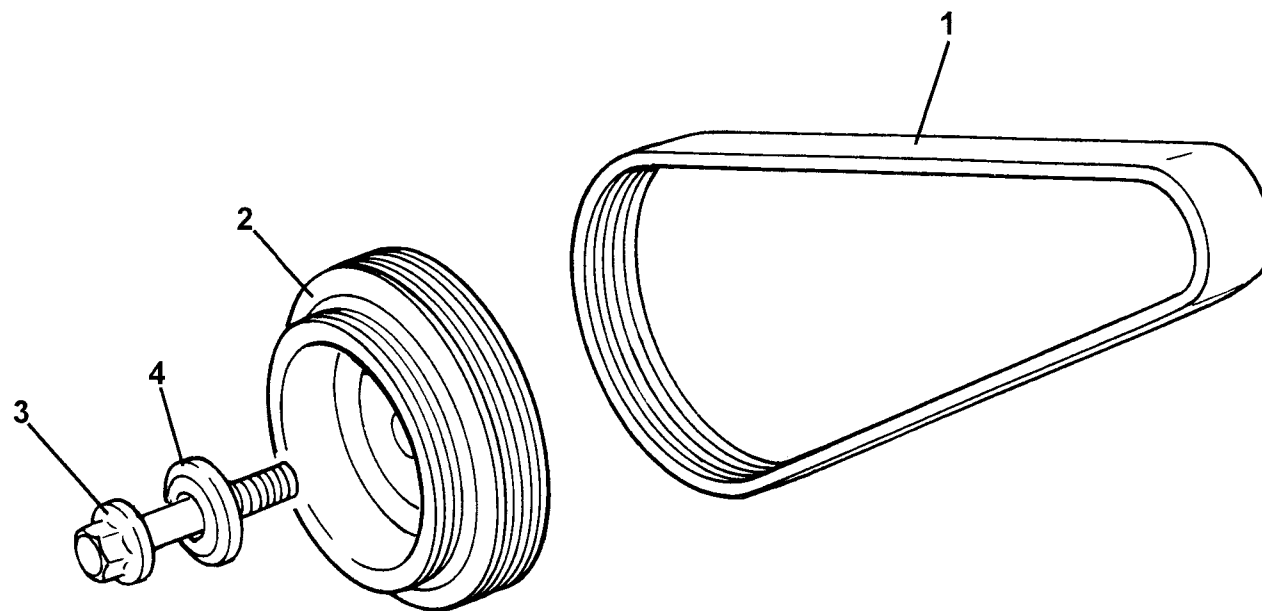

ELISE

41.03

# Service Parts List **ELISE**



## Function Code 41.03 Auxiliary Drive Belts & Pulleys

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Drive Belt, alternator			A111E6041S	1
02	Auxiliary Belt Pulley			A111E6158S	1
03	Bolt, pulley fix.			A111E6159S	1
04	Washer, special, bolt to pulley			A111E6275S	1


# Service Parts List **ELISE**




## Function Code 42.01 Airboxes, Trunking & Air Filters

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Air Cleaner Housing Assembly			A111E0015K	1
02	Air Cleaner Element			A111E6022S	1
03	Flexible Hose, air cleaner to throttle body			A111E6010F	1
04	Hose Clip, hose to air cleaner			A075L6044F	1
05	Hose Clip, hose to throttle body			A111E6024F	1
06	Mounting Bracket Assy., air cleaner			A117E0071F	1
07	Grommet, air cleaner lower mounting			A111E6018F	1
08	Grommet, air cleaner upper mounting			A111E6017F	2
09	Pin, air cleaner retention			A111E6012F	2
10	Screw, M6, hex. hd., bracket to roll-over bar stay				2
11	Washer, spring, M6,			A907E6258F	2
12	Washer, flat, M6				2
13	Setscrew, M6 x 22, hex. hd., filter to bracket			A082W1111F	1
14	Washer, spring, M6			A079W4035Z	1
15	Insert, grommet fix.			A089U1518F	1
16	Bracket Assy., intake hose fix.	Includes items: 17,19,20		A117E0012F	1
17	Cradle Clip, cable tie fix.			A082W6293F	2
18	Cable Tie				2

**ELISE**

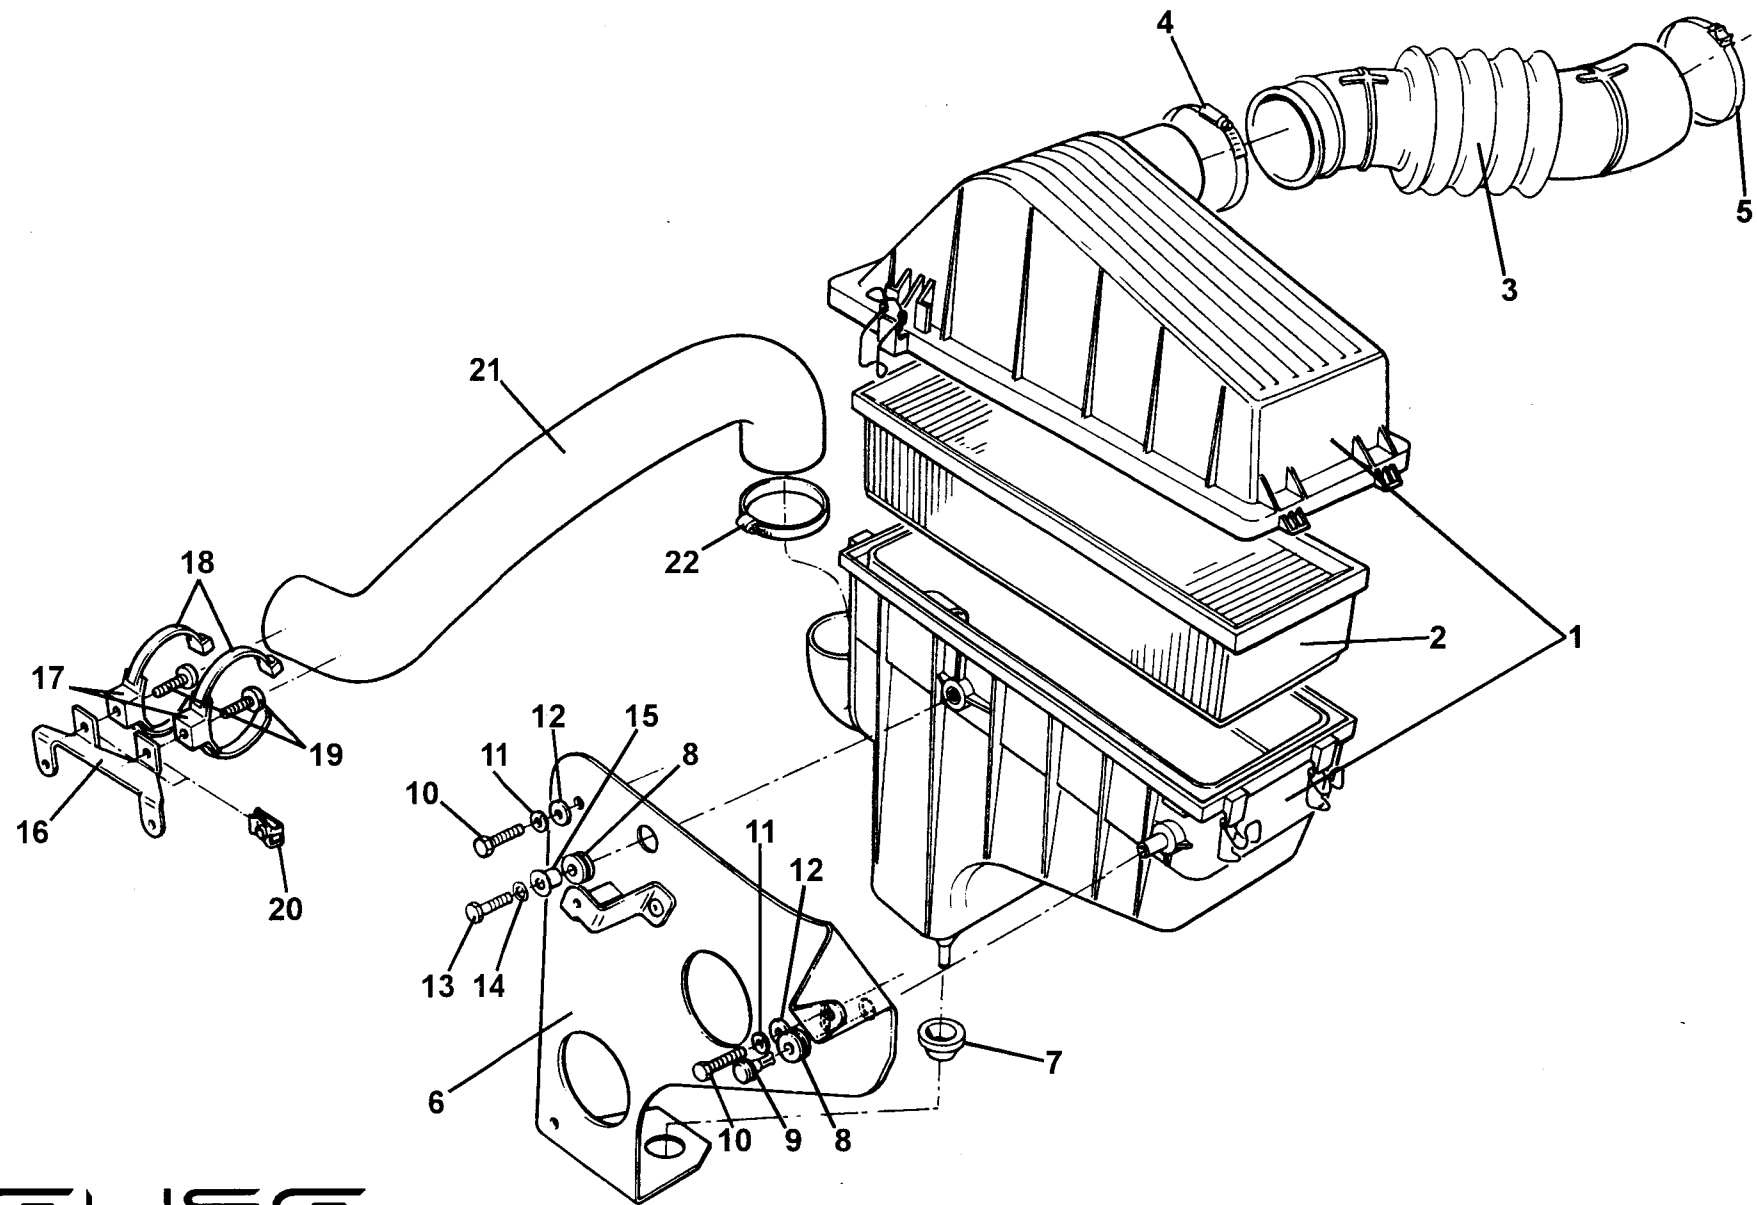

**ELISE**  
42.01


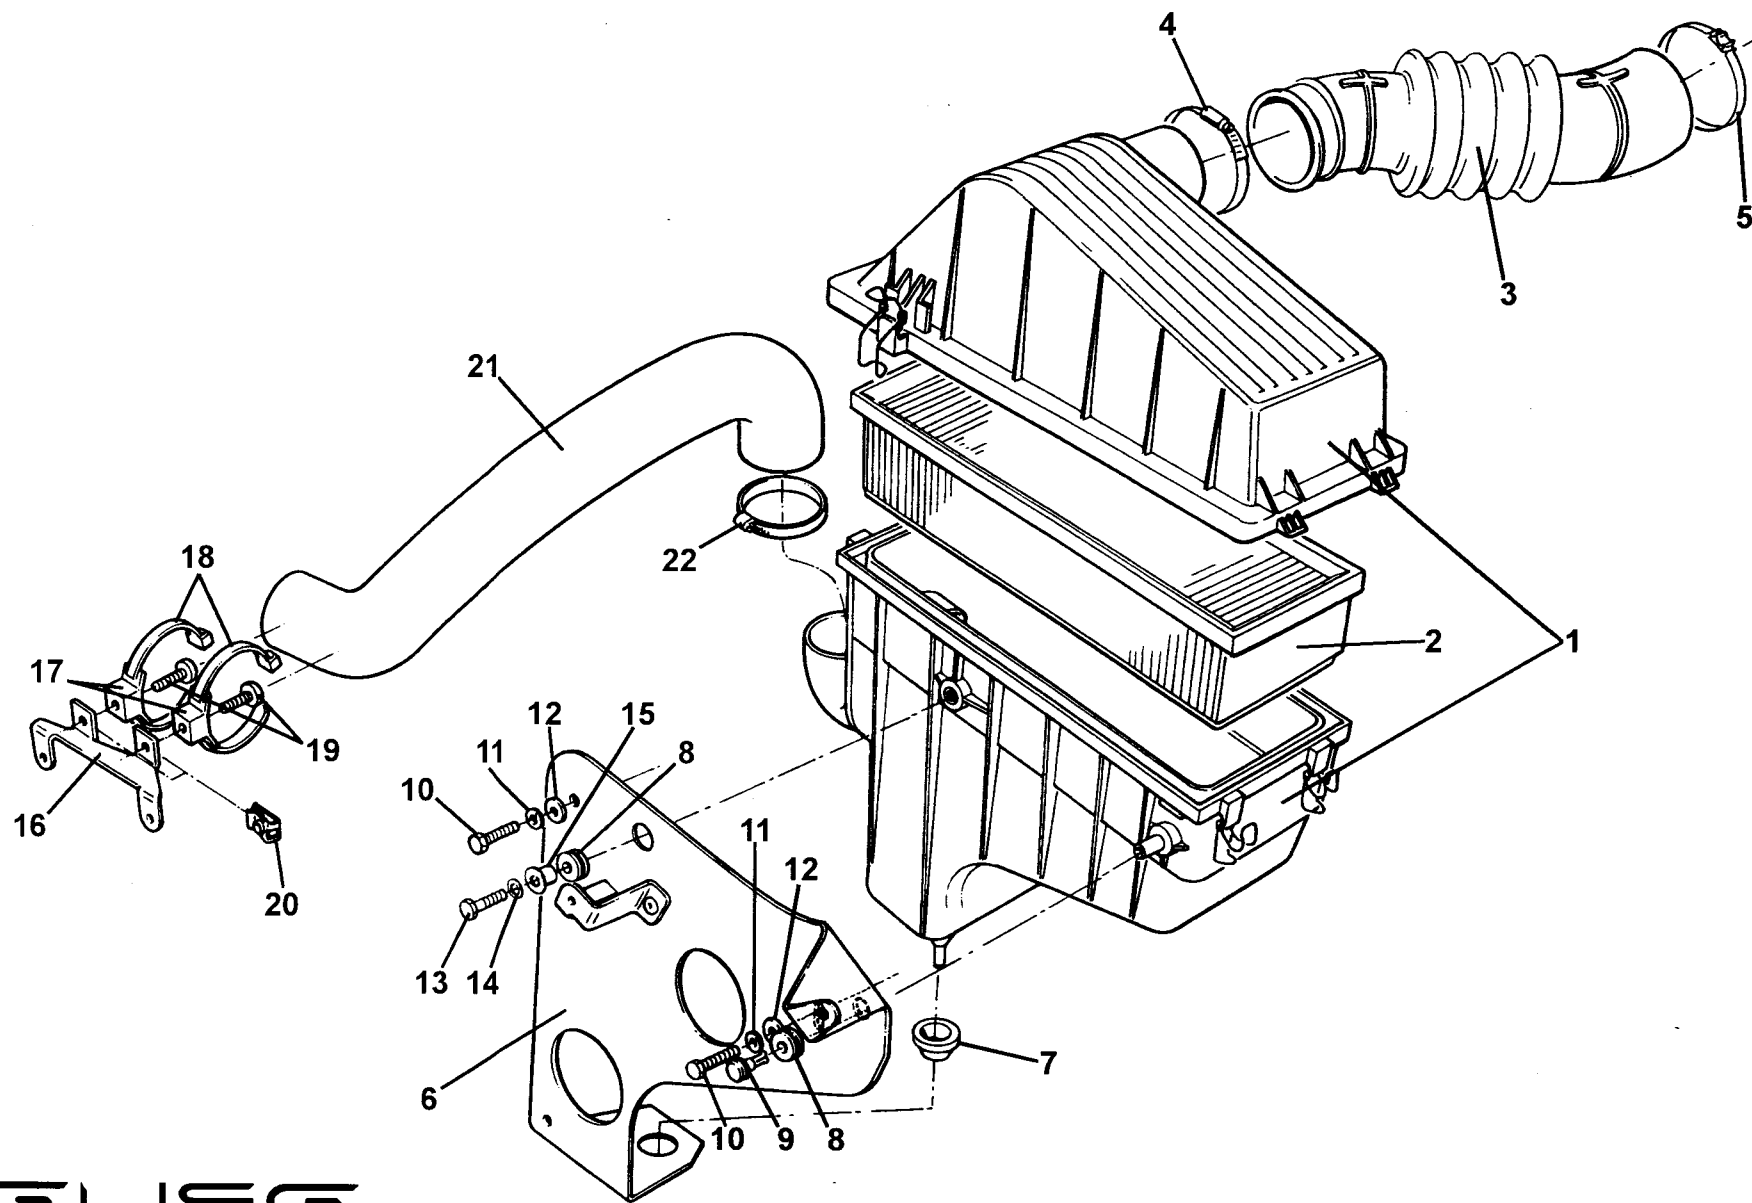


**ELISE**  
42.01

---

**Function Code 42.01 Airboxes, Trunking & Air Filters**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
19	Screw, M5 x 12, button hd.			A111W7138F	2
20	Spirenut, M5			B100W6372F	2
21	Intake Hose			A111E6034F	1
22	Hose Clip			A910E7004F	1

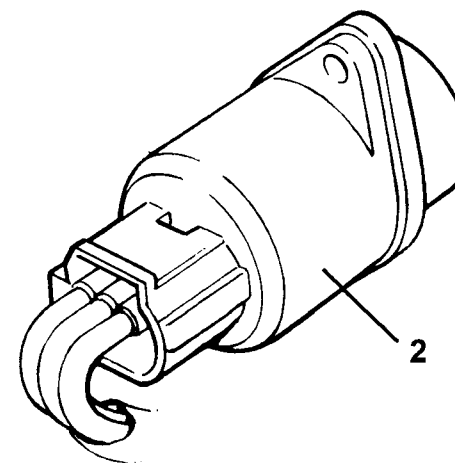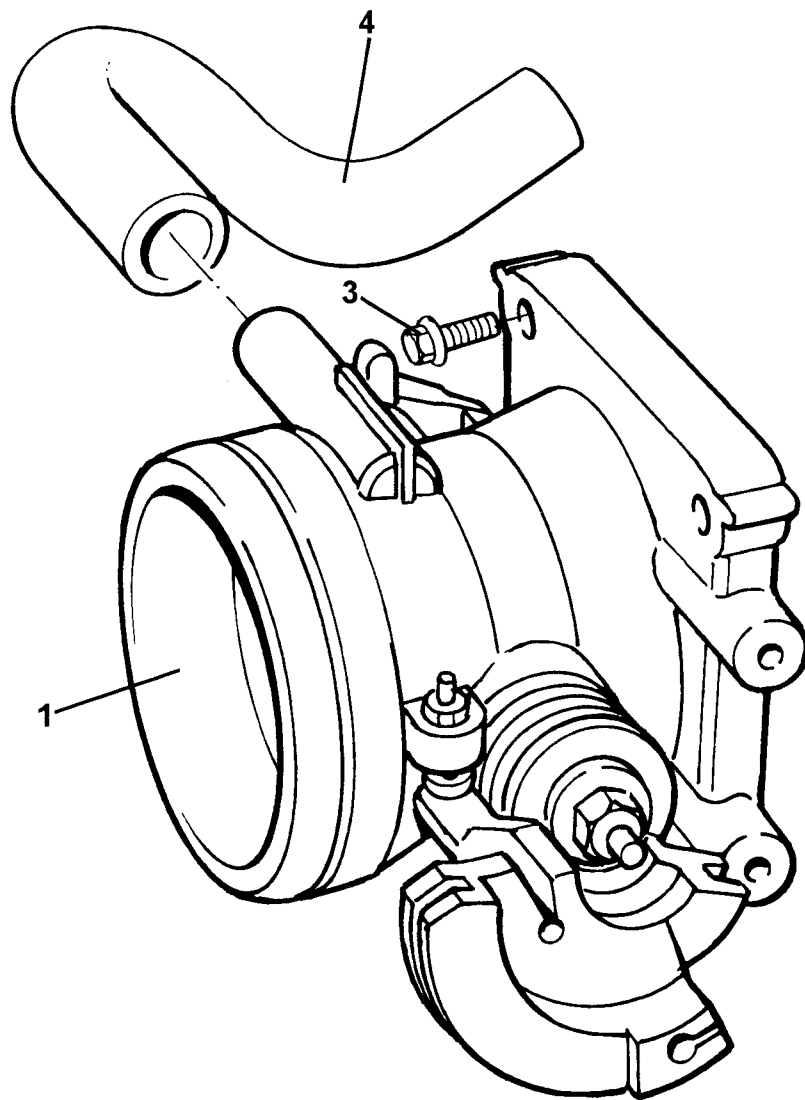

**ELISE**  
42.04




# Service Parts List **ELISE**



## Function Code 42.04 Throttle Body, Mechanism & IAC Valve

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Throttle Body				1
02	Idle Air Control Valve (IAC)			A111E6132S	1
03	Screw, flg, hd., throttle body to plenum			A111E6364S	4
04	Hose, throttle body to IAC			A111E6365S	1

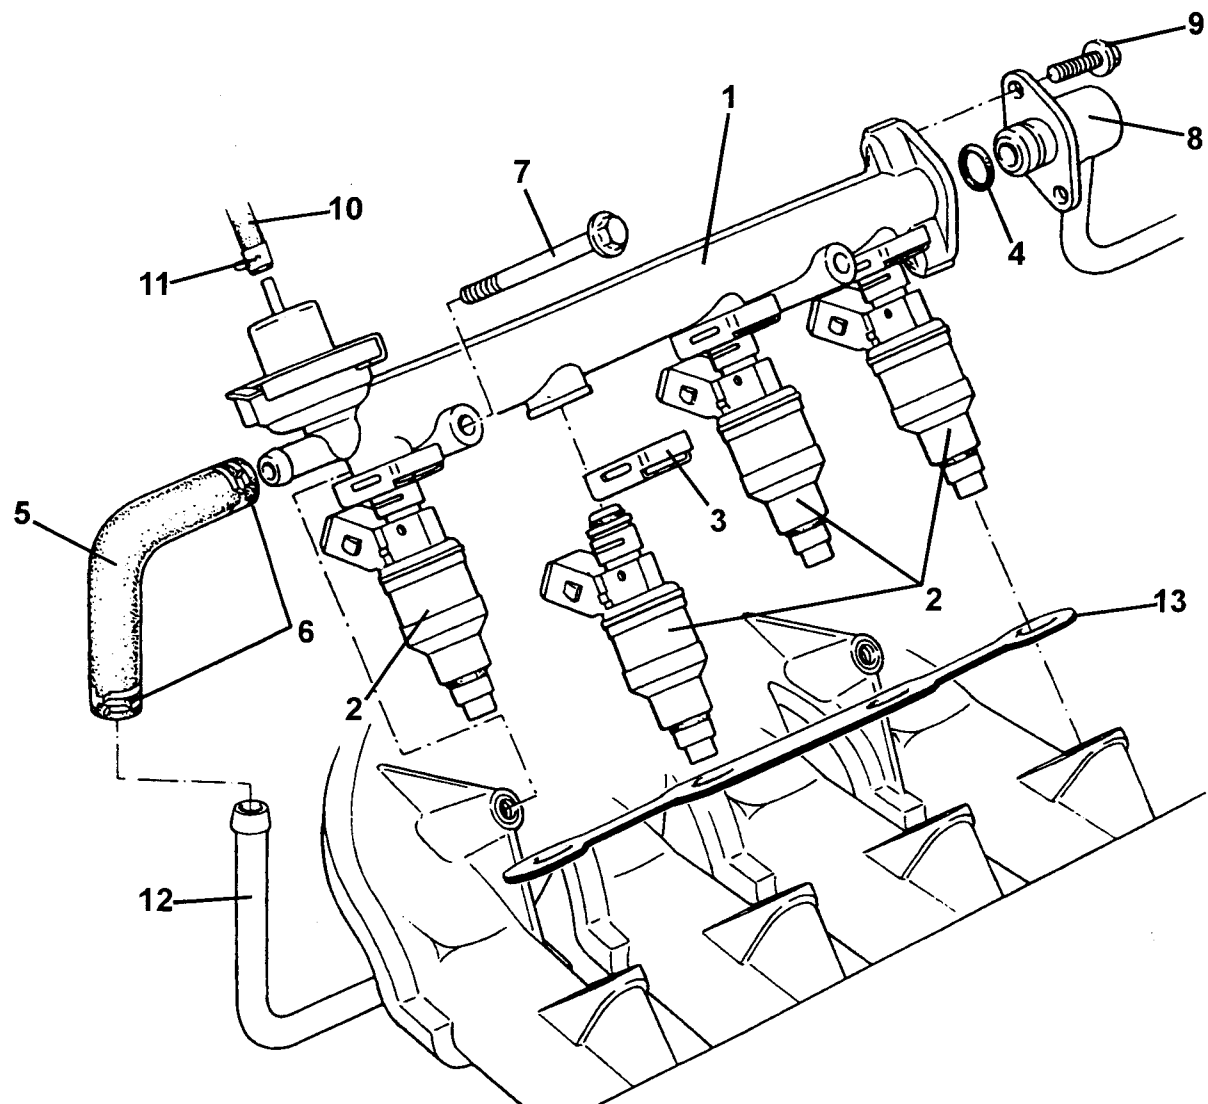

**ELISE**  
42.05


# Service Parts List **ELISE**



## Function Code 42.05 Fuel Injection System

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Fuel Rail.			A111E6079S	1
02	Injector.			A111E6060S	4
03	Clip, injector retaining			A111E6162S	4
04	'O' Ring, pipe to rail			A111E6142S	1
05	Hose, elbow, fuel return			A117L6028S	1
06	Hose Clip			A111L6034S	2
07	Bolt, fuel rail to manifold			A111E6160S	2
08	Fuel Pipe Assembly, fuel feed			A111L6030S	1
09	Bolt, pipe to rail			A111L6035S	2
10	Vacuum Hose, regulator to manifold			A111E6078S	1
11	Hose Clip, vacuum hose securing			A111E6161S	1
12	Fuel Pipe Assembly, fuel return			A111L6046S	1
13	Injector Holding Plate, plastic			A117E	1

**ELISE**

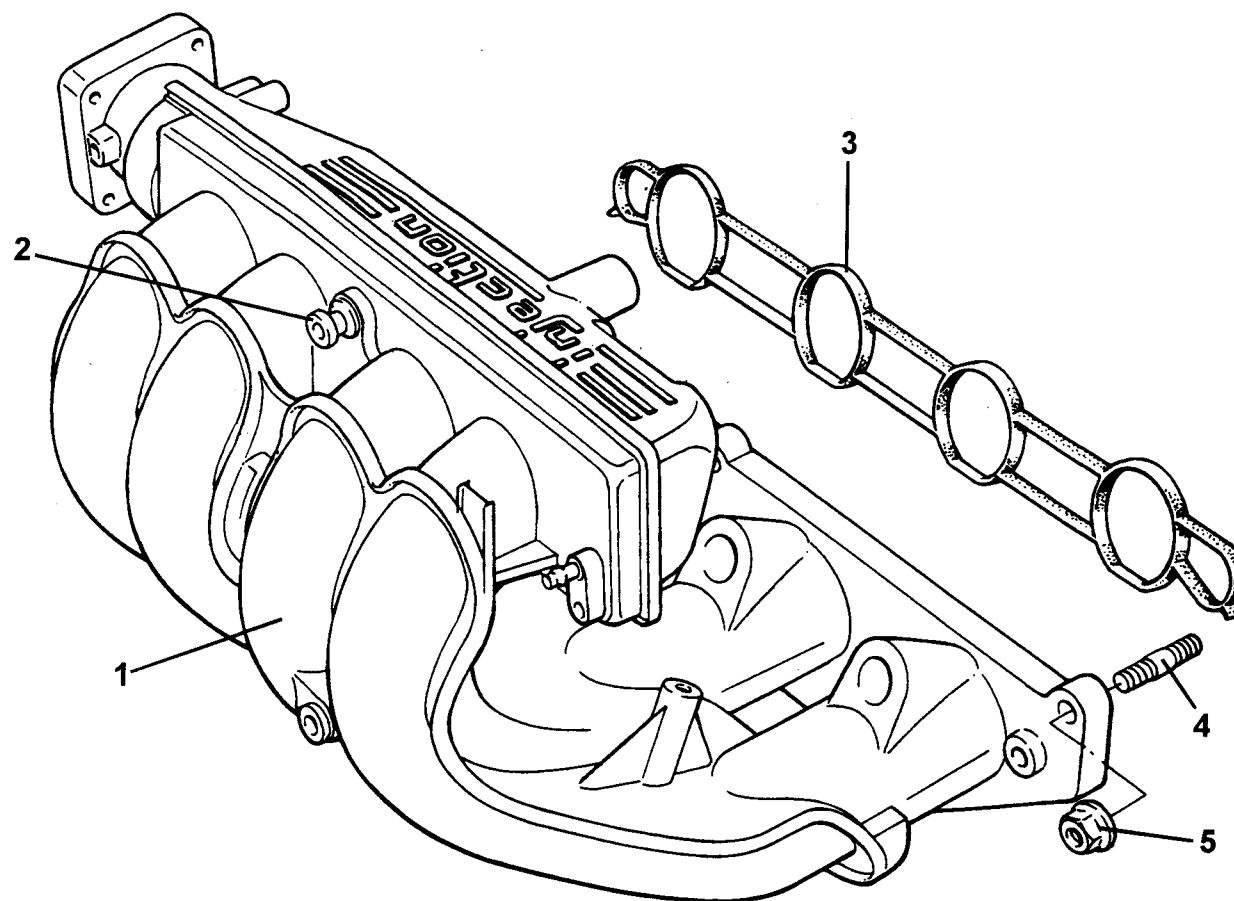


**ELISE**  
42.07

# Service Parts List **ELISE**



## Function Code 42.07 Inlet Manifolds, Plenum & Gaskets

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Inlet Manifold				1
02	Vacuum Pipe Union			A111E6327S	1
03	Gasket, inlet manifold (green)	Also see section 40.02		B111E6086S	1
04	Stud, inlet manifold			B111E6081S	7
05	Nut, inlet manifold fix.			A111E6326S	7

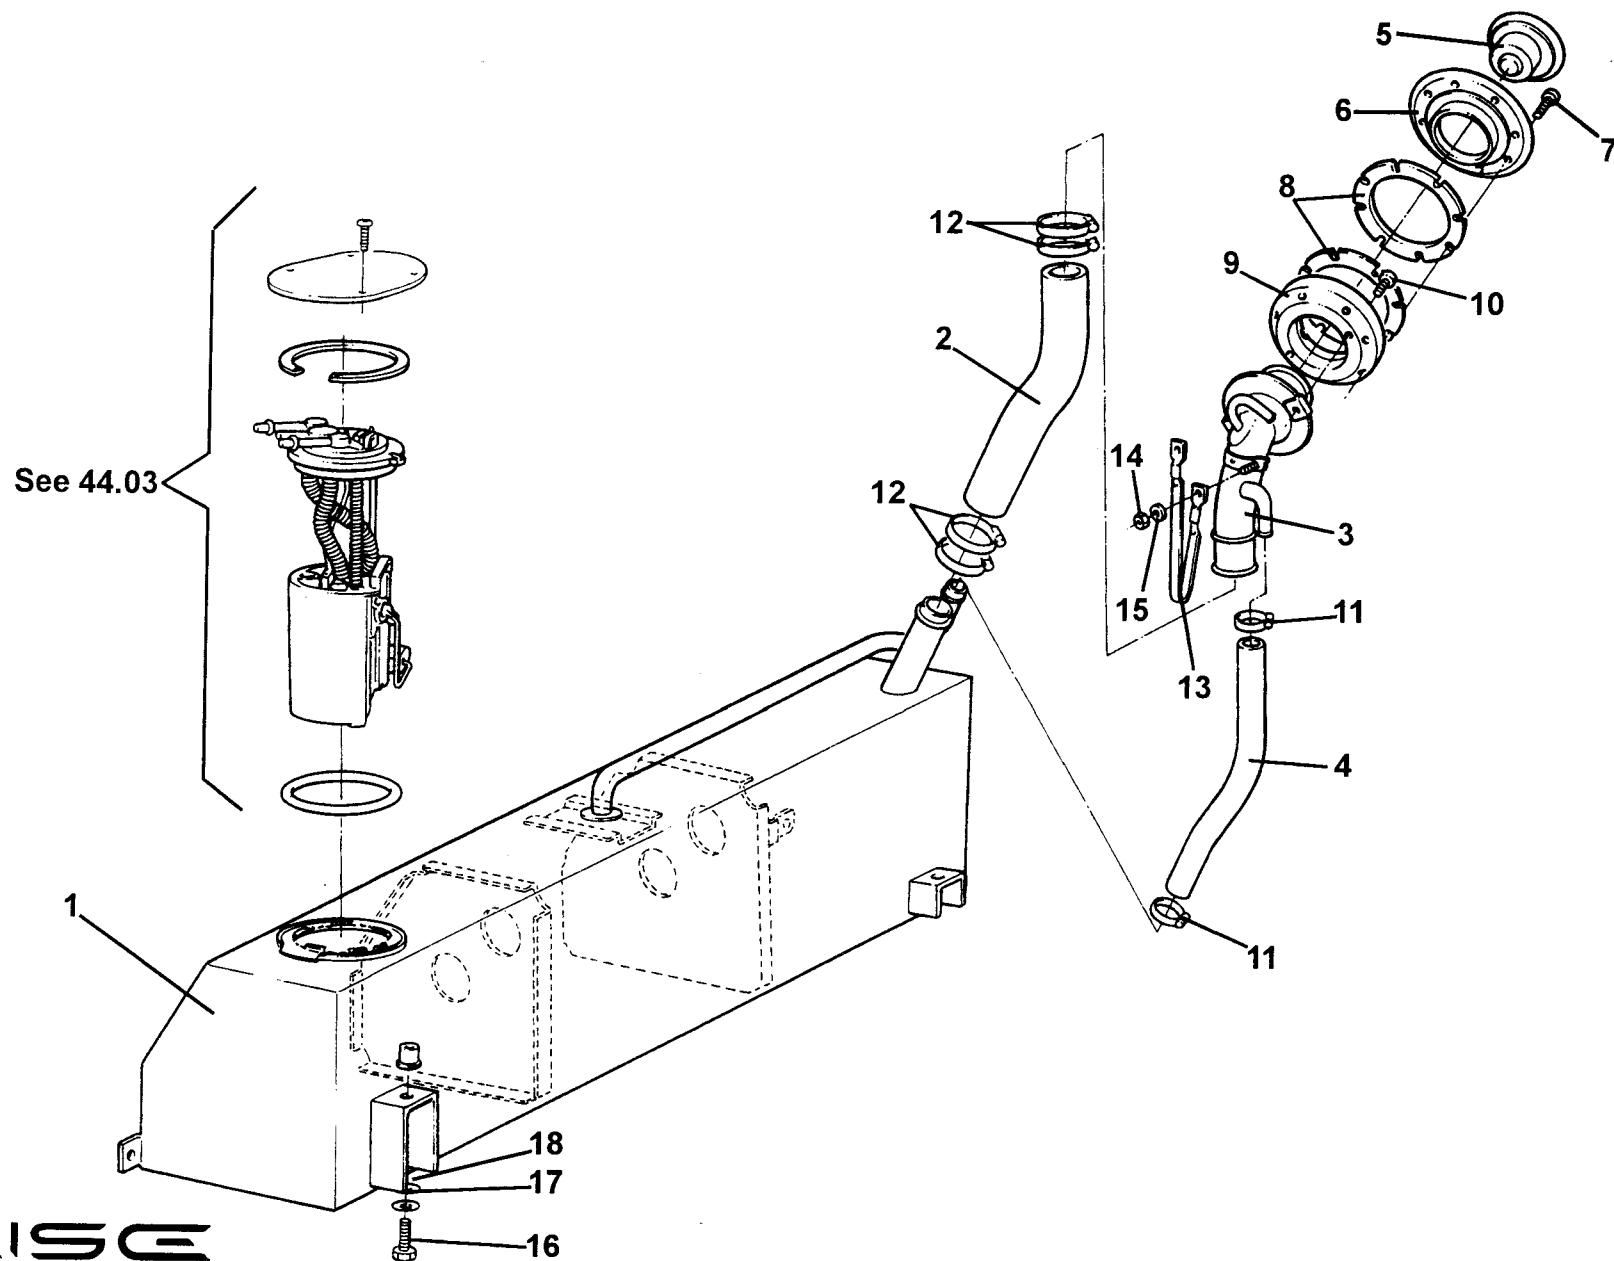

**ELISE**  
44.01


# Service Parts List **ELISE**



## Function Code 44.01 Fuel Tanks, Filler

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Fuel Tank			A117L0052H	1
02	Hose, fuel filler			A117L0044F	1
03	Filler Neck				1
04	Hose, fuel breather			A117L0045F	1
05	Fuel Filler Cap, locking	Includes lock barrel		A117L0025J	1
05a	Fuel Filler Cap	Cap only		A117L6058F	1
06	Ring, fuel filler cap to clamshell			B117L0037F	1
07	Setscrew No 6 x 1/2", filler neck to body				8
08	Gasket, clamping ring			B117L0021F	1
09	Clamping Ring, filler to clamshell				1
10	Screw, ring to filler neck				2
11	Hose Clip, breather hose			A117W6677F	4
12	Hose Clip, filler hose, upper			A117W6679F	2
13	Hose Clip, filler hose, lower			A117W6678F	2
14	Earth Braid			A079M4049F	1
15	Nut, braid to filler neck				2
16	Washer, flat				2
17	Setscrew, M8 x 25, tank to chassis			A075W1039Z	4

**ELISE**

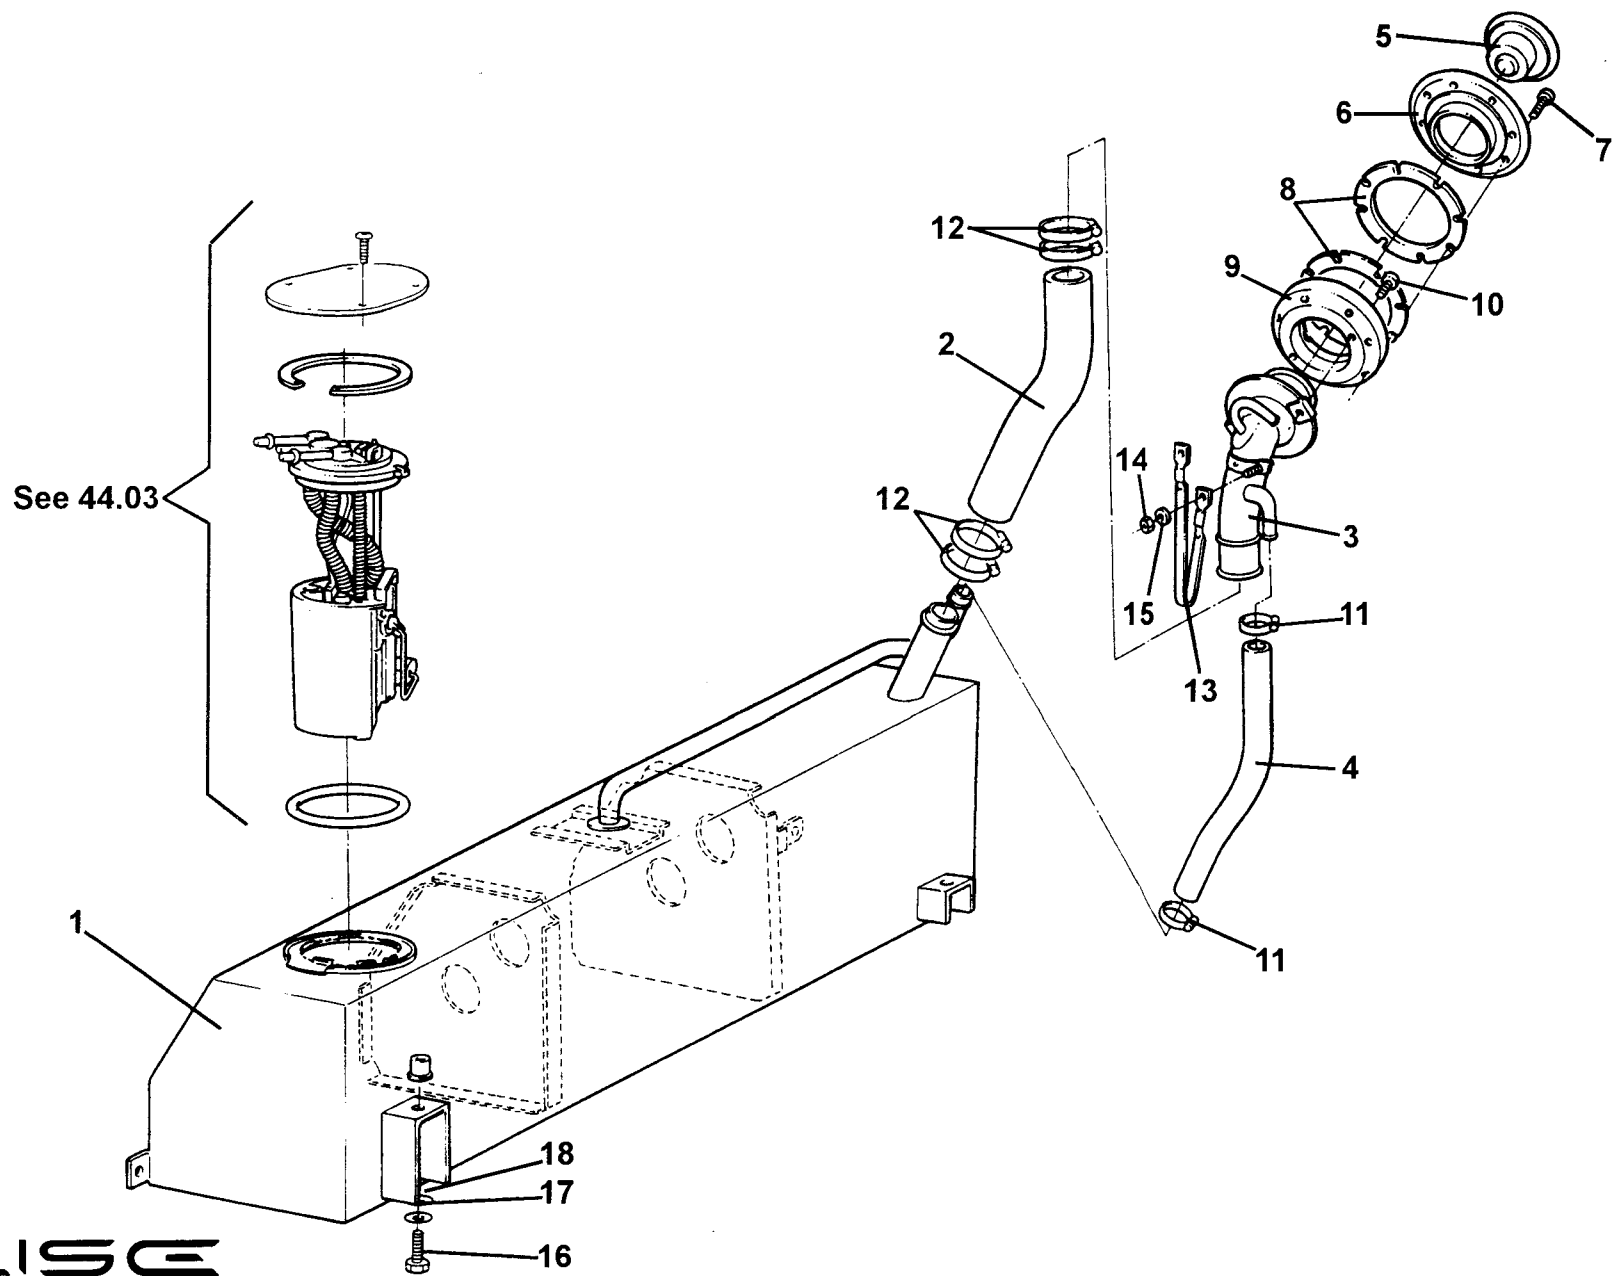

**ELISE**  
44.01




---

**Function Code 44.01 Fuel Tanks, Filler**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
18	Washer, spring, M8, tank to chassis			A075W4036Z	4
19	Washer, flat, M8, tank to chassis			A075W4019Z	4

---

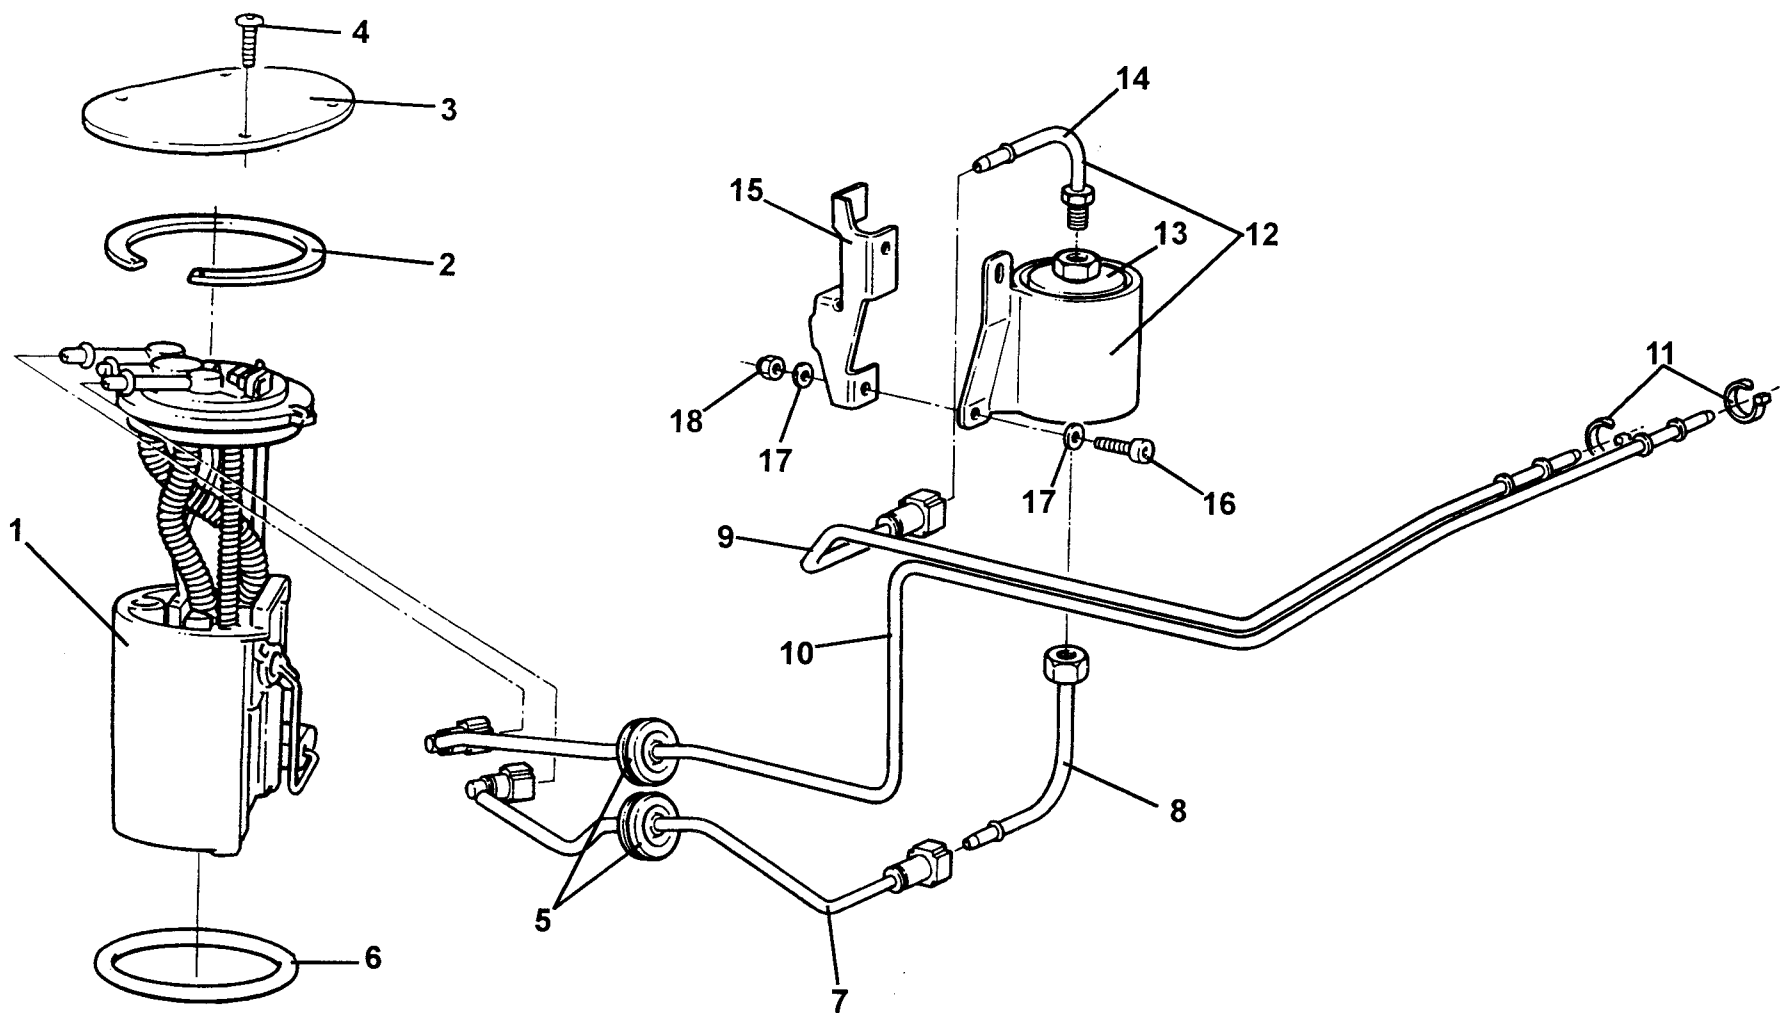


**ELISE**  
44.03

# Service Parts List **ELISE**



## Function Code 44.03 Fuel Pump; Filter, Pipes

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Fuel Pump and Sender Unit			A116L6001L	1
02	Circlip, pump to tank				1
03	Access Panel, fuel tank			A117L0042F	1
04	Screw, access cover			A111W7117F	4
05	Grommet			A117L6027F	2
06	'O' Ring, fuel pump to tank			A111L6008F	1
07	Fuel Pipe Assembly, feed, pump to filter			A117L0006F	1
08	Adaptor Pipe, filter inlet to feed hose			A111L6006F	1
09	Fuel Pipe Assembly , feed, filter to engine			A117L0012F	1
10	Fuel Pipe Assembly, return			A117L0008F	1
11	Cable Tie, quick connect retention			A075W6038F	2
12	Fuel Filter Housing Assembly	Includes pipe item 14		A111L6002F	1
13	Fuel Filter Element			A340L6038S	1
14	Adaptor Pipe, filter outlet to feed hose			A111L6038S	1
15	Bracket, filter mounting			A117L0003F	1
16	Setscrew, M6 x 18, cap hd., filter assy to bracket				2
17	Washer, flat, M6			A075W4015Z	4
18	Nyloc Nut, M6			A075W3009Z	2

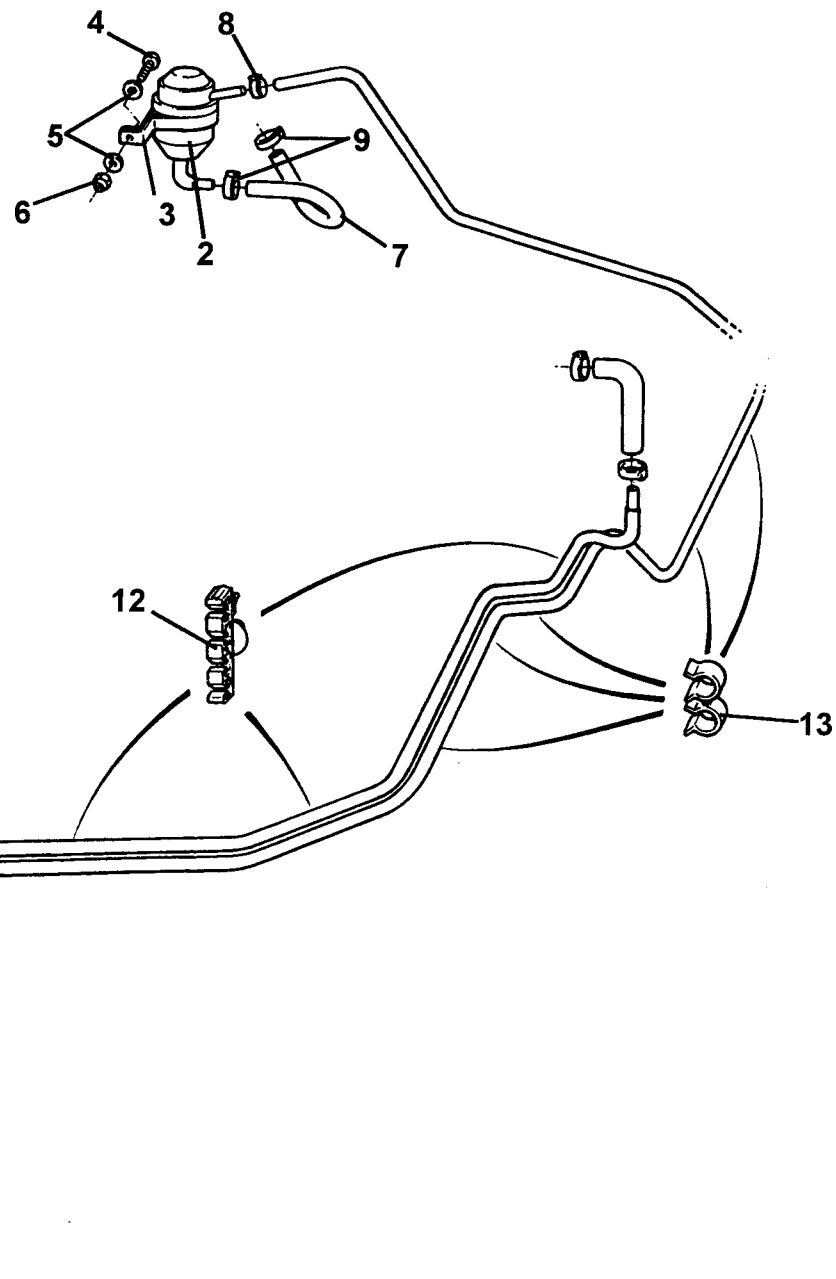

**ELISE**  
44.05

# Service Parts List


# ELISE



## Function Code 44.05 Charcoal Canister & Evaporative Loss System.

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Charcoal Canister Assembly	Includes pipes & fixings		A117L0029H	1
02	Roll Over Valve			A117L6039H	1
03	Mounting Clamp, roll over valve			A111L6012H	1
04	Setscrew, M6 x 12, roll over valve fix.			A075W1027Z	1
05	Washer, M5, roll over valve fix.			A075W4011Z	2
06	Nyloc Nut, M6, roll over valve fix			A907E6285F	1
07	Hose, roll over valve to filler neck			A117L6015H	1
08	Hose Clip			A117L6024	1
09	Hose Clip				2
10	Bracket, charcoal canister			A111L6009F	1
11	Pop Rivet, bracket to bulkhead				1
12	Clip, four pipe retention				3
13	Clip, two pipe retention				5

# ELISE

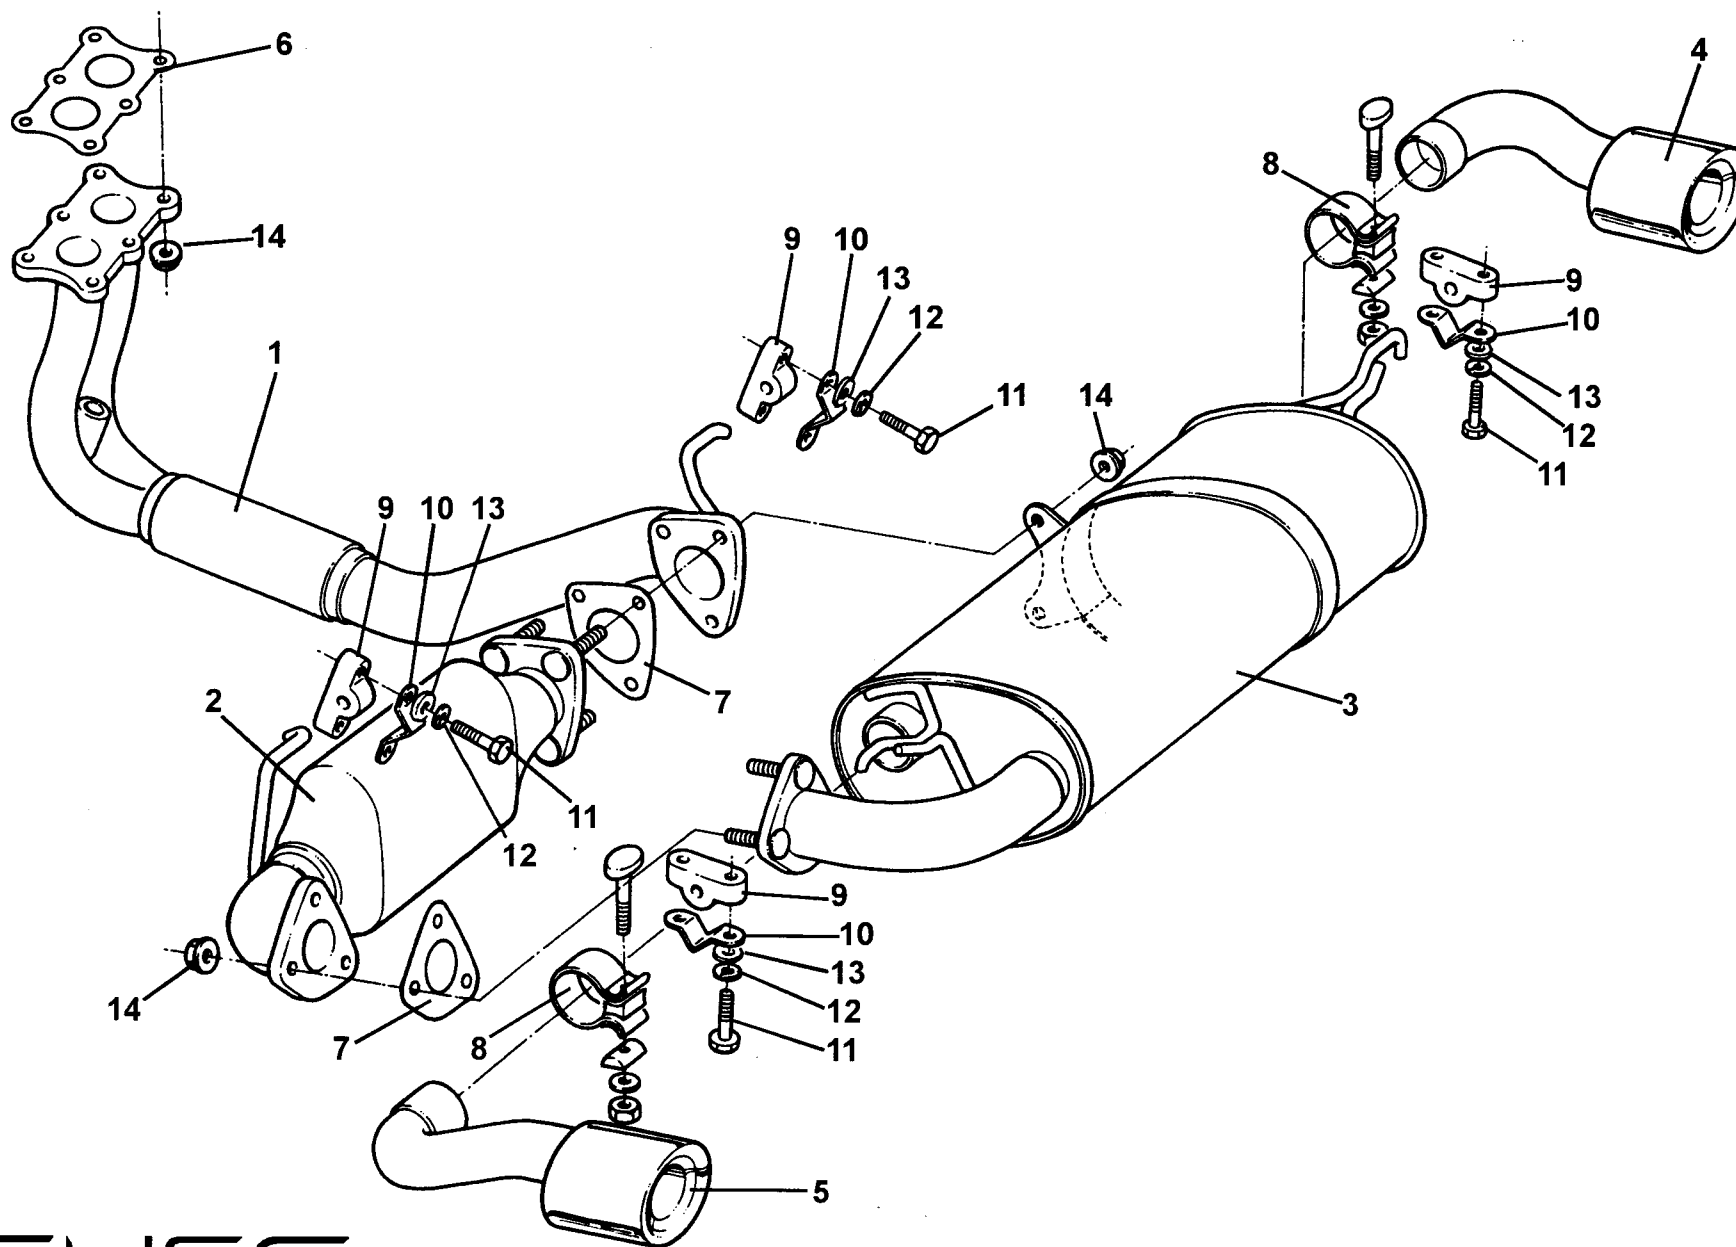


**ELISE**  
45.01

# Service Parts List **ELISE**



## Function Code 45.01 Exhaust system

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Downpipe			A117S0028F	1
02	Catalyst	Includes studs		A117S0029F	1
03	Silencer			A117S0027F	1
04	Tail Pipe, RH			A117S0032F	1
05	Tail Pipe, LH			A117S0031F	1
06	Gasket, manifold to downpipe			A117S0037F	1
07	Gasket, catalyst			A111S6014F	2
08	Clamp, 48mm, tail pipes to silencer			A111S6007F	2
09	Exhaust Mounting, silicon, blue			A111S0071F	1
10	Clip, exhaust hanger			A111S0023K	4
11	Bolt, M8 x 35, hex hd.			A075W2038D	8
12	Washer, spring, M8			A075W4036Z	8
13	Washer, flat, M8			A075W4020Z	8
14	Nut, M10 x 1.5, flg. hd.			A111W3151F	12

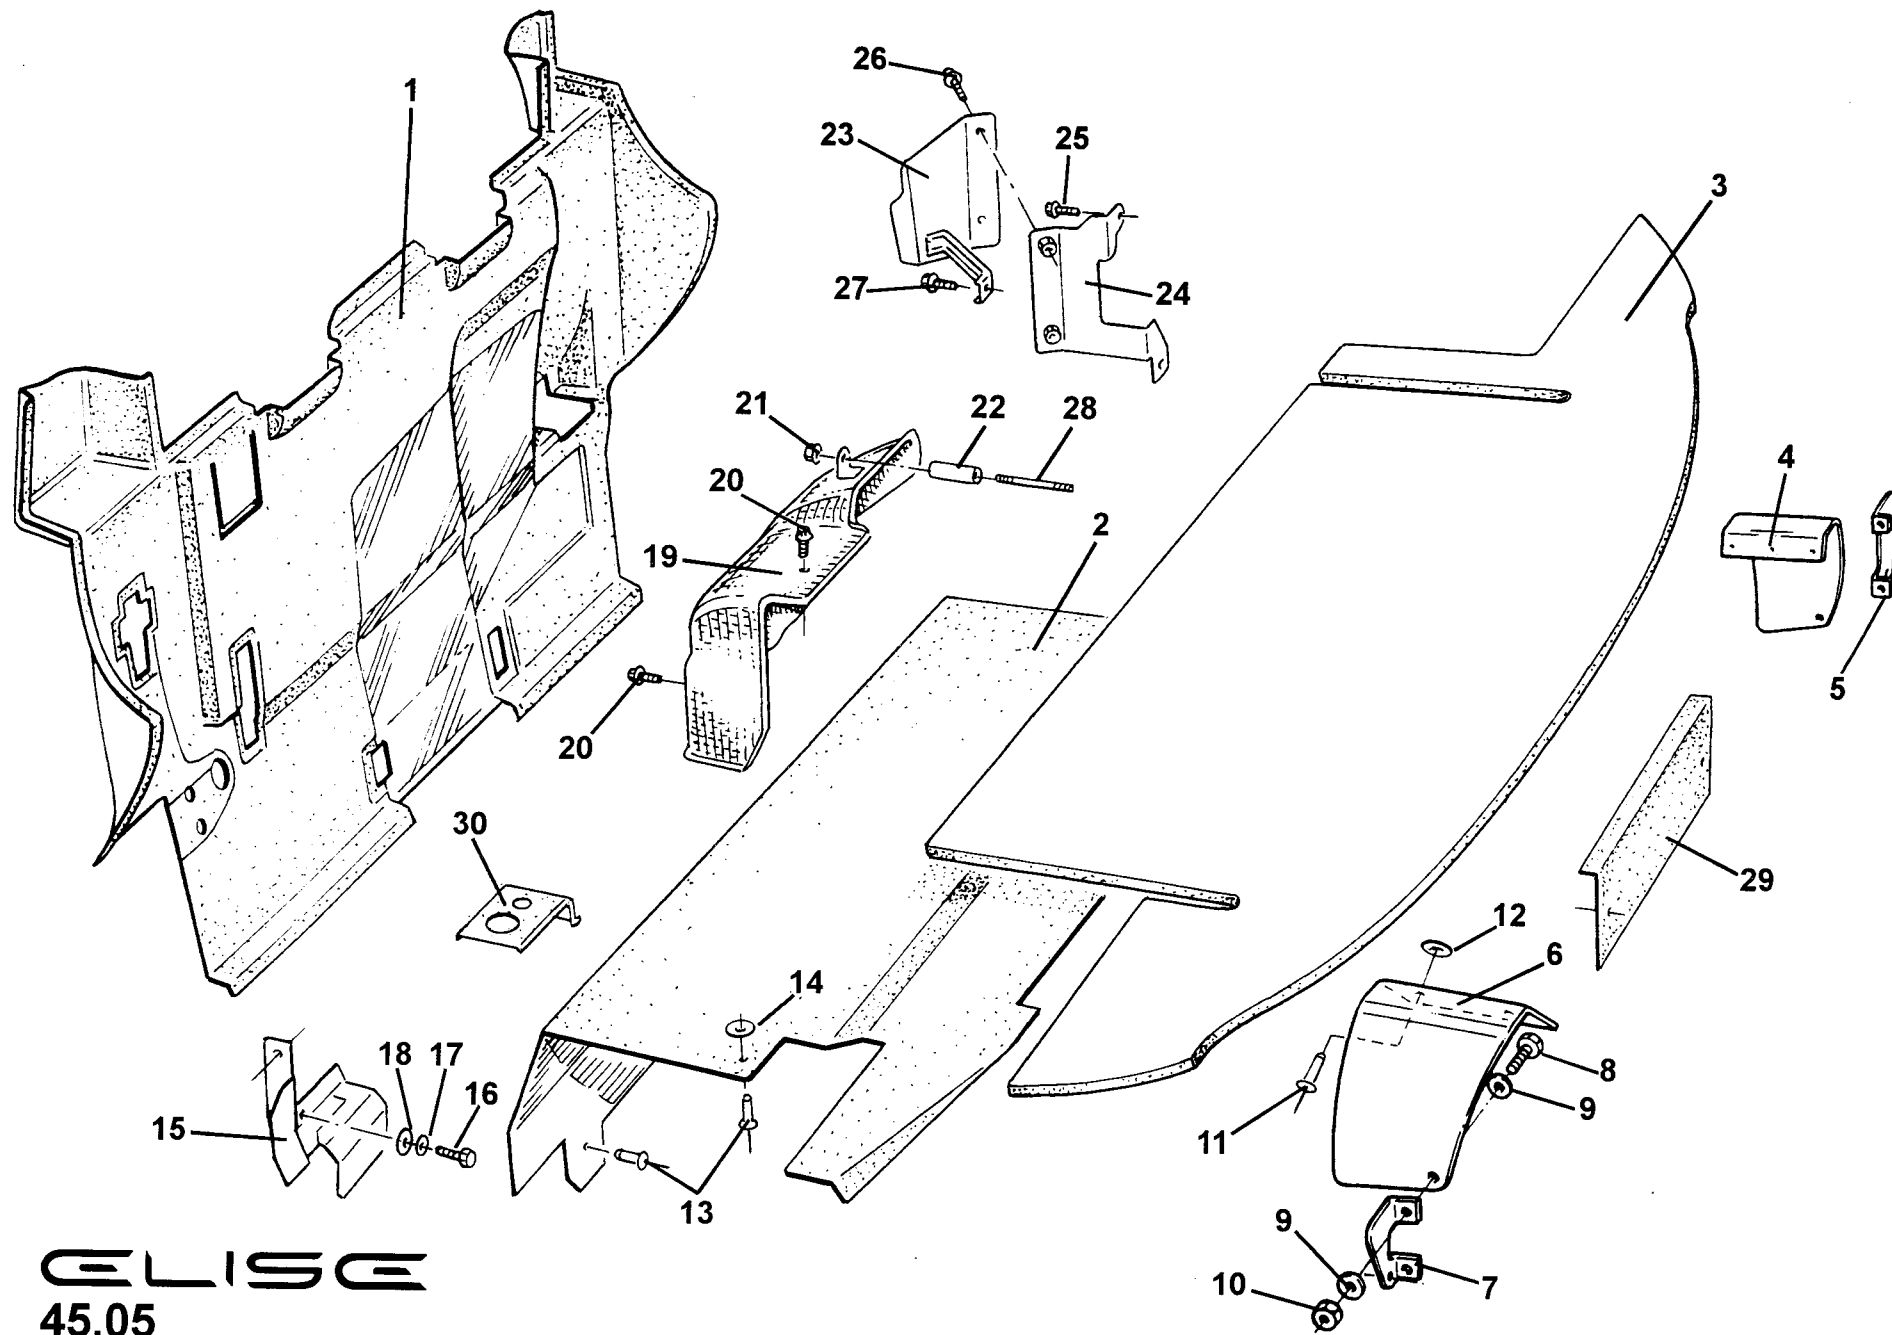

**ELISE**  
45.05




# Service Parts List **ELISE**



## Function Code 45.05 Heatshields

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Heatshield, bulkhead			B117S0023F	1
02	Heatshield, catalyst			A117U0041F	1
03	Heatshield, boot floor			A117U0254F	1
04	Heatshield, rear clamshell, RH			A117S0042F	1
05	Bracket, heatshield retention, LH	Bonded to clamshell			1
06	Heatshield, rear clamshell, LH			A117S0043F	1
07	Bracket, heatshield retention, RH	Bonded to clamshell			1
08	Screw, hex. hd., heatshield to bracket				4
09	Washer, flat				8
10	Nut				4
11	Pop Rivet, heatshield to longeron				4
12	Washer, flat, heatshield to longeron				4
13	Pop Rivet, 3/16, heatshields fix.			A089W6297F	6
14	Washer, flat				4
15	Heatshield, balljoint			A111S0074F	1
16	Screw, M6 x 12, hex. hd., heatshield to subframe			A075W1027Z	3
17	Washer, spring, M6			A075W4035S	3
18	Washer, flat, M6 x 15 x 1.5			A075W4015Z	3


**ELISE**

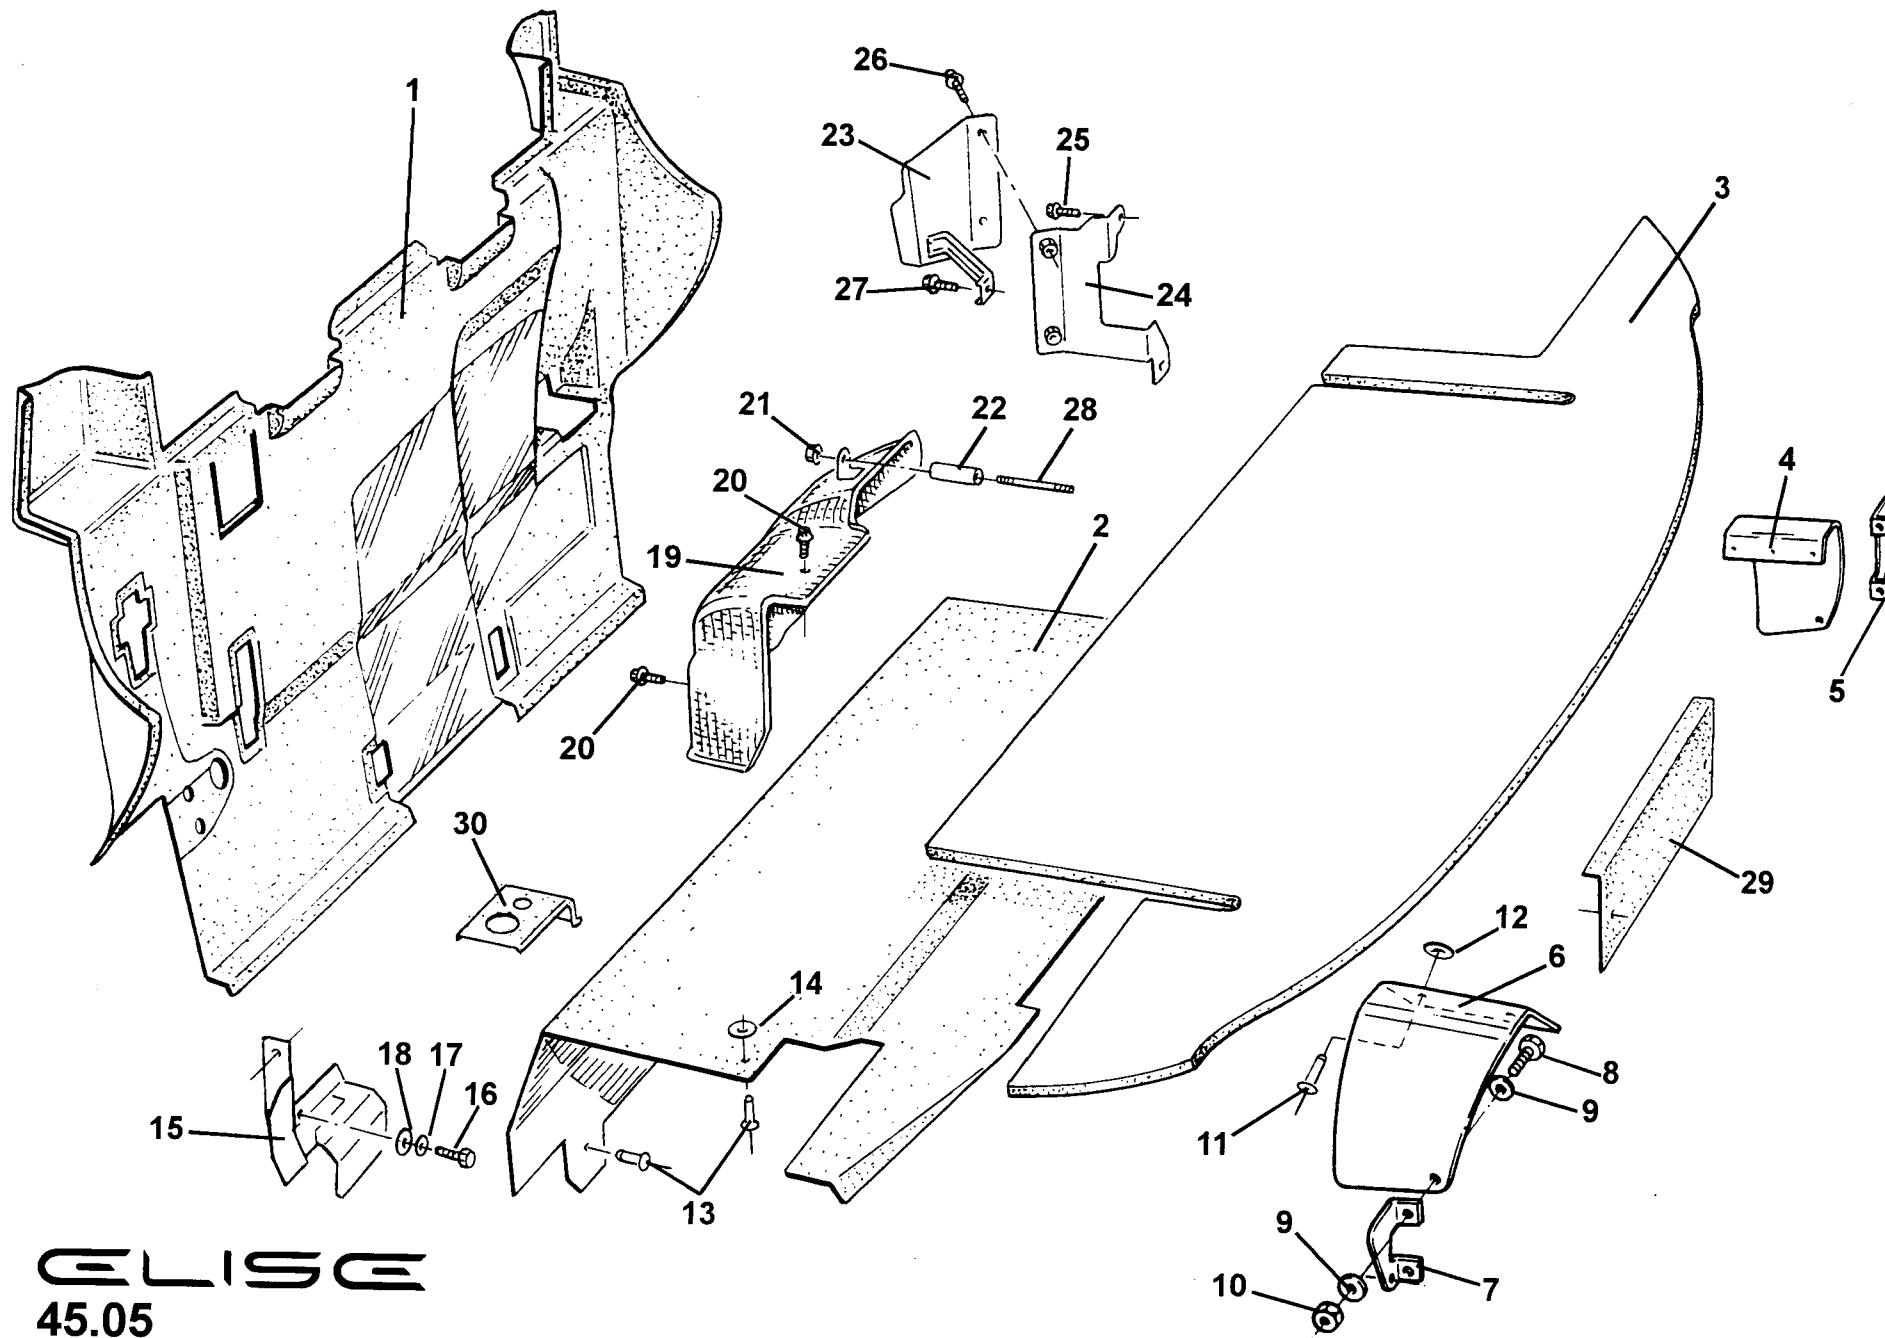

**ELISE**  
45.05

**Function Code 45.05 Heatshields**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
19	Heatshield, exhaust manifold			A117E6004F	1
20	Screw, flg. hd., heatshield to manifold				2
21	Nut., flange, M6 x 16. hex. hd., heatshield to head			A117W1169F	2
22	Spacer, exhaust heatshield support			A117E0026F	1
23	Heatshield, alternator				1
24	Bracket, heatshield to block			A111E6224F	1
25	Screw, flg. hd., bracket to block				2
26	Screw, flg. hd., heatshield to bracket				2
27	Screw, flg. hd., heatshield to block				1
28	Stud, heatshield to head			A117E6041S	1
29	Heatshield, clamshell support plate			A117U0041F	1
30	Heatshield/NVH Pad, fuel tank to chassis aperture	Fits around filler & breather pipes		A117S0046F	1

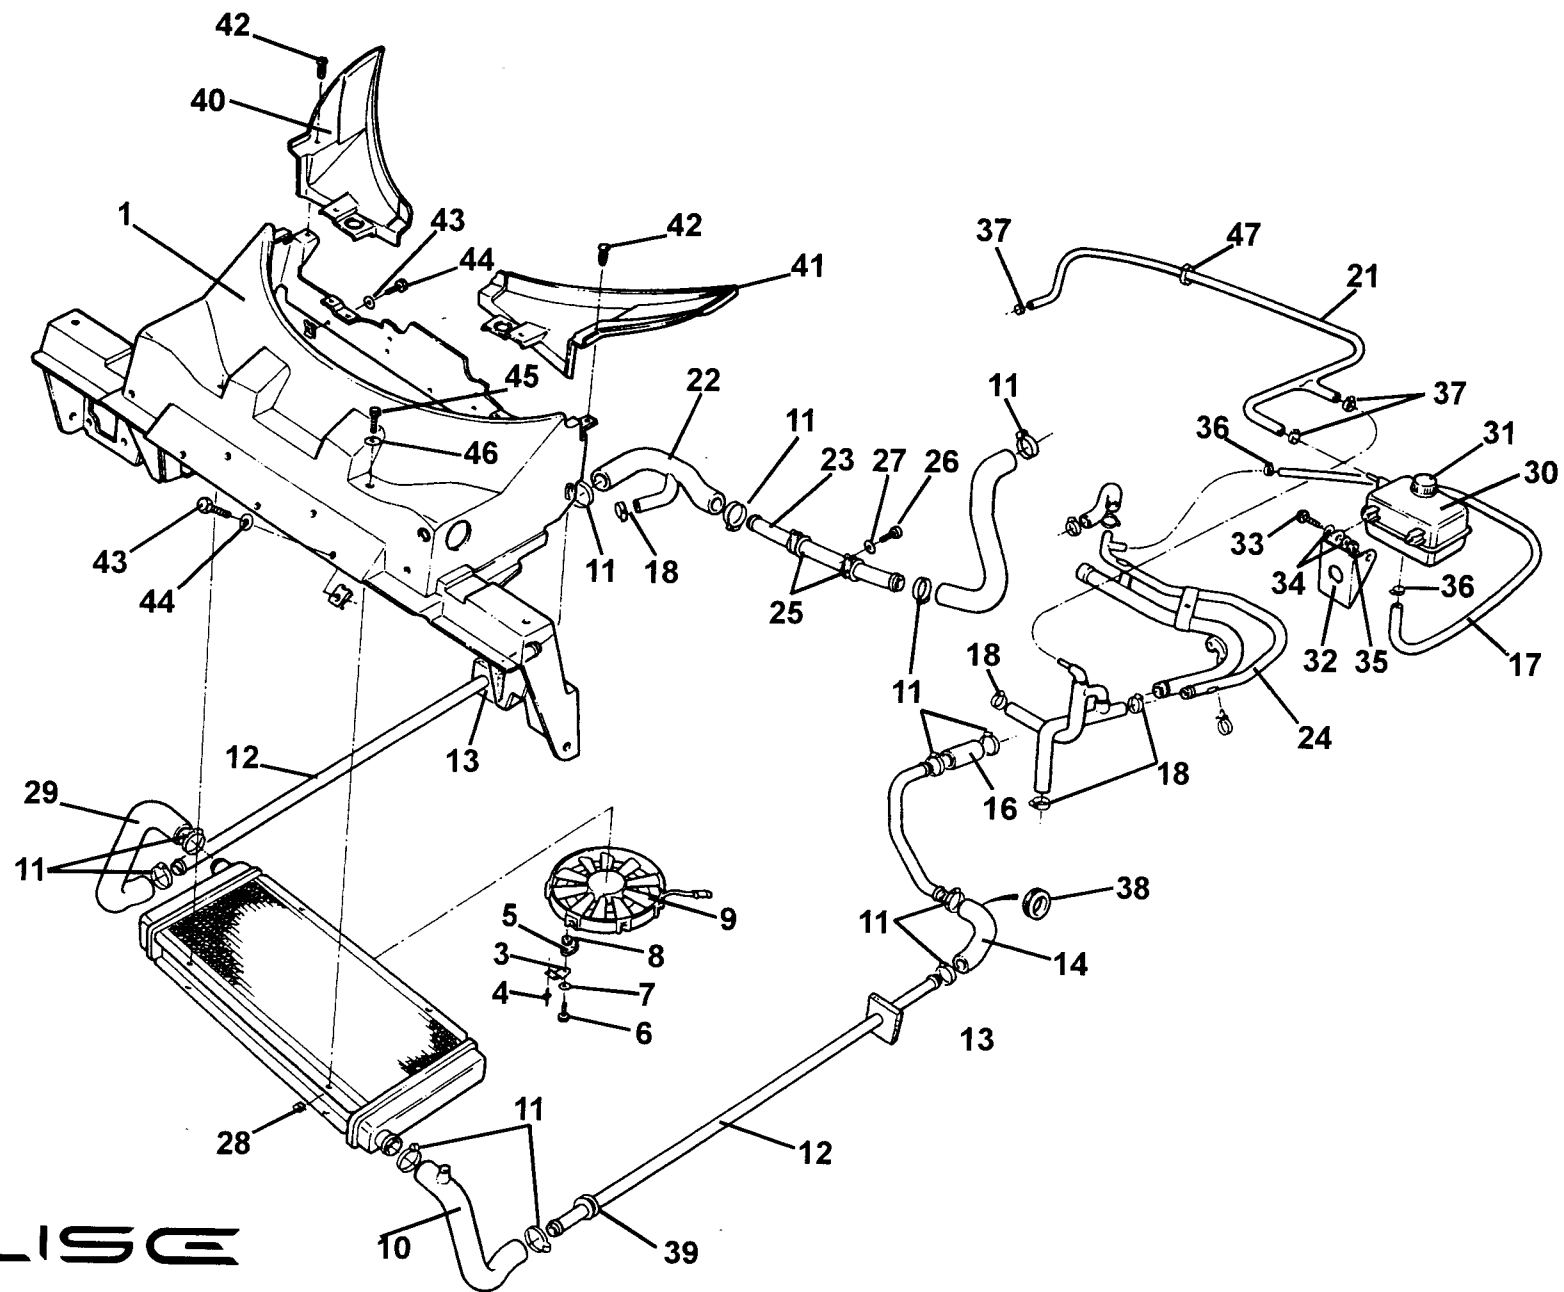

**ELISE**  
46.01


# Service Parts List **ELISE**



## Function Code 46.01 Engine Cooling System & Fan

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Radiator Housing			A117B0151F	1
02	Radiator			A111K0021F	1
03	Bracket, radiator fan mtg.			A111K0001F	4
04	Pop Rivet			A075W6087Z	8
05	Bracket, radiator fan mtg.			A111K6003F	4
06	Setscrew, M6 x 16			A075W1028Z	4
07	Washer, M6			A075W4017Z	4
08	Nyloc Nut, M6			A907E6285F	4
09	Radiator Cooling Fan			A111K6002F	1
10	Hose, pipe to radiator, LH	Includes bleed valve		A111K0007F	1
11	Hose Clip, 25-40mm			A075M6145F	12
12	Pipe, chassis water rail			A111K0041F	2
13	Seal, pipe to chassis			A111A0033F	4
14	Hose, engine inlet			A111K0016F	1
15	Pipe, engine inlet			A111K0017F	1
16	Hose, engine inlet			A111K0015F	1
17	Hose, header tank to engine			A079P4056F	1
18	Hose Clip, 16-25mm			A079K6018F	11


**ELISE**

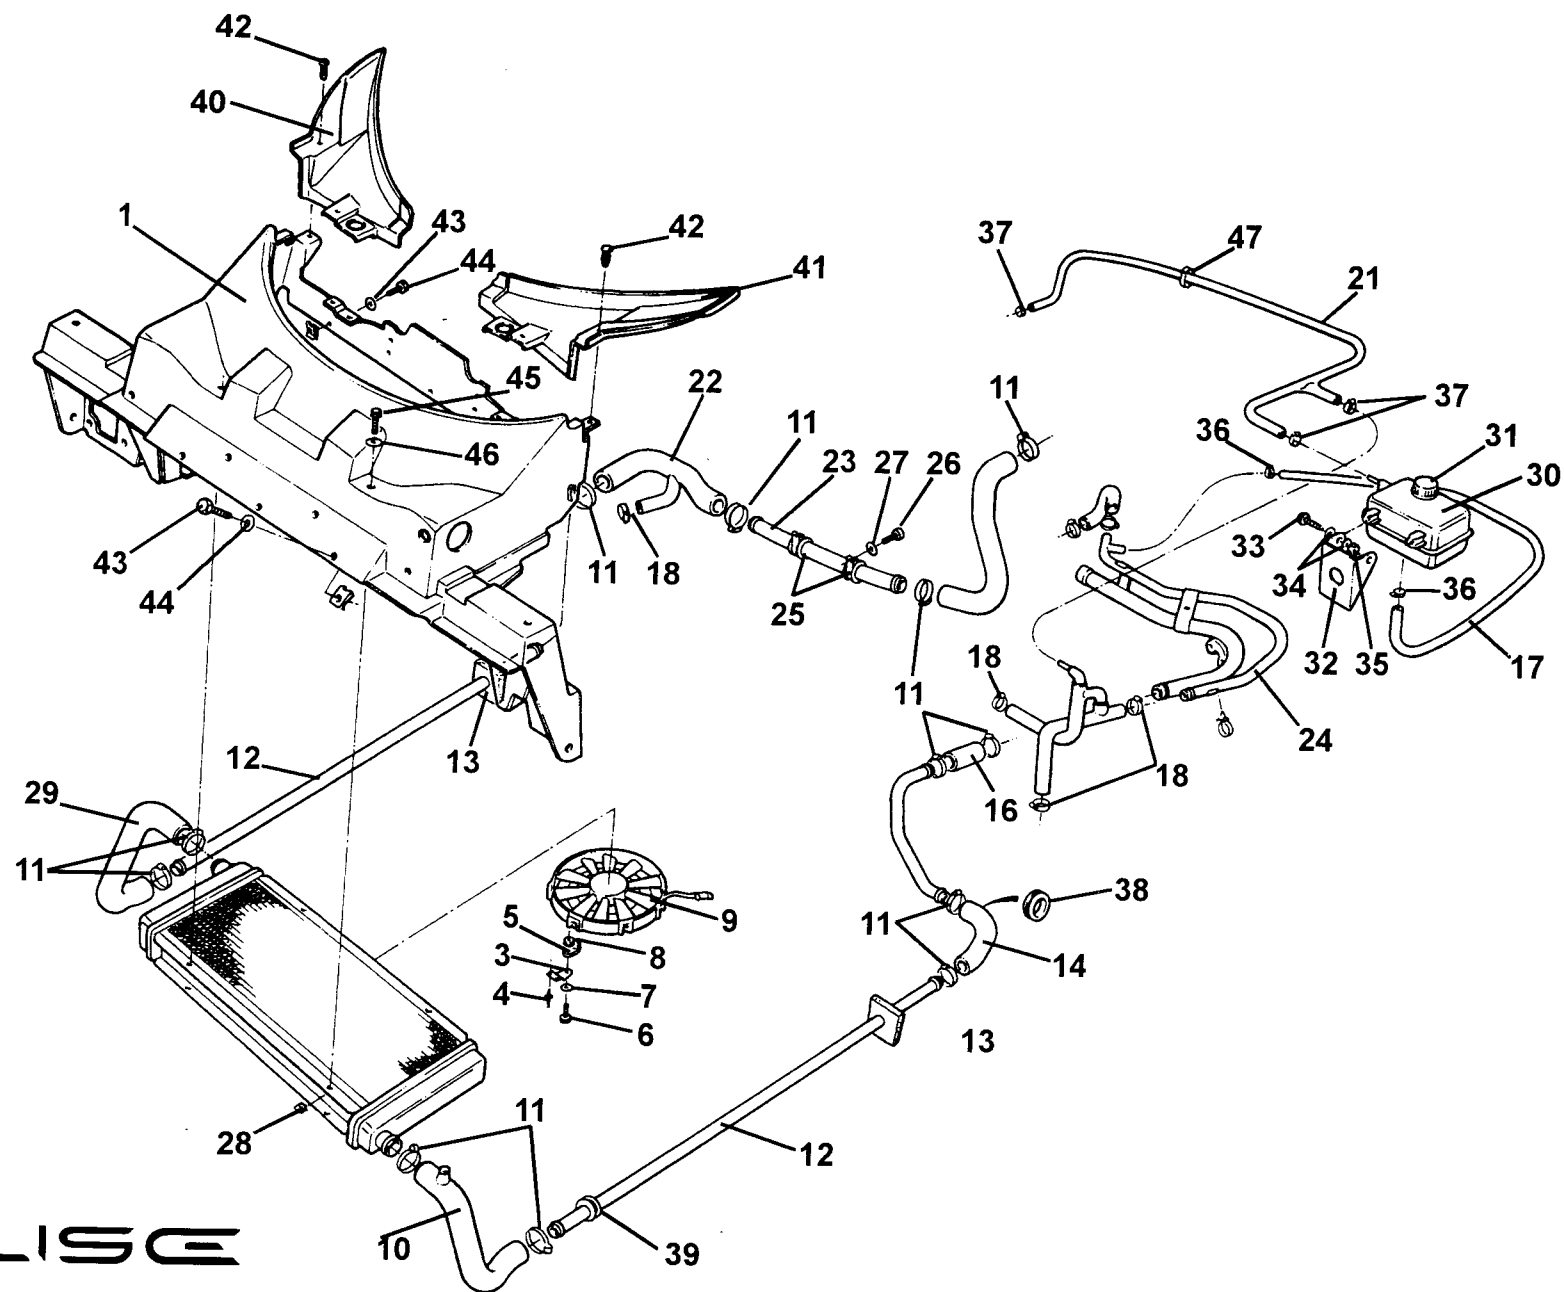

**ELISE**  
46.01

**Function Code 46.01 Engine Cooling System & Fan**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
19	Hose, coolant bypass heater return			A111K0004K	1
20	Hose, engine water outlet			C111K0011F	1
21	Hose, header tank bleed			A111K0040F	1
22	Hose, engine outlet/heater feed			C111K0002F	1
23	Pipe, engine outlet			B111K0012F	1
24	Coolant Pipe, engine return	Mounted on engine		A111E6229S	1
25	'P' Clip			A111W6573F	1
26	Setscrew, M8 x 25			A075W1039Z	1
27	Washer, M8			A075W4020Z	3
28	Cage Nut, rad. to housing			A100W6362F	4
29	Hose, pipe to radiator, RH			A111K0008F	1
30	Header Tank			A111K6004F	1
31	Pressure Cap			A111K6001F	1
32	Bracket, header tank mounting			C111K0003F	1
33	Setscrew, M6 x 25 S/S			A918W115F	2
34	Washer, flat, M6			A075W4015Z	4
35	Nyloc Nut, M6			A907E6285F	2
36	Hose Clip, 20-32mm			B907E6085F	2
37	Hose Clip, 8-16mm			A082L6042F	3
38	Grommet, hose through chassis rear			A082K6022F	2
39	Grommet, pipe through chassis front			A111K6006F	2

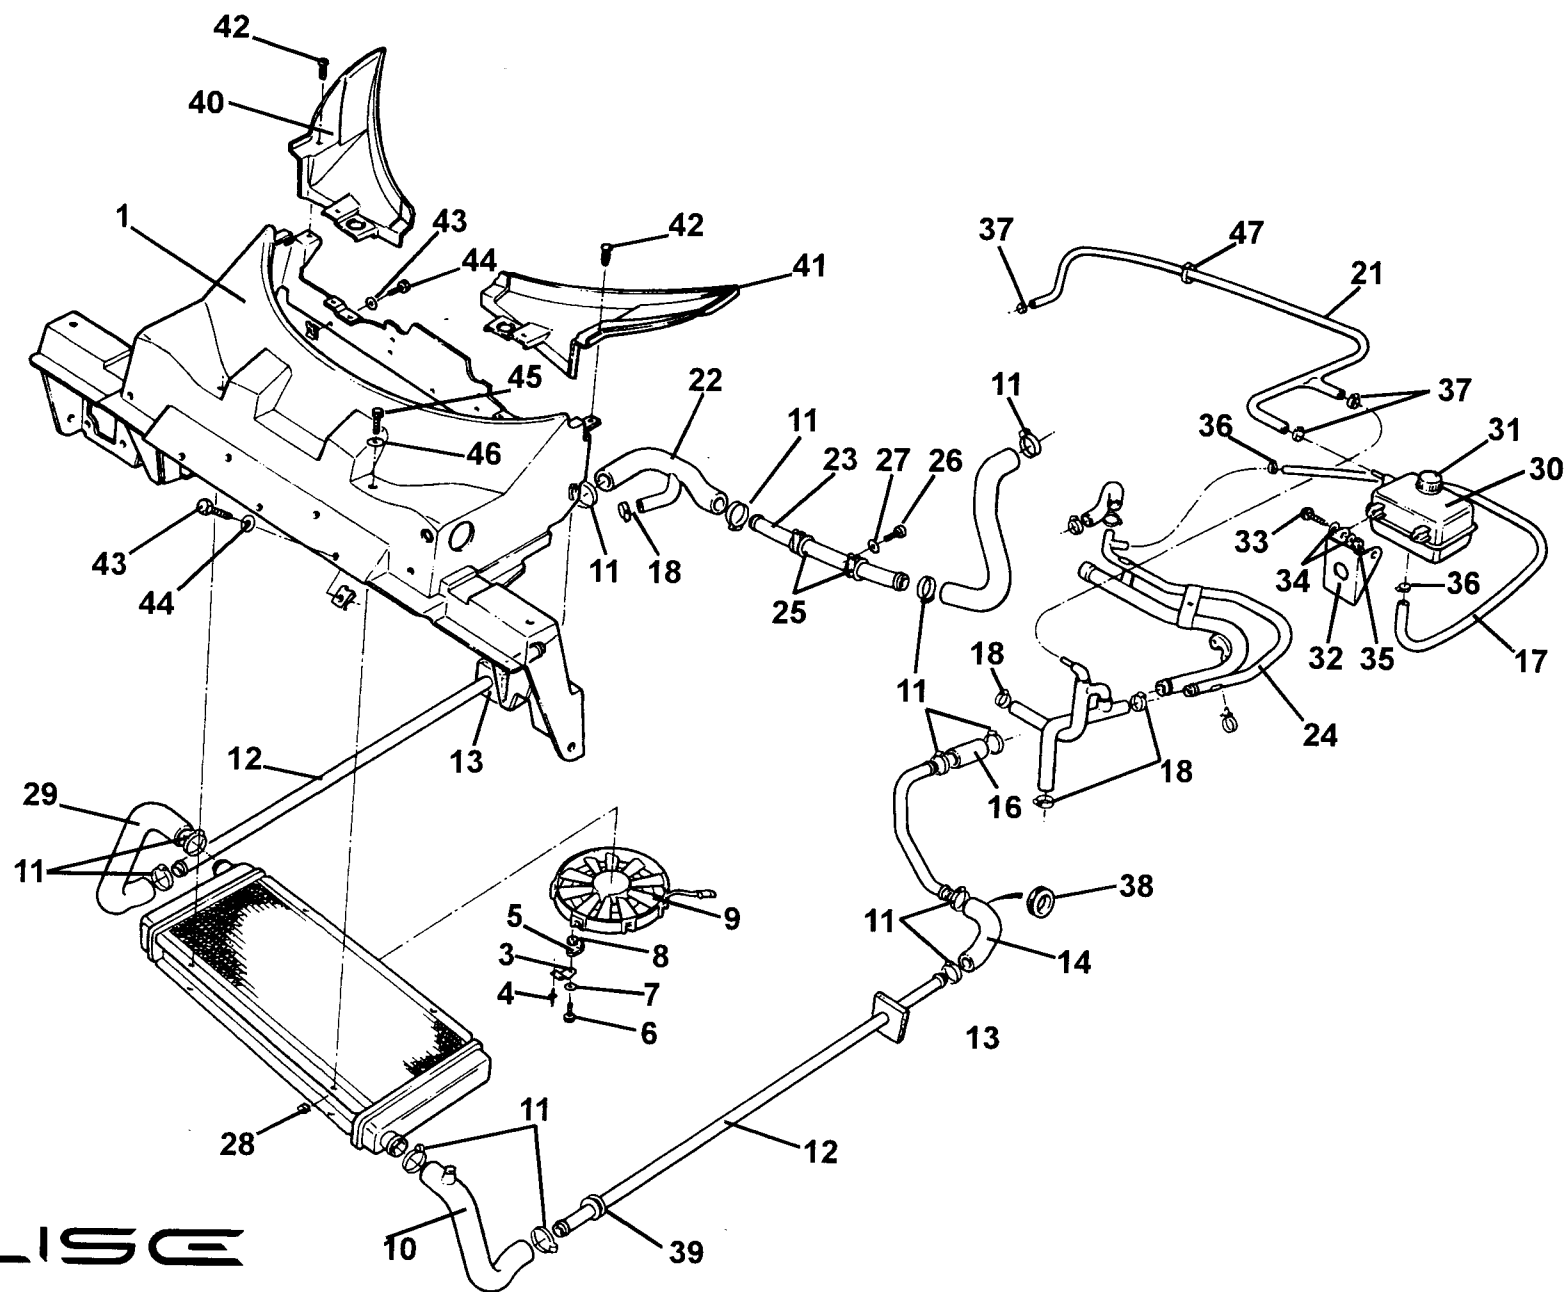


**ELISE**  
46.01



**Function Code 46.01 Engine Cooling System & Fan**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
40	Shroud.radiator, RH			A117B0242F	1
41	Shroud.radiator, LH			A117B0241F	1
42	Plastic Fastener, fence fix.			A111W6535F	5
43	Screw, M5 x 16, pozi., housing to crash structure			A082W5107F	6
44	Washer, flat, 0.75"			A075W4009Z	6
45	Setscrew, M6 x 16, hex. hd., rad. to housing			A075W1028Z	4
46	Washer, flat, M6 x 25 x 1.4			A075W4017Z	4
47	Clip			A082W6587F	2
48	Antifreeze	Not illustrated		A082K6063V	4 Ltr

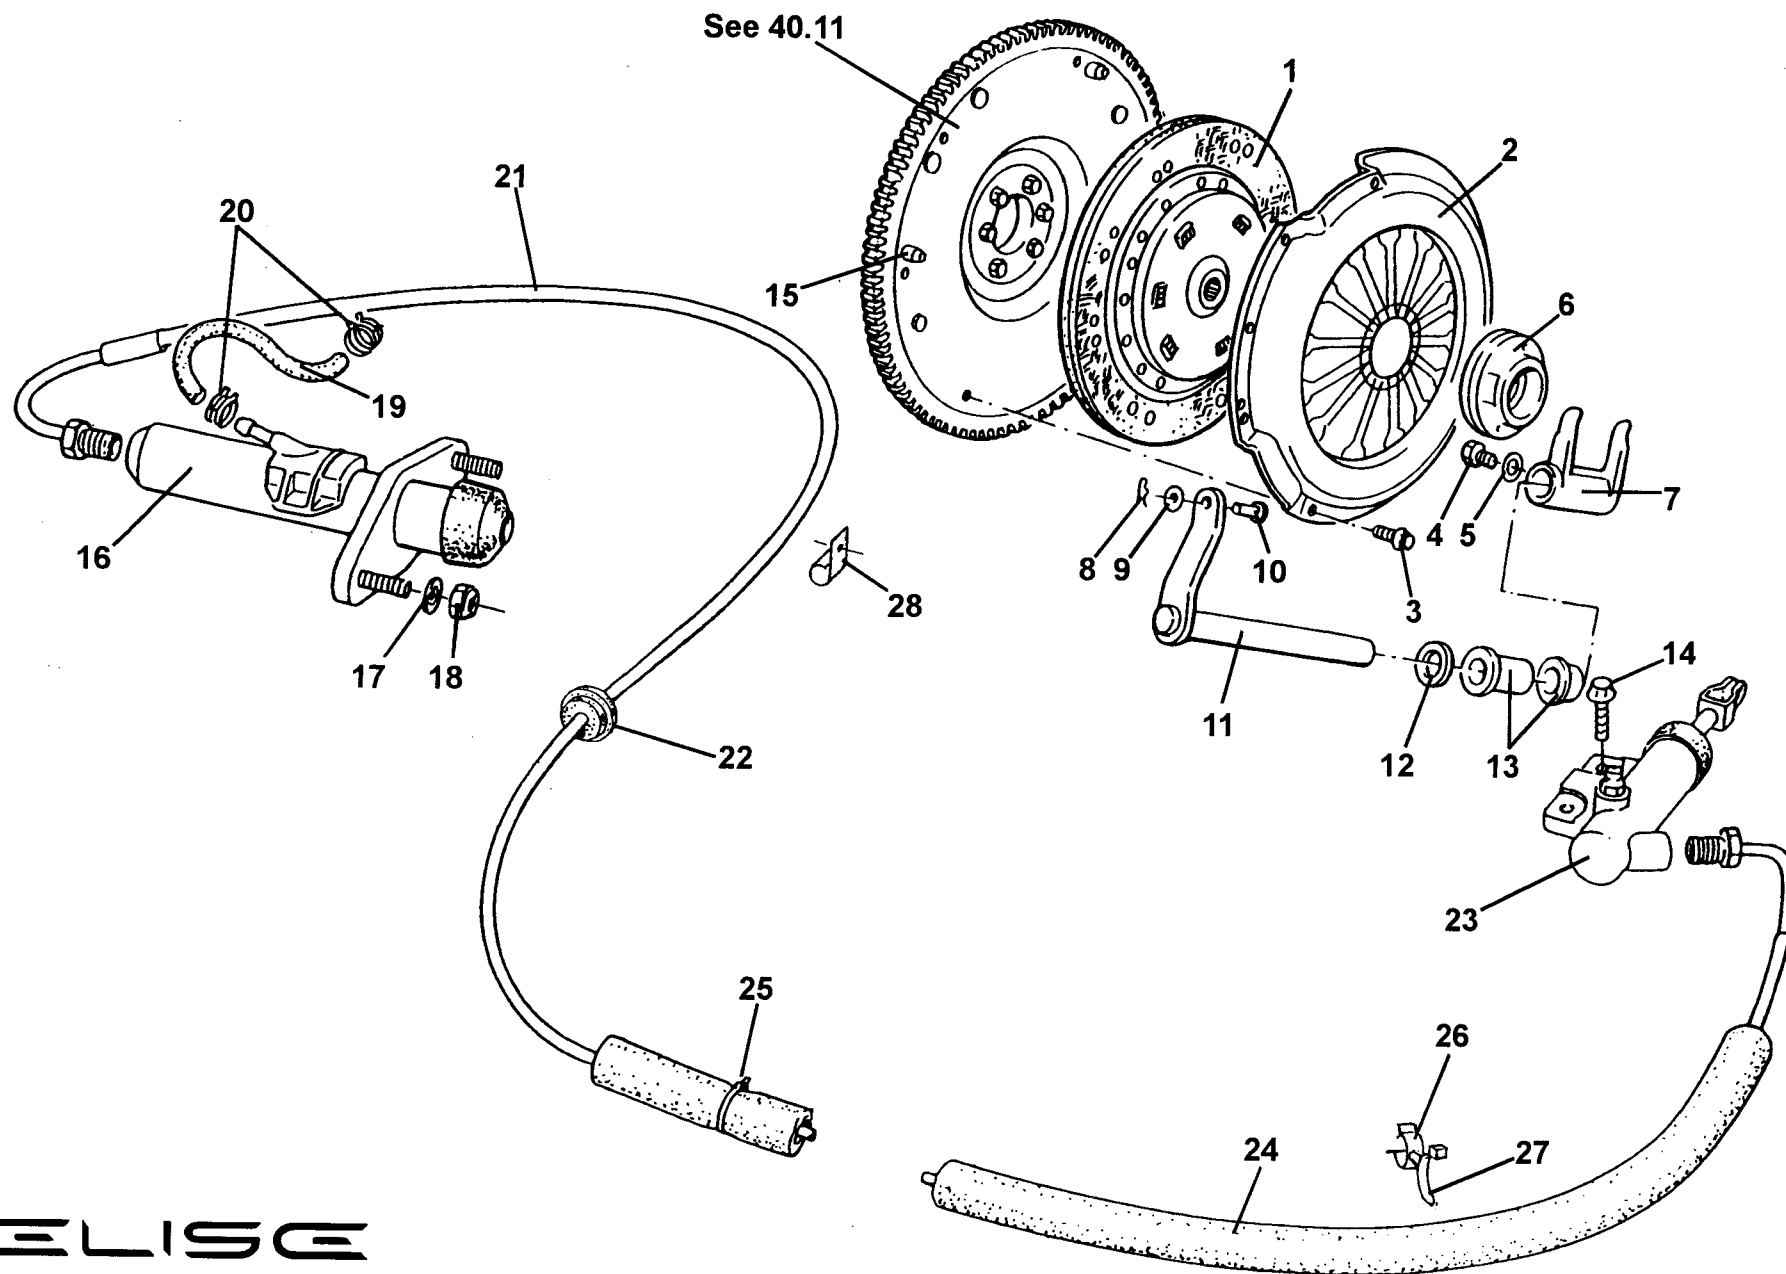

**ELISE**  
47.01


# Service Parts List **ELISE**



## Function Code 47.01 Clutch & Release Mechanism

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Clutch Driven Plate			A111Q6005S	1
02	Clutch Cover			A111Q6004S	1
03	Bolt, clutch to flywheel			A111Q6010S	1
04	Bolt, release fork to shaft			A111Q6013S	1
05	Washer, flat			A111Q6014S	1
06	Clutch Release Bearing			A111Q6007S	1
07	Clutch Fork			A111Q6011S	1
08	'R' Clip			A082W6348F	1
09	Washer, spring, fork to shaft			A111Q6014S	1
10	Clevis Pin			TBA	1
11	Lever/Shaft, clutch release fork			A111Q6012S	1
12	Seal, clutch shaft			A111F6031S	1
13	Bush Kit, Clutch shaft			A111F6032S	1
14	Screw, M10 x 22, slave cylinder to mtg. bracket			A111E6140S	2
15	Dowel, clutch to flywheel			A111Q6009S	3
16	Clutch Master Cylinder			A111Q6001F	1
17	Washer, M8 x 16.6, master cylinder to pedal box			A075W4020F	2
18	Nyloc Nut, M8, master cylinder to pedal box			A111W3126F	2


**ELISE**

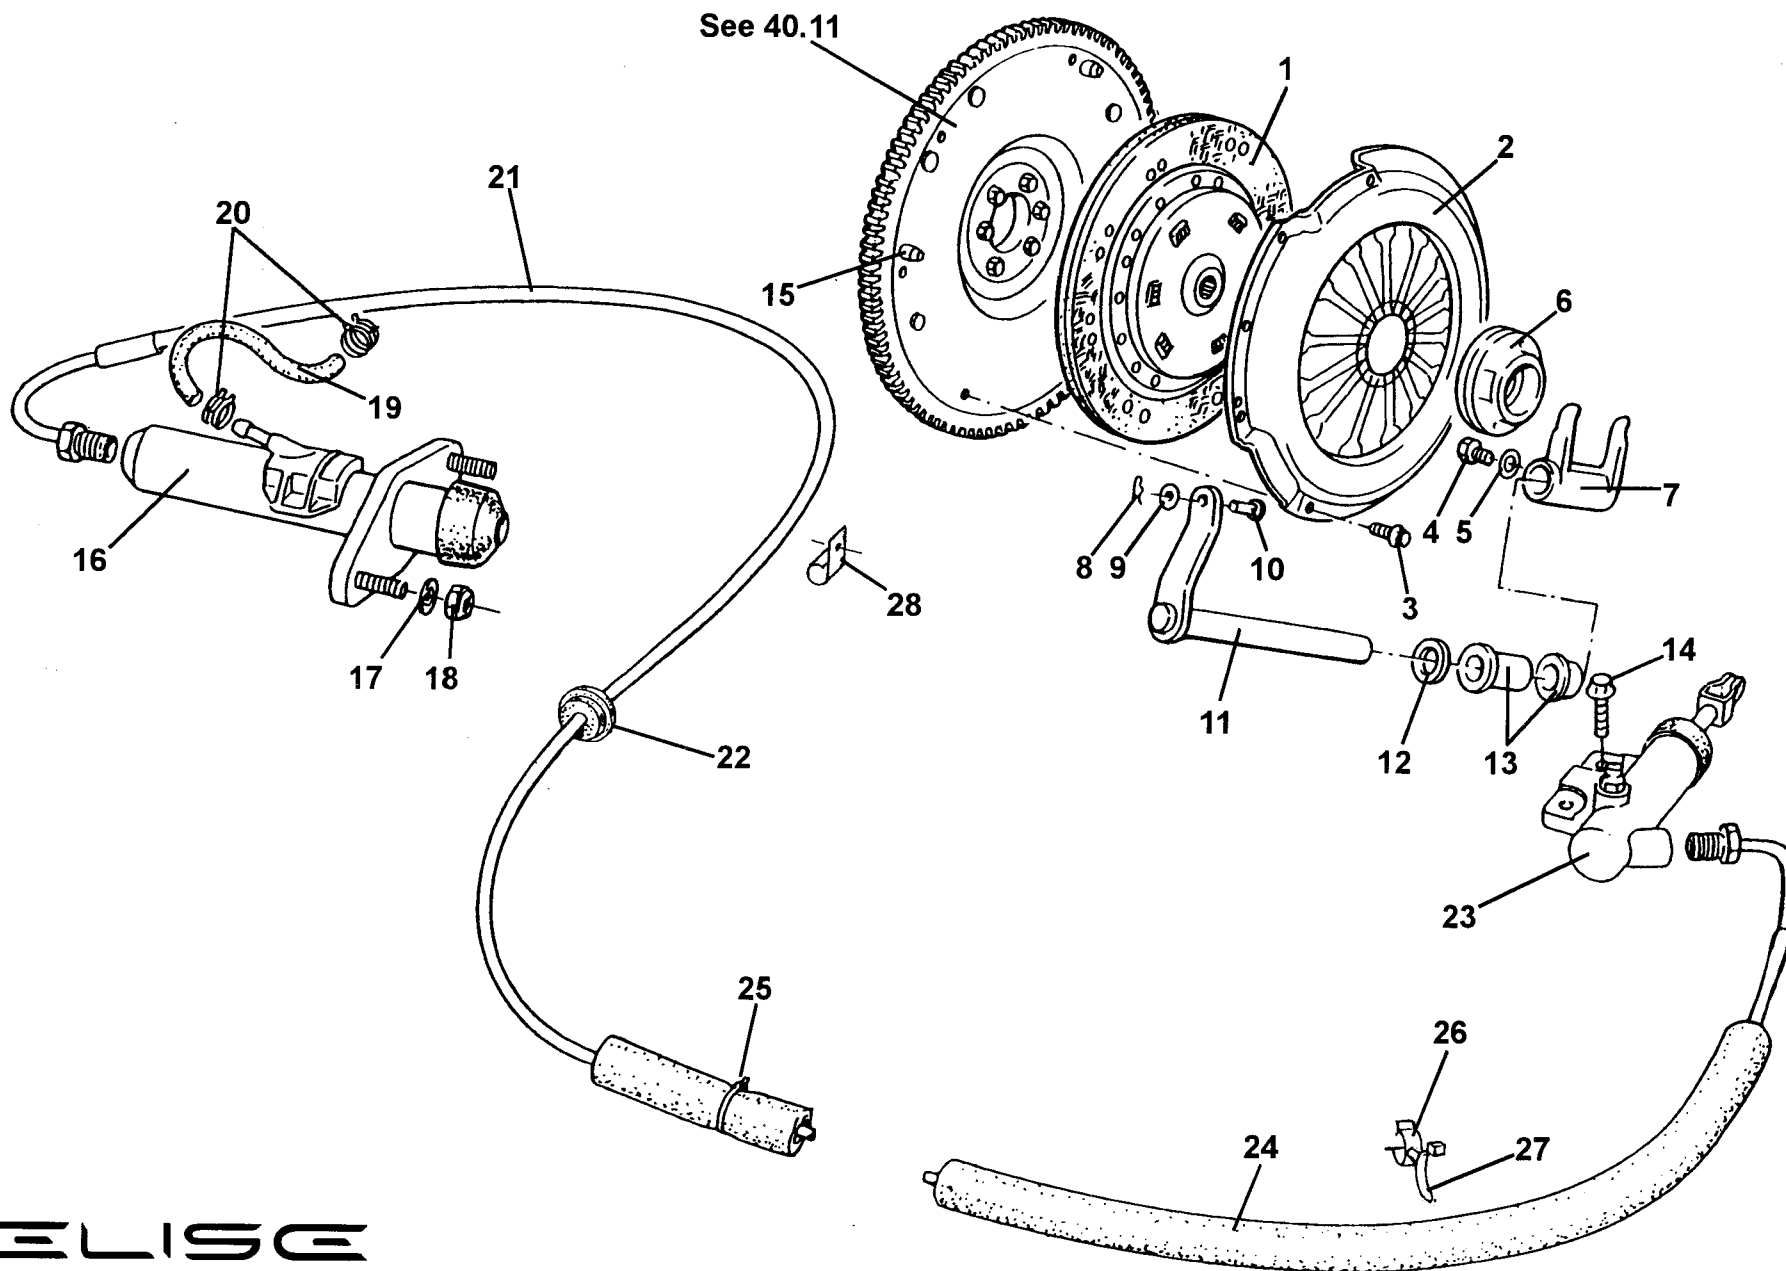

ELISE  
47.01

**Function Code 47.01 Clutch & Release Mechanism**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
19	Hose, reservoir to clutch master cylinder			C111J0085F	1
20	Clip, hose to reservoir to cylinder			A079W6189F	2
21	Pipe Assembly, clutch			A111Q0005S	1
22	Grommet, clutch pipe to bulkhead			A075U6043F	1
23	Clutch Slave Cylinder			A111Q6006S	1
24	Tube, anti rattle clutch pipe through body side			A111J0084K	1
25	Cable Tie, tube to clutch pipe			A075W6038Z	4
26	Swivel Clip, cable tie fixing			A082W6587F	1
27	Cable Tie, swivel clip type			A082W6324F	1
28	'P' Clip, pipe fixing		RHD	A075W6228F	1
29	Repair Kit, slave cylinder			A111Q6008S	1

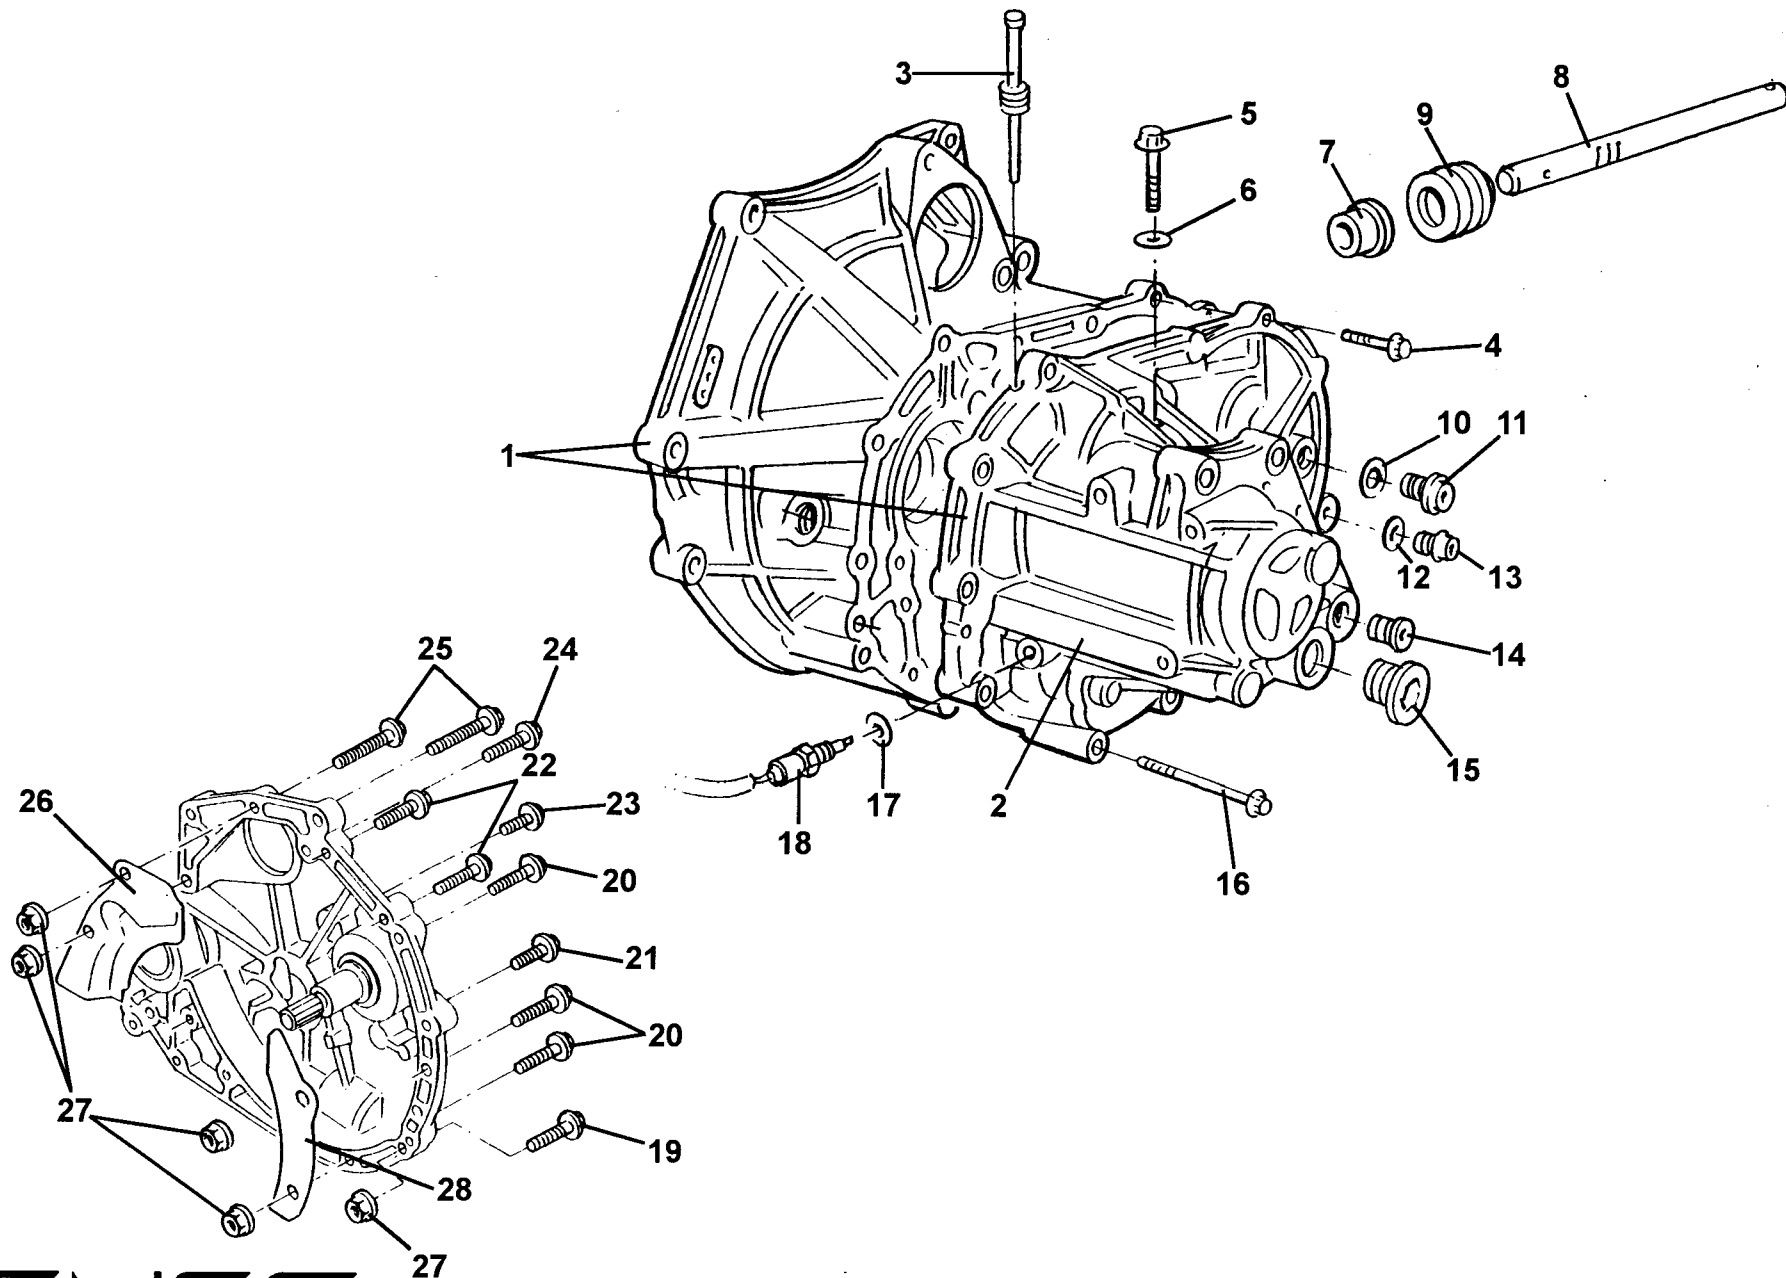


**ELISE**  
47.03

# Service Parts List **ELISE**



## Function Code 47.03 Transmission Assembly

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Transmission Assy., close ratio, 4.2 FD			A111F0034S	1
02	Transmission Main Casing			A111F6037S	1
03	Breather Pipe			A111E6169S	1
04	Bolt, M10 x 42, transmission to clutch housing			A111F6161S	12
05	Bolt, flg. hd., reverse idler shaft fixing			A111F6162S	1
06	Washer, reverse idler shaft fixing			A111F6163S	1
07	Oil Seal, Gearshift Rod			A111F6023S	1
08	Rod, Gearshift			A111F6033S	1
09	Gaiter, gear shift rod			A111F6180S	1
10	Washer, filler/level plug			A111F6166S	1
11	Plug, filler/level			A111F6165S	1
12	Washer, drain plug			A111E6035S	1
13	Drain Plug			A111F6026S	1
14	Sealing Plug, rear of transmission case			A111F6168S	1
15	Plug, access to output shaft bearing circlip, 32 mm			A111F6167S	1
16	Bolt, M10 x 92 , transmission case to clutch housing			A111F6164S	2
17	Sealing Washer, reverse switch			A111E6035S	1
18	Reverse Lamp Switch			A111F6021S	1

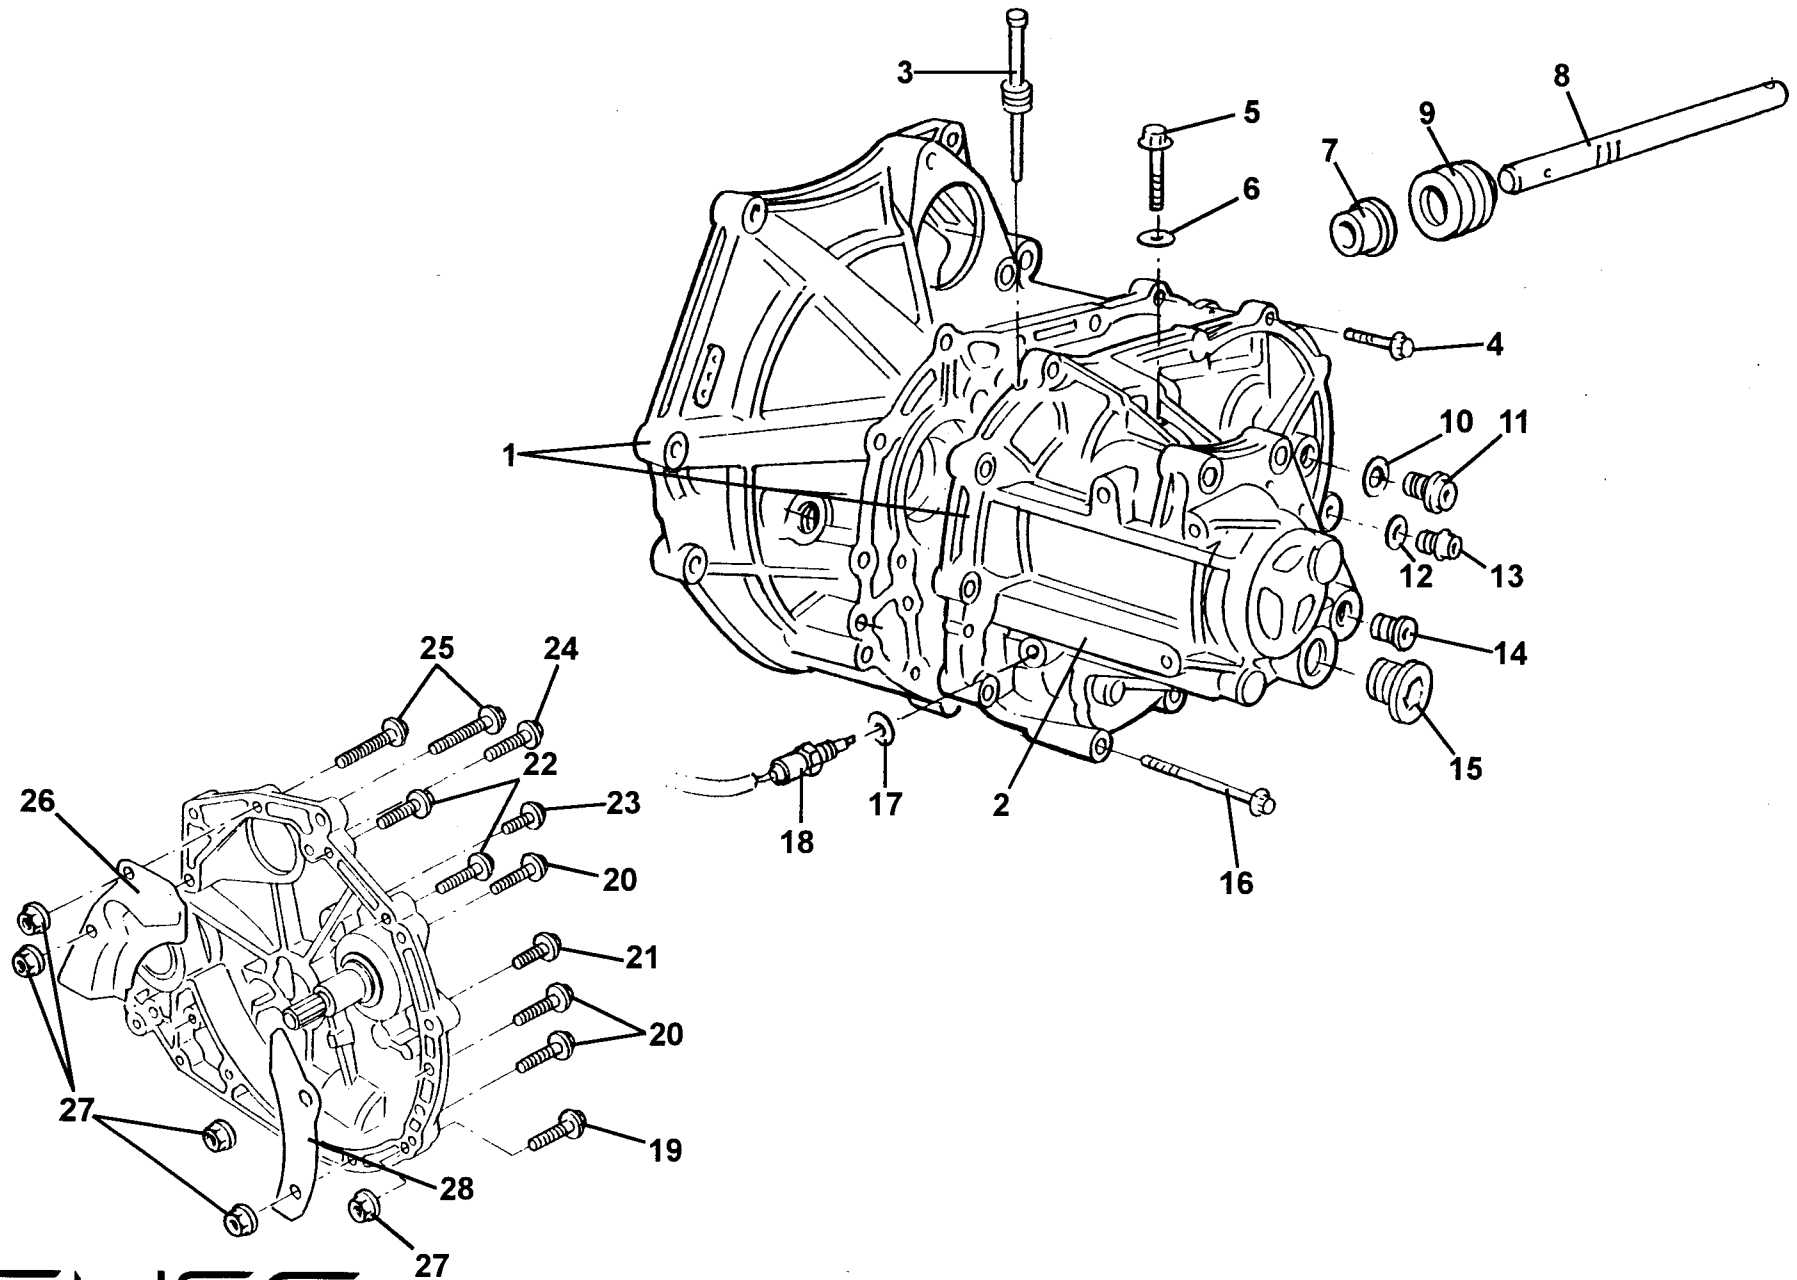


**ELISE**

**47.03**



**Function Code 47.03 Transmission Assembly**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
19	Bolt, M12 x 80, transmission to engine			A111F6170S	1
20	Bolt, M12 x 50, transmission to engine			A111F6171S	3
21	Screw, M10 x 35, transmission to engine			A111F6172S	1
22	Bolt, M12 x 30, transmission to engine			A111F6181S	2
23	Screw, M10 x 30, transmission to engine			A111F6174S	1
24	Bolt, M12 x 65, transmission to engine			A111F6175S	1
25	Bolt, M12 x 90, transmission to engine			A111F6176S	2
26	Closure pate, rear			A111F6177S	1
27	Nut, M12, front/rear closure plates fixing			A111F6178S	5
28	Closure Plate, front			A111F6179S	1
29	Magnet, swarf attraction, transmission case	Not illustrated		A111F6100S	1
30	Dowel, clutch housing to gearbox	Not illustrated		A111F6197S	2
31	Gearbox Oil, Texaco MTF 94	Not illustrated		A111F6017V	2.1lit

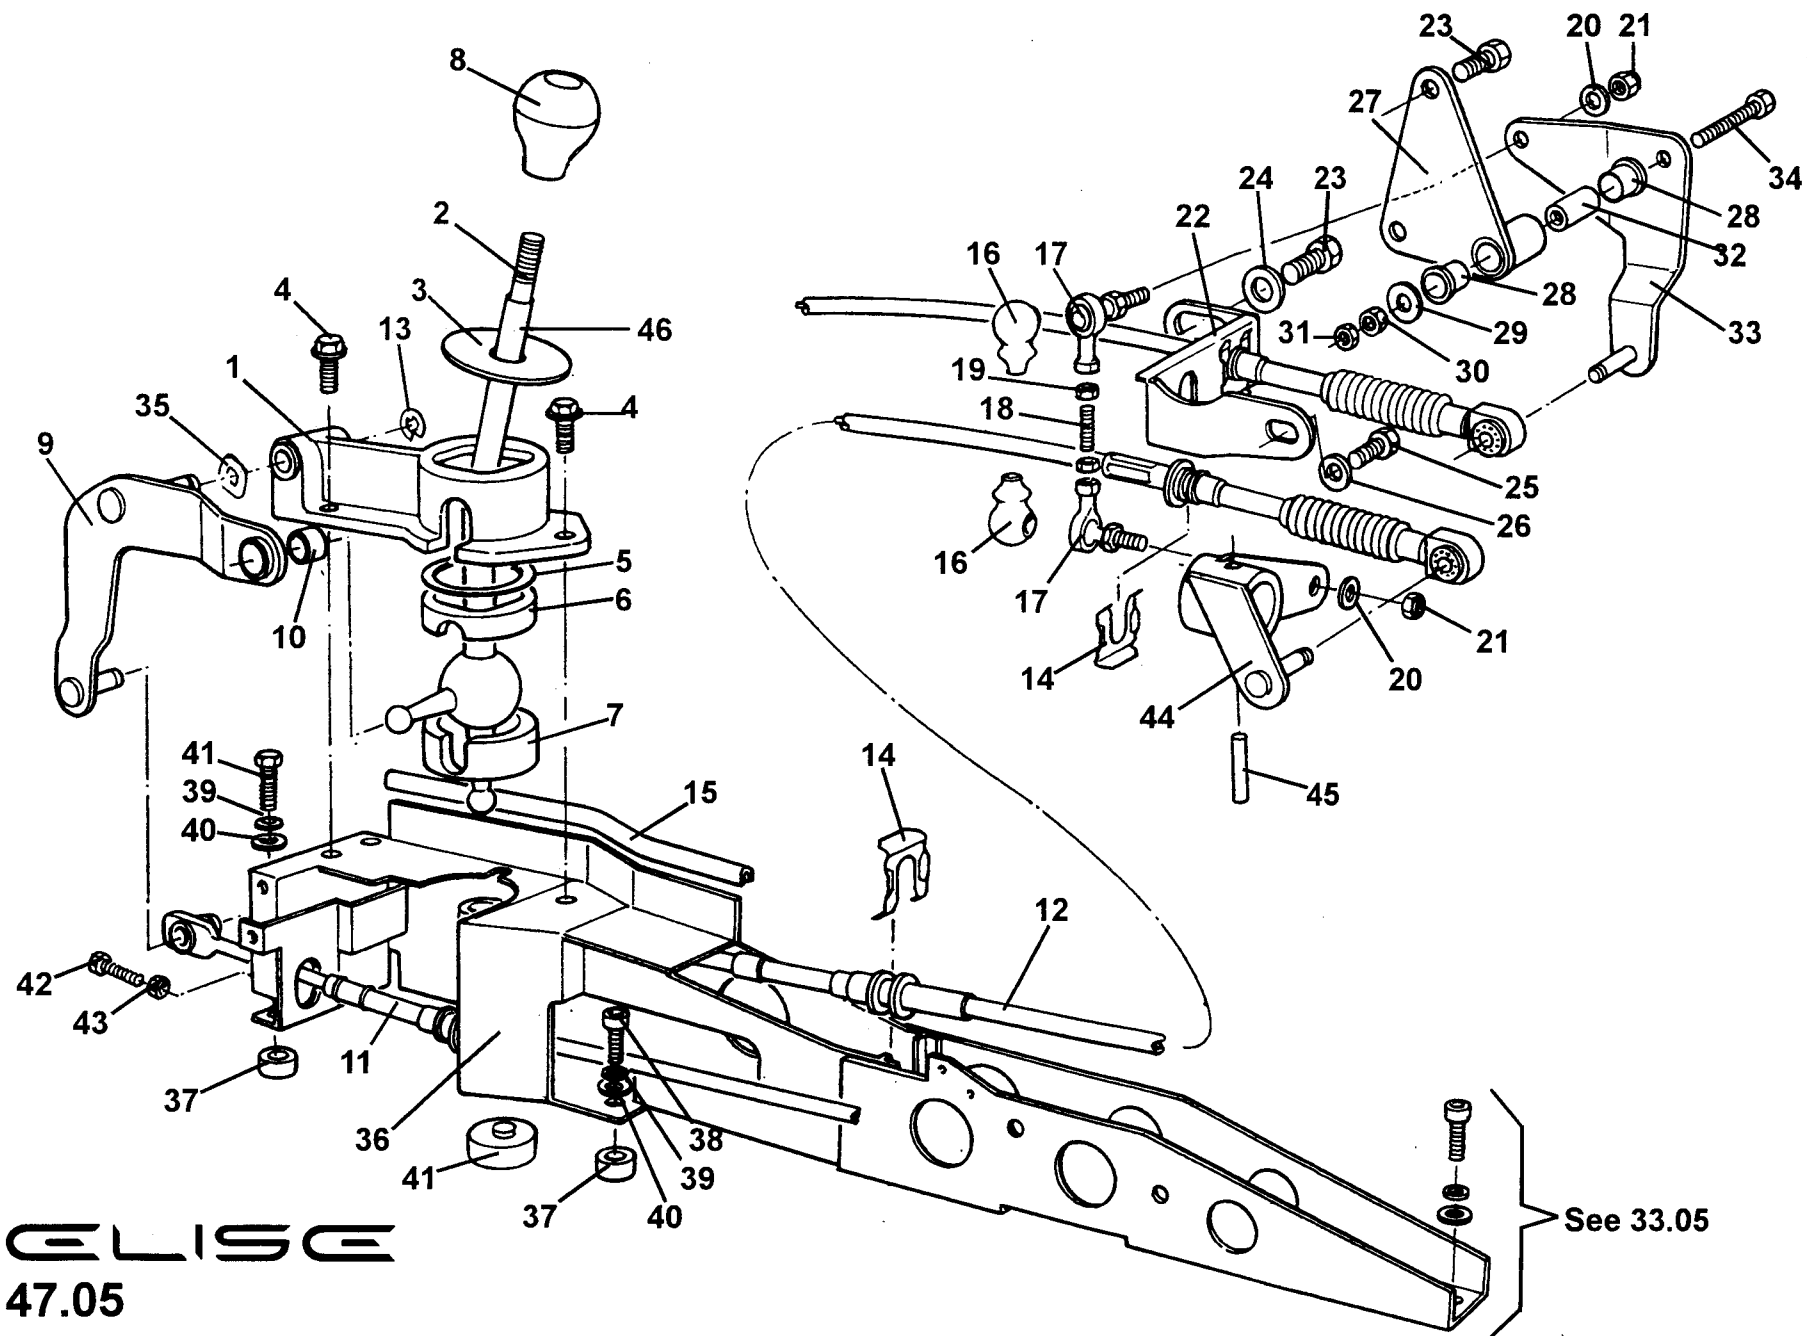

**ELISE**  
47.05

# Service Parts List **ELISE**



## Function Code 47.05 Gearchange Mechanism, External


<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Housing, gear lever pivot			A111F6008H	1
02	Gear Lever	Includes heatshrink, item 48		A111F0013H	1
03	Dust Shield, gear lever			A111F0005K	1
04	Screw, self tap., housing to bracket			A111F6014H	3
05	Gasket/Spacer, neoprene			A111F6010H	1
06	Socket, upper			A111F6009H	1
07	Socket, lower			A111F6011H	1
08	Knob, gear lever, alloy		Standard	A117U0085F	1
08a	Knob, gear lever, alloy/leather		Sports Tourer/Race Tech	A117U0048F	1
09	Bellcrank/Pivot Pin Assembly			A111F6006H	1
10	Bush, bellcrank to lever			A111F6005H	1
11	Crossgate Cable, gearchange			A111F0004F	1
12	Selector Cable, gearchange			A111F0003F	1
13	Circlip, type 'E', pivot retention			A111E6012H	1
14	Retaining Clip, gear change			A111F6018H	4
15	Edging Strip, rubber			B075U6054V	0.13m
16	Boot, gear linkage			A082F4149F	2
17	Rod End, gear change			A082F6368F	2

**ELISE**



**Function Code 47.05 Gearchange Mechanism, External**


<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
18	Tie Rod			B111F0028F	1
19	Locknut			A082W3085F	2
20	Washer, flat, M5 x 12 x 1.4			A075W4013Z	2
21	Nyloc Nut, M5			A075W3009Z	2
22	Bracket Abutment, gear linkage			A111F0015F	1
23	Screw, M12 x 30, hex. hd., bracket to gearbox			A082W1141F	2
24	Washer, flat, M12 x 23.5 x 2.3			A075W4028Z	1
25	Screw, M10 x 25, hex. hd. bracket to gearbox			A075W1048Z	1
26	Washer, flat, M10 x 20 x 1.8			A075W4024Z	1
27	Pivot Plate Assembly			A111F0023F	1
28	Bush			A111F6015F	2
29	Washer, flat, M8			A079W4019F	1
30	Nut, M8, full hex.			A075W3021Z	1
31	Nut, M8, hex thin			A075W3026Z	1
32	Pivot Shaft, gear linkage			A111F0026F	1
33	Crossgate Selector			A111F0016F	1
34	Screw, M8 x 45, hex. hd.			A075W1043Z	1
35	Washer, wavy, M10 x 15 x 0.16			A111W4167F	1
36	Mounting Bracket, gear selector mechanism			A117F0004F	1
37	Spacer, mounting bracket to gear selector			A111F0012F	3
38	Screw, M8 x 30, cap hd., bracket to floor			A089W7052F	1

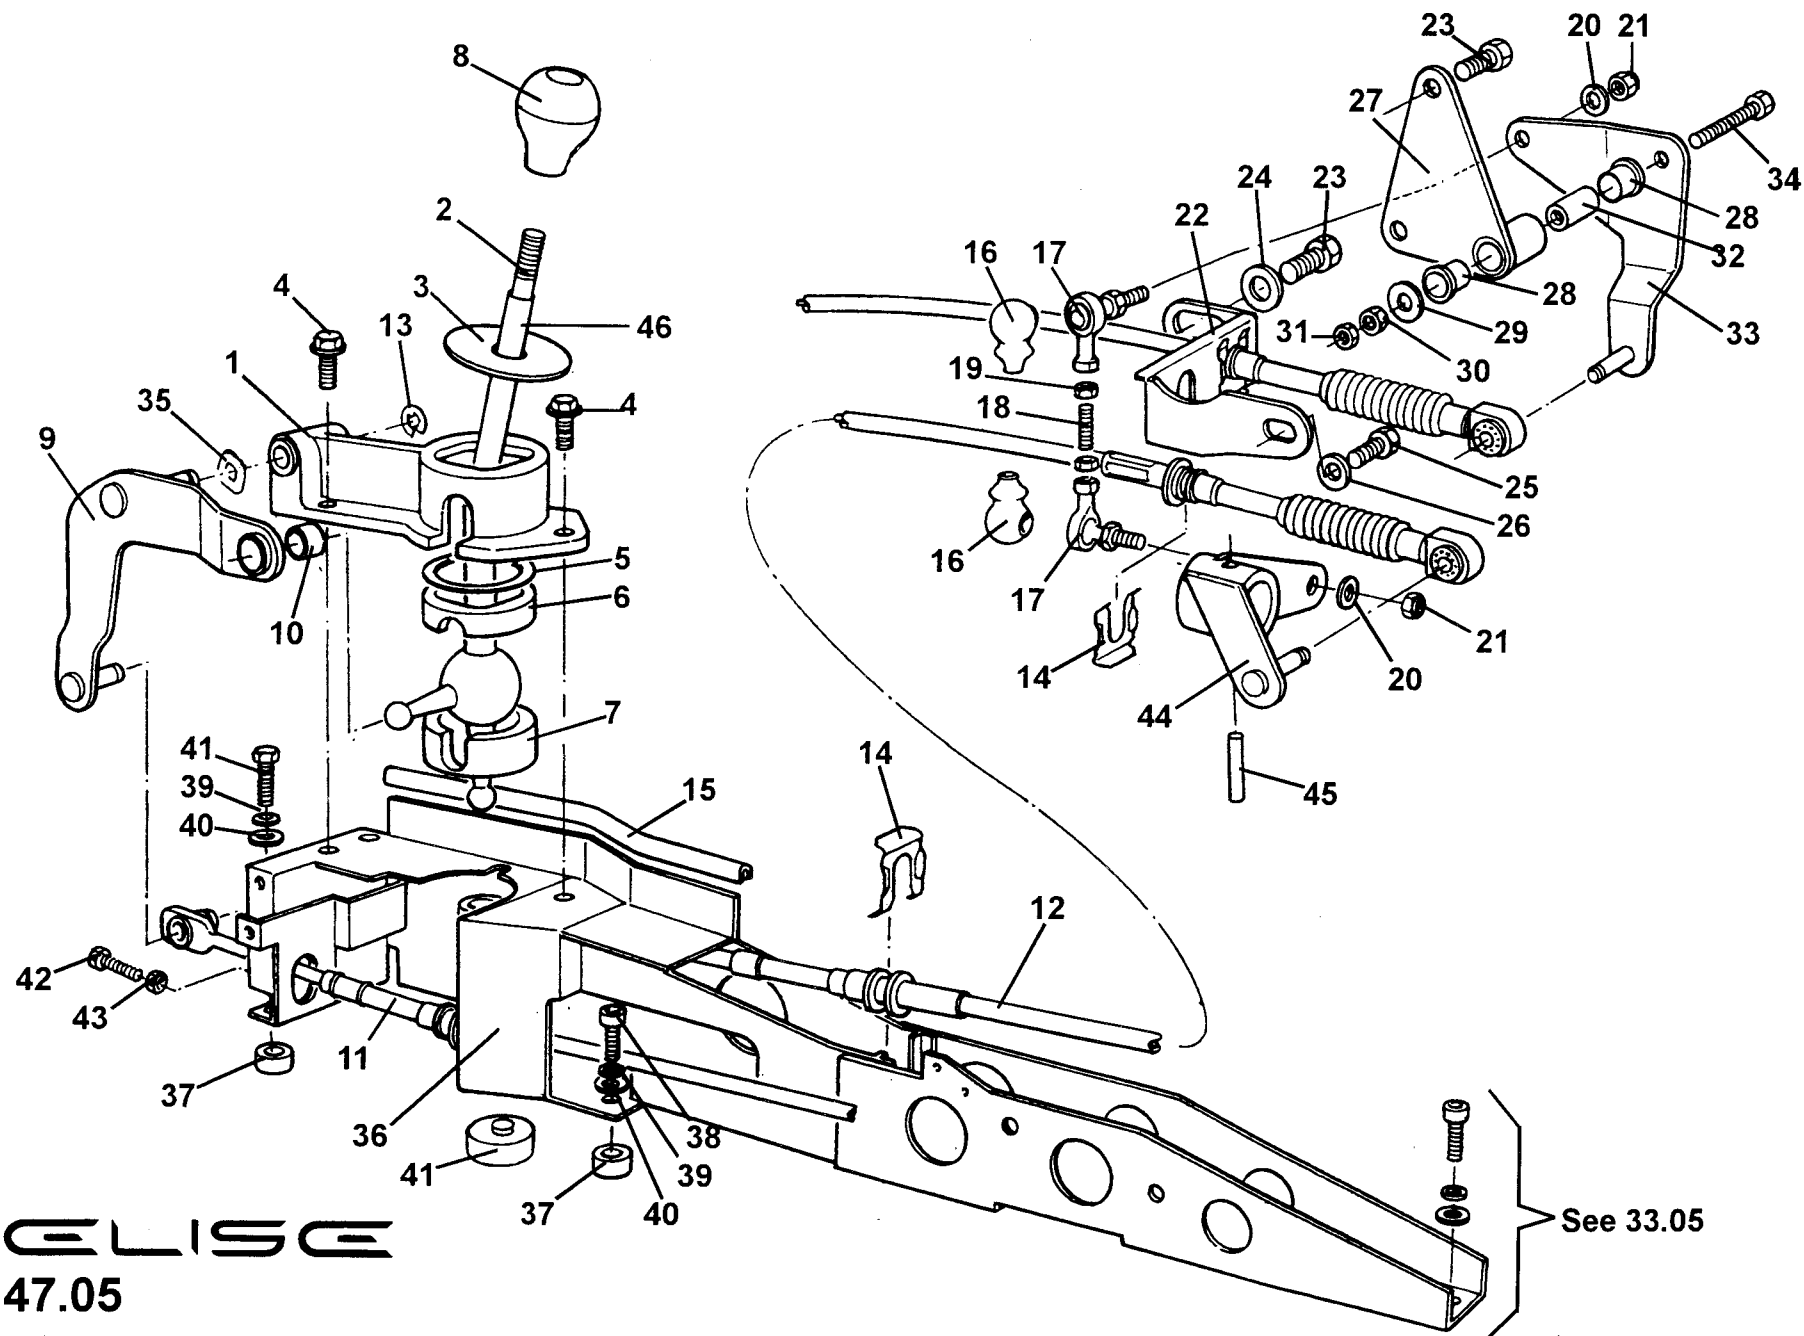

**ELISE**  
47.05

**Function Code 47.05 Gearchange Mechanism, External**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
39	Washer, spring, M8			A075W4036Z	3
40	Washer, flat, M8 x 16.6 x 1.4			A075W1085F	1
41	Spacer, gear selector mounting bracket to step plate			A111F0032F	2
42	Screw, M5 x 16, hex. hd.			A075W1085F	1
43	Nut, M5, crossgate stop			A082W3084F	1
44	Link, gear selector			B111F0019F	1
45	Translator Pin, gearbox			A111F6019F	1
46	Label, gear change pattern			A111U0004F	1
47	Heatshrink Tube, gearlever	Part of lever, item 2		A111V6021V	As req.
48	Permabond A130, knob to lever	Not illustrated		A912E7033V	As req.

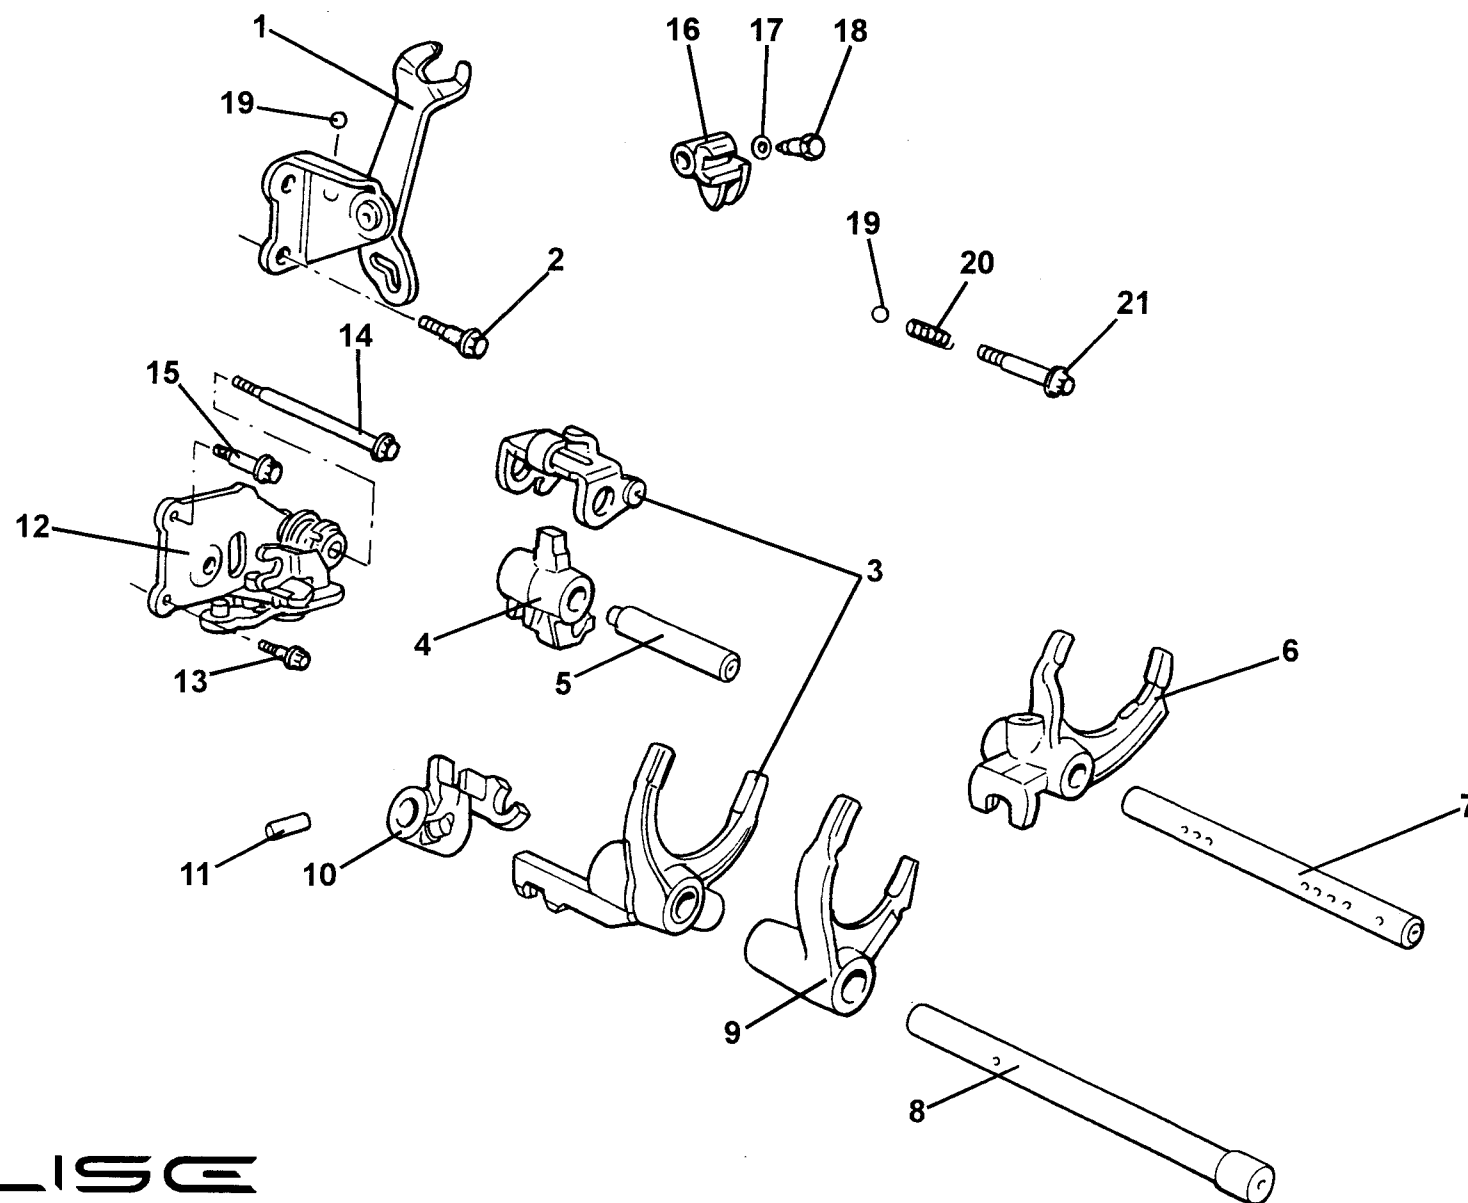

**ELISE**  
47.06




# Service Parts List **ELISE**



## Function Code 47.06 Gear Selector Mechanism, Internal

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Reverse Selector Fork			A111F6143S	1
02	Bolt, M6 x 22.5 , selector fix.			A111F6144S	2
03	Kit: Interlock Guide/Selector Fork, 3rd/4th gears			A111F6145S	1
04	Selector Actuator			A111F6146S	1
05	Selector Shaft			A111F6147S	1
06	Selector Fork, 1st/2nd gears			A111F6148S	1
07	Selector Shaft, 1st/2nd gears			A111F6149S	1
08	Selector Shaft, 5th/ reverse gears			A111F6150S	1
09	Selector Fork, 5th gear			A111F6151S	1
10	Gear Selector, 5th/reverse gears			A111F6153S	1
11	Roll Pin, 5th/reverse selector			A111F6154S	1
12	Translator Assembly			A111F6202S	1
13	Bolt, M6 x 22.5, flg. hd., translator fix.			A111F6144S	2
14	Bolt, special, M8, flg. hd., translator fix.			A111F6204S	1
15	Bolt, M6 x 18, flg. hd., translator fix.			A111F6203S	1
16	Selector Shaft Guide			A111F6198S	1
17	Dowel Bolt, M8 x 24, flg. hd.			A111F6199S	1
18	Washer, spring, M6			A111F6014S	1

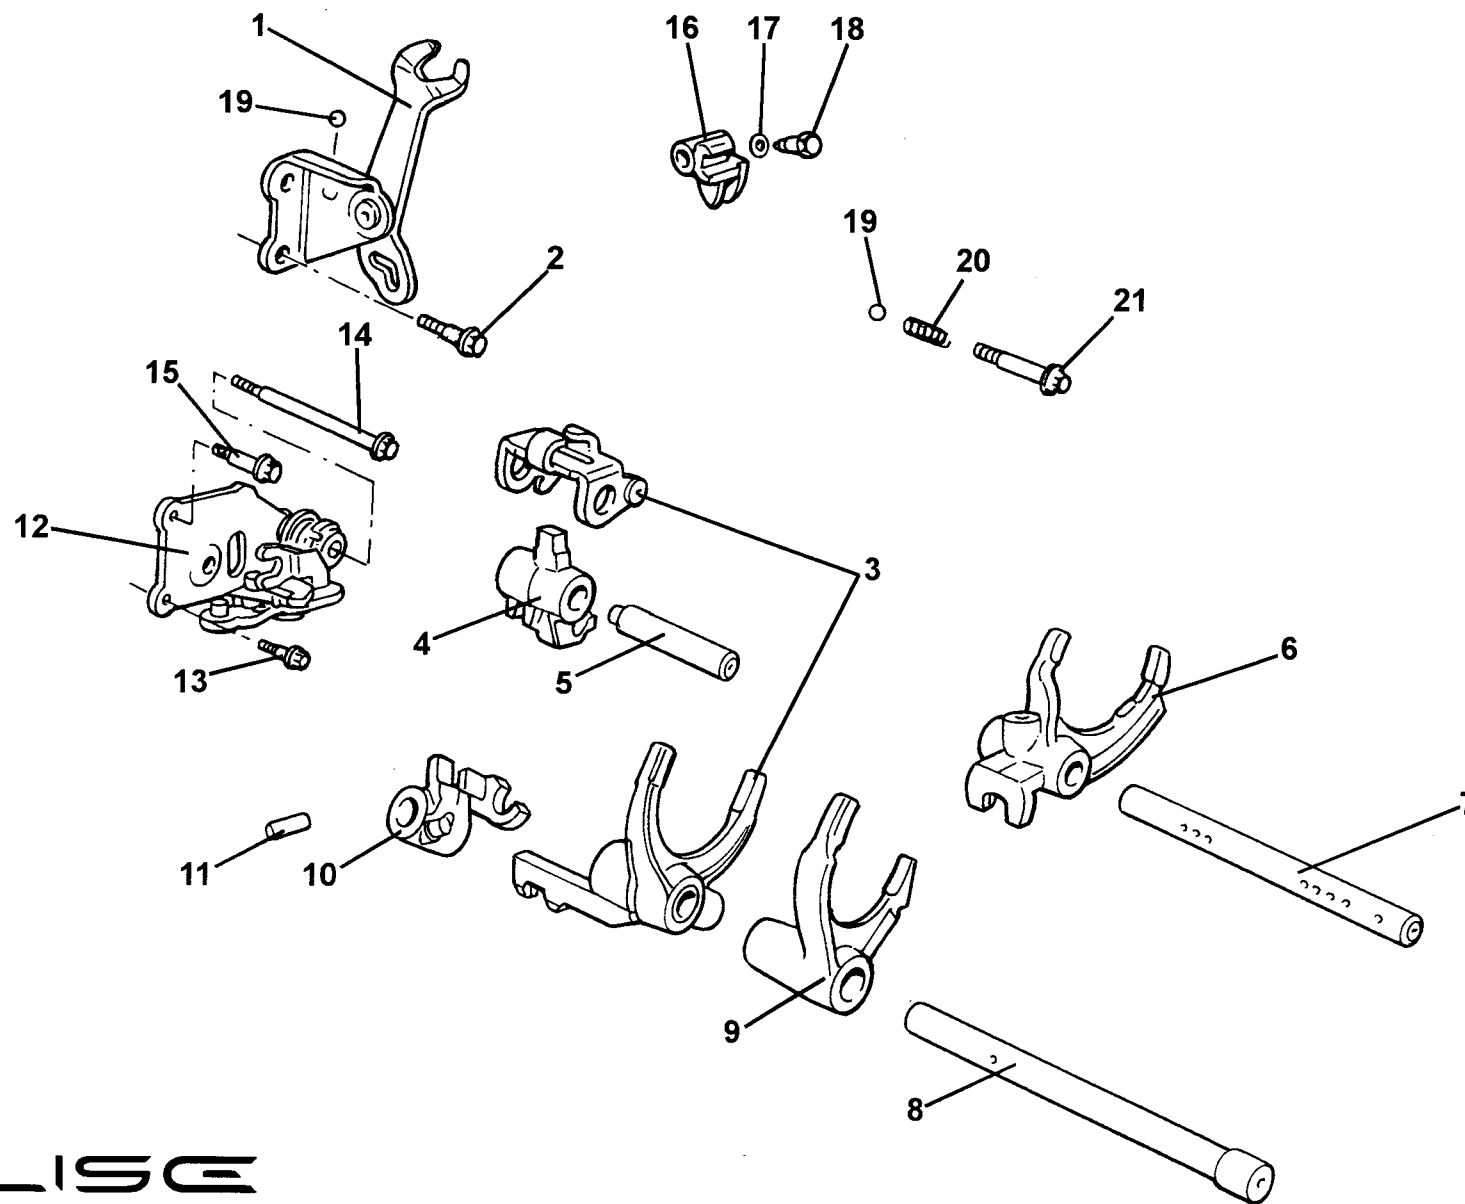


**ELISE**  
47.06

---

**Function Code 47.06 Gear Selector Mechanism, Internal**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
19	Steel Ball, detent			A111F6201S	2
20	Spring, detent			A111F6206S	1
21	Cap Bolt, spring retention			A111F6205S	1

---

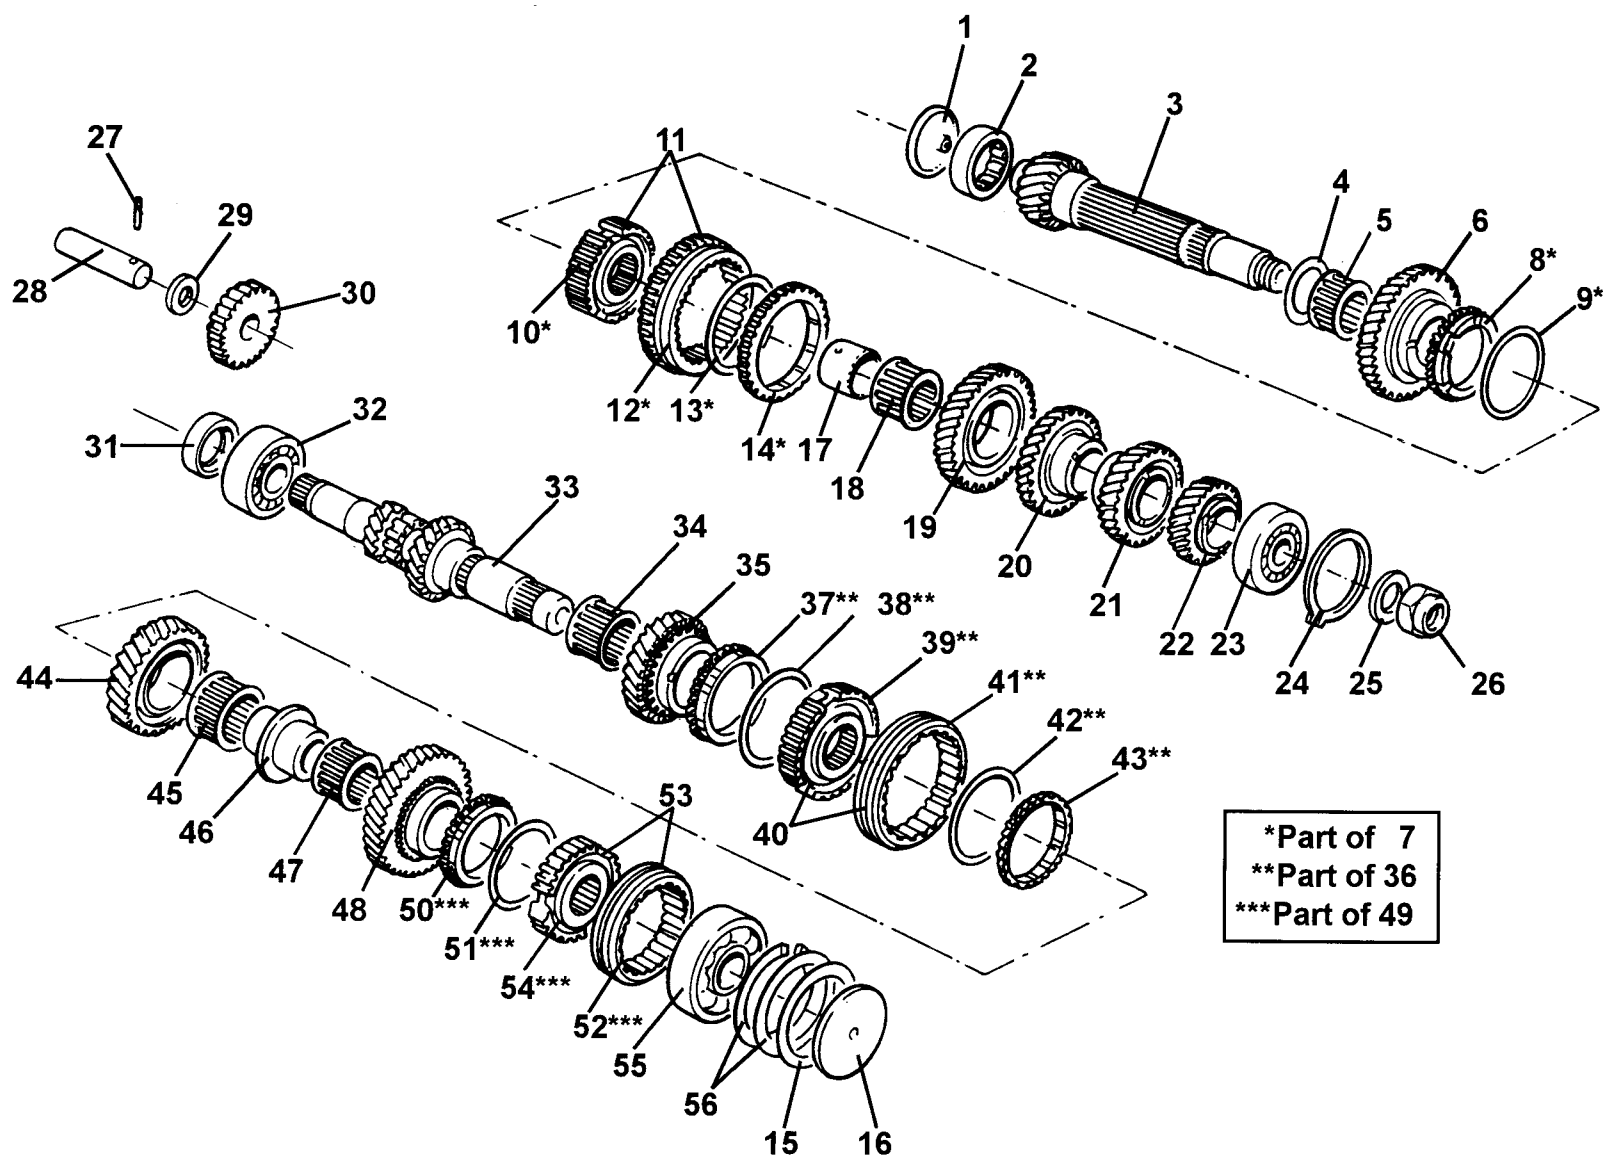


**ELISE**  
47.07

# Service Parts List **ELISE**



## Function Code 47.07 Gears, Shafts & Bearings


<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Oil Guide Plate, input shaft			A111F6065S	1
02	Caged Roller Bearing, output shaft			A111F6066S	1
03	Output Shaft			A111F6189S	1
04	Selective Thrust Washer, 1.96 mm	1st gear end float adjustment		A111F6068S	As req.
04a	Selective Thrust Washer, 1.99 mm	1st gear end float adjustment		A111F6069S	As req.
04b	Selective Thrust Washer, 2.02 mm	1st gear end float adjustment		A111F6070S	As req.
04c	Selective Thrust Washer, 2.05mm	1st gear end float adjustment		A111F6071S	As req.
04d	Selective Thrust Washer, 2.08mm	1st gear end float adjustment		A111F6072S	As req.
05	Needle Roller Bearing, 1st gear			A111F6073S	1
06	1st Gear			A111F6190S	1
07	Synchroniser Assembly, 1st/2nd gear	Includes items: 8/9/10/12/13/14		A111F6075F	1
08	Synchro Ring, 1st gear	Part of item: 7		A111F6076F	1
09	Synchro Spring, 1st gear	Part of item: 7		A111F6077S	1
10	Synchro Hub, 1st/2nd gear	Part of item: 7 & 11		A111F6078S	1
11	Synchro Hub/Sleeve Assembly	Assy. of items: 10 & 12		A111F6109S	1
12	Synchro Sleeve, 1st/2nd gear	Part of item: 7 & 11		A111F6079S	1
13	Synchro Spring, 2nd gear	Part of item: 7		A111F6080S	1
14	Synchro Ring, 2nd gear	Part of item: 7		A111F6081S	1

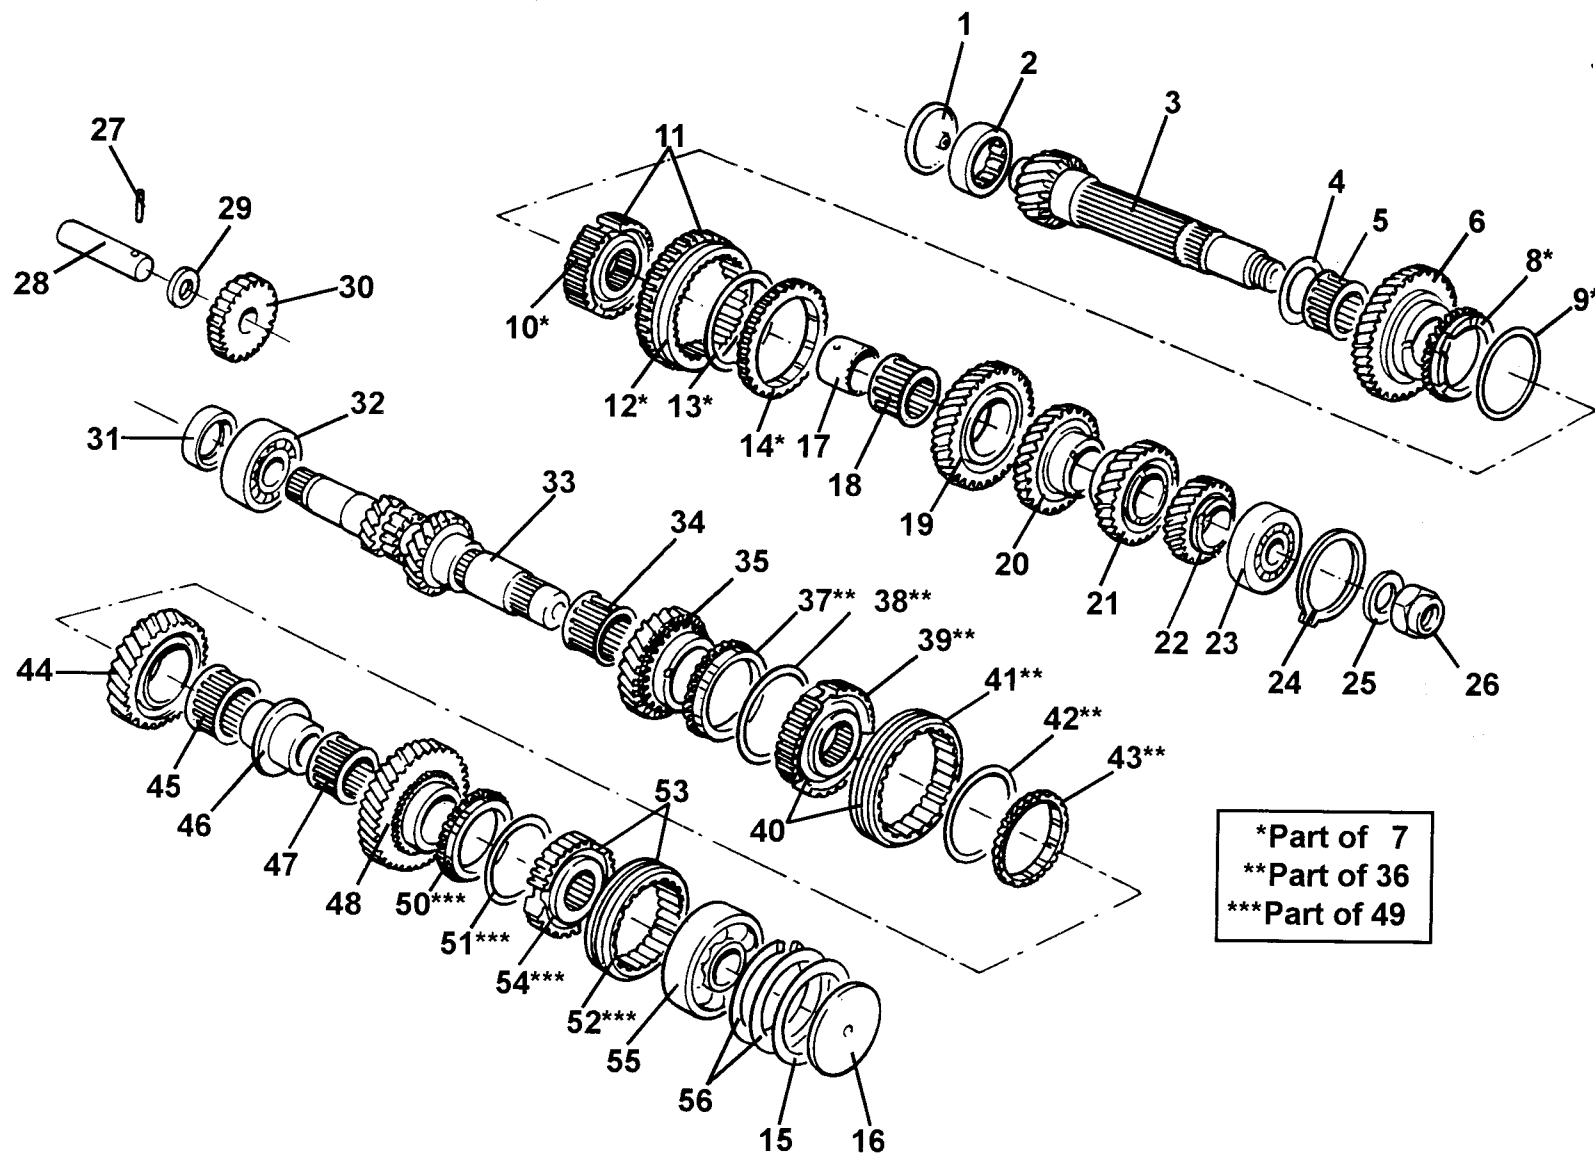

**ELISE**  
47.07

**Function Code 47.07 Gears, Shafts & Bearings**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
15	Thrust Washer, input shaft end			A111F6139S	1
16	Oil Guide Plate			A111F6140S	1
17	Selective Collar, 2nd gear end float adjustment			A111F6082F	As req.
17a	Selective Collar, 2nd gear end float adjustment			A111F6083S	As req.
17b	Selective Collar, 2nd gear end float adjustment			A111F6084S	As req.
17c	Selective Collar, 2nd gear end float adjustment			A111F6085S	As req.
18	Needle Roller Bearing, 2nd gear			A111F6086S	1
19	2nd Gear, 35 teeth			A111F6191S	1
20	3rd Gear, 34 teeth			A111F6088S	1
21	4th Gear, 31 teeth			A111F6089S	1
22	5th Gear			A111F6188S	1
23	Ball Bearing, output shaft			A111F6091S	1
24	Circlip, 60 mm			A111F6095S	1
25	Washer, tongued belleville, M23			A111F6093S	1
26	Lock Nut, M23 , LH thread, output shaft			A111F6094S	1
27	Roll Pin, reverse idler shaft locking.			A111F6097S	1
28	Reverse Idler Shaft			A111F6096S	1
29	Thrust Washer, reverse idler gear			A111F6098S	1
30	Reverse Idler Gear			A111F6099S	1
31	Oil seal, input Shaft			A111F6024S	1
32	Ball bearing, input shaft			A111F6101S	1

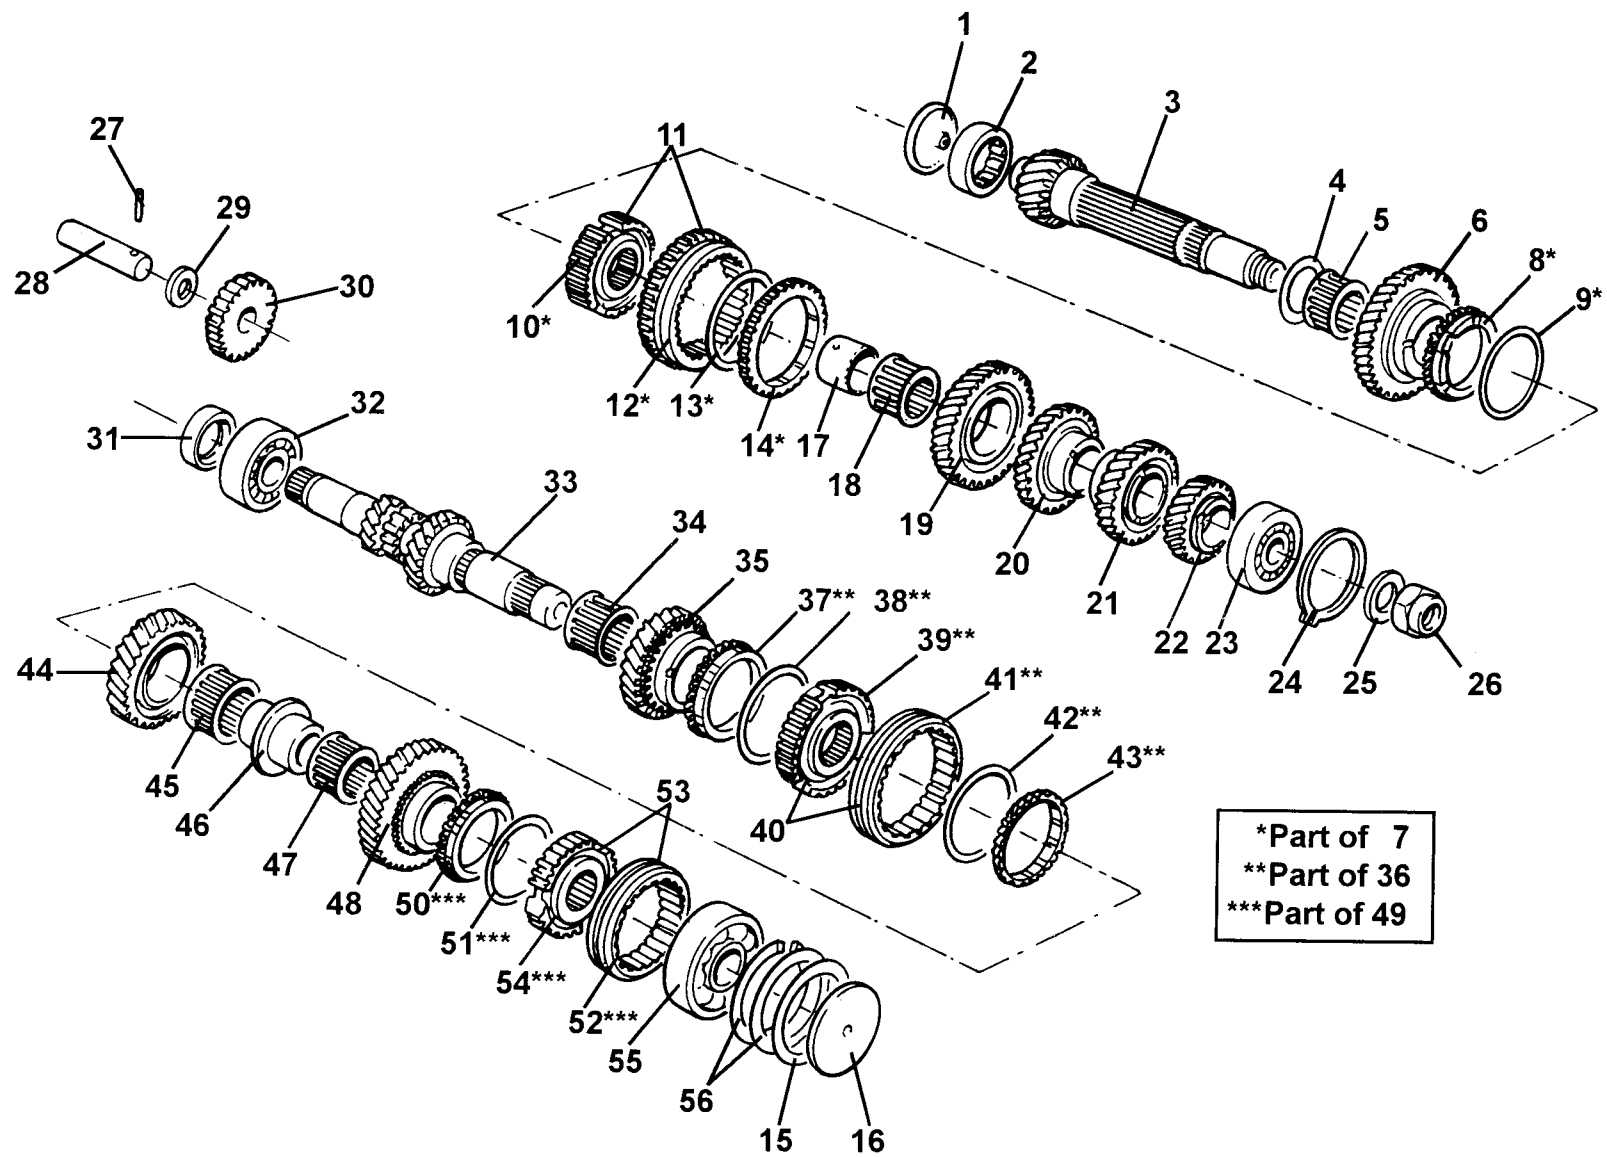


**ELISE**  
47.07



**Function Code 47.07 Gears, Shafts & Bearings**


<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
33	Input Shaft			A111F6193S	1
34	Needle Roller Bearing, 3rd Gear			A111F6104S	1
35	3rd Gear			A111F6103S	1
36	Synchroniser Assembly, 3rd/4th gear	Includes items: 37/38/39/41/42/43		A111F6105S	1
37	Synchro Ring, 3rd Gear	Part of item: 36		A111F6106S	1
38	Synchro Spring, 3rd Gear	Part of item: 36		A111F6107S	1
39	Synchro Hub, 3rd/4th Gear	Part of item: 36 & 40		A111F6110S	1
40	Synchro Hub/Sleeve assembly, 3rd/4th gear	Assy. of items: 39 & 41		A111F6108S	1
41	Synchro Sleeve, 3rd/4th Gears	Part of item: 36 & 40		A111F6111S	1
42	Synchro Spring, 4th Gear	Part of item: 36		A111F6112S	1
43	Synchro Ring, 4th Gear	Part of item: 36		A111F6113S	1
44	4th Gear			A111F6114S	1
45	Needle Roller Bearing, 4th Gear			A111F6104S	1
46	Distance Collar, 4th/5th gear			A111F6115S	As req.
47	Needle Roller Bearing, 5th Gear			A111f6104S	1
48	5th Gear			A111F6117S	1
49	Synchroniser Assembly, 5th Gear	Includes items: 50/51/52/53/55		A111F6118S	1
50	Synchro Ring, 5th Gear	Part of item: 49		A111F6119S	1
51	Synchro Spring, 5th Gear	Part of item: 49		A111F6120S	1
52	Synchro Sleeve, 5th Gear	Part of item: 49 & 54		A111F6123S	1
53	Synchro Hub/Sleeve assembly, 5th Gear	Assy. of items: 52 & 54		A111F6121S	1

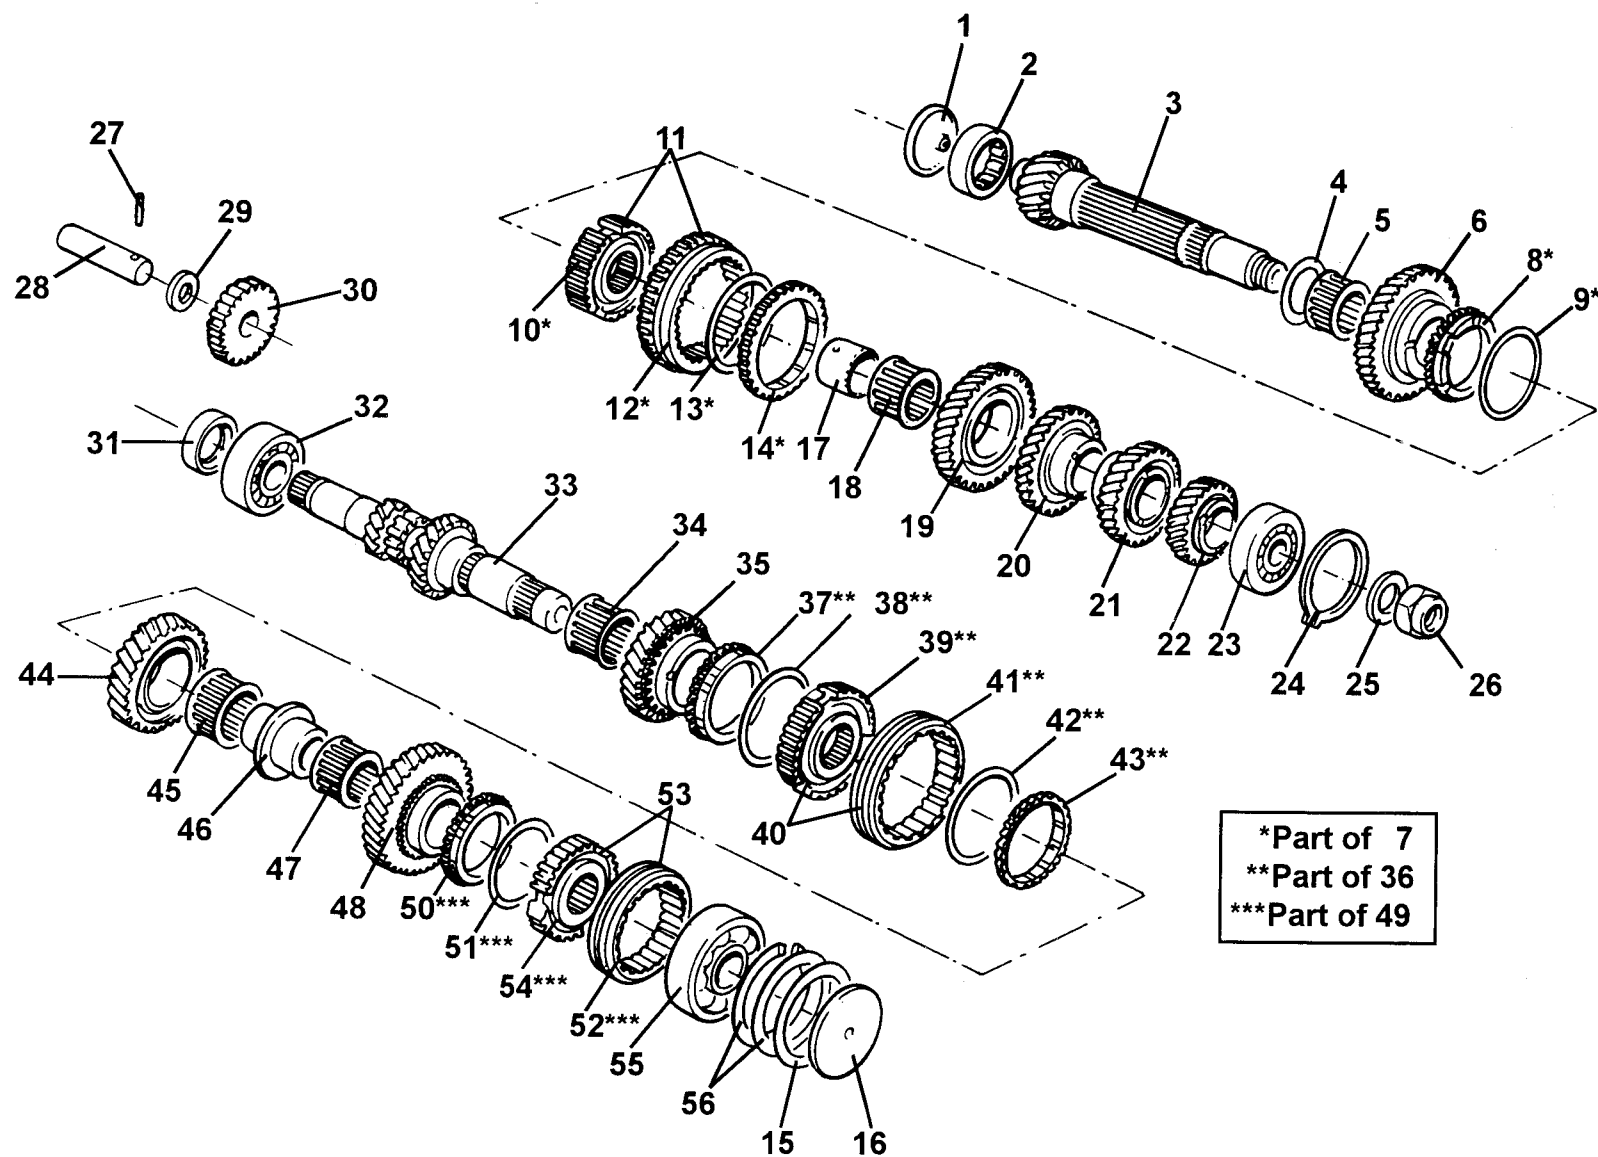

**ELISE**  
47.07

**Function Code 47.07 Gears, Shafts & Bearings**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
54	Synchro Hub, 5th Gear	Part of item: 49 & 53		A111F6122S	1
55	Ball Bearing, input shaft			A111F6124S	1
56	Selective Snap Rings, input shaft, 0.50 mm			A111F6125S	As req.
56a	Selective Snap Rings, input shaft, 0.55 mm			A111F6126S	As req.
56b	Selective Snap Rings, input shaft, 0.60 mm			A111F6127S	As req.
56c	Selective Snap Rings, input shaft, 0.65 mm			A111F6128S	As req.
56d	Selective Snap Rings, input shaft, 0.70 mm			A111F6129S	As req.
56e	Selective Snap Rings, input shaft, 0.75 mm			A111F6130S	As req.
56f	Selective Snap Rings, input shaft, 0.80 mm			A111F6131S	As req.
56g	Selective Snap Rings, input shaft, 0.85 mm			A111F6132S	As req.
56h	Selective Snap Rings, input shaft, 0.90 mm			A111F6133S	As req.
56i	Selective Snap Rings, input shaft, 0.95 mm			A111F6134S	As req.
56j	Selective Snap Rings, input shaft, 1.00 mm			A111F6135S	As req.
56k	Selective Snap Rings, input shaft, 1.05 mm			A111F6136S	As req.
56L	Selective Snap Rings, input shaft, 1.10 mm			A111F6137S	As req.
56m	Selective Snap Rings, input shaft, 1.15 mm			A111F6138S	As req.

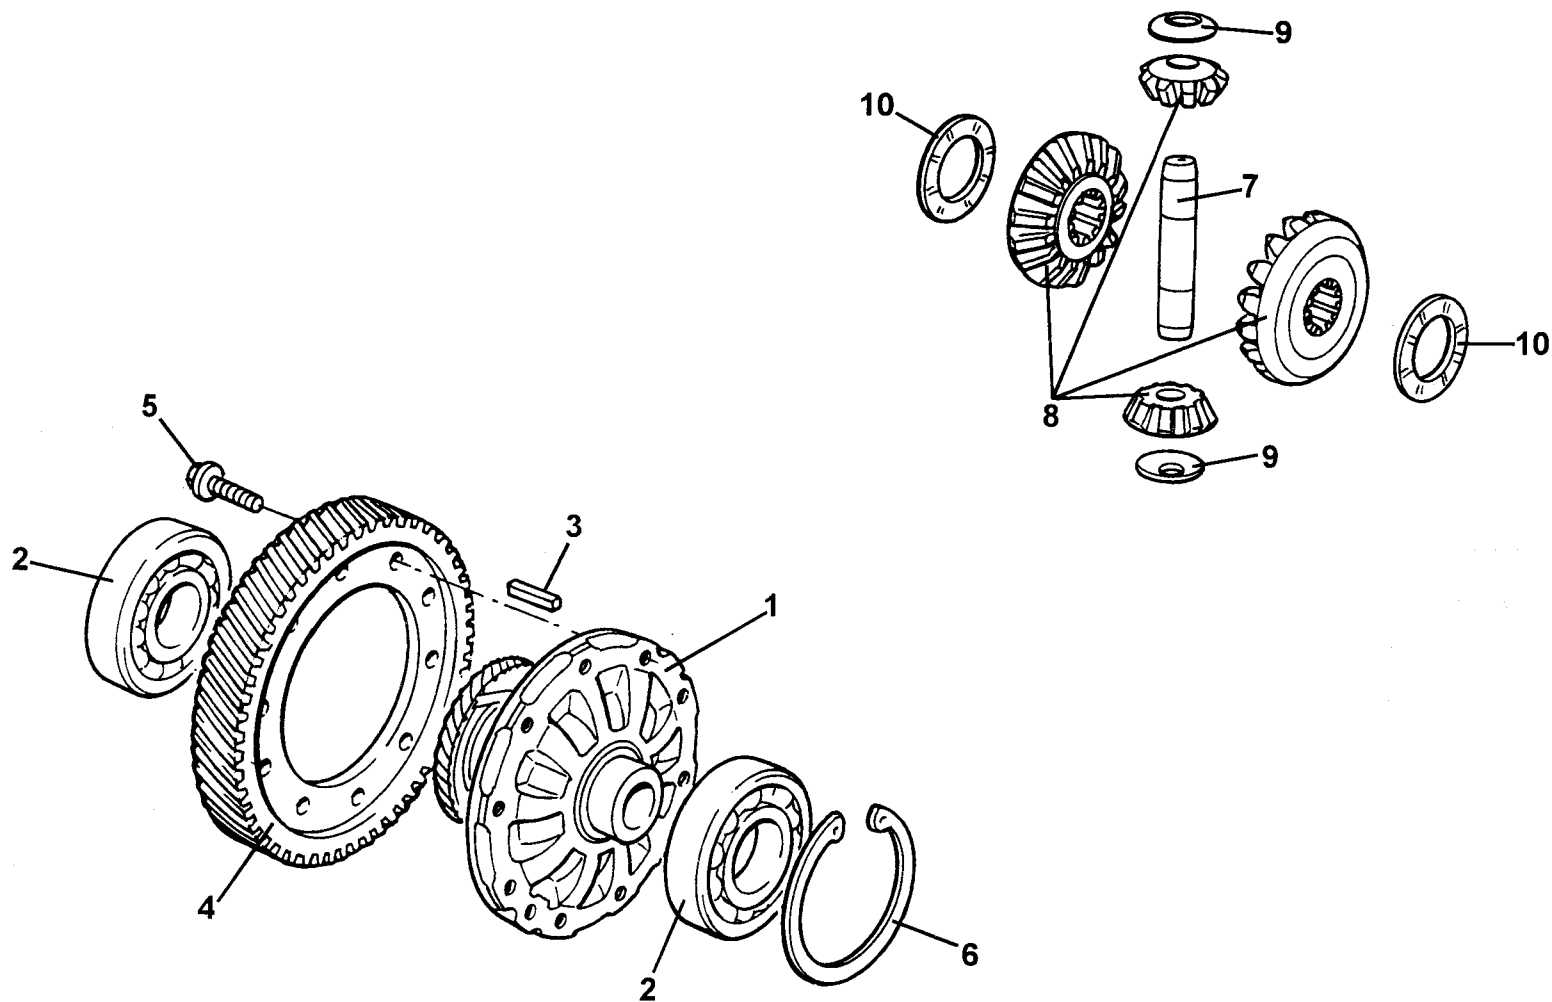

**ELISE**  
47.11


# Service Parts List **ELISE**



## Function Code 47.11 Final Drive & Bearings

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Differential Assembly, 4.2 ratio	Includes items: 3/7/8/9/10		A111F6195S	1
02	Ball Bearing, differential			A111F6043S	2
03	Roll Pin, differential pinion shaft			A111F6044S	1
04	Final Drive Gear, 4.2 ratio			A111F6196S	1
05	Bolt, final drive gear to differential casing			A111F6046S	10
06	Selective Circlip, 2.5 mm			A111F6047S	1
06a	Selective Circlip, 2.6 mm			A111F6048S	1
06b	Selective Circlip, 2.7 mm			A111F6049S	1
06c	Selective Circlip, 2.8 mm			A111F6050S	1
06d	Selective Circlip, 2.9 mm			A111F6051S	1
06e	Selective Circlip, 3.0 mm			A111F6052S	1
07	Pinion Shaft			A111F6053S	1
08	Sun/Planet Gear, matched set			A111F6055S	1
09	Thrust Washer, planet gear, 0.70 mm			A111F6056S	1
09a	Thrust Washer, planet gear, 0.75 mm			A111F6057S	1
09b	Thrust Washer, planet gear, 0.80 mm			A111F6058S	1
09c	Thrust Washer, planet gear, 0.85 mm			A111F6059S	1
09d	Thrust Washer, planet gear, 0.90 mm			A111F6060S	1


**ELISE**

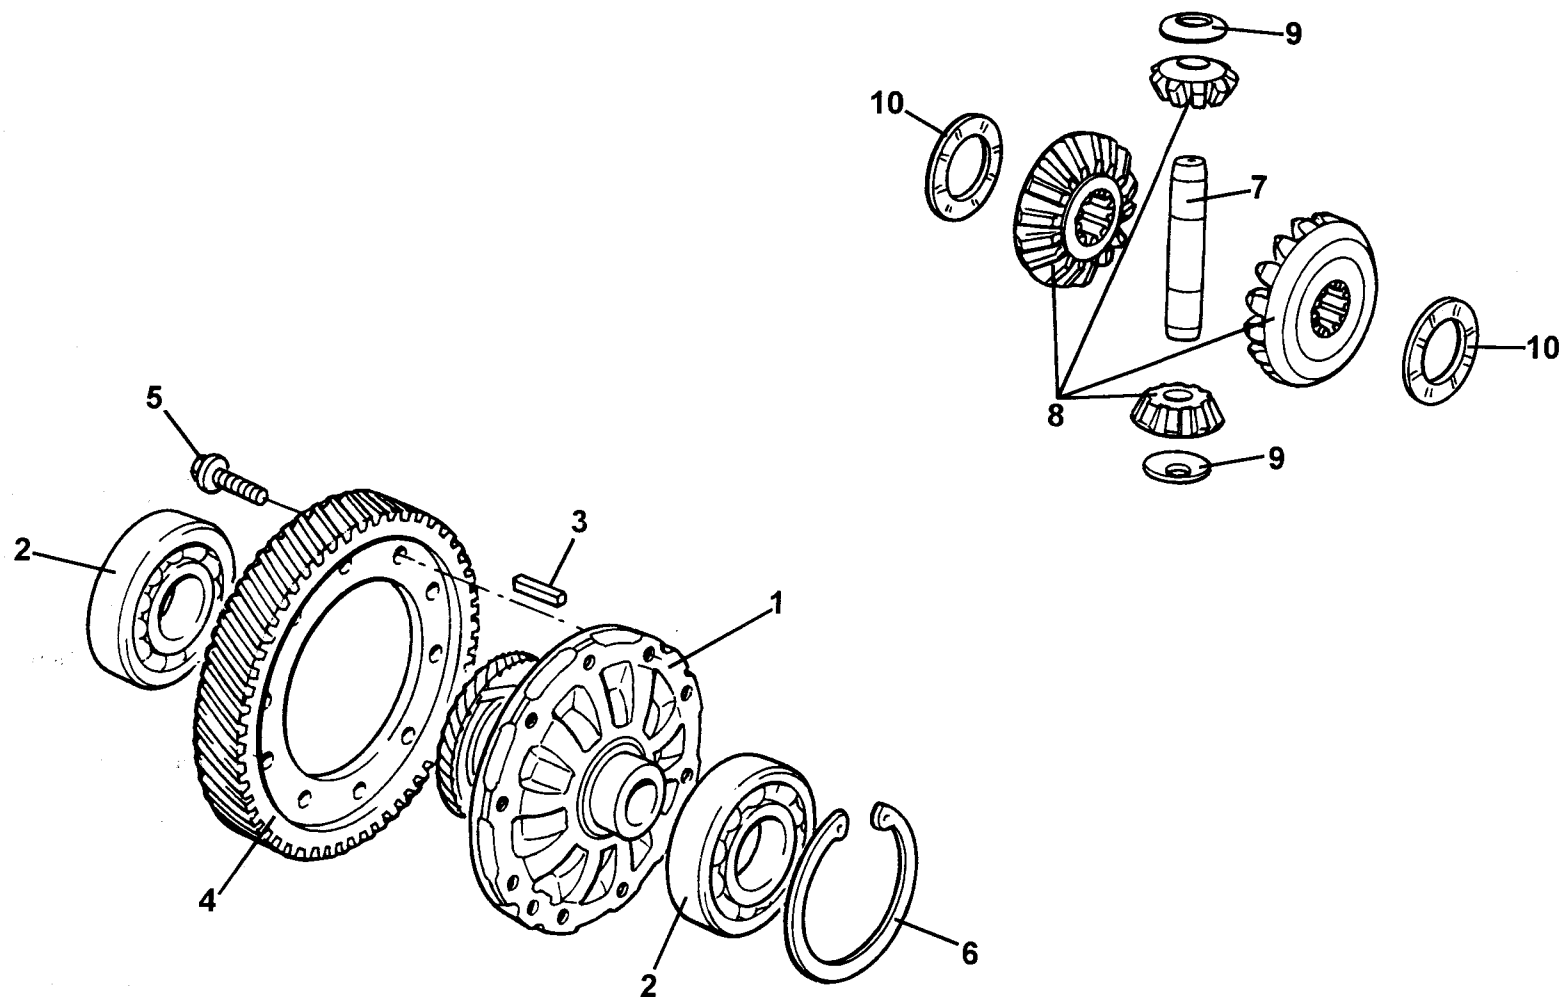

**ELISE**  
47.11

**Function Code 47.11 Final Drive & Bearings**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
09e	Thrust Washer, planet gear, 0.95 mm			A111F6061S	1
09f	Thrust Washer, planet gear, 1.00 mm			A111F6062S	1
09g	Thrust Washer, planet gear, 1.05 mm			A111F6063S	1
10	Thrust Washer, sun gear			A111F6064S	2

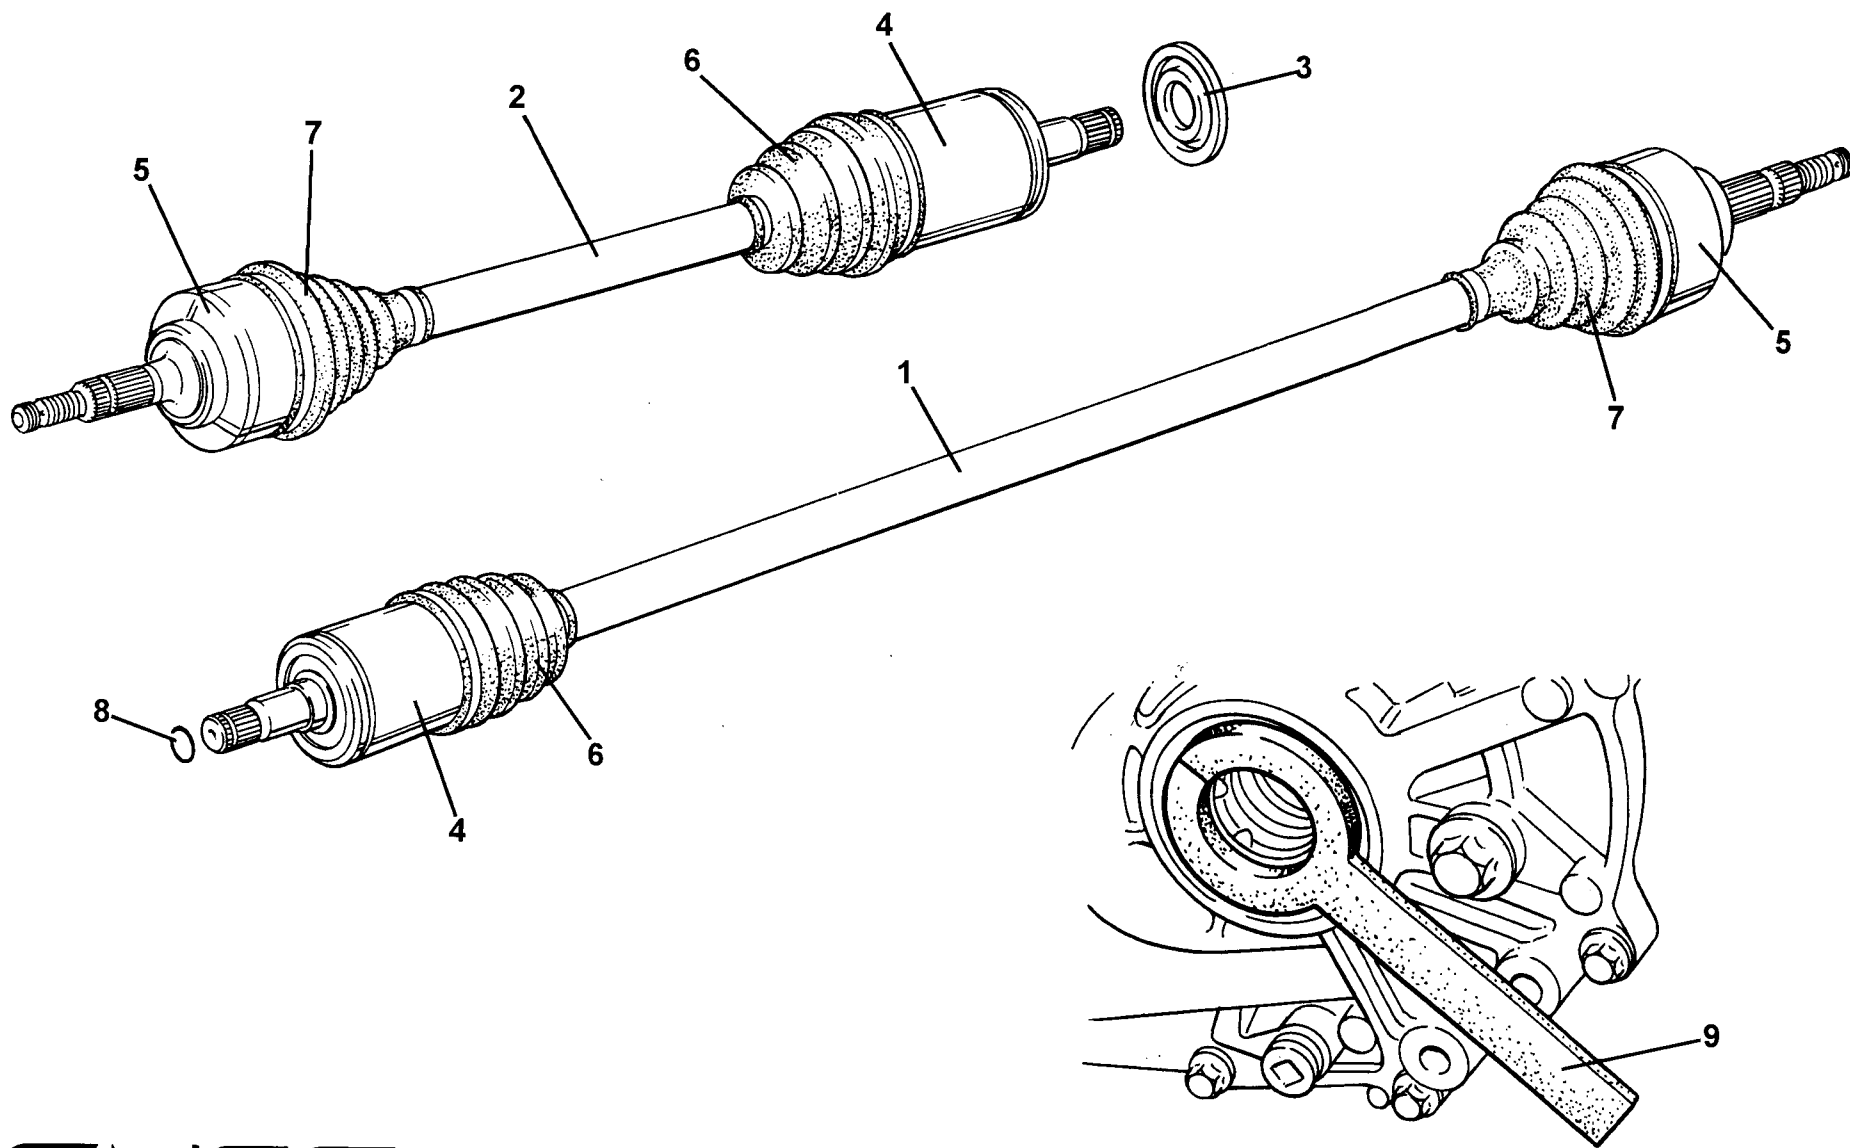

**ELISE**  
47.15




# Service Parts List **ELISE**



## Function Code 47.15 Driveshafts & Seals

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Drive Shaft, LH			A117D0013F	1
02	Drive Shaft, RH			A117D0012F	1
03	Oil Seal, drive shaft, LH			A111F6029S	1
03b	Oil Seal, drive shaft, RH			A111F6022S	1
04	CV Joint, inboard			A117D0003S	2
05	CV Joint, outboard			A117D0004S	2
06	Gaiter Kit, inboard CV joint	Including clips and grease		A111D6011S	2
07	Gaiter Kit, outboard CV joint	Including clips and grease			2
08	Circlip, driveshaft retention in transmission			A100R6001F	2
09	Special Tool, seal protector	Used to insert driveshaft*		T000T1390F	1

\*See Service Notes, Section F

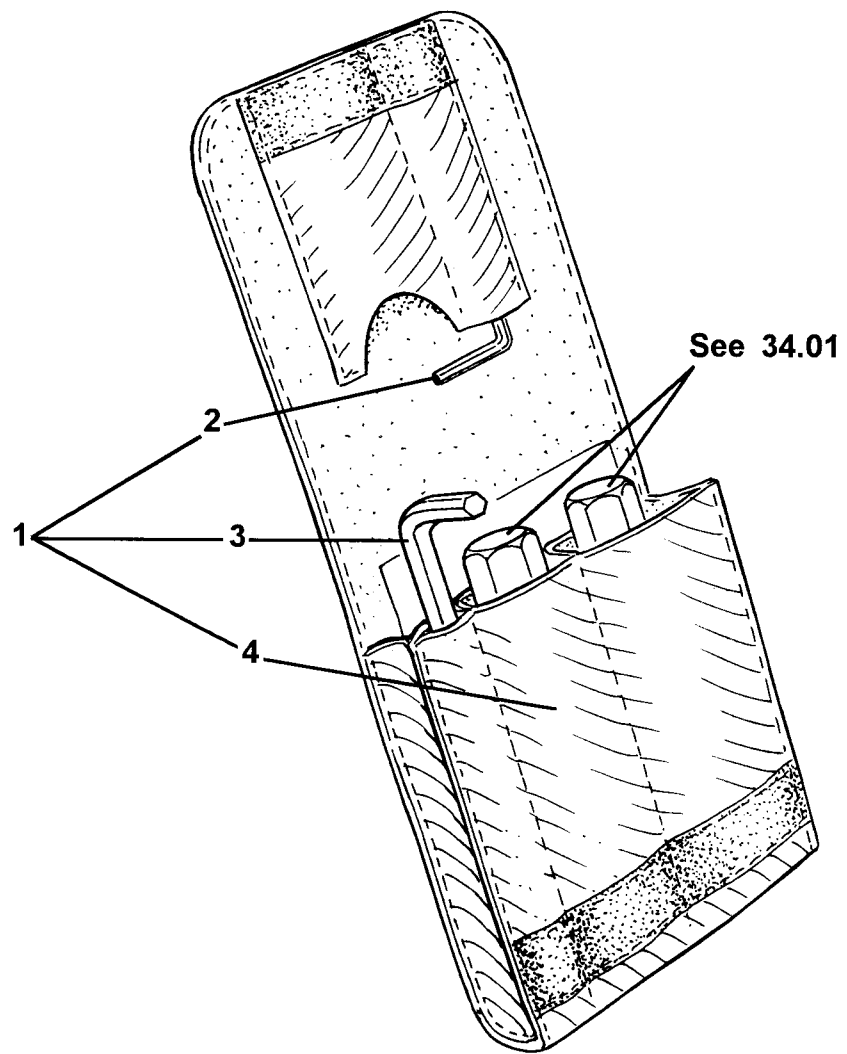

**ELISE**  
**60.01**


# Service Parts List **ELISE**



## Function Code 60.01 Tool Kit

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Tool Kit	Includes items: 2,3,4, & wheel bolt adaptors			1
02	Allen Key				1
03	Allen Key				1
04	Tool Bag				1


**ELISE**

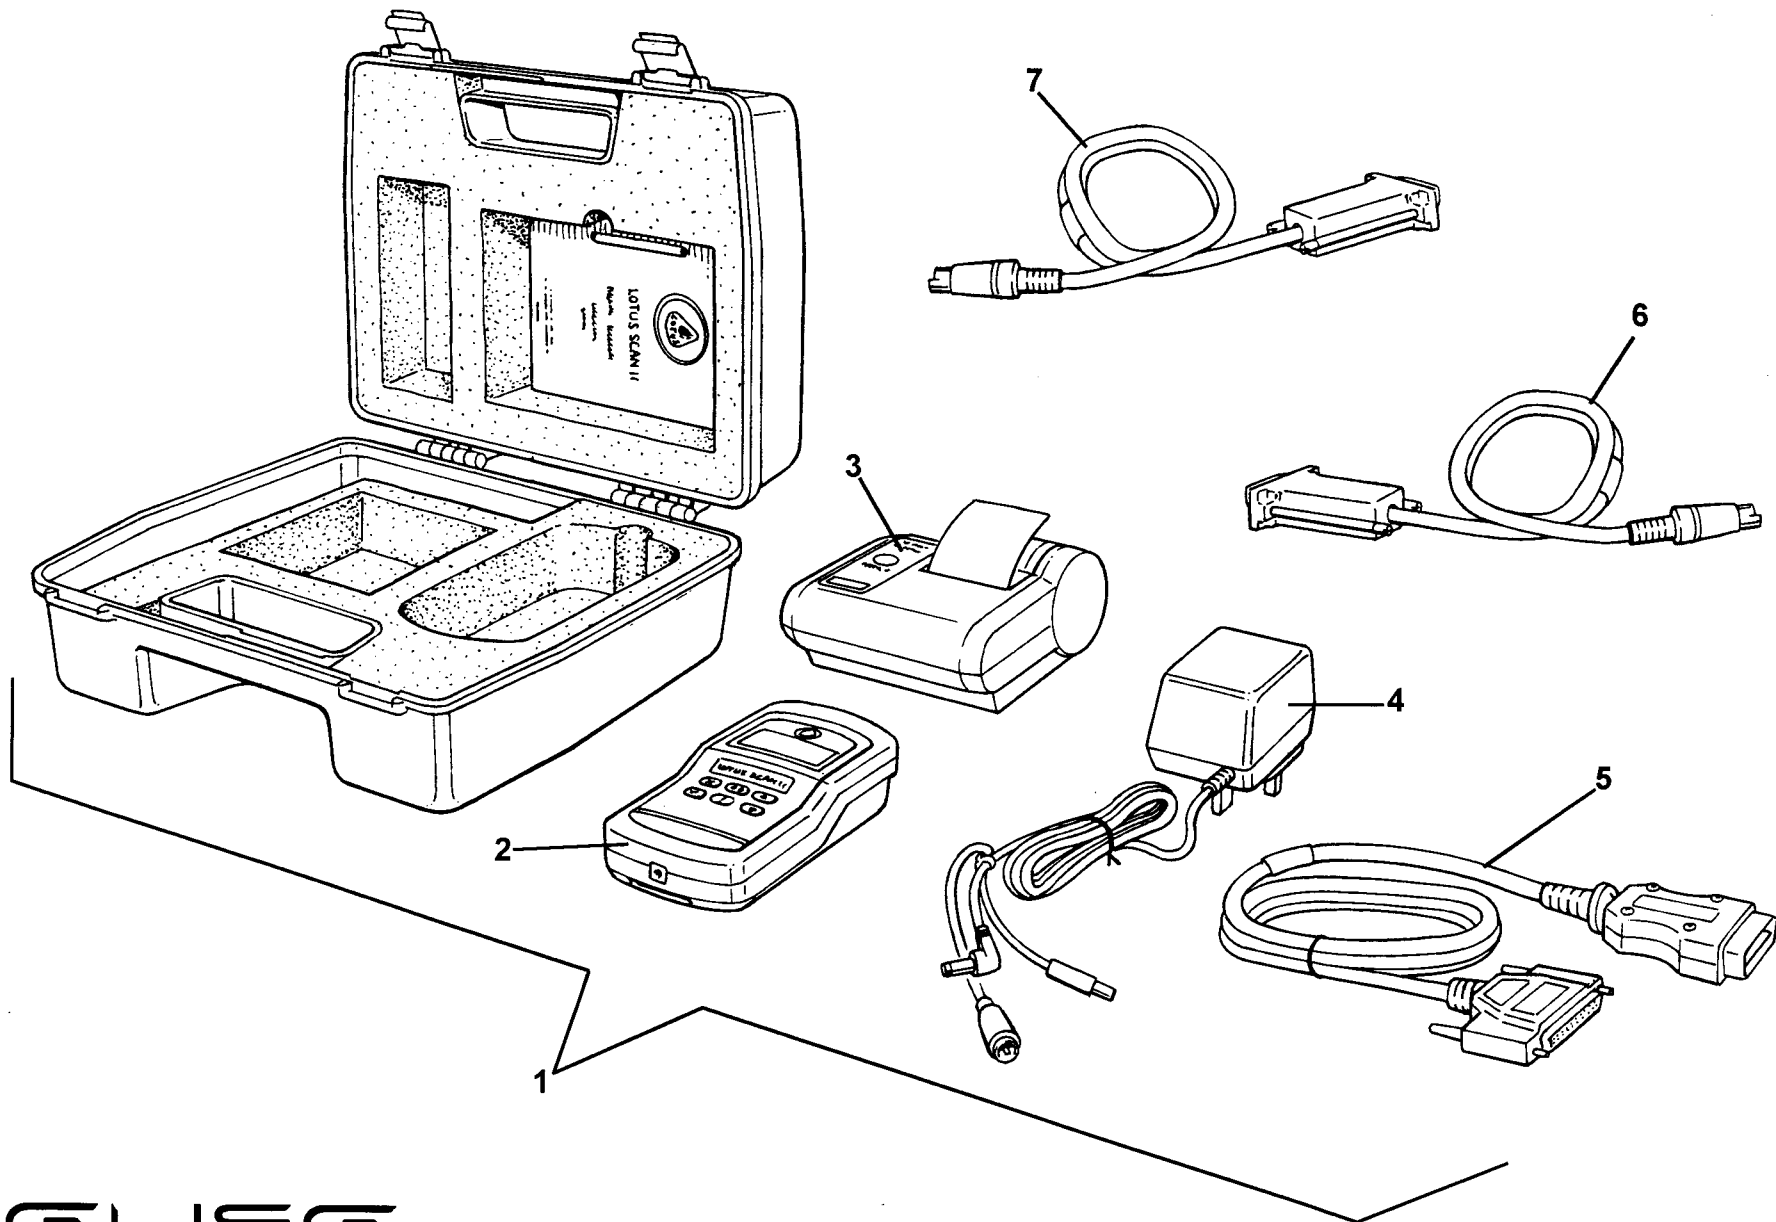

**ELISE**  
60.01a

**Function Code 60.01a Diagnostic Equipment**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Lotus Scan II Kit			TOOOT1418F	1
02	Lotus Scan II, scanner tool				1
03	Printer			TOOOT1419F	1
04	Transformer, printer or scanner power supply	Includes adaptor lead for scanner			1
05	Lead, scanner to ALDL connector				1
06	Lead, scanner to printer				1
07	Lead, scanner to PC				1

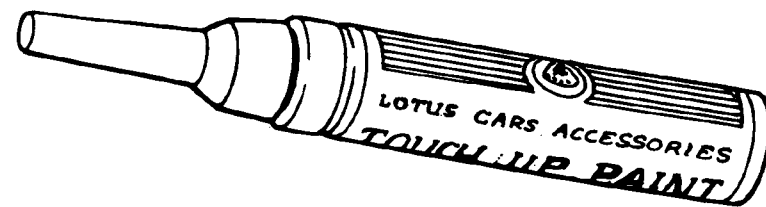

**ELISE**

**80.20a**

# Service Parts List **ELISE**



## Function Code 80.20a Touch-in Paint Pencil Range

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
B02	Black	Solid		A082B6295F	1
B23	Ruby Red	Metallic		A082B6306F	1
B03	Calypso Red	Solid		D075B6264F	1
B	Laser Blue	Metallic			1
B	Ice Blue	Metallic			1
B	Cobalt Blue	Metallic			1
B	Silver	Metallic			1
B	Gunmetal	Metallic			1
B	Aqua	Metallic			1
B	Racing Green	Metallic			1
B	Lava Orange	Pearlescent			1
B	Lightning Yellow	Pearlescent			1
B	Quartz	Mettallic			







## LOTUS CARS LTD.



July 2001

**Attention Parts Manager**

**Elise 2001 Service Parts List A117T0325J - Update package 2001/01**

Dear Sir/Madam,

Please find the enclosed update package 2001/01 for the Elise 2001 Service Parts List A117T0325J, which should be collated into your copy as follows:

**Discard (text and illus.)**

**Insert**

10.01 to 10.25, all pages

10.01 to 10.25 all pages, (stamped '2001/01')

11.01 & 11.02, all pages

11.01 & 11.02, all pages, (stamped '2001/01')

12.01 to 12.09, all pages

12.01 to 12.09, all pages, (stamped '2001/01')

13.02, all pages

13.02, all pages, (stamped '2001/02')

34.01, all pages

34.01, all pages, (stamped '2001/01')

40.19, all pages

40.19, all pages, (stamped '2001/01')

Please take time to correctly update this parts list, and ensure that all parts dept. personnel are made aware of the new content. Any copies of the parts list held in dealer stock should be updated by ordering under Part No. A117T0325/01/01

Yours faithfully

**John Hostler – Illustrator/Parts List Controller**


A117UPpl

## VEHICLE IDENTIFICATION NUMBER & ENGINE NUMBER



The Vehicle Identification Number (V.I.N.) is stamped on the chassis in the right hand rear sill area, and is also printed on a label stuck to the body in the front services compartment. The engine number is marked on a vertical patch at the left hand end of the forward face of the cylinder block, and is most easily viewed using a mirror.


Both numbers should always be quoted with any vehicle enquiries, as Factory records are filed against V.I.N., and specification change points are identified by V.I.N. or engine number. The vehicle licence number may not accurately reflect vehicle age, may also be changed during the car's life, and is an unreliable method of vehicle identification.

The V.I.N. comprises 17 characters, coded in accordance with European Economic Community (EEC) directives. For change point identification in Service Notes and Service Parts Lists, characters 10 (model year) and 15 - 17, or 14 - 17 (serial number) will be quoted.

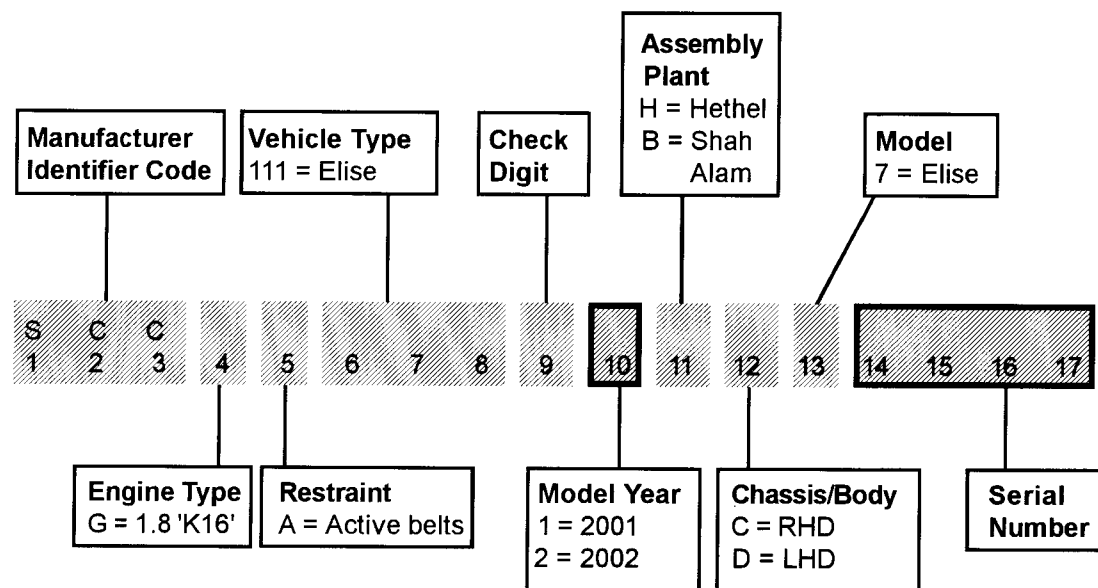

ELISE

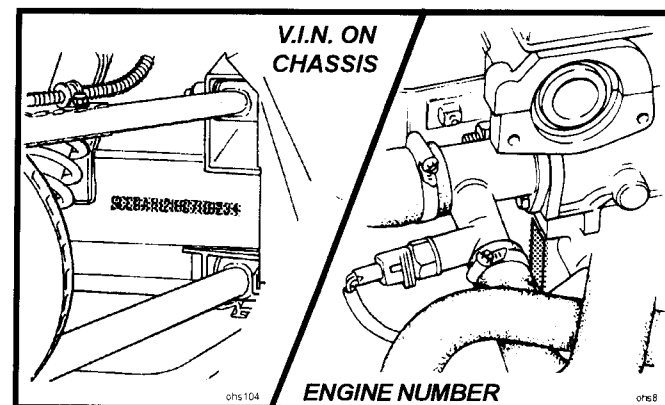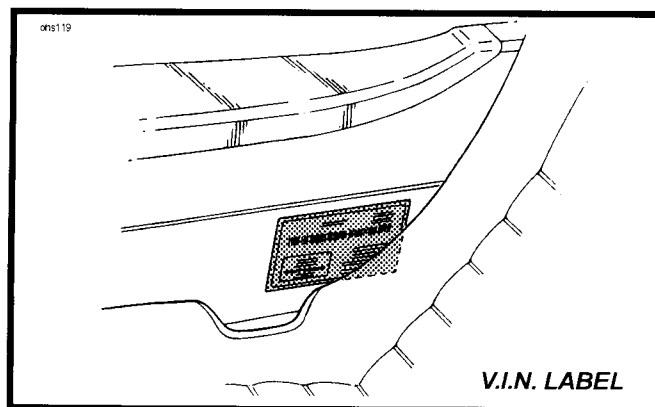

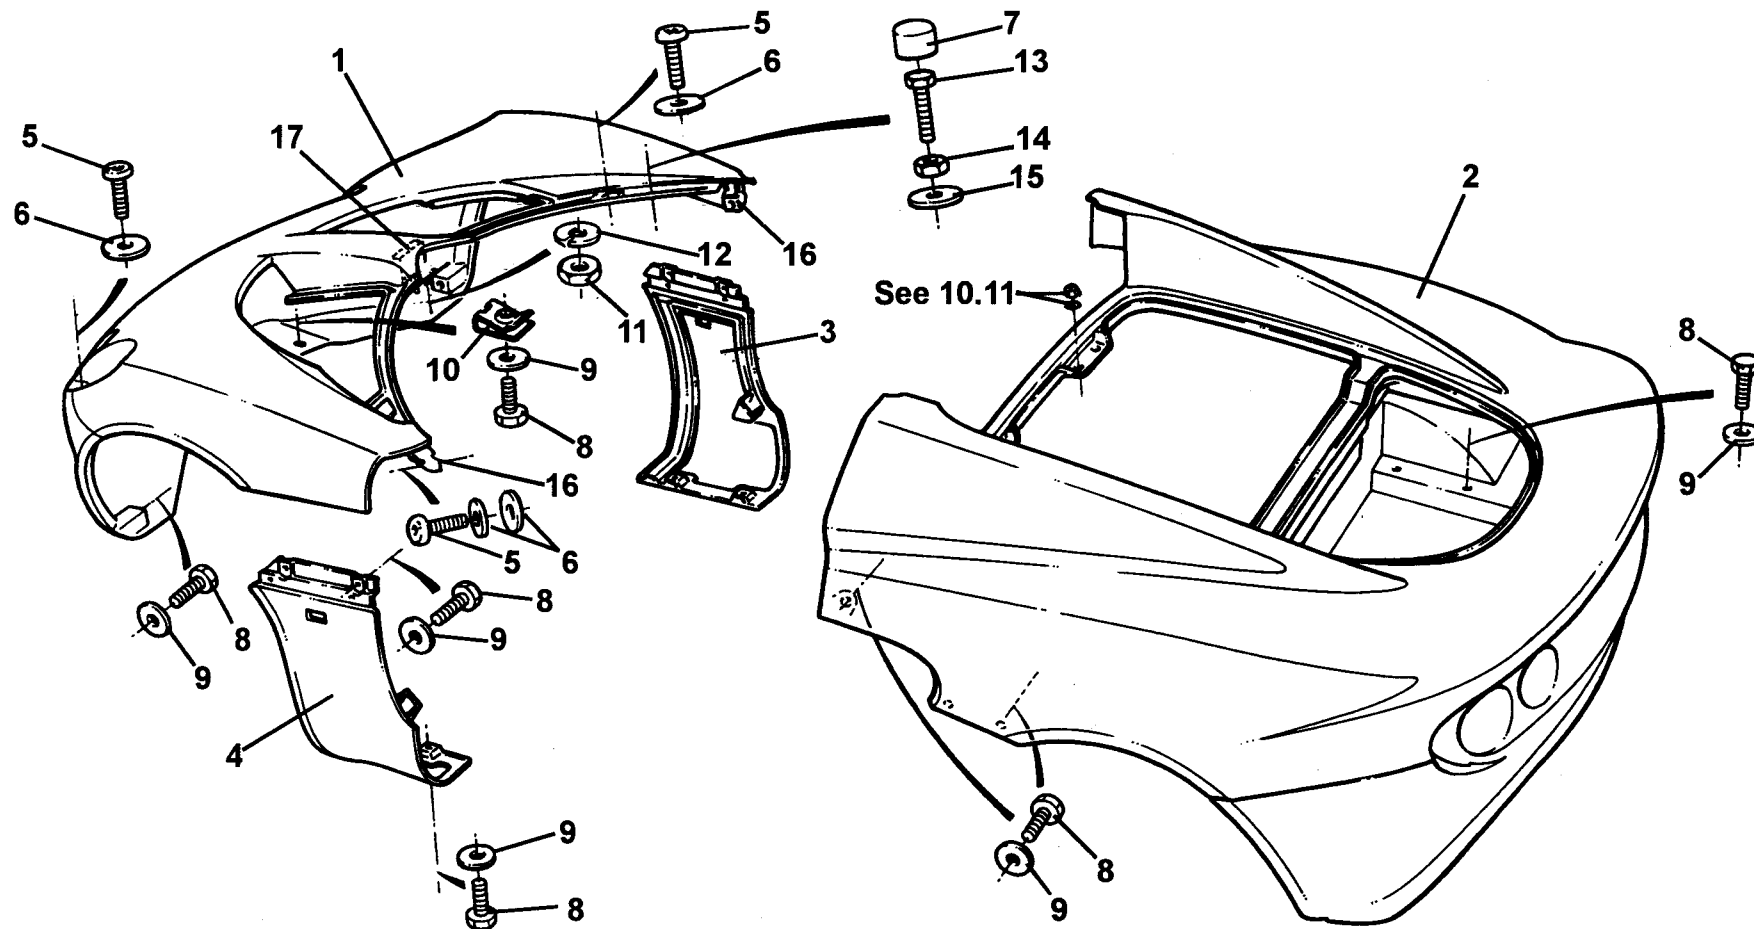

**ELISE**  
10.01


# Service Parts List **ELISE**



## Function Code 10.01 Body: Front & Rear Clamshells & Fixings

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Front Clamshell		Primed	A117B0002K	1
02	Rear Clamshell		Primed	A117B0016K	1
03	Door Hinge Cover Panel, RH		Primed	A117B0226K	1
04	Door Hinge Cover Panel, LH		Primed	A117B0227K	1
05	Screw, M8 x 25, S/S, button hd.			A111W7175F	6
06	Washer, flat, S/S, M8 x 21 x 1.6			A111W4176F	8
07	Rubber buffer			X046B6113Z	2
08	Screw, M6 x 16, hex. hd.			A075W1028Z	22
09	Washer, flat, M6 x 18 x 1			B082W4018F	22
10	Spirenut, M6			B100W6372F	3
11	Nut, M8			A075W3021Z	2
12	Washer, spring, M8			A075W4036F	2
13	Setscrew, M8 x 35, hex. hd.			A075W1041Z	2
14	Locknut, M8			A075W3026Z	2
15	Washer, flat, M8 x 25 x 1.4			A111W4156F	2
16	Bracket, front clamshell	Part of clamshell assy.		A117B0163F	2
17	Bracket, centre front clamshell	Part of clamshell assy.		C117U0193F	1
18	Pad, front clamshell mounting	Not illustrated, on radiator housing		A117U0163F	2

**ELISE**

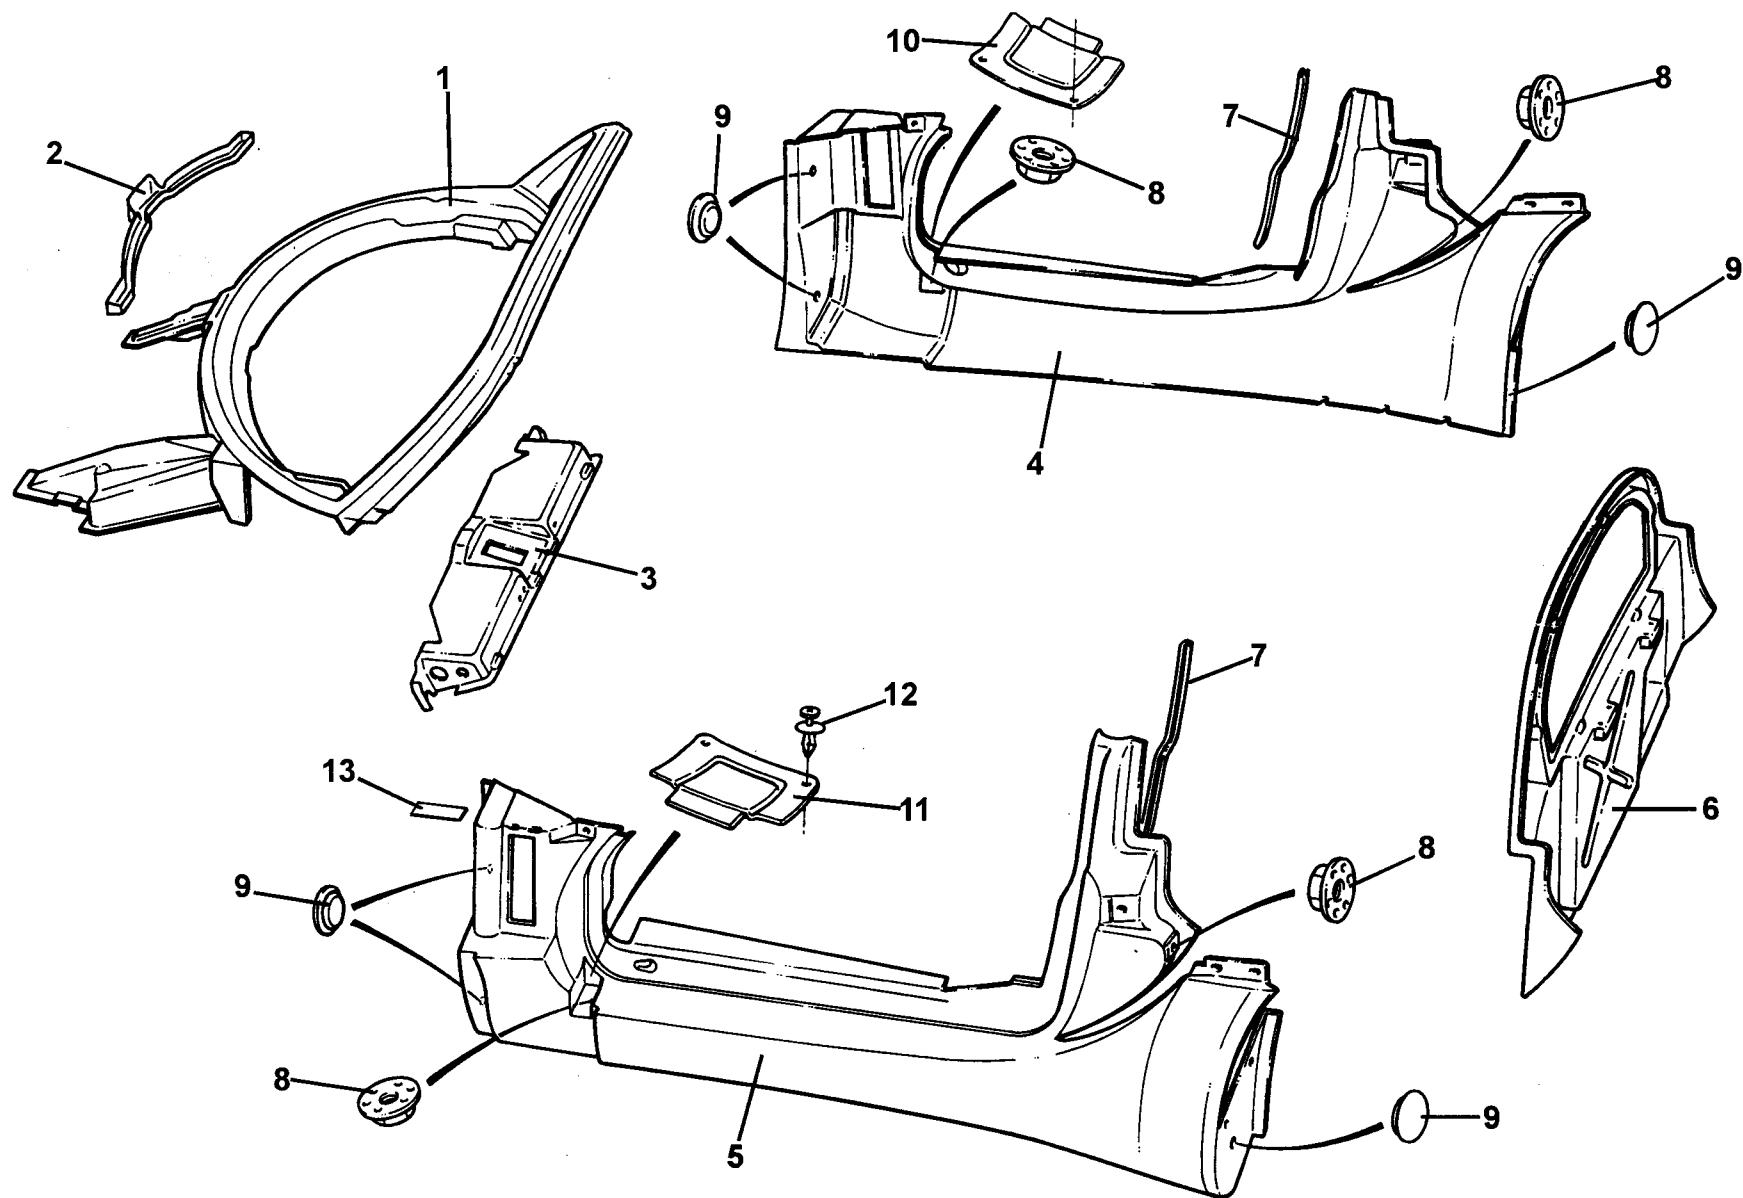


**ELISE**  
10.02a

# Service Parts List **ELISE**



## Function Code 10.02a Body: Sill Panels, Windscreen Frame & Rear Bulkhead

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Windscreen Frame Assembly		Painted	A116B0148K	1
02	Gutter, windscreen frame			A117B0153F	1
03	Baffle, scuttle to fascia top			A116B0195F	1
04	Sill Panel, RH		Primed	A117B0028K	1
05	Sill Panel, LH		Primed	A117B0029K	1
06	Rear bulkhead Assembly			A117U0041F	1
07	Edge Finisher, 'B' post			B111U0231K	2
08	Captive Nut, M8, big hd.			A111W6592F	18
09	Blanking Grommet, 12.5mm			A100B6163F	1
10	Finisher Panel, front sill recess, RH			A117U0168F	1
11	Finisher Panel, front sill recess, LH			A117U0169F	1
12	Plastic Fastener, panel fix.			A100W6479F	4
13	Pad, hole blanking, upper hinge fixings			A117U0258F	2
14	NVH Foam, sill front	Not illustrated		B117B0034F	2

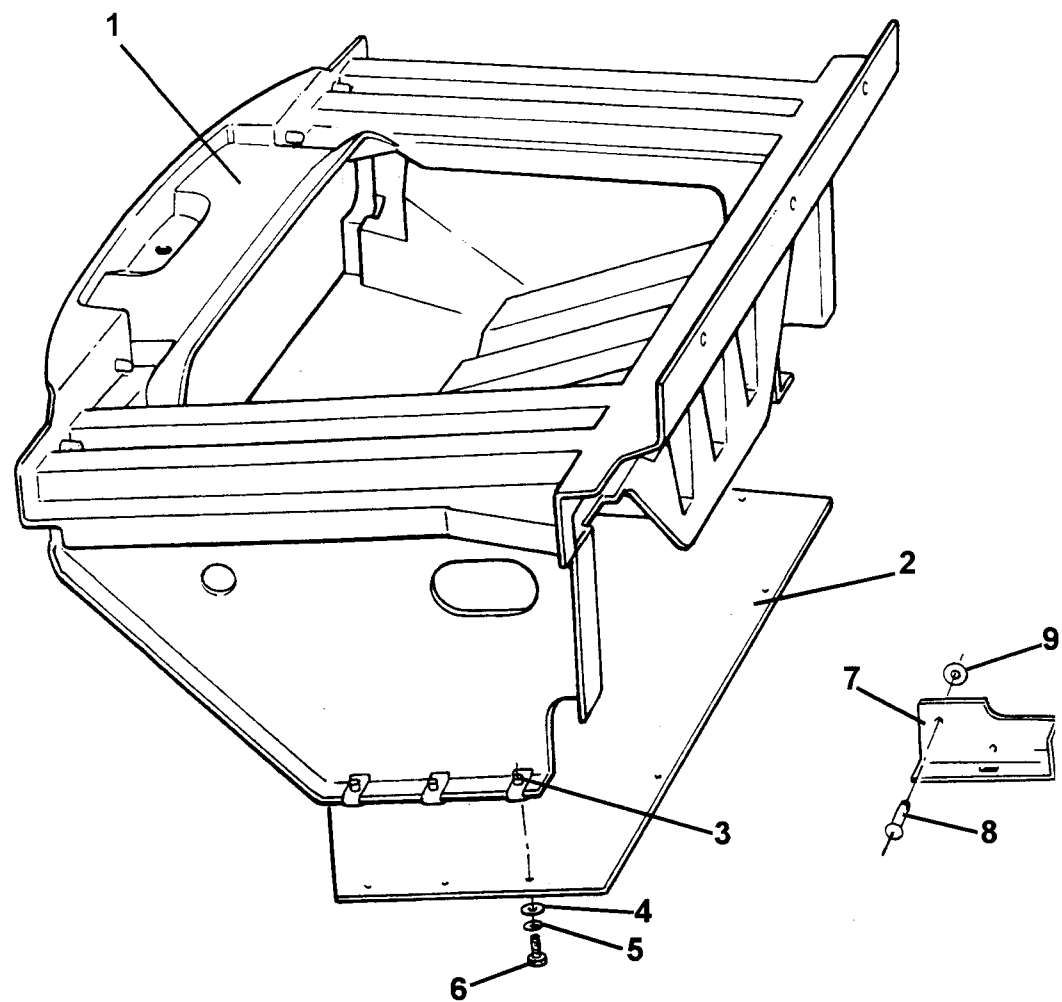

**ELISE**  
**10.04**

# Service Parts List

# ELISE




## Function Code 10.04 Crash Structures

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Front Crash Structure Assembly			A116B0056J	1
02	Panel, front undershield			B117B0237F	1
03	Spirenut M6, undershield fix			B100W6372F	6
04	Screw, M6 x 25, pozi., undershield fix			A075W5089Z	9
05	Washer, spring, M6, undershield fix			A075W4035Z	9
06	Washer, flat, M6 x 15 x 1.5, undershield fix			A075W4015Z	9
07	Alloy Plate, LH			A111B0531F	1
07a	Alloy Plate, RH			A111B0530F	1
08	Pop Rivet, plate fix.			A085W6259F	6
09	Washer, flat, 3/16" x 1/2", plate to crash structure			A075W4000Z	4
12	Betaseal 1701, crash structure bonding	Not illustrated		A082B6281F	300mm

# ELISE



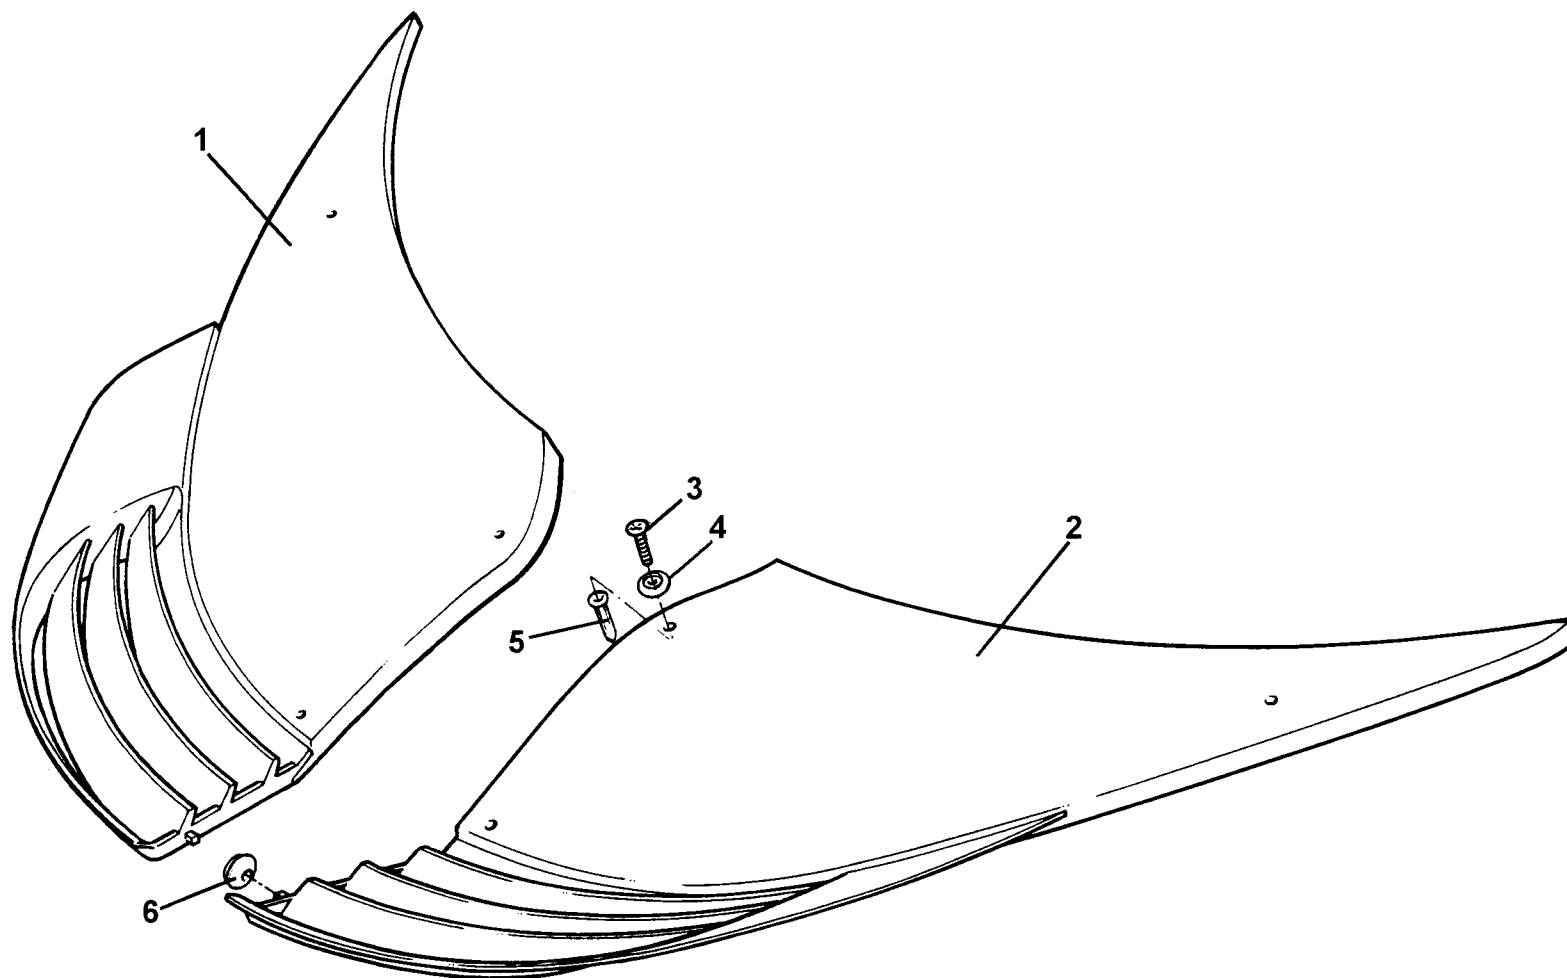

**ELISE**  
10.09a


# Service Parts List **ELISE**



## Function Code 10.09a Front Services Access Panels

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Access Panel Assembly, front services, RH		Primed	A117B	1
02	Access Panel Assembly, front services, LH		Primed	A117B	1
03	Screw, M5 x 15, button. skt. hd., panel fix.			A082W7179F	6
04	Escutcheon, screw to panel			B340B0123F	6
05	Jacknut			A076W3043F	6
06	Grommet, panel spigot retaining			X036B6010Z	2
07	Washer, self adhesive, escutcheon to panel	Not illustrated		A340B3013F	6

**ELISE**

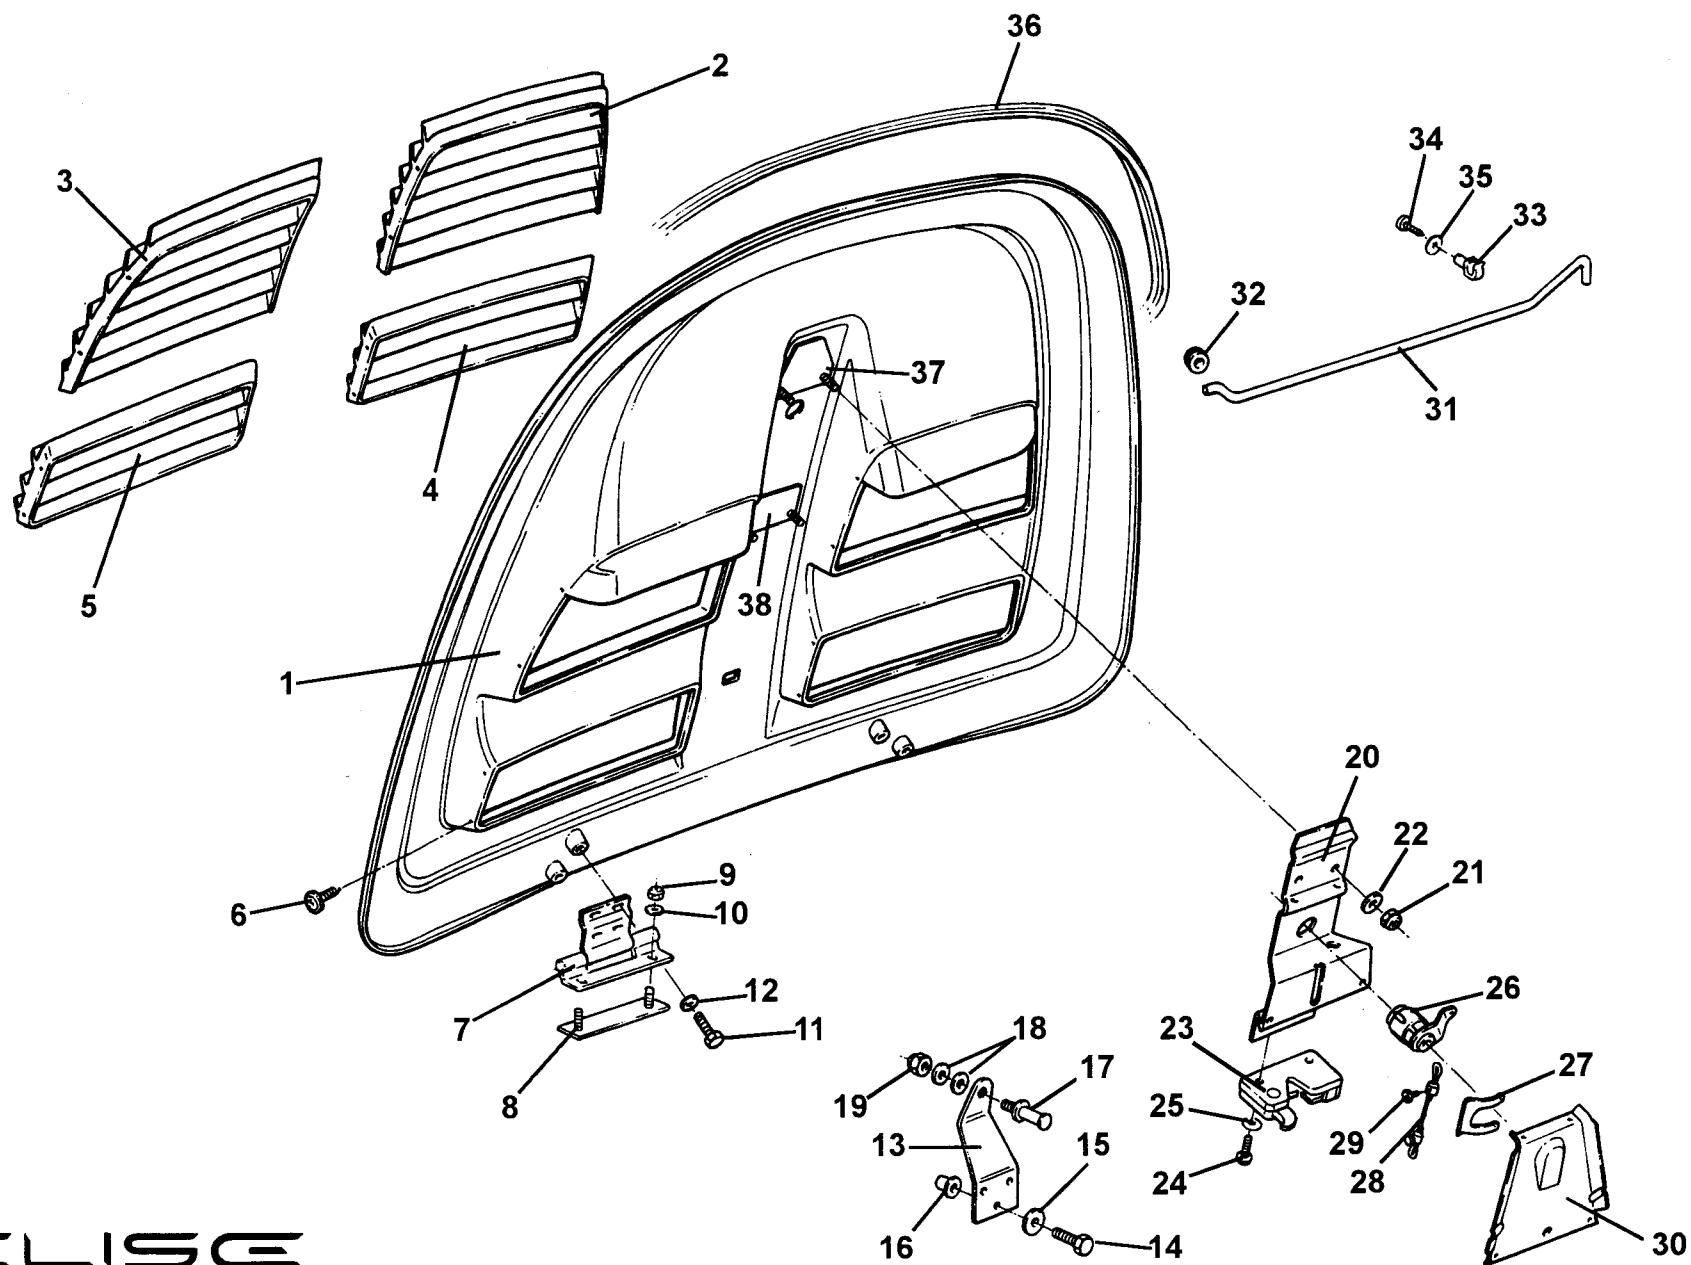

**ELISE**  
10.11


# Service Parts List **ELISE**



## Function Code 10.11 Engine Cover Lid & Latch Mechanism

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Engine Cover Lid			A117B0050K	1
02	Grille, outlet, RH rear			C117B0218F	1
03	Grille, outlet, LH rear			C117B0217F	1
04	Grille, outlet, RH front			C117B0130F	1
05	Grille, outlet, LH front			C117B0129F	1
06	Screw, grille to cover				16
07	Hinge assembly			C117B6002F	2
08	Stud Plate, hinge retention			B117B0236F	2
09	Nut, hinge to stud plate				4
10	Washer, flat				4
11	Screw, hinge to engine cover				4
12	Washer				4
13	Bracket, striker pin			A117B0222F	1
14	Screw, bracket to bulkhead				3
15	Washer, flat				3
16	Rivnut				3
17	Striker Pin			A117B0223F	1
18	Washer				1


**ELISE**

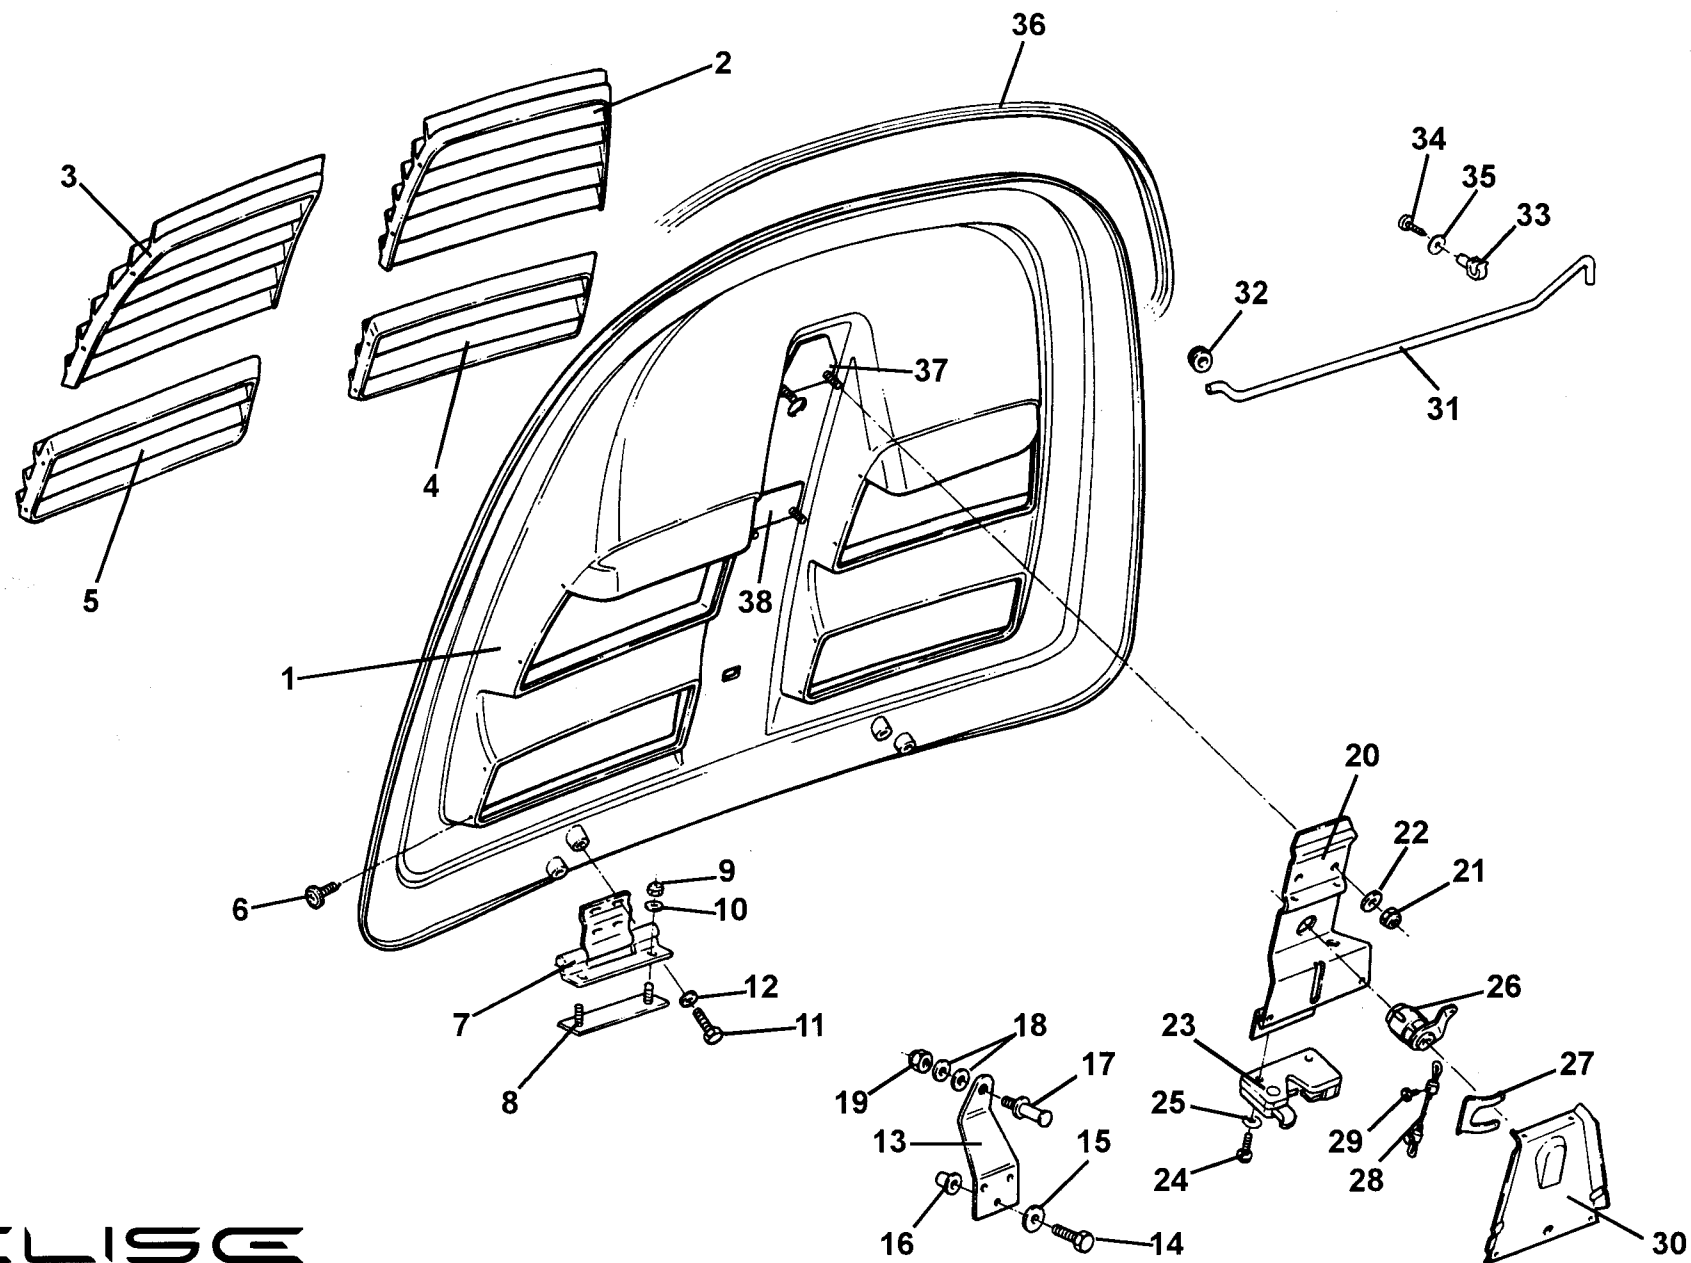

**ELISE**  
10.11

## Function Code 10.11 Engine Cover Lid & Latch Mechanism

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
19	Nut				1
20	Bracket, latch retention			A117B0053F	1
21	Nut, bracket to cover				4
22	Washer, flat				4
23	Latch Assembly			A117B6001F	1
24	Screw, M6 x 20, latch to bracket			A111W1150F	3
25	Washer, flat, M6 x 25 x 1.4, SS, black			A082W4131F	3
26	Lock Barrel				1
27	Clip, barrel retention				1
28	Cable, latch release				1
29	Grub Screw, cable adjustment				2
30	Cover, latch assembly			A117U0162F	1
31	Stay, lid supporting			A117B0244F	1
32	Grommet, stay to bulkhead			X036B6150Z	1
33	Retaining Clip, stay			A082W6325F	1
34	Screw, No.8 x 0.5", pan hd., pozi., clip fixing			A075W5034Z	1
35	Washer, flat, 3/16 x 1/2", blk.			A075W4063Z	1
36	Weatherseal, luggage compartment gutter			A089V6055F	1
37	Stud Plate, bracket fixing, rear			A117B0243F	1
38	Stud Plate, bracket fixing, front			A117B0242F	1

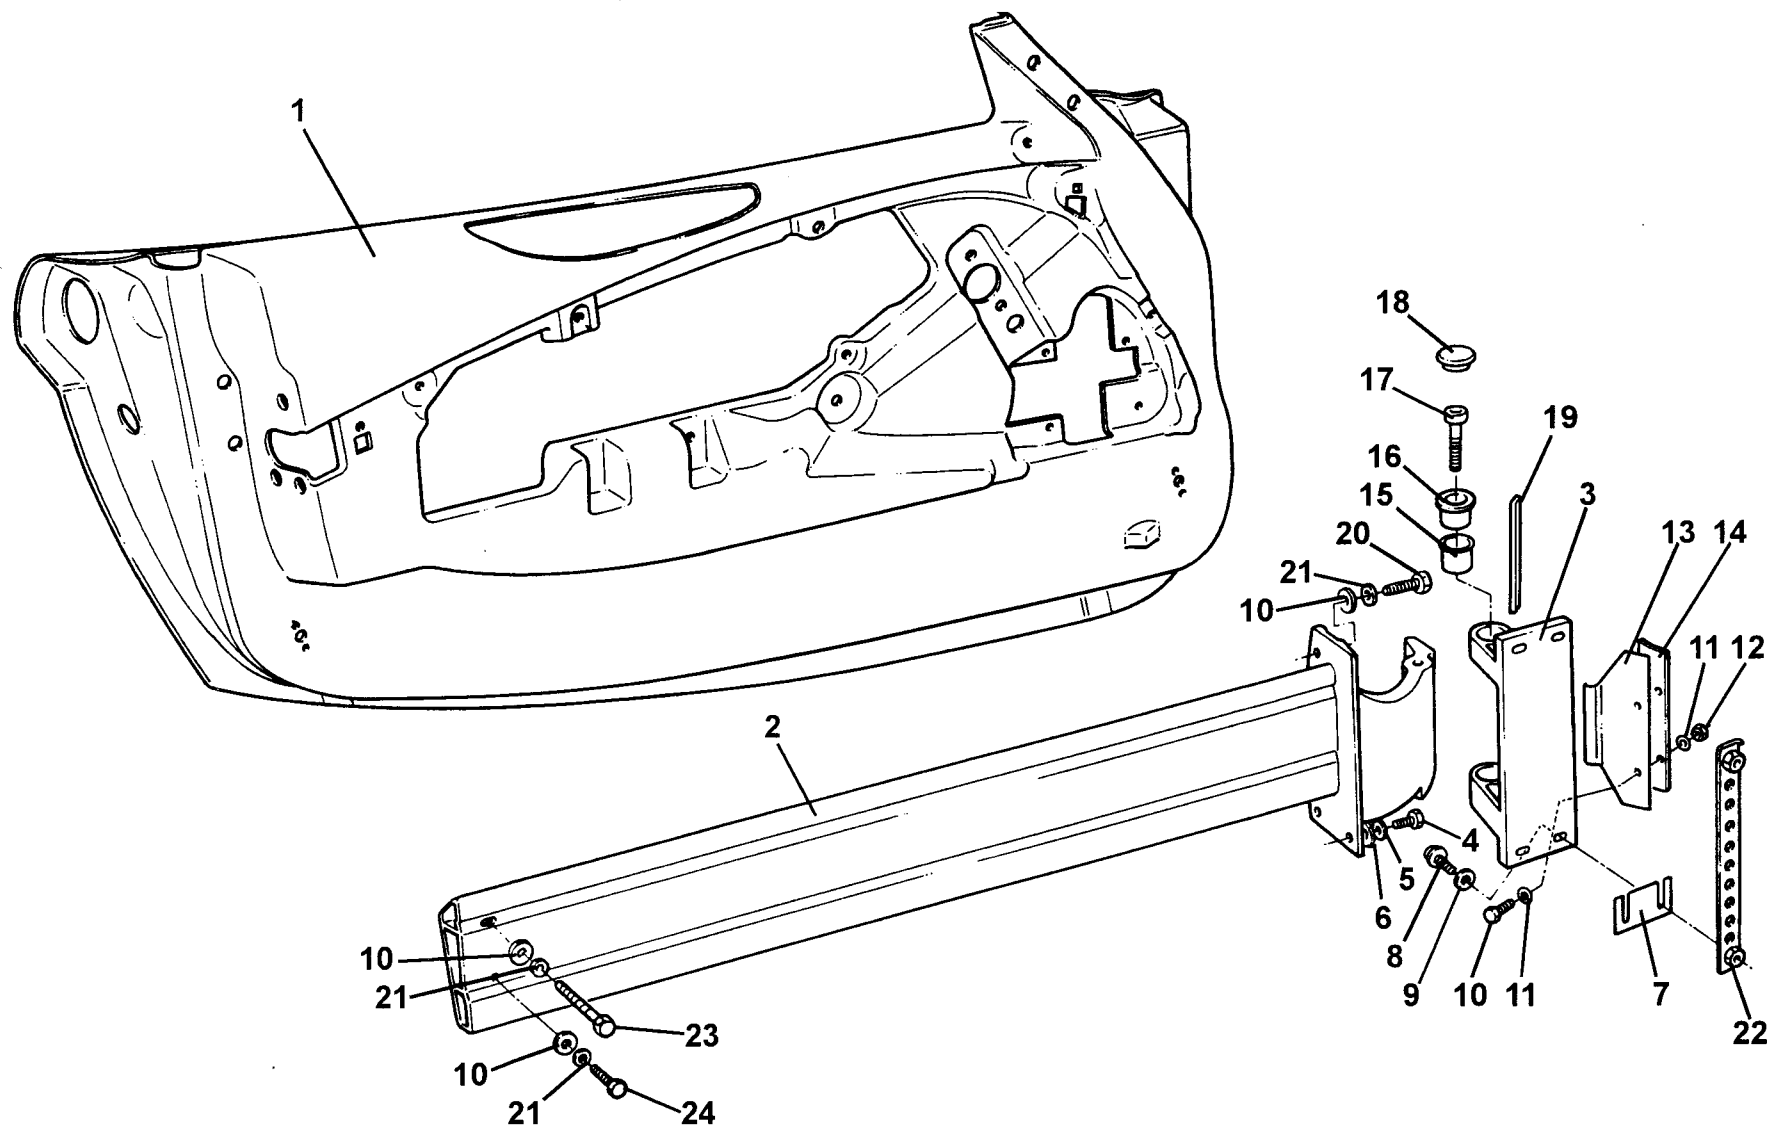

**ELISE**  
10.15

# Service Parts List **ELISE**




## Function Code 10.15 Door Shells, Beams, Hinges

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Door Shell, LH		Primed	A117B0059K	1
01a	Door Shell, RH		Primed	A117B0058K	1
02	Door Beam, LH			D116U0029F	1
02a	Door Beam, RH			D116U0030F	1
03	Hinge, chassis to door beam			A111U0055F	2
04	Setscrew, M6 x 20, hex. hd., beam to door fix.			A075W1030Z	4
05	Washer, shakeproof, M6			A075W4046Z	4
06	Washer, flat, M6 x 1.5			A075W4015Z	4
07	Shim, door hinge, 1.0mm			A111B0316F	As req
07a	Shim, door hinge, 1.5mm			A111B0317F	As req
07b	Shim, door hinge, 2.0mm			B111B0314F	As req.
07c	Shim, door hinge, 3.0mm			B111B0315F	As req
08	Screw, M8 x 30, cap hd.			A089W7052F	8
09	Washer, flat, M8 x 16.6 x 1.4			A075W4020Z	18
10	Screw, M6 x M20, hex. hd.			A075W1030Z	4
11	Washer, flat, M6			A075W4013Z	8
12	Nut, M6, Nyloc			A075W3009Z	4
13	Spring Plate, door check			C116B0257F	2

**ELISE**




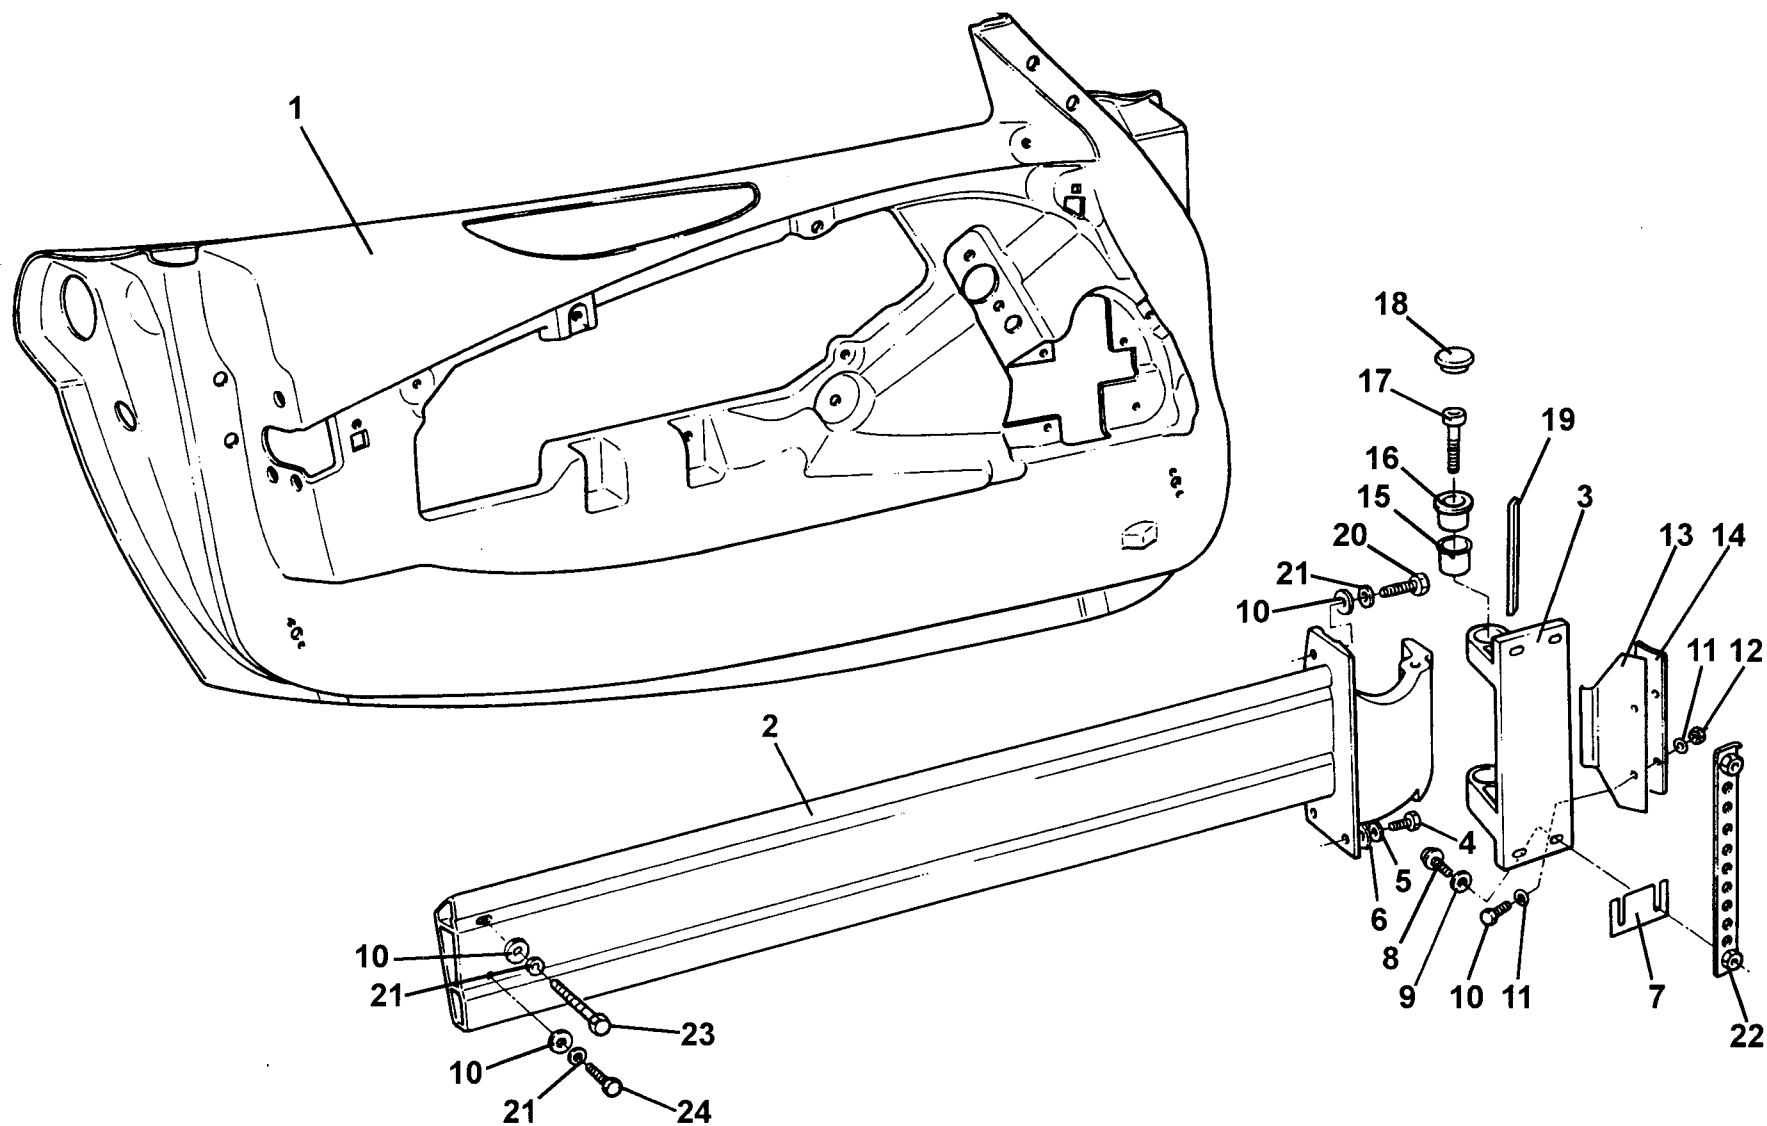

**ELISE**  
10.15

**Function Code 10.15 Door Shells, Beams, Hinges**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
14	Support Plate, door check spring			C111B0175F	2
15	Bearing, door hinge			A111U6025F	4
16	Bush, door hinge			A111U0057F	4
17	Screw, M10 x 30, cap hd.			A075W7030F	4
18	Dust Cap, door hinge			A111U6024F	2
19	Door Stop Buffer Strip			B111B0178K	2
20	Setscrew, M8 x 20, hex. hd., beam to door fix.			A075W1038Z	4
21	Washer, shakeproof, M8			A075W4048Z	10
22	Nutplate, door hinges	Fitted in chassis		A111U0056F	4
23	Bolt, M8 x 45, hex,hd.,beam to rear bracket, upper			A075W2040Z	2
24	Setscrew, M8 x 25, hex. hd., beam to rear bracket, lower			A075W1039Z	2

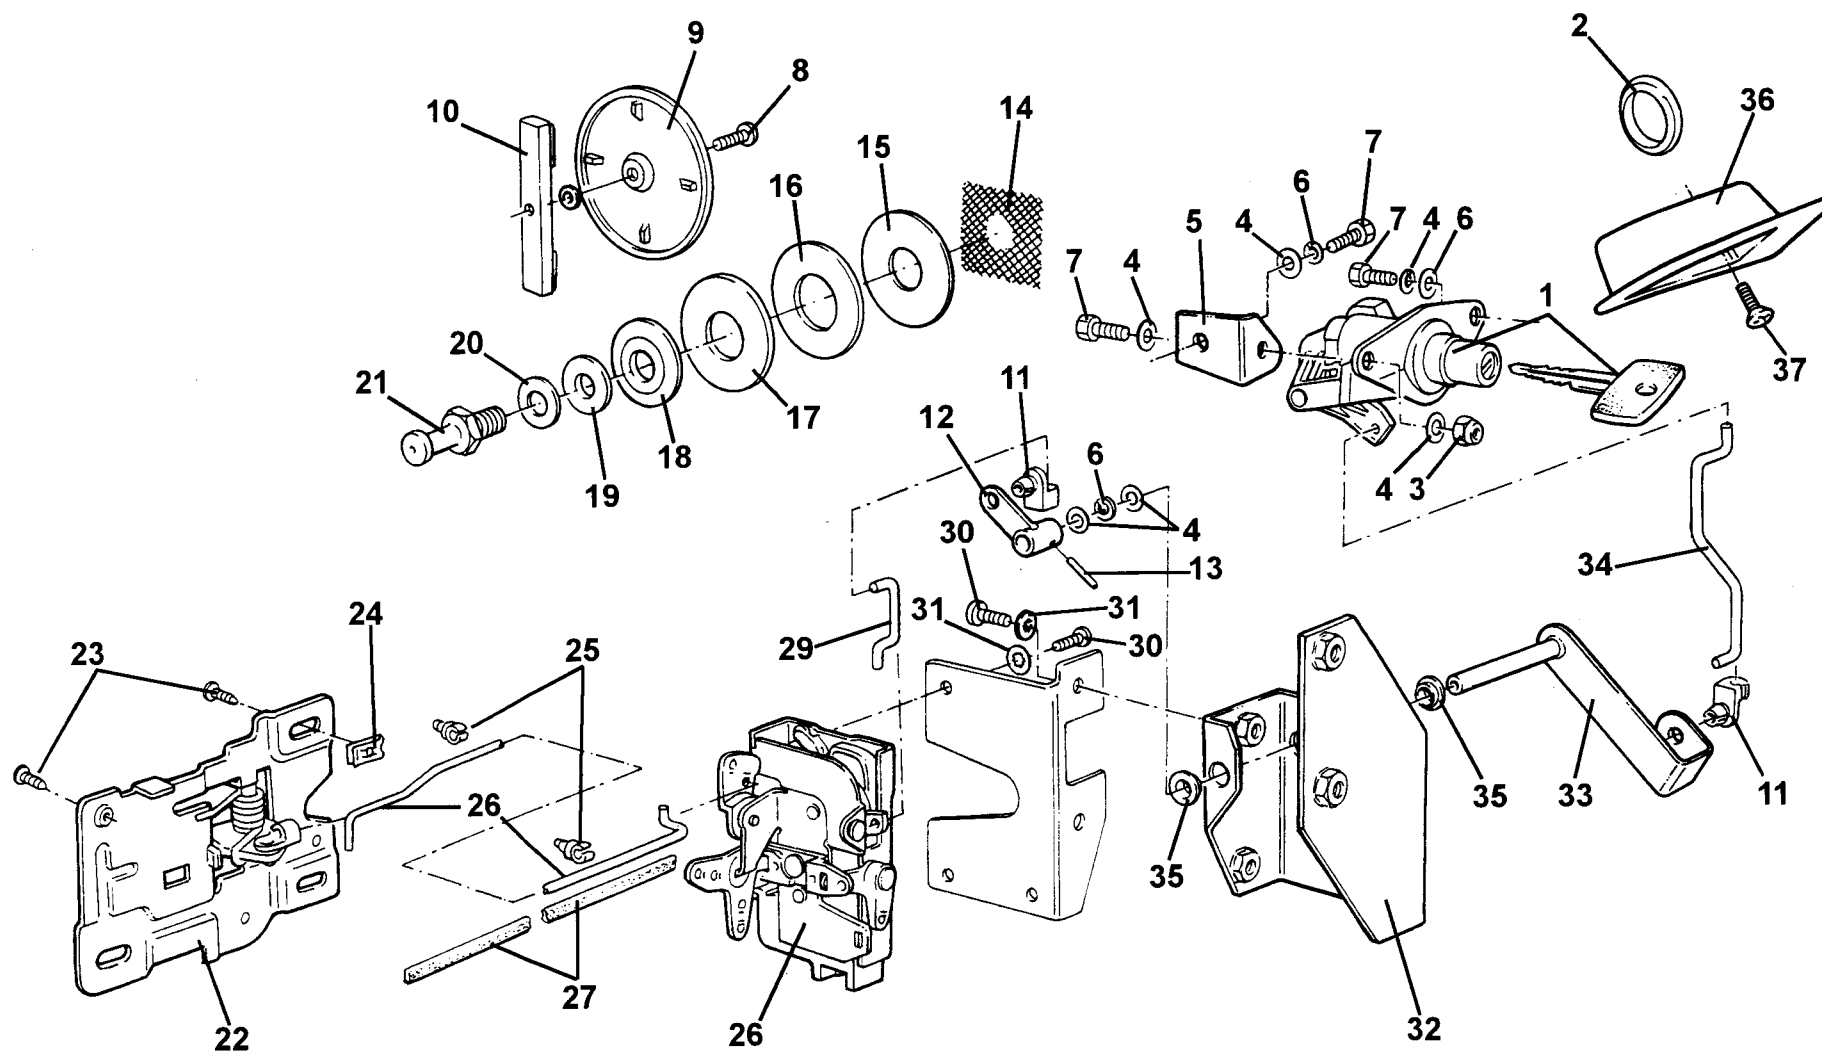

**ELISE**  
10.17


# Service Parts List **ELISE**



## Function Code 10.17 Door Latch Mechanism

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Vehicle Lock Set	Comprising; 2 door lock assys., 1 steering lock barrel, pair of keys		A111U0326S	1
02	Blanking Grommet, linkage access hole			A082B6057F	2
03	Nut, nyloc, M6, support brkt fix			A082B6057F	2
04	Washer, flat, M6 x 12.1 x 1.4, support brkt fix			A075W4013Z	12
05	Support Bracket, release button, LH			A117U0001F	1
05a	Support Bracket, release button, RH			A117U0002F	1
06	Washer, spring, M6, support brkt. fix.			A075W4035Z	6
07	Setscrew, M6 x 16, support brkt. fix.			A075W1028Z	6
08	Screw, M5 x 10, pozi, cover plate fix			A111W5223F	2
09	Cover Plate, mechanism access hole			B111U0094K	2
10	Fixing Strap, cover plate			A111U0095K	2
11	Nylon Clip, linkage retention			A082U6267F	4
12	Lever, door latch release			A111U0122F	2
13	Roll Pin, door latch lever to spindle retention			A111U6560F	2
14	Shim, expanded stainless, door striker attachment			A111U0215F	2
15	Shim, 2mm, door striker pin			A111U0220F	2
16	Shim, 4mm, door striker pin			A111U0219F	2
17	Front Collar, door striker pin			A111U0138F	2


**ELISE**

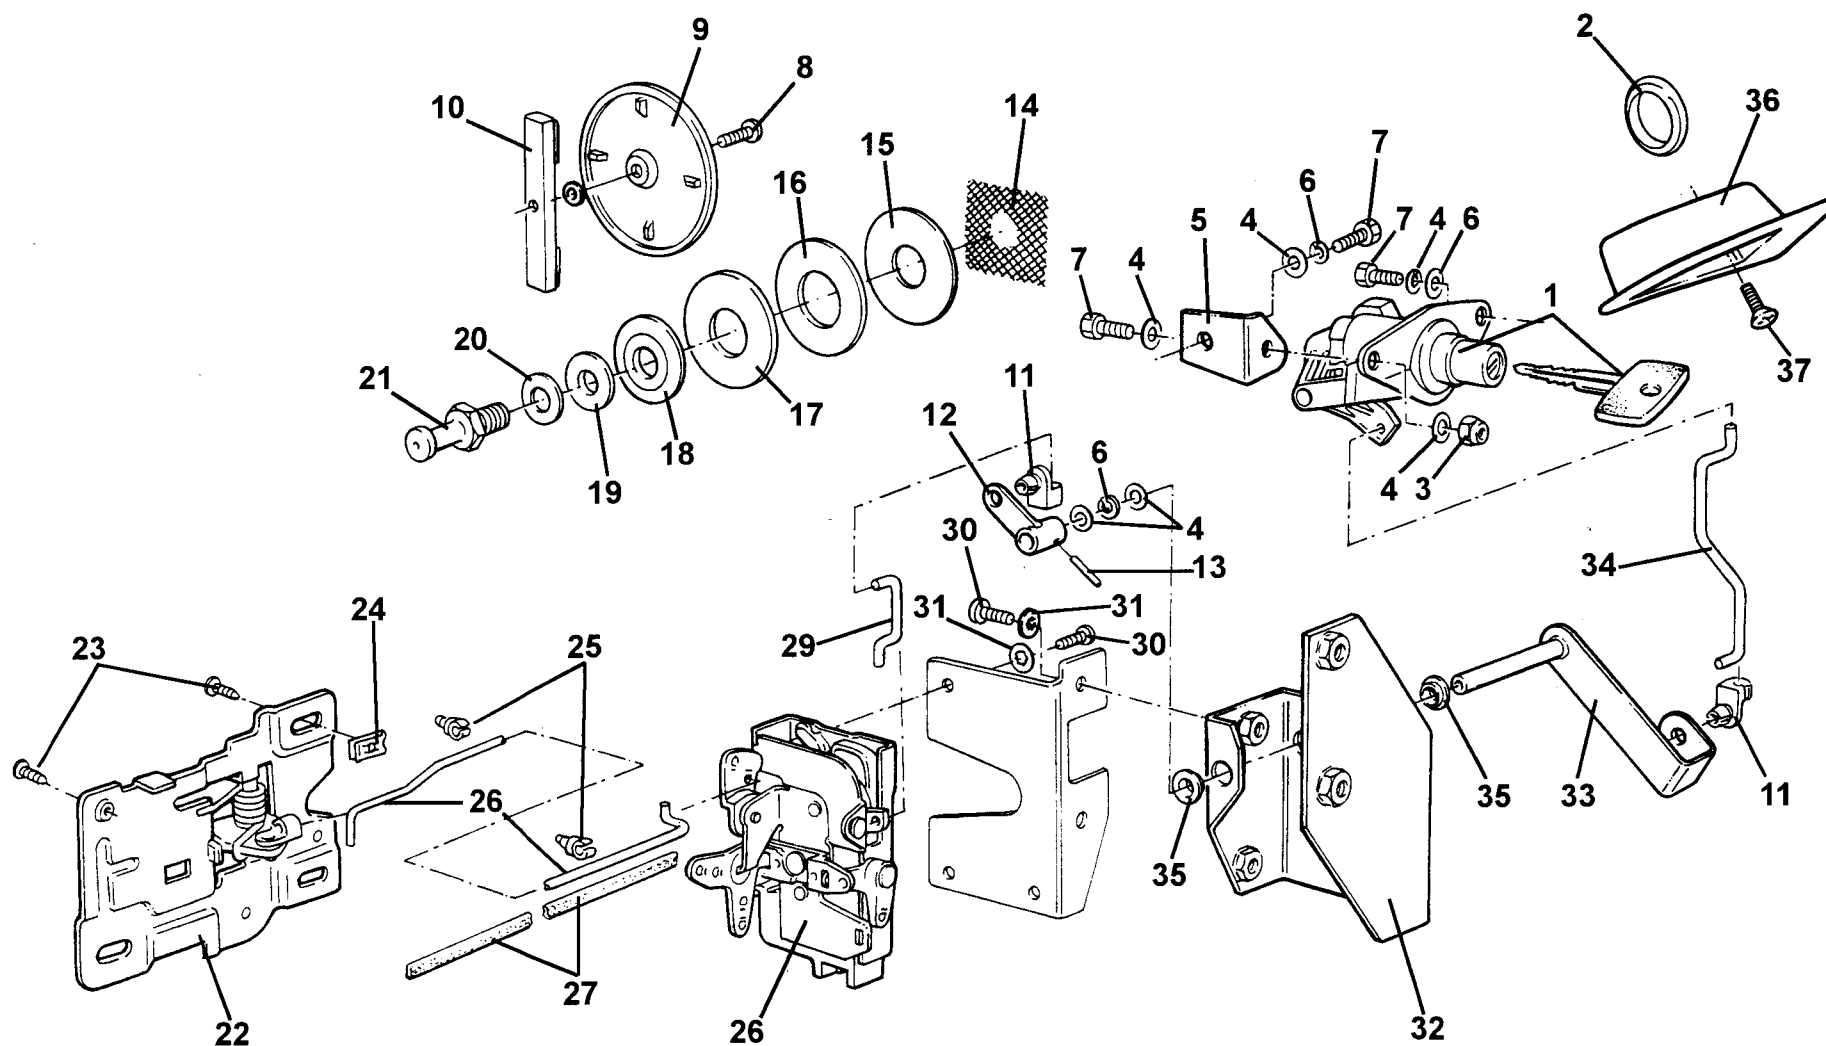

**ELISE**  
10.17

**Function Code 10.17 Door Latch Mechanism**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
18	Finisher, door striker pin			A111U0137K	2
19	Washer, striker			A111U0136F	2
20	Washer, flat, M12 x 24 x 1.6, door striker pin			A075W4071F	2
21	Striker Pin, door latch			A111U6003F	2
22	Release, door latch, interior, LH			A111U6005F	1
22a	Release, door latch, interior, RH			A111U6004F	1
23	Screw, No. 8 x 3/4", pozi., door release fix.			A075W5074Z	6
24	Spire Nut, No 8 captive, door release fix.			A075W6016Z	4
25	Plastic Clip, interior release rod guide			A075J6027Z	4
26	Rod, interior release to latch, LH			B117U0137F	1
26a	Rod, interior release to latch, RH			B117U0138F	1
27	Foam Strip, 19 x 3mm			A082U6067F	As req.
28	Latch mechanism, LH			A111U0389S	1
28a	Latch mechanism, RH			A111U0388S	1
29	Rod, latch to lever assy.			A111U0134F	2
30	Screw, M6 x 12, pozi., door latch/ bracket fix.			A111W5214F	10
31	Washer, shakeproof, M6, door latch fix.			A075W4046Z	6
32	Bracket, door beam attachment, LH			A111U0069F	1
32a	Bracket, door beam attachment, RH			A111U0068F	1
33	Spindle/Lever, door latch release, LH			C111U0121F	1
33a	Spindle/Lever, door latch release, RH			C111U0120F	1

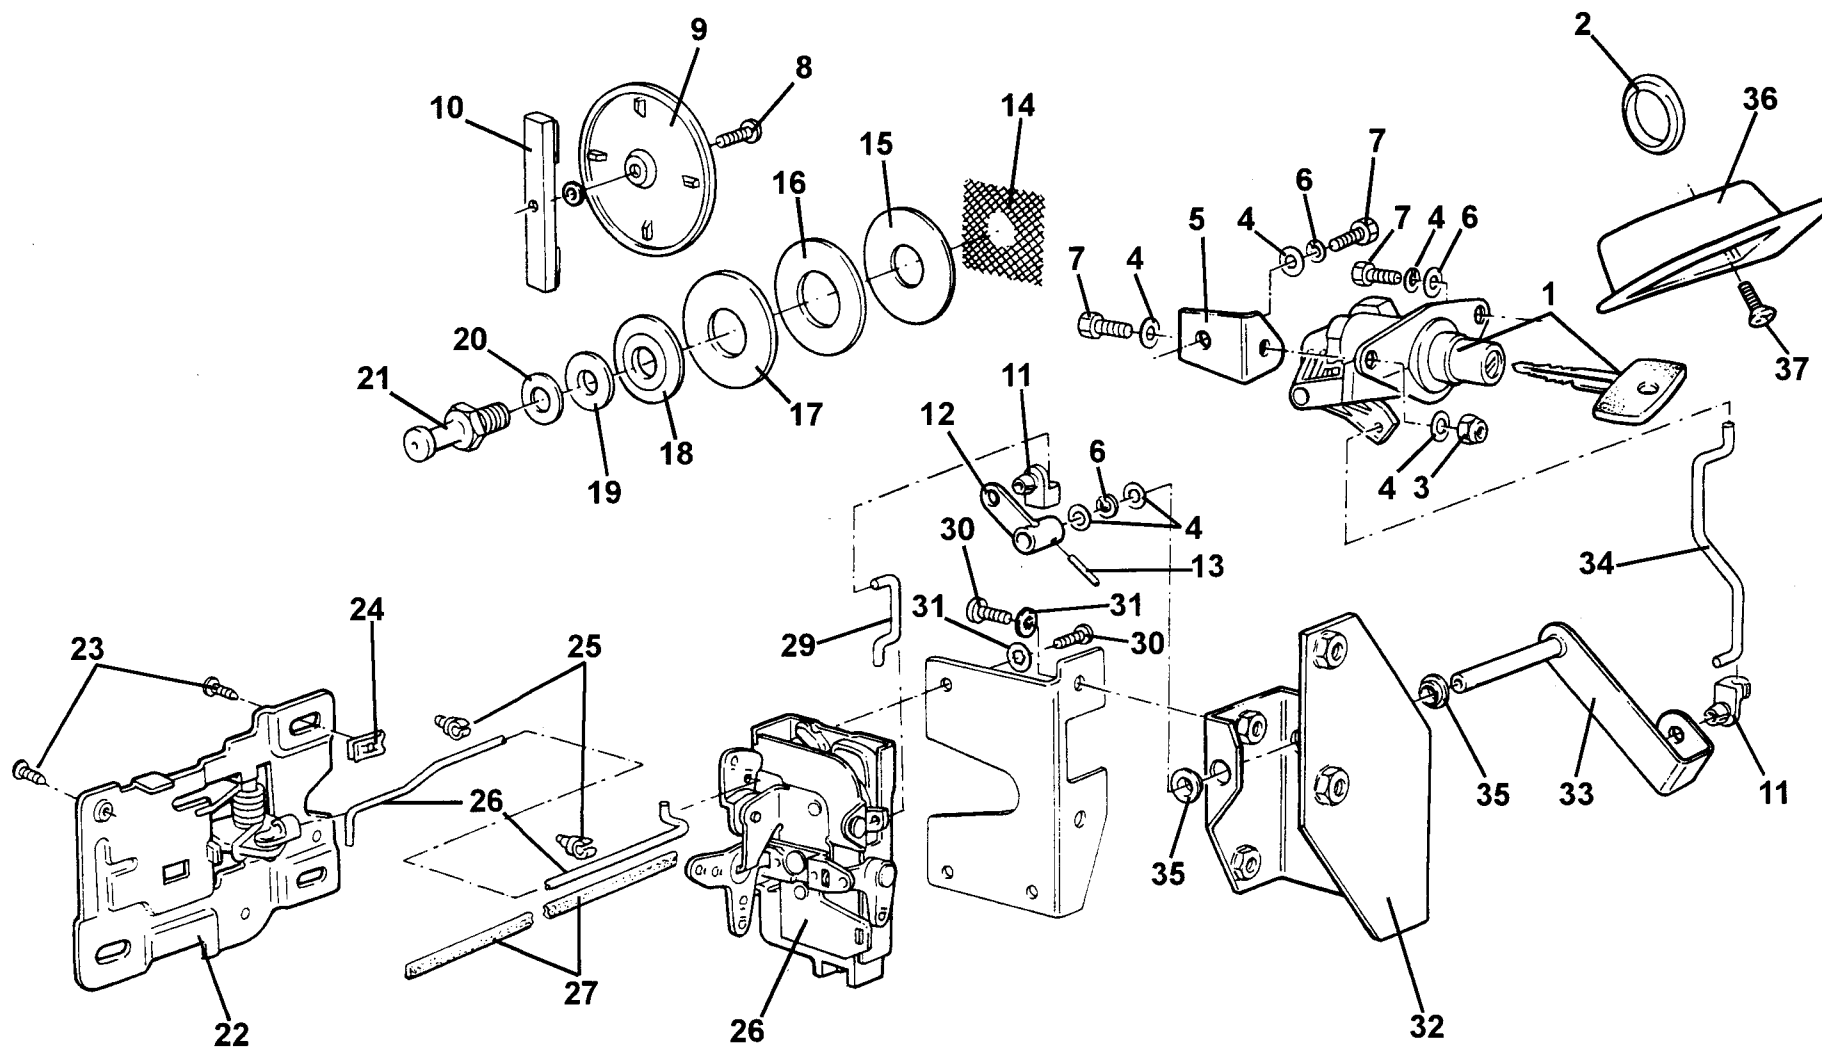


**ELISE**  
10.17

**Function Code 10.17 Door Latch Mechanism**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
34	Rod, latch to release button			A117U0003F	2
35	Bush, lever/spindle assy.			A111U6018F	4
36	Door Pull, exterior, LH			C117B0135F	1
36a	Door Pull, exterior, RH			C117B0136F	1
37	Screw, M4 x 16, csk, pozi, exterior door pull fix.			A100W5033F	4



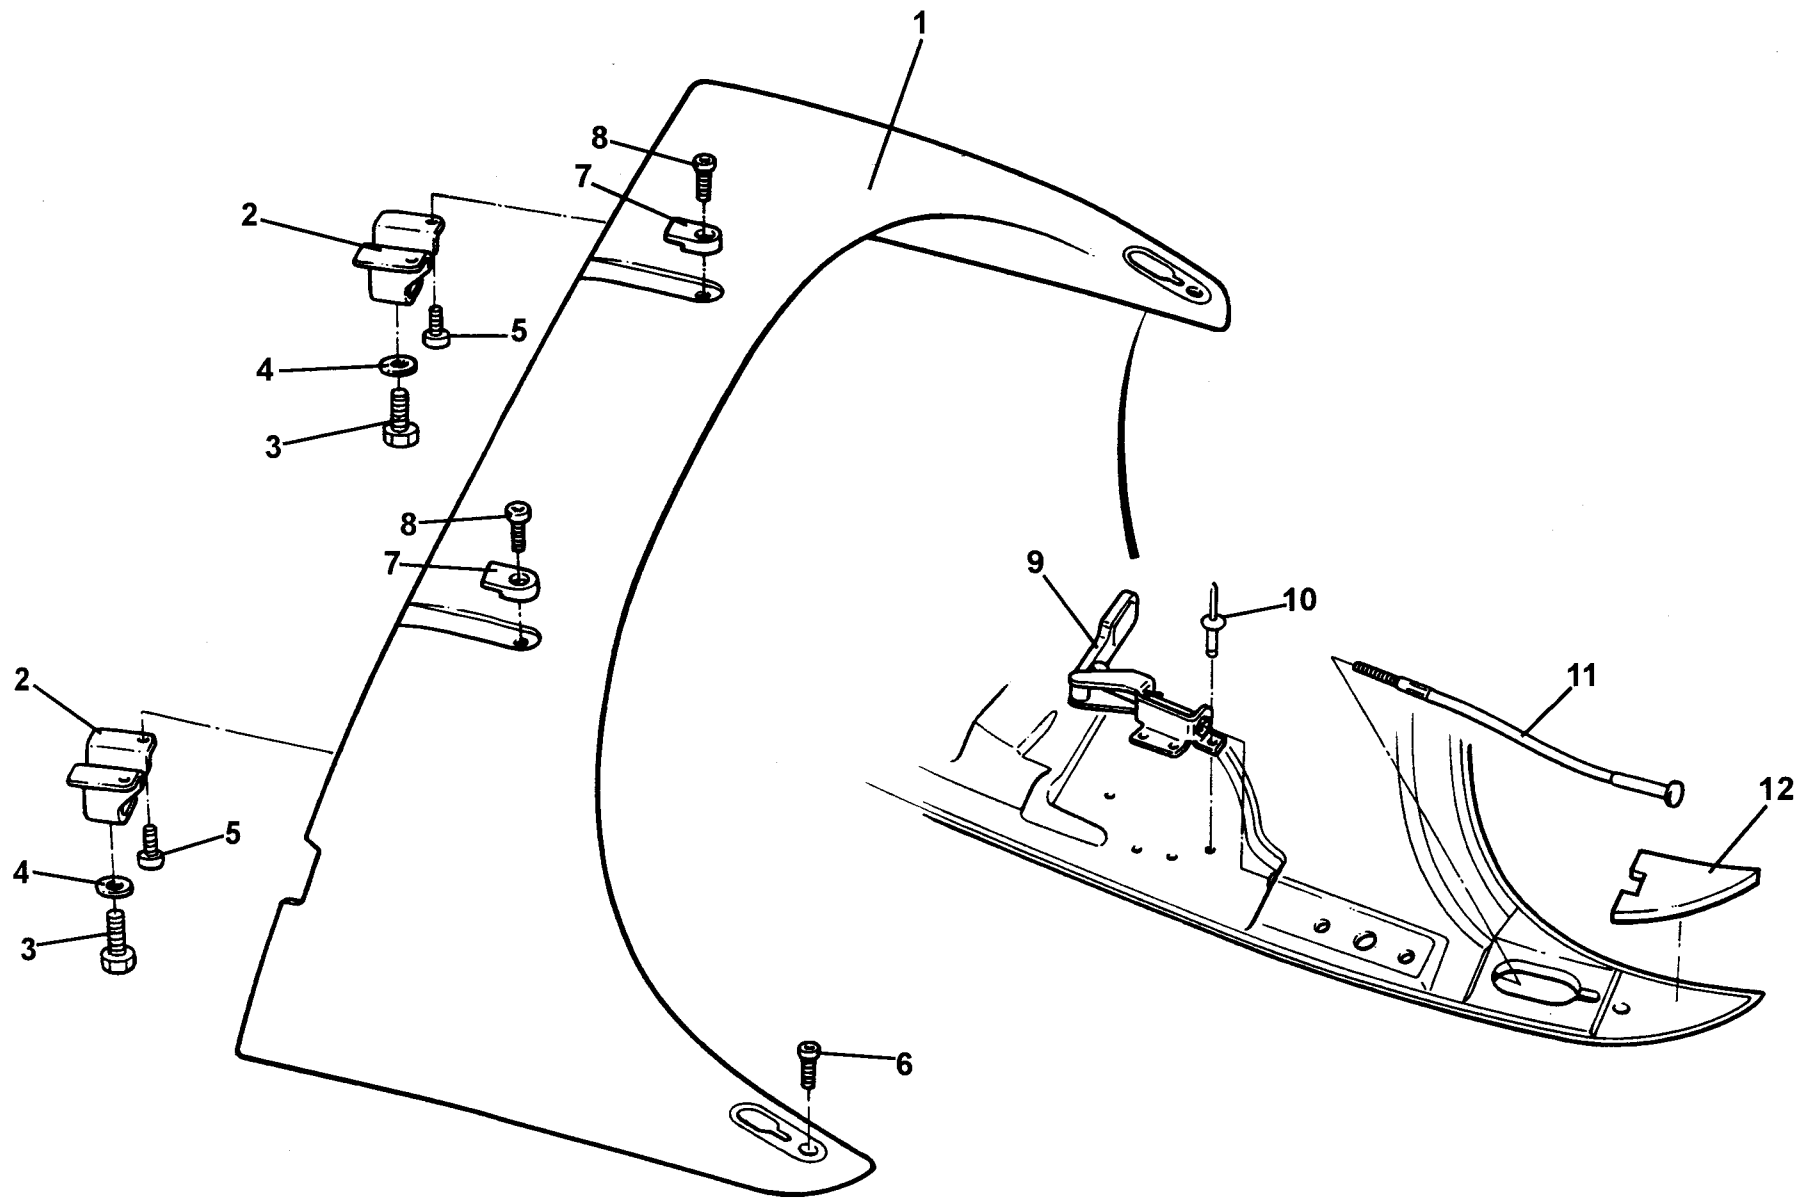

**ELISE**  
10.20

# Service Parts List


# ELISE



## Function Code 10.20 Rear Window Shroud & Fixings

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Rear Window Shroud Assembly	Includes all fittings etc.	Primed	A117B0307F	1
02	Bracket, shroud to bulkhead			A117B0091H	2
03	Screw, hex. hd.				2
04	Washer, flat				2
05	Screw, M4 x 8, cap hd., bracket to shroud			A117B0208H	4
06	Screw, cap hd., shroud to clamshell				2
07	Keeper Plate, rear of hood stays			A117B0084H	2
08	Screw, M5, cap hd., SS, keeper to shroud			A117B0207H	2
09	Tensioner Assembly, soft top tail, RH			A117B0206H	1
09a	Tensioner Assembly, soft top tail, LH			A117B0205H	1
10	Pop Rivet, lever assy. to shroud				6
11	Cable Assembly, soft top tensioning, RH			A117B0250H	1
11a	Cable Assembly, soft top tensioning, LH			A117B0249H	1
12	Foam Gasket, shroud to clamshell			A117B0092H	2

# ELISE

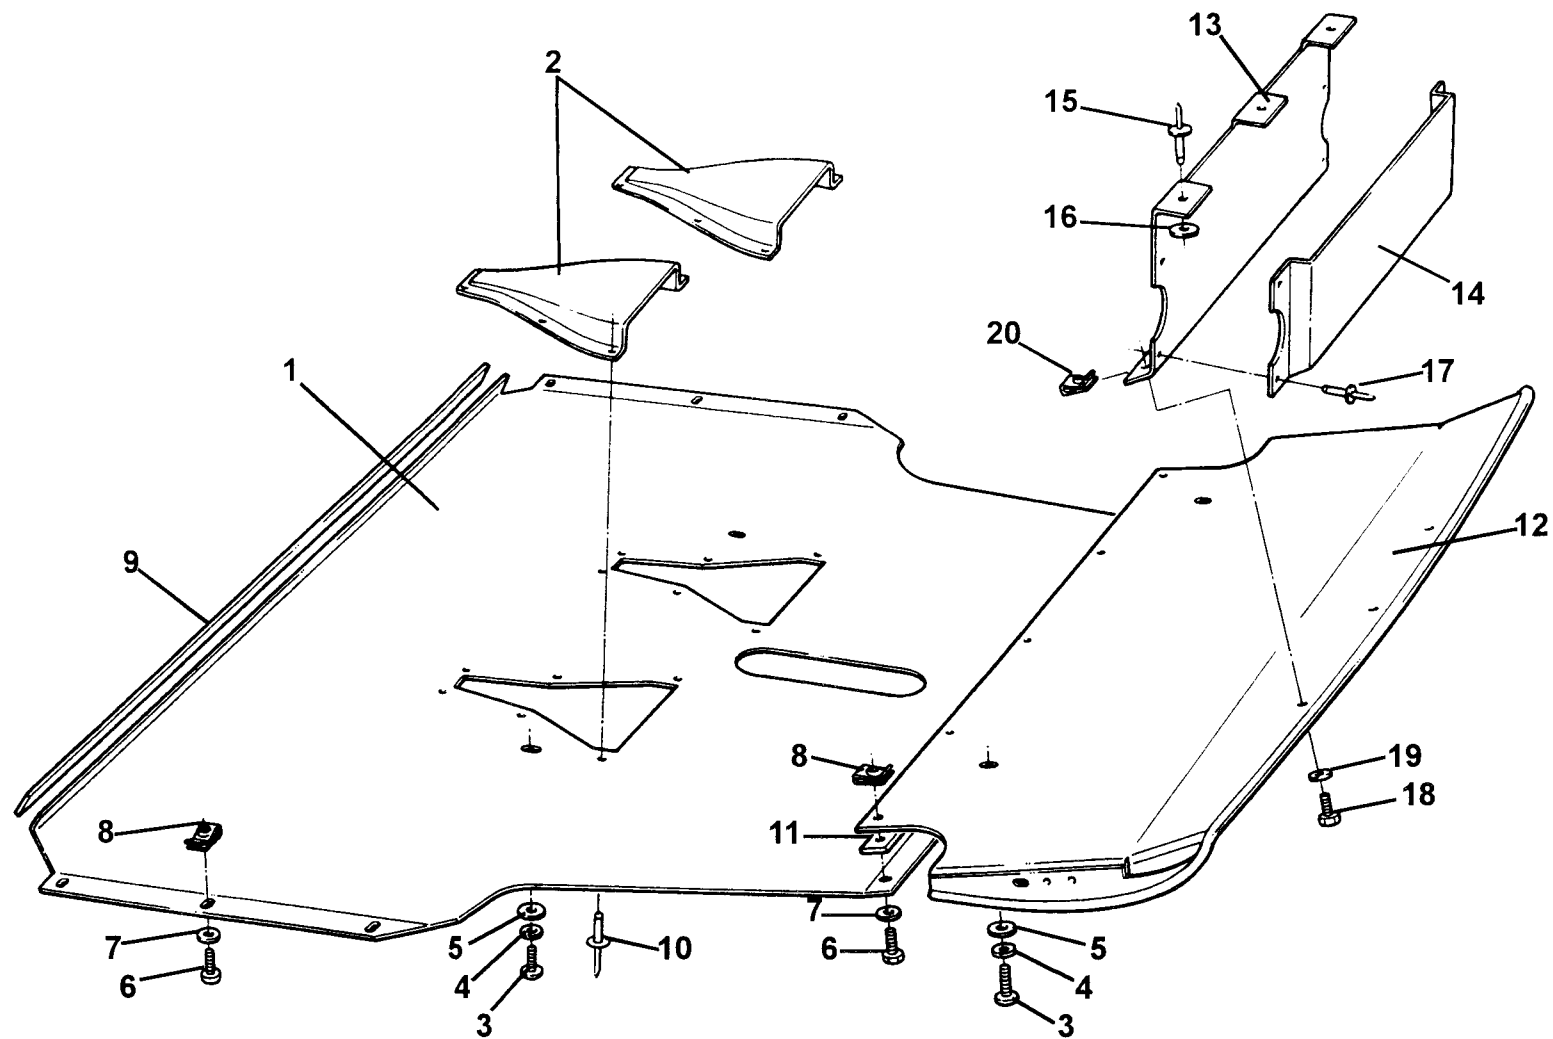

**ELISE**  
10.25


# Service Parts List **ELISE**



## Function Code 10.25 Undertray & Diffuser

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Undertray	Without NACA ducts		A117A0036F	1
01a	Undertray Assembly	With NACA ducts		A117A0056J	1
02	NACA Duct	Part of item 1		A111A0218K	2
03	Screw, M8 x 25, button hd.			A111W7115F	4
04	Washer, spring, M8			A075W4036Z	4
05	Washer, flat, M8 x 25 x 1.4 mm			A111W4156F	4
06	Screw, M5 x 16, hex. hd.			A111W1163F	16
07	Washer, flat, M5 x 25 mm x 1.4			A082W4098F	16
08	Spire Nut, M5			B100W6372F	16
09	Foam Strip, self adhesive, 10mm x 6mm			A100B0431V	As req.
10	Pop Rivet, NACA duct fix.			A075W6065Z	12
11	Foam Strip, self adhesive, 19mm x 3mm			A082U6067F	3
12	Diffuser			A117A0102J	1
13	Support Plate, diffuser			A117B0270F	1
14	Panel, license plate mounting			A117B0271F	1
15	Pop Rivet, plate to clamshell			A089W6397F	3
16	Washer, flat, 3/16" x 0.75"			A075W4009Z	3
17	Pop Rivet, domed. black, license plate panel to plate			A082W6512F	3

**ELISE**

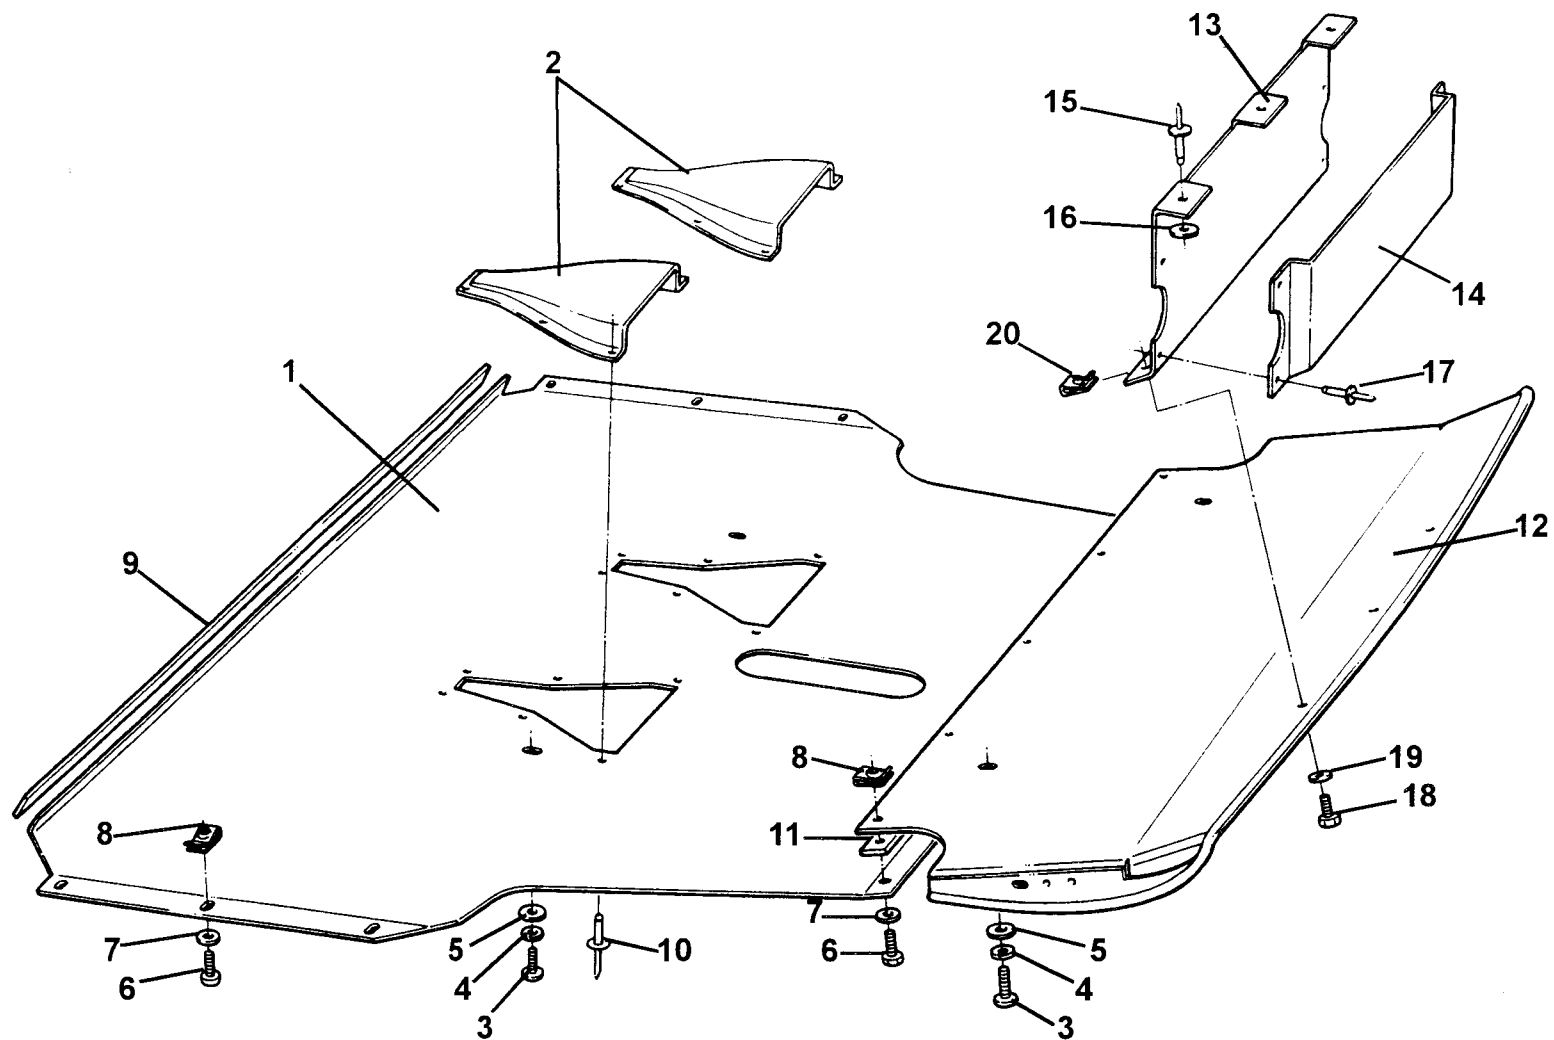


**ELISE**  
10.25

---

**Function Code 10.25 Undertray & Diffuser**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
18	Screw, M5 x 16 hex. hd. SS, diffuser to plate			A111W1163F	3
19	Washer, 3/162 x 0.752, flat, SS			B075W4009Z	3
20	Spirenut			B100W6372F	3

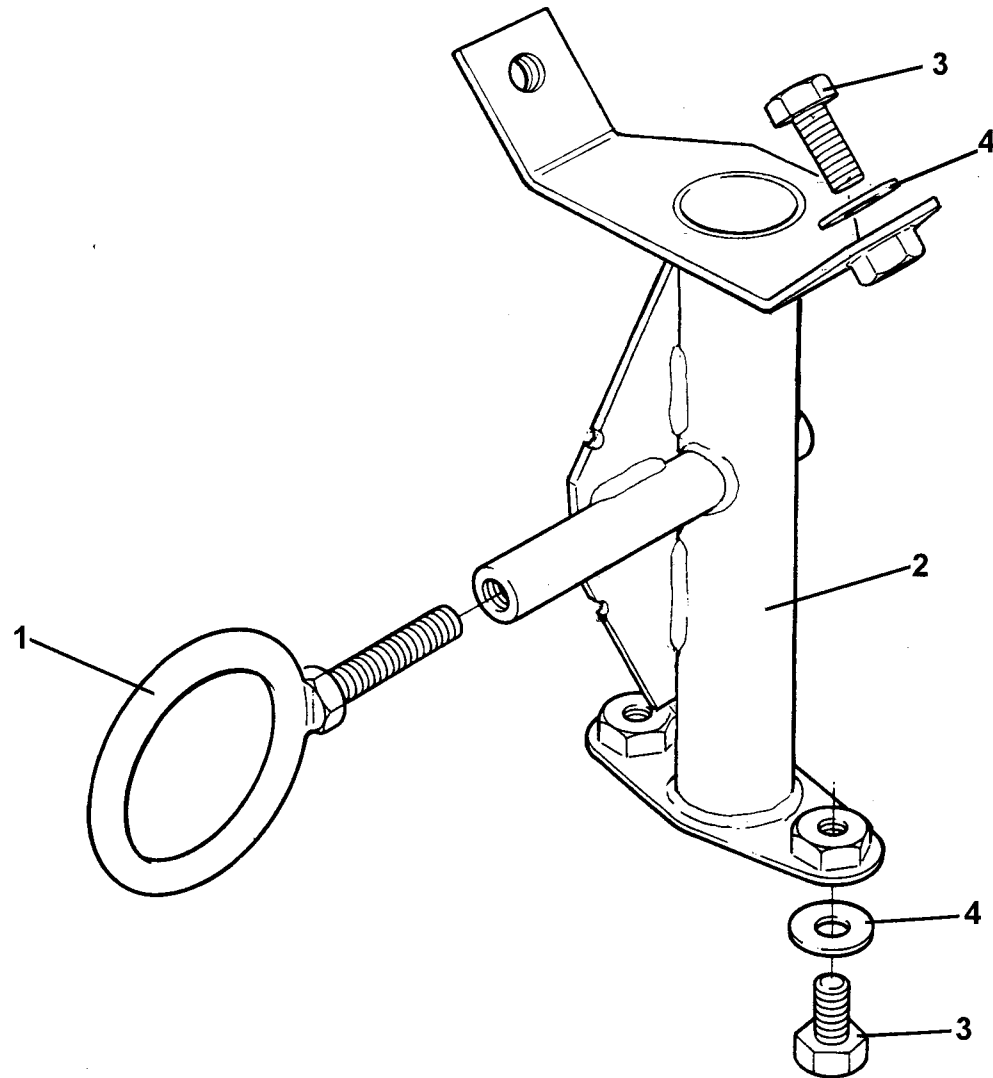

**ELISE**  
10.31


# Service Parts List **ELISE**



## Function Code 10.31 Towing Strut/ Hook

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Towing Eye			A111B6087F	1
02	Mounting Strut, towing eye			A117B0160F	1
03	Setscrew, M8 x 16, hex. hd., grade 8.8 Zn			A075W1036Z	4
04	Washer, flat, M8 x 1.4 Zn			A075W4021Z	4



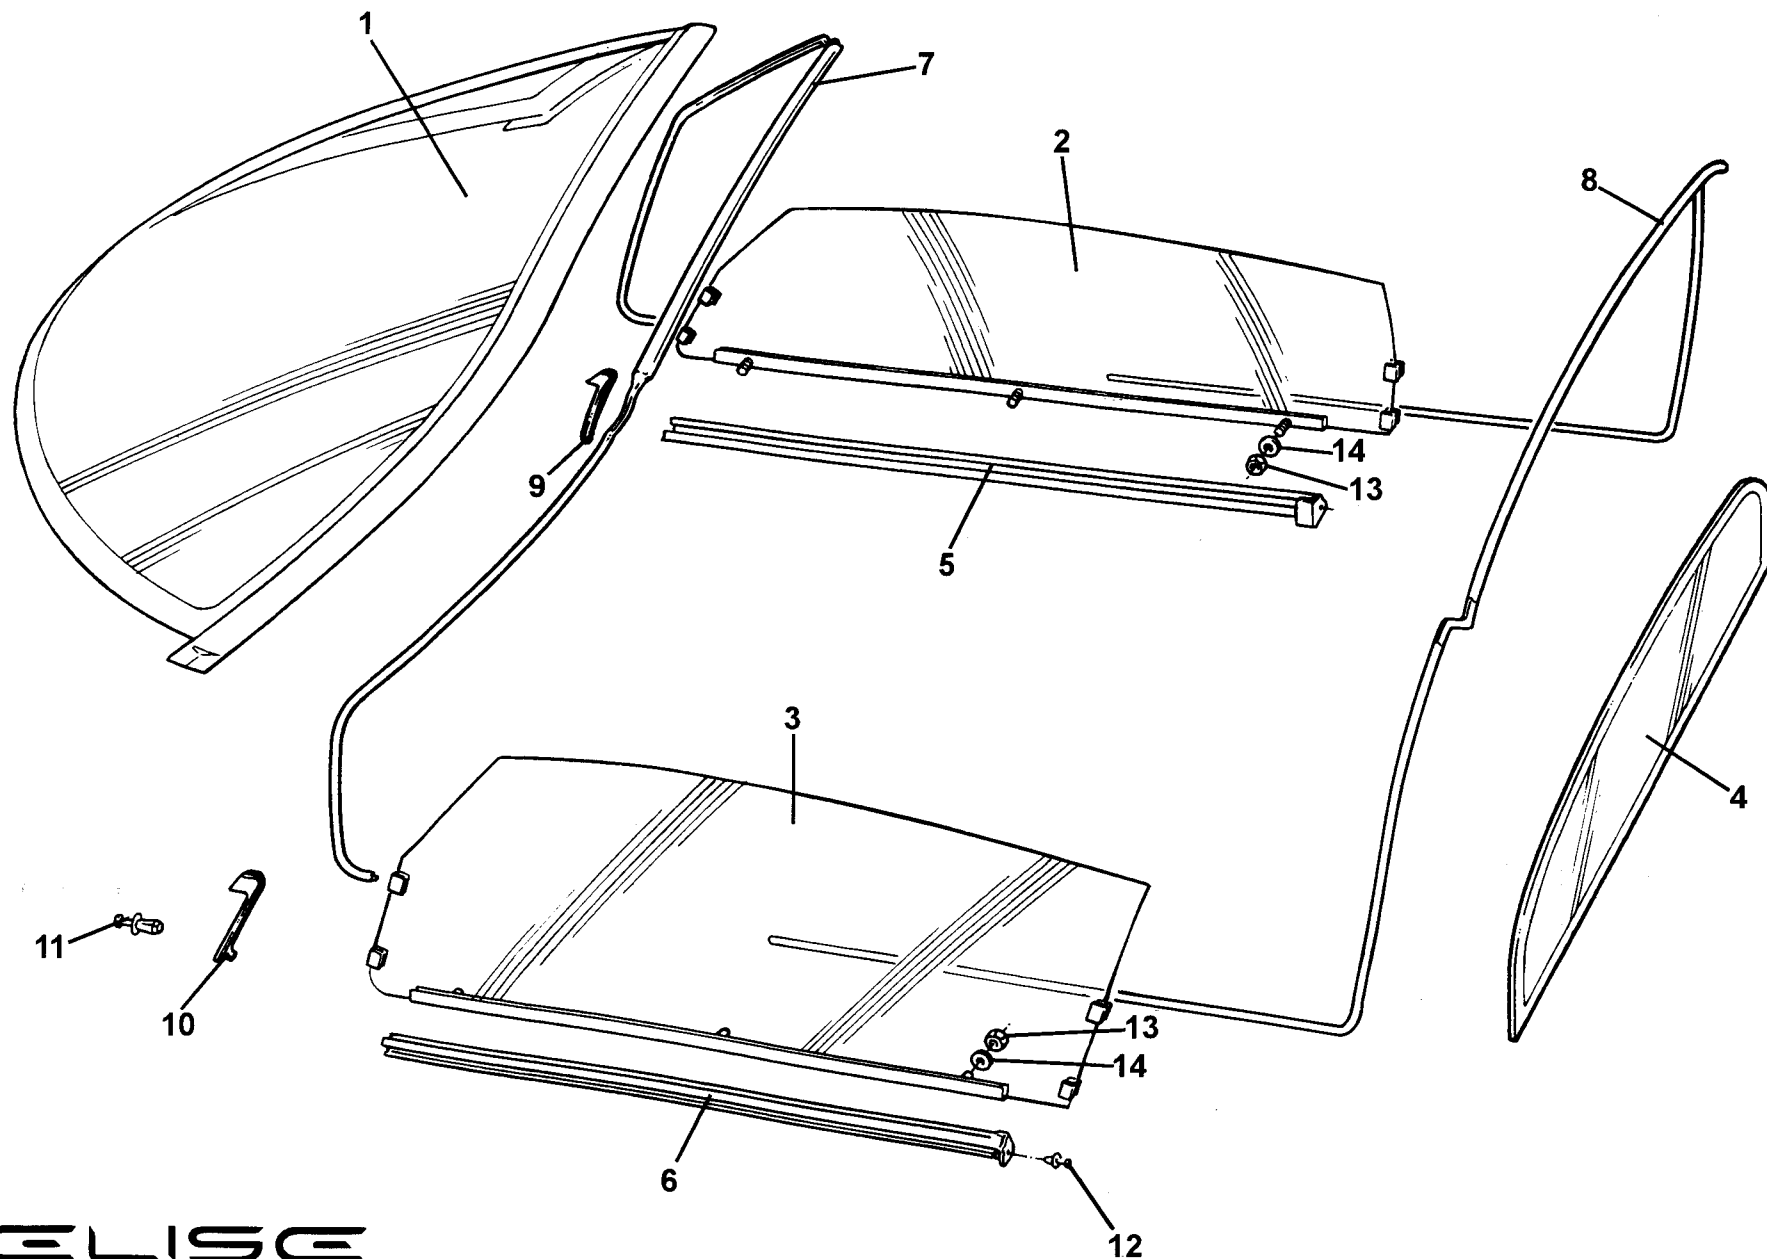

**ELISE**  
11.01


# Service Parts List **ELISE**



## Function Code 11.01 Windscreen, Door Glass, Seals & Weather Strips

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Windscreen & Finisher Assembly			A117B0094F	1
02	Door Glass Assembly, RH			B116B0186F	1
03	Door Glass Assembly, LH			B116B0185F	1
04	Rear Window, glass	Bonded to bulkhead		A117B0136F	1
05	Seal Assembly, door waist, RH			A117U0010F	1
06	Seal Assembly, door waist, LH			A117U0009F	1
07	Front Door/Roof Seal Assembly			A117B0239F	1
08	Rear Door/Roof Seal Assembly			A117B0201F	1
09	Door Cheater Seal, RH			A117U0134F	1
10	Door Cheater Seal, LH			A117U0133F	1
11	Plastic Fastener, cheater seal fix.			A079W6195F	2
12	Plastic Fastener, waist seal fix.				2

**ELISE**

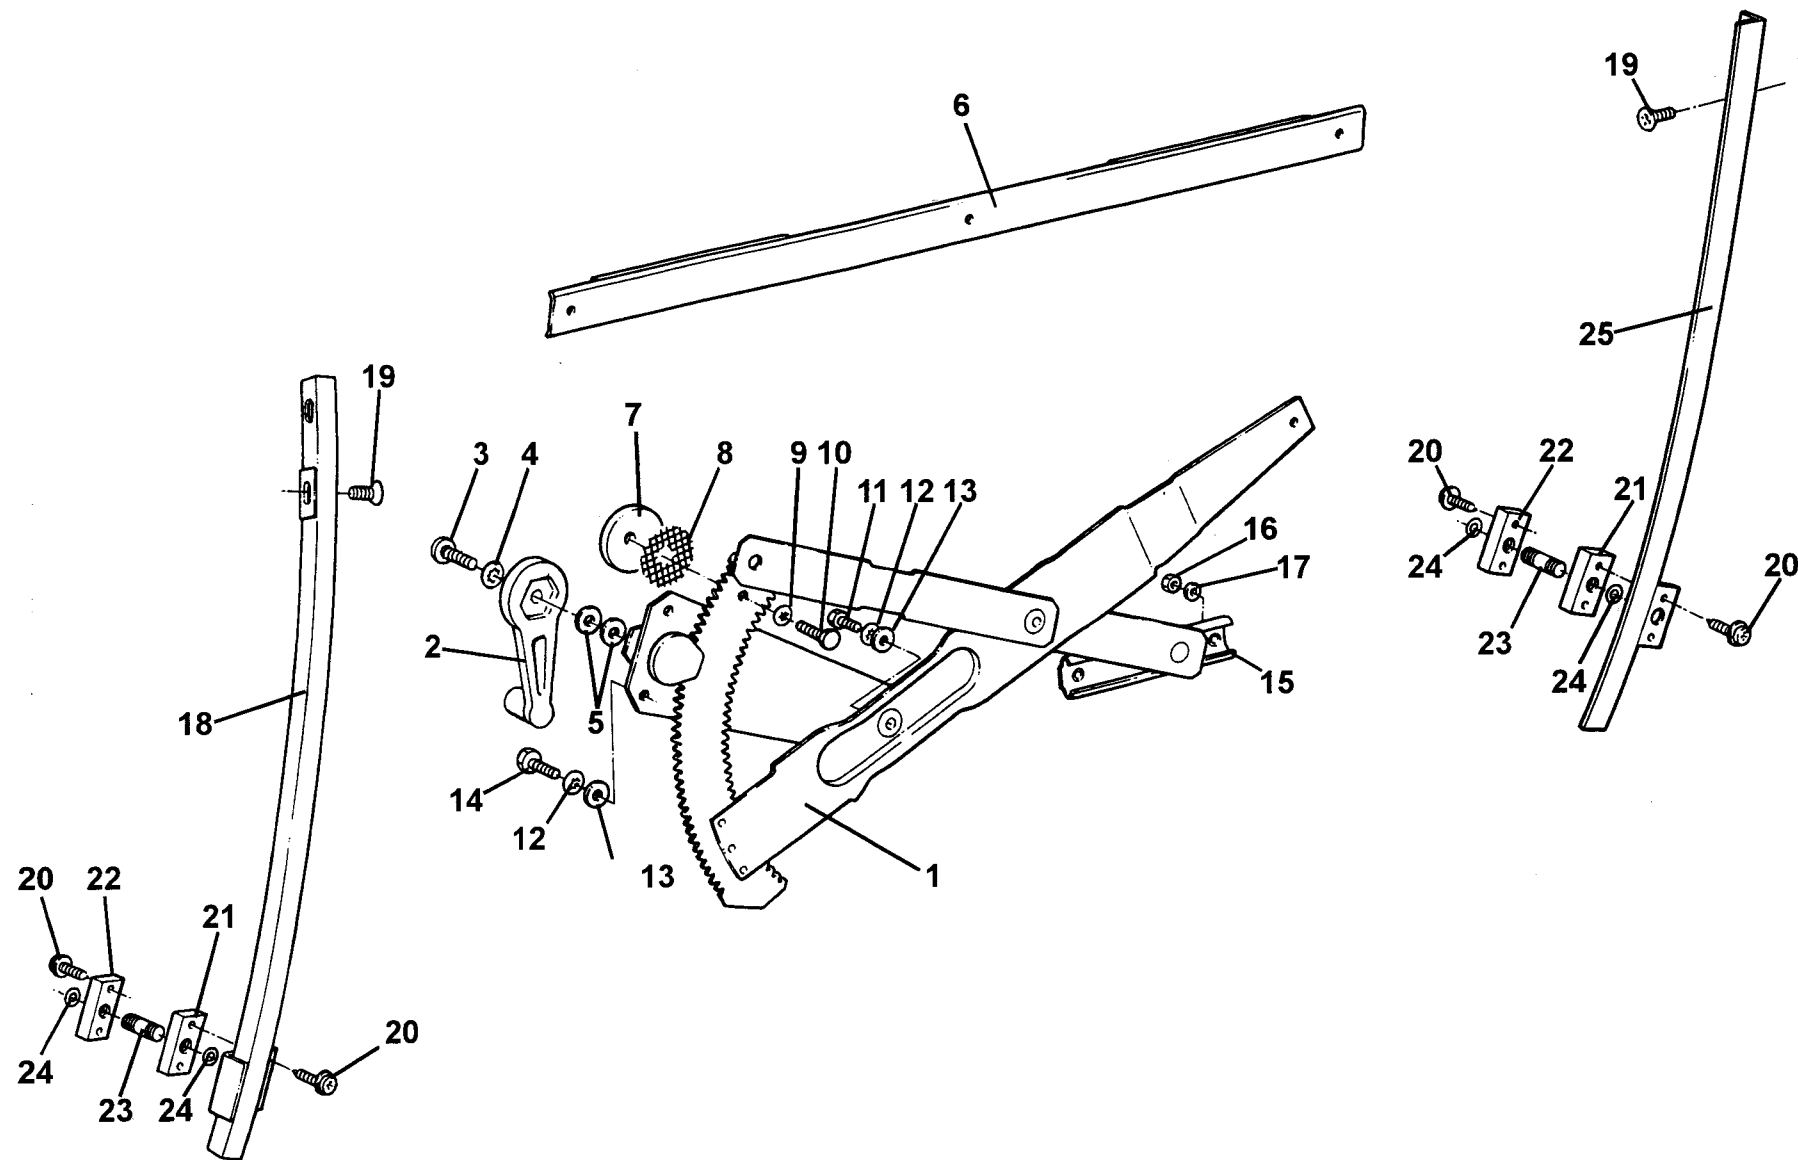

**ELISE**  
11.02


# Service Parts List **ELISE**



## Function Code 11.02 Door Window Lift Mechanism

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Window Regulator, RH			C111U0082K	1
01a	Window Regulator, LH			C111U0083K	1
02	Window Winder Handle, alloy brushed/polished	Includes fixings	Standard & Race Tech	B117U0057F	2
02a	Window Winder Handle, alloy polished	Includes fixings	Sports Tourer	A117U0220F	
03	Screw, regulator to handle fix,				2
04	Washer, shakeproof				2
05	Glass Carrier Channel			B116U0130F	2
06	Spacer, window regulator handle			A082W4109F	4
07	Eccentric Stop			B111U0084F	2
08	Mesh Washer, eccentric stop			A111U0251F	1
09	Washer, shakeproof			A075W4046Z	2
10	Setscrew, eccentric stop fix.			A100W1055F	2
11	Setscrew, regulator fix			A075W1028Z	2
12	Washer, spring, M6			A075W4035Z	6
13	Washer, flat,,M6			B082W4018F	6
14	Setscrew M6, regulator fix			A075W1027Z	4
15	Guide Channel, window regulator			A111U6011F	1
16	Nyloc Nut, M5			A075W3113F	4


**ELISE**

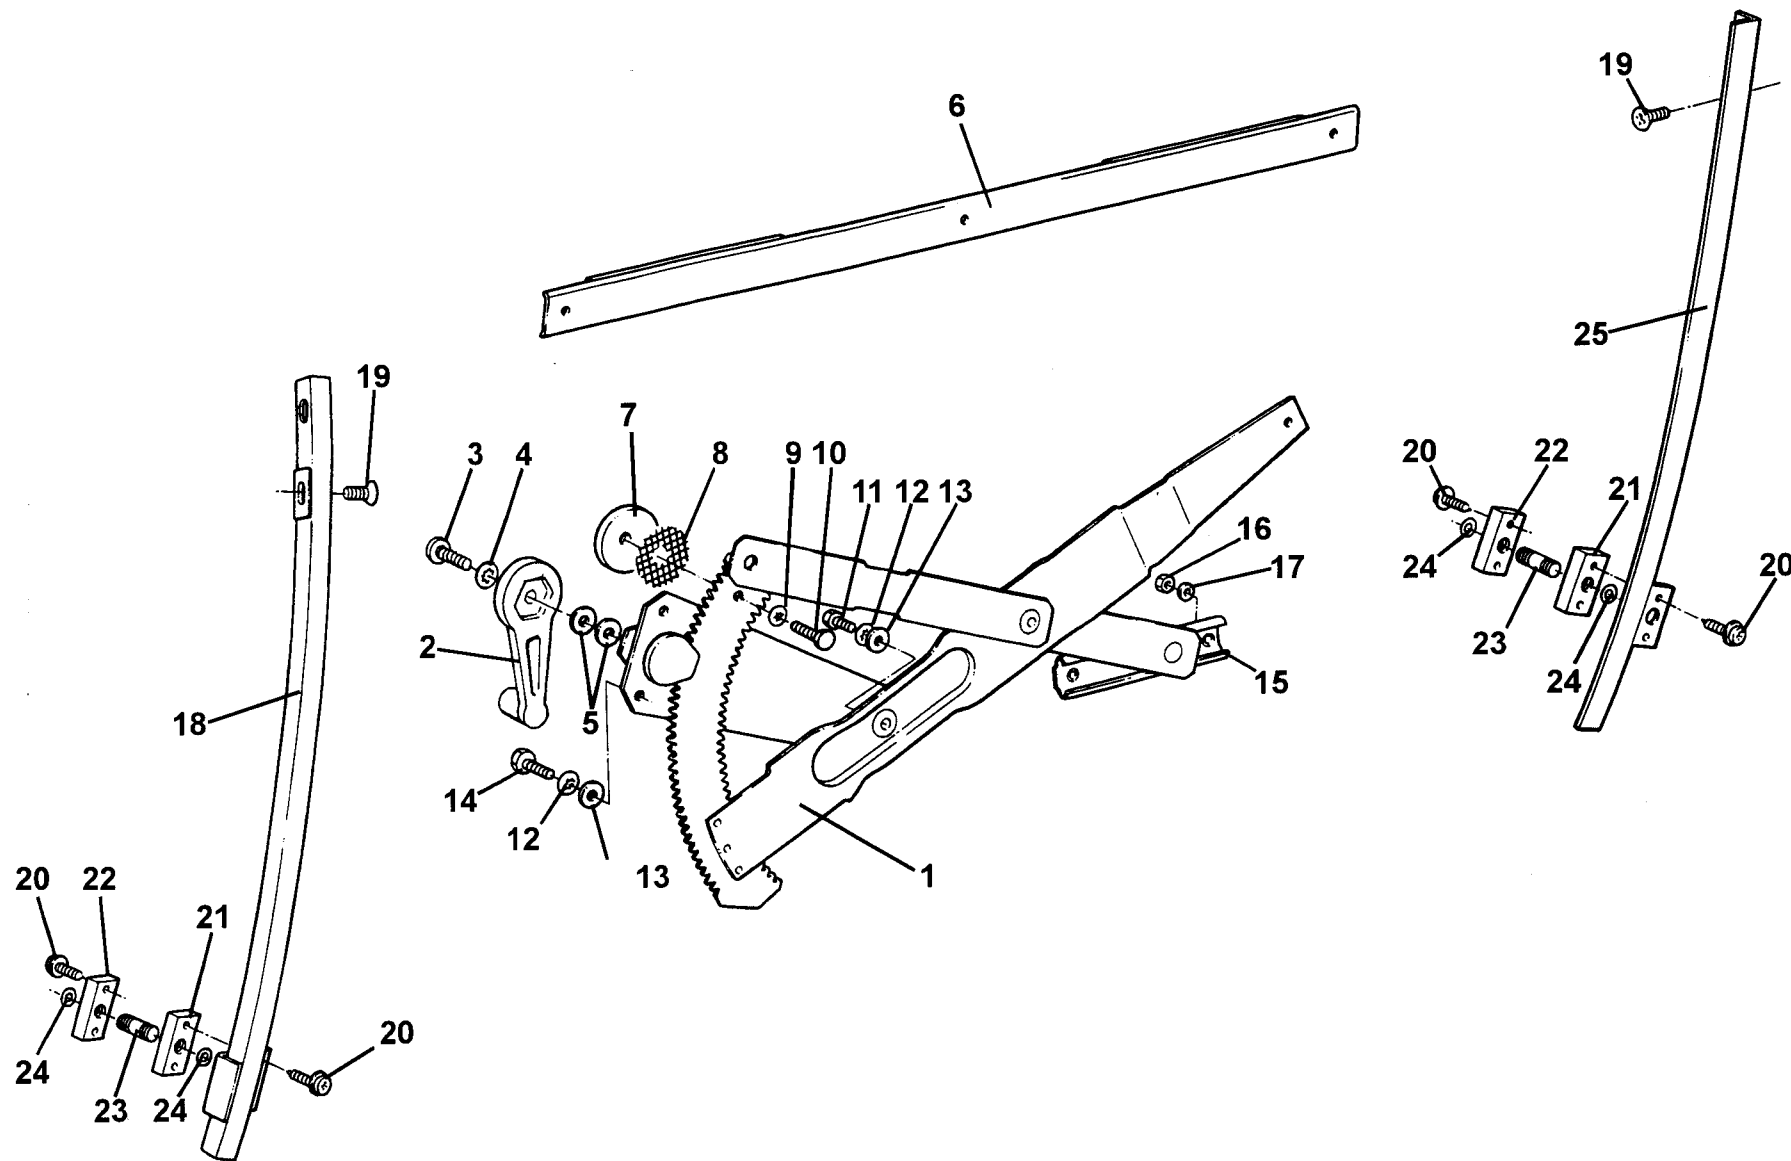

**ELISE**  
11.02

**Function Code 11.02 Door Window Lift Mechanism**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
17	Washer, flat M5			A075W4000Z	4
18	Guide Rail, door glass, front, LH			C116U0007F	1
18a	Guide Rail, door glass, front, RH			C116U0007F	1
19	Screw, rail to door				4
20	Screw, no,8 x 0.75", flg. pozi, hd., block fixing			A075W5074Z	16
21	Adjuster Block, guide rail LH thread			A116U0020F	4
22	Adjuster Block, guide rail RH thread			A116U0021F	4
23	Stud, rail adjusting			A116U0022F	4
24	'O' Ring			A116U0023F	8
25	Guide Rail, door glass, rear, LH			C116U0005F	1
25a	Guide Rail, door glass, rear, RH			C116U0006F	1

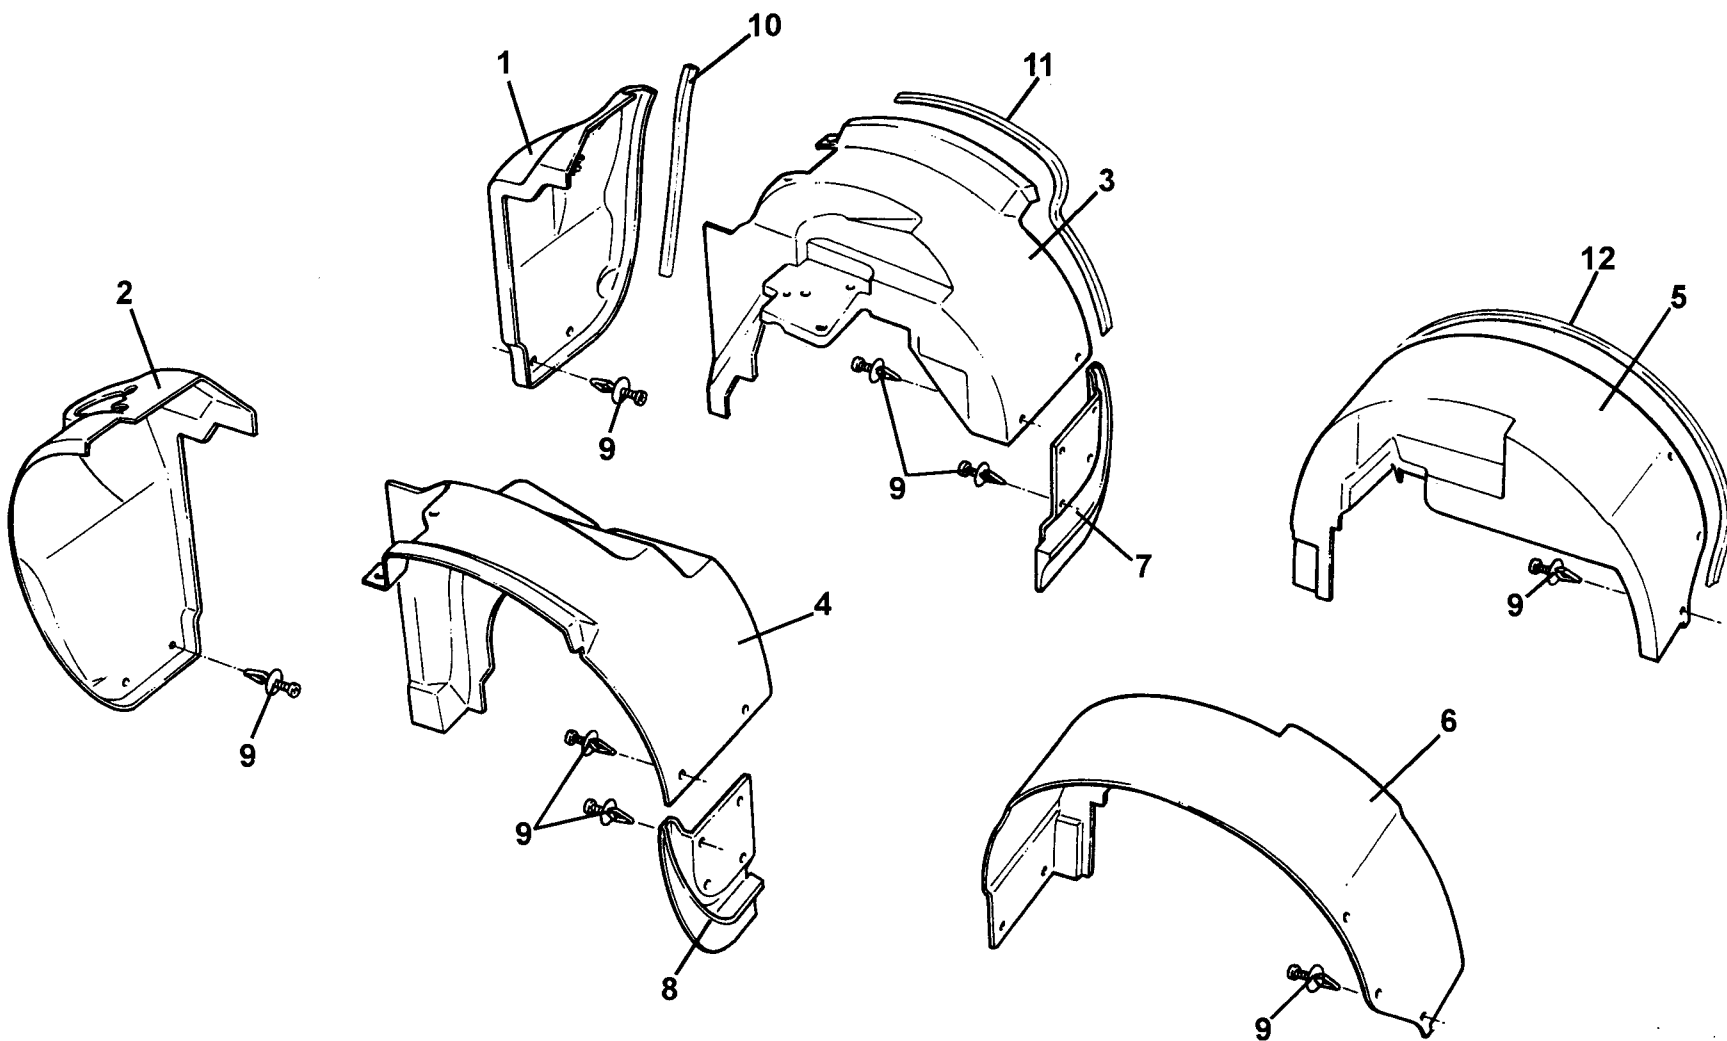

**ELISE**  
12.01


# Service Parts List **ELISE**



## Function Code 12.01 Wheelarch Liners

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Access Panel, front wheelarch, RH			A117B0190F	1
02	Access Panel, front wheelarch, LH			A007B0191F	1
03	Wheelarch Liner, front, RH			A117B0150F	1
04	Wheelarch Liner, front, LH			A117B0149F	1
05	Wheelarch Liner, rear, RH			A117B0148F	1
06	Wheelarch Liner, rear, LH			A117B0147F	1
07	Mudflap, front, RH			A117B0172F	1
08	Mudflap, front, LH			A117B0171F	1
09	Plastic Fastener, liners/mudflaps retention			A100W6391F	26
10	Weatherseal, front access panel			A117U0261K	2
11	Weatherseal, front liner			A117U0262K	2
12	Weatherseal, rear liner			A117U0263K	2



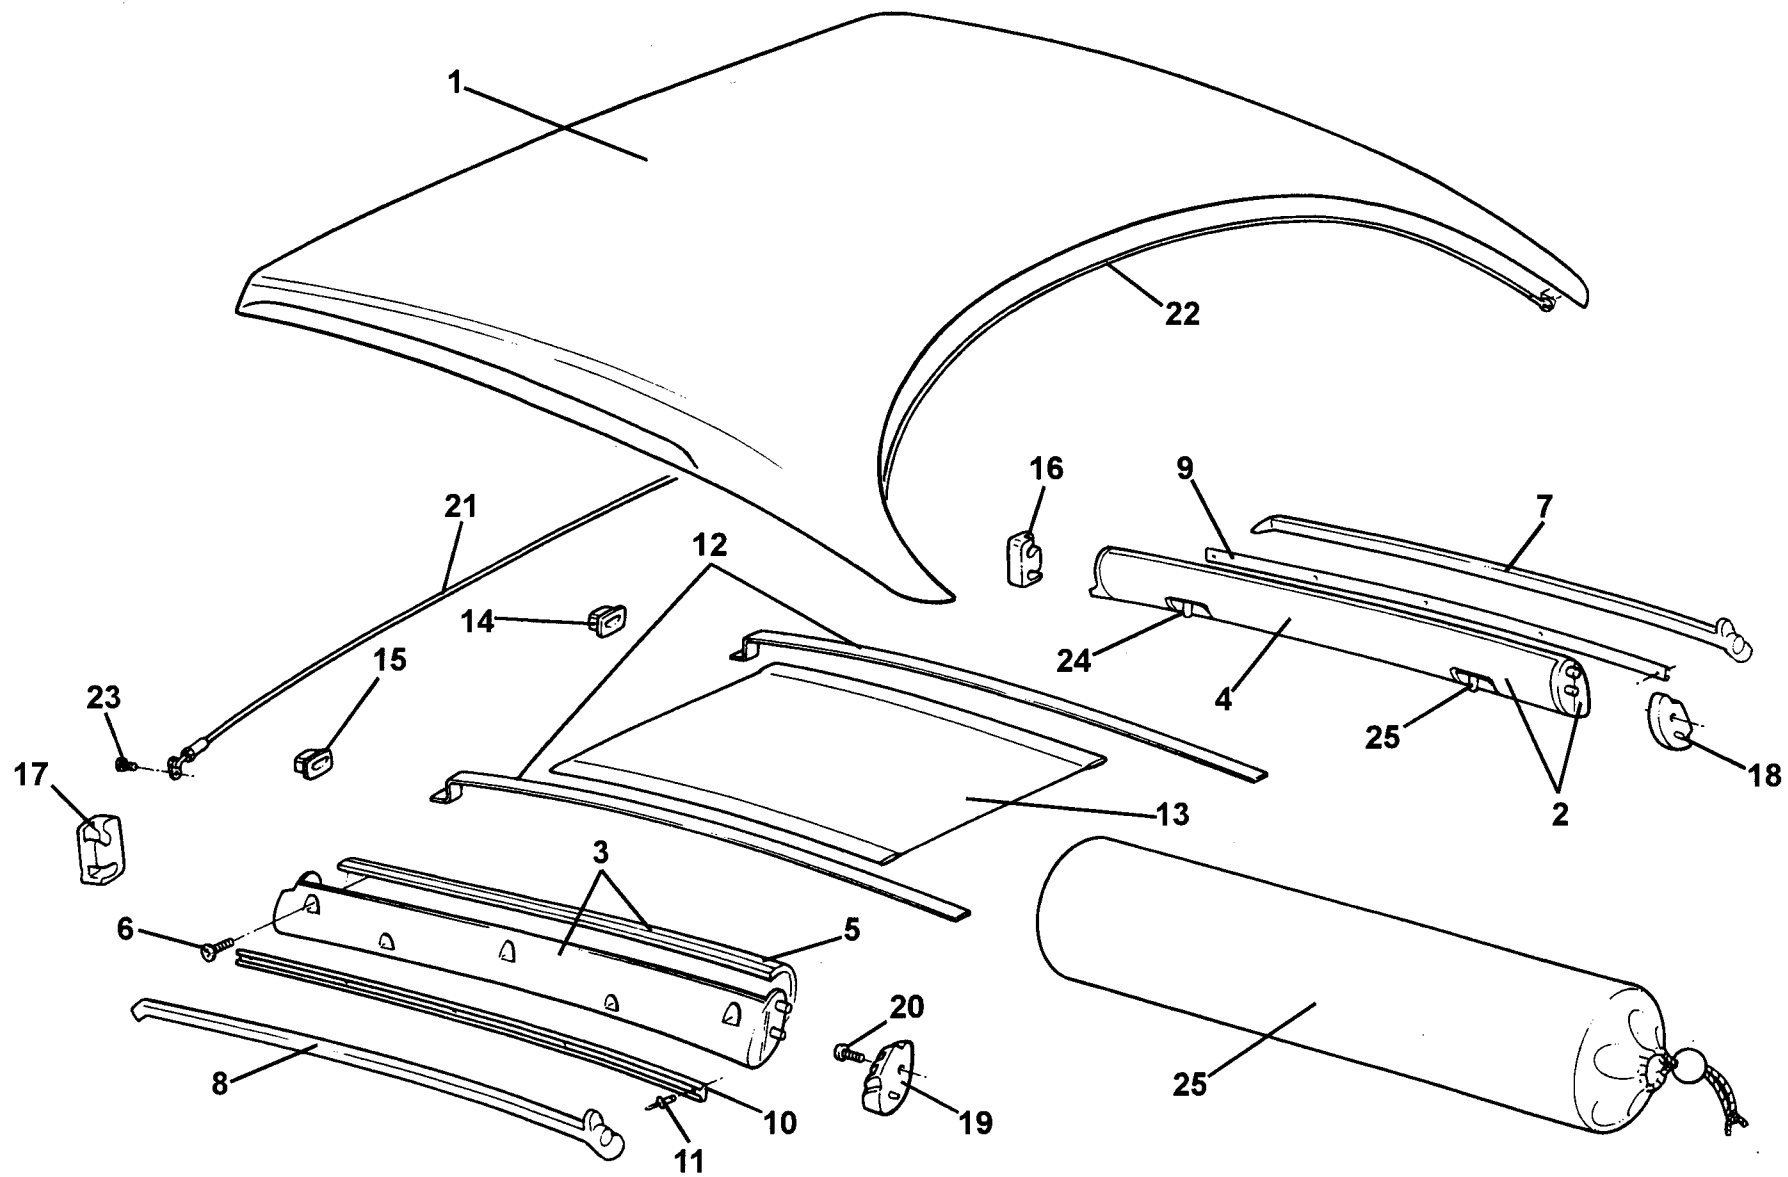

**ELISE**  
12.02


# Service Parts List **ELISE**



## Function Code 12.02 Soft Top Roof, Cant Rails & Stays

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Soft Top Roof Assembly	Includes cant rail assemblies	Black	A117B0074F	1
01a	Soft Top		Black	A117B0072H	1
02	Cant Rail Assembly, RH			B116V0068H	1
03	Cant Rail Assembly, LH			B116V0069H	1
04	Trim Panel, cant rail, RH			B116V0004H	1
05	Trim Panel, cant rail, LH			B116V0003H	1
06	Screw, No. 12 x 0.5" trim panel to cant rail			A116V0083H	10
07	Weatherseal, RH			A116V0092H	1
08	Weatherseal, LH			A116V0091H	1
09	Seal Carrier, RH			B116V0088H	1
10	Seal Carrier, LH			B116V0089H	1
11	Pop Rivet, seal carrier to cant rail			A116V0090H	12
12	Stay, soft top supporting			B116V0095H	2
13	Diaphragm, soft top supporting				1
14	Pocket, stay to header rail, RH	Bonded to windscreen frame		A116B0184F	1
15	Pocket, stay to header rail, LH			A116B0184F	1
16	Latch Plate, front, RH	Bonded to windscreen frame		A116B0002F	1
17	Latch Plate, front, LH	Bonded to windscreen frame		A116B0001F	1


**ELISE**

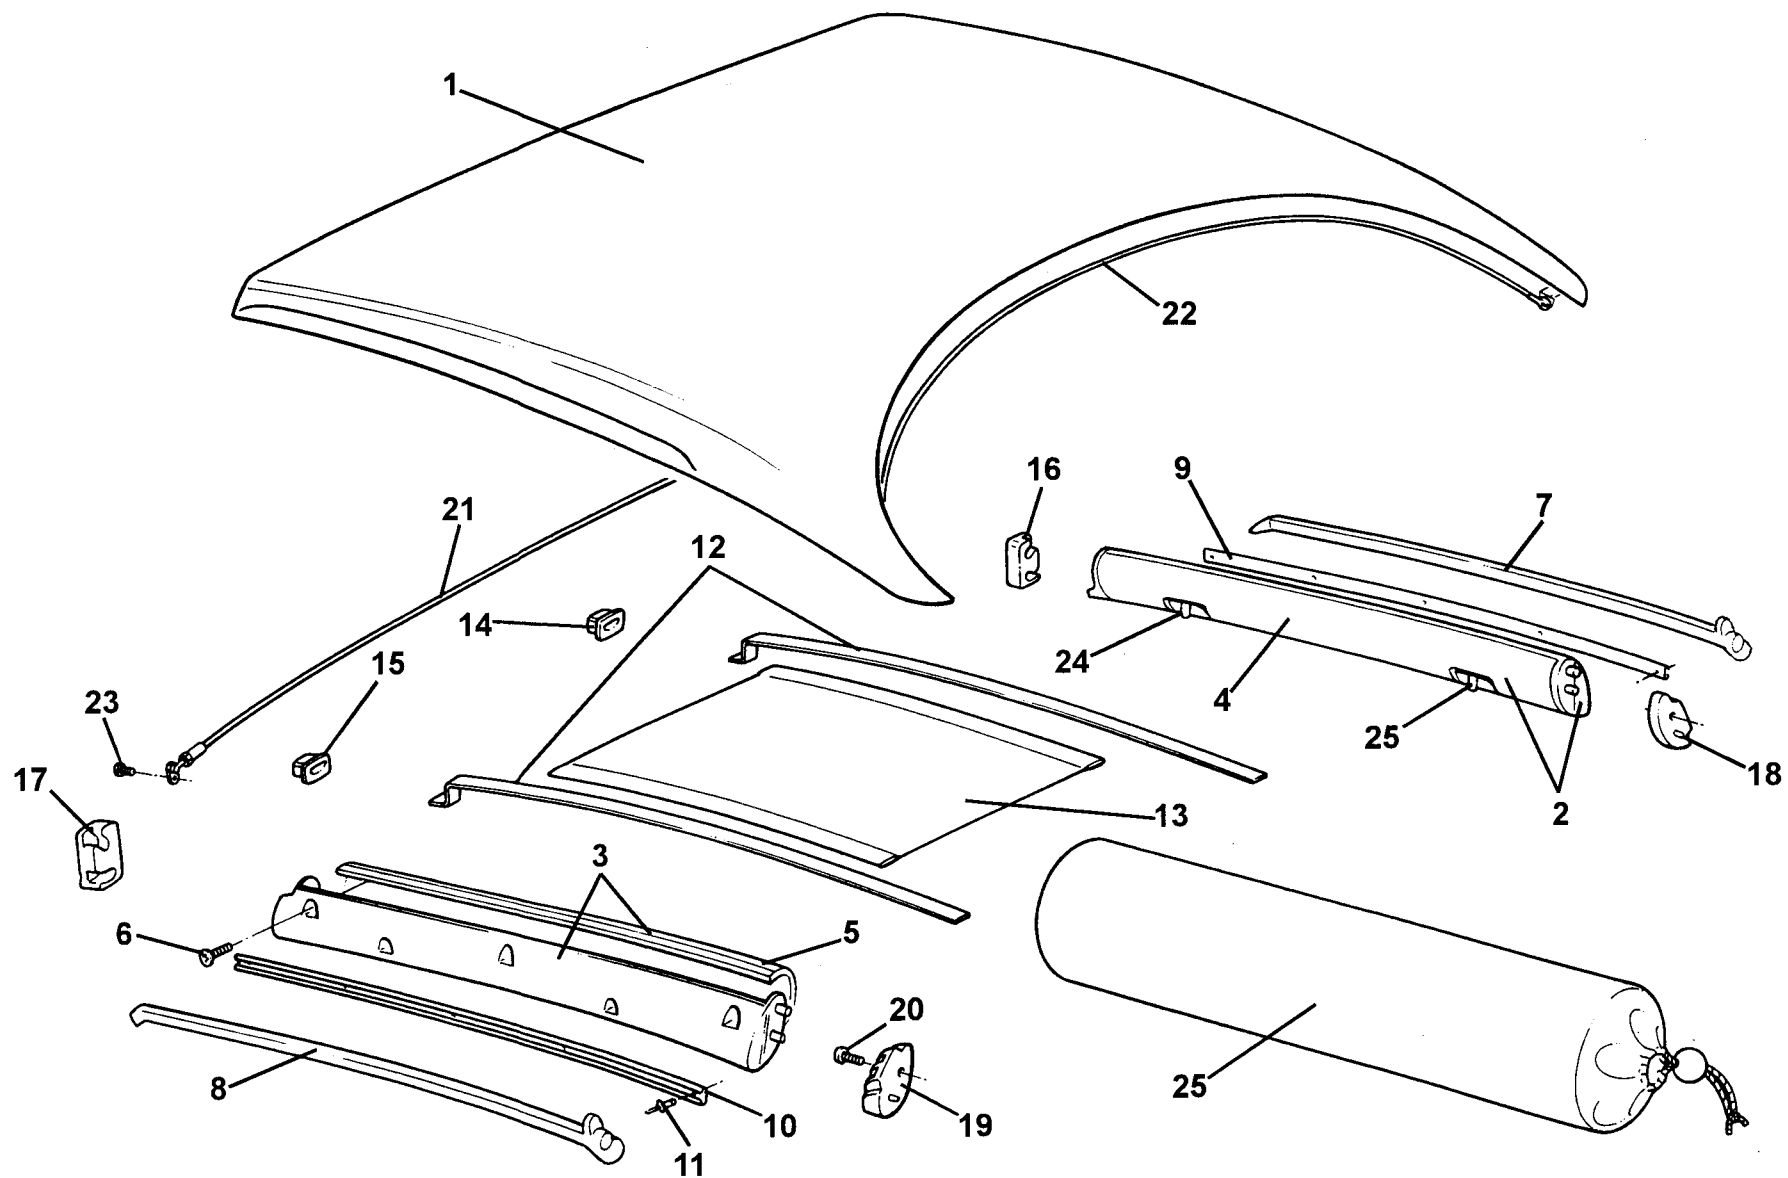

**ELISE**  
**12.02**

**Function Code 12.02 Soft Top Roof, Cant Rails & Stays**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
18	Latch Plate, rear, RH			A117B0212F	1
19	Latch Plate, rear, LH			A117B0213F	1
20	Screw, M6 x 20, cap hd., black, latch plate to roll-over bar			A082W7041F	2
21	Cable, front, soft top tensioning			B116V0064H	1
22	Cable, rear, soft top tensioning			A117B0082H	1
23	Screw, cables to soft to assy.			A116V0065H	4
24	Latch Assembly, front, RH			A116V0084H	1
24a	Latch Assembly, front, LH			A116V0075H	1
25	Latch Assembly, rear, RH			A116V0084H	1
25a	Latch Assembly, rear, LH			A116V0085H	1
26	Soft Top Stowage Bag			A116W0096H	1

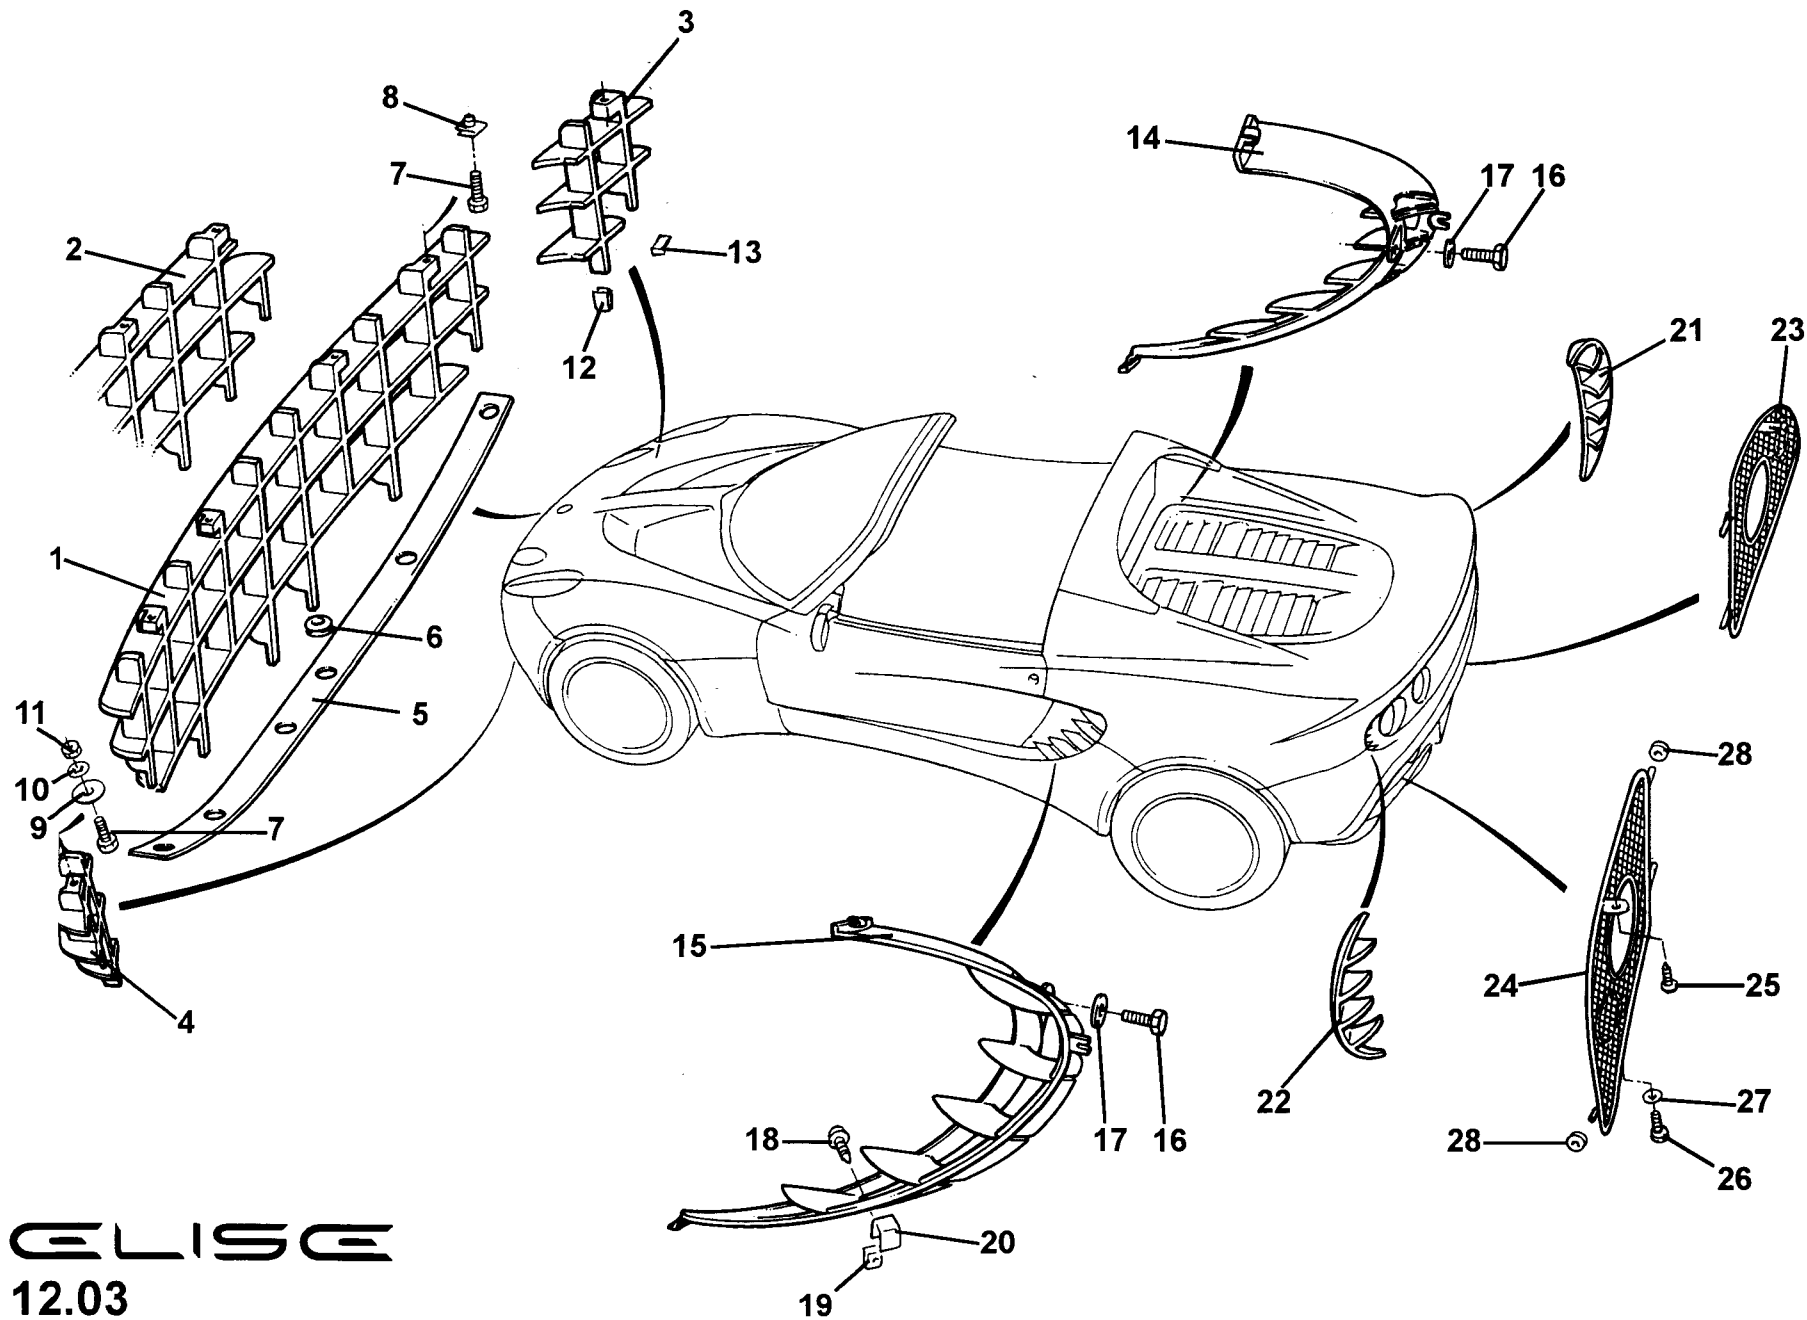

**ELISE**  
12.03


# Service Parts List **ELISE**



## Function Code 12.03 Grilles and Louvres

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Grille, front intake, central, without driving lamps			F117B0114F	1
02	Grille, front intake, central, with driving lamps			C117B0234F	1
03	Grille, front intake, LH			F117B0117F	1
04	Grille, front intake, RH			F117B0118F	1
05	Mounting Strip, front grille			A117U0173F	1
06	Plastic Insert, grille to body			A117W6681F	6
07	Screw, M5 x 16, hex. hd., grilles fixing			A082W1068F	6
08	Spire Nut, M5, central grille fix.				4
09	Washer, flat, M5, outbord grille fix.			B075W4009Z	2
10	Washer, shakeproof, M5, outboard grille fix.			A075W4045F	2
11	Nut, M5, outboard grille fix.			A082W3084F	2
12	Clip, outboard grilles to bracket				2
13	Bracket, outboard grilles to clamshell	Bonded to clamshell		A117B0235F	2
14	Grille, side intake, RH			E117B0126F	1
15	Grille, side intake, LH			E117B0125F	1
16	Screw, hex. hd., grille fix.				2
17	Washer, flat				2
18	Screw, No.8 x 0.7, self tap., flg. hd., pozi., grille fix.			A075W5074Z	6

**ELISE**


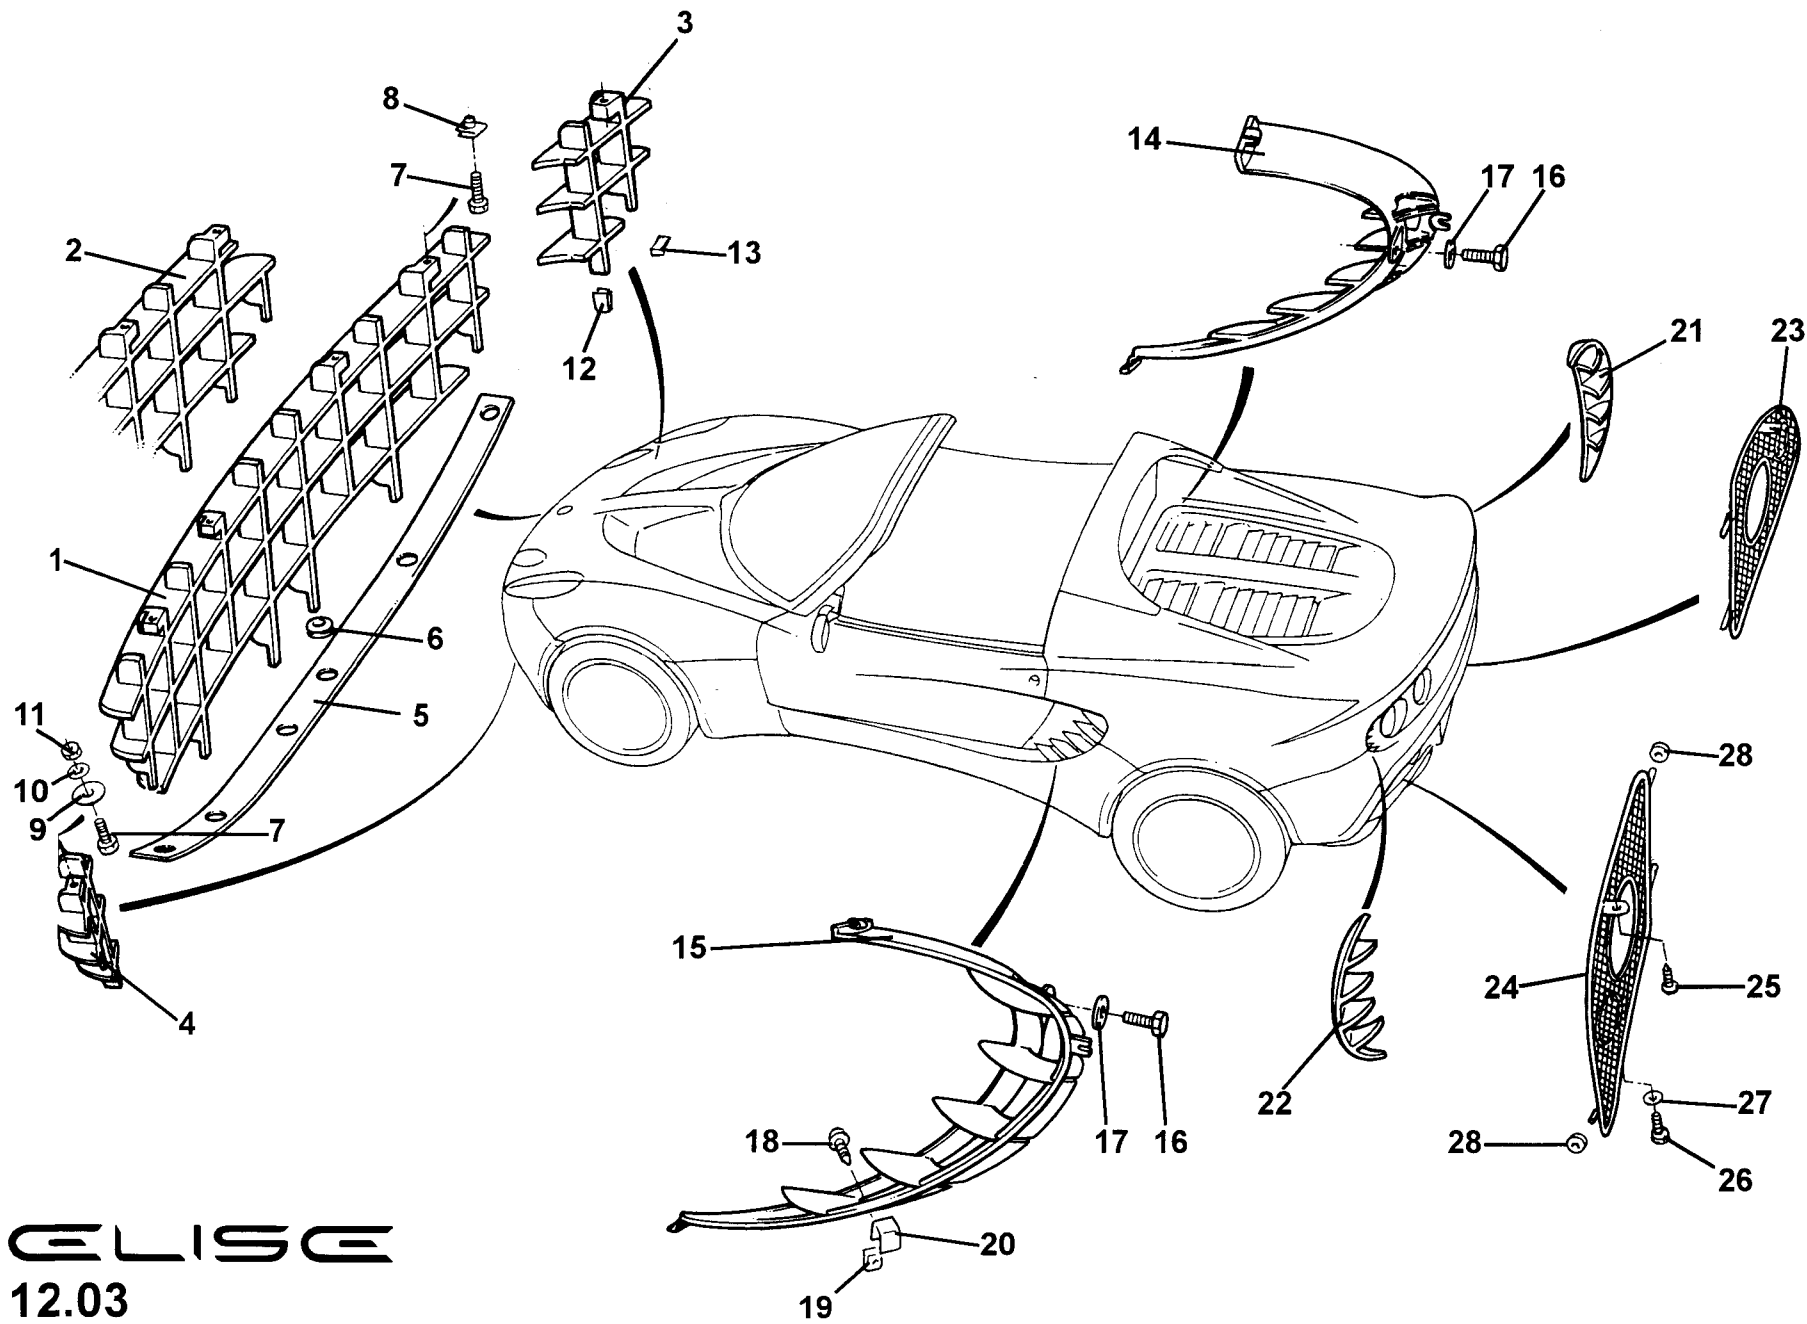


ELISE  
12.03


**Function Code 12.03 Grilles and Louvres**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
19	Spire Nut, No.8			A075W6016Z	6
20	Bracket, side grille mounting,	Bonded to sill panel		A117B0329F	2
21	Grille, rear transom, RH			C117B0134F	1
22	Grille, rear transom, LH			C117B0133F	1
23	Grille, rear body to diffuser, RH			A117B0268F	1
24	Grille, rear body to diffuser, LH			A117B0269F	1
25	Screw, pan hd., pozi., upper grille to clamshell				2
26	Screw, hex. hd., lower grille to diffuser				2
27	Washer, flat,lower grille to diffuser				2
28	Grommet, grille spigots to clamshell				6



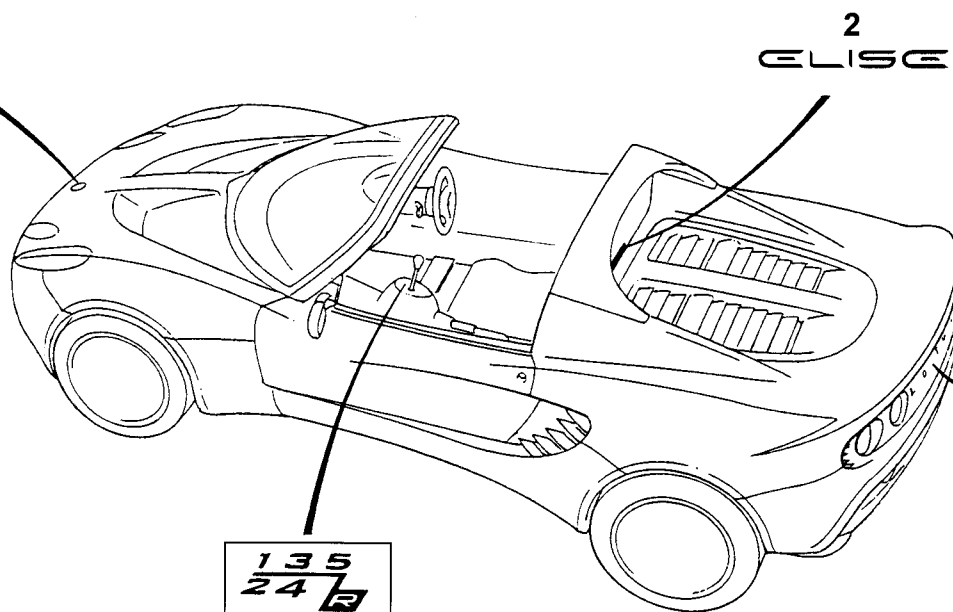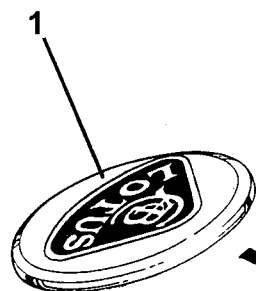

L O T U S  
3



ELISE  
12.05

# Service Parts List **ELISE**



## Function Code 12.05 Decals, Badges & Protective Film

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Nose Badge, Lotus logo			A117U0170F	1
02	Decal, elise	On rear glass		A117U0192F	1
03	Decal, Lotus	On rear transom		A117U0193F	1
04	Decal, gearshift pattern	On gear lever cover		A117	1

**ELISE**


# Service Parts List **ELISE**



## Function Code 12.05 Decals, Badges & Protective Film

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Nose Badge, Lotus logo			A117U0170F	1
02	Decal, elise	On rear glass		A117U0192F	1
03	Decal, Lotus	On rear transom		A117U0193F	1
04	Decal, gearshift pattern	On gear lever cover		A117	1

**ELISE**

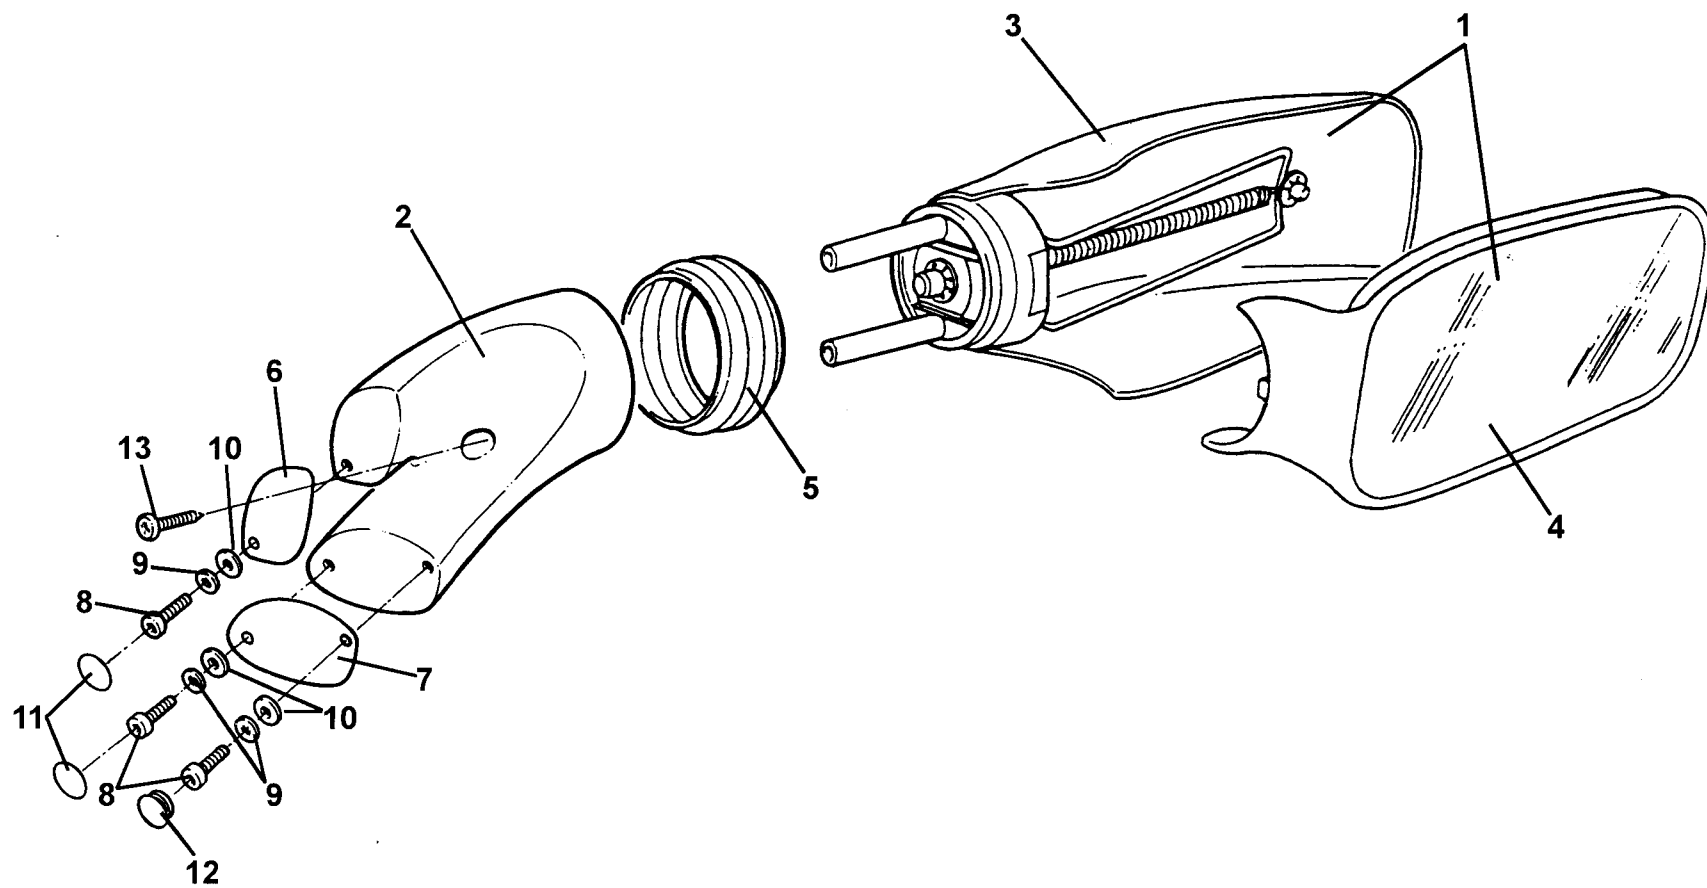

**ELISE**  
12.09


# Service Parts List **ELISE**



## Function Code 12.09 Exterior Driving Mirrors

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Mirror Assembly, convex glass	Painted	Common RH & LH	A111U0335J	1
01a	Mirror Assembly, flat glass	Painted	Australia only RH & LH	B111U0279J	1
02	Plinth, mirror mounting, RH	Not painted		A117U0124F	1
02a	Plinth, mirror mounting, LH	Not painted		A117U0123F	1
03	Mirror Housing	Not painted	Common RH & LH	B111U0117K	2
03a	Mirror Housing, common RH & LH	Primed	Common RH & LH	A111S0424K	2
04	Glass, convex			A111U6046F	2
04a	Glass, flat		Australia only	A111U6039F	2
05	Bellows, mirror to plinth			A111U6032F	2
06	Gasket, mirror plinth upper			A117U0327F	2
07	Gasket, mirror plinth lower			A117U0328F	2
08	Screw, M5 x 20, cap hd.			A111W7126F	6
09	Washer, internal shakeproof, M5			A075W4045Z	6
10	Washer, flat, M5			A075W4011Z	6
11	Blanking Tape			A111V0206K	4
12	Blanking Grommet			A100B6163F	2
13	Screw, No 10 x 1", pan hd. pozi., plinth to mirror			A075W5043Z	2

**ELISE**

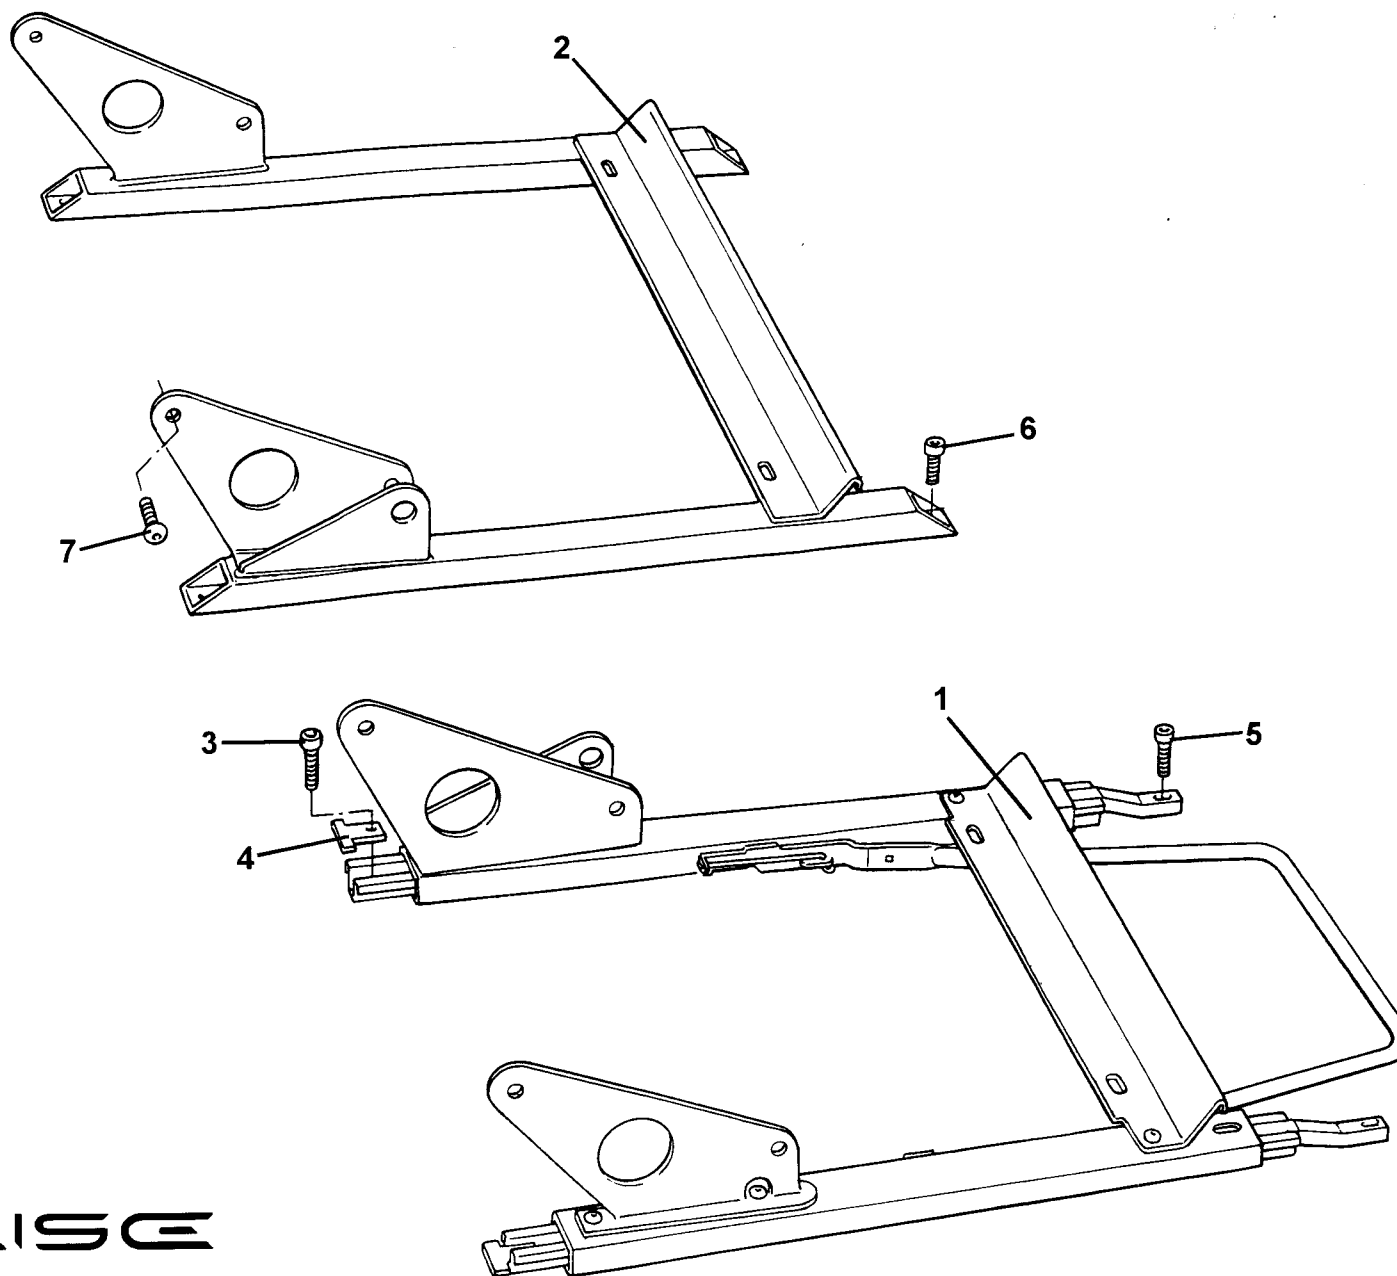


**ELISE**  
13.01

# Service Parts List **ELISE**



## Function Code 13.01 Seat Runners

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Seat Runners, driver, RHD			A111V0012J	1
01a	Seat Runners, driver, LHD			A111V0011J	1
02	Seat Mounting Frame, passenger, RHD			A111V0013F	1
02a	Seat Mounting Frame, passenger, LHD			A111V0014F	1
03	Screw, M8 x 20, cap hd.	Runner rear fix.		A111W7130F	2
04	Stop, seat runner			B111V0017F	2
05	Screw, M8 x 25, cap hd.	Runner front fix.		A111W7115F	2
06	Screw, M8 x 16, cap hd.	Mounting frame fix.		A111W7125F	4
07	Screw, M8 x 12, button hd.	Side brackets to seat fix.		A111W7131F	4

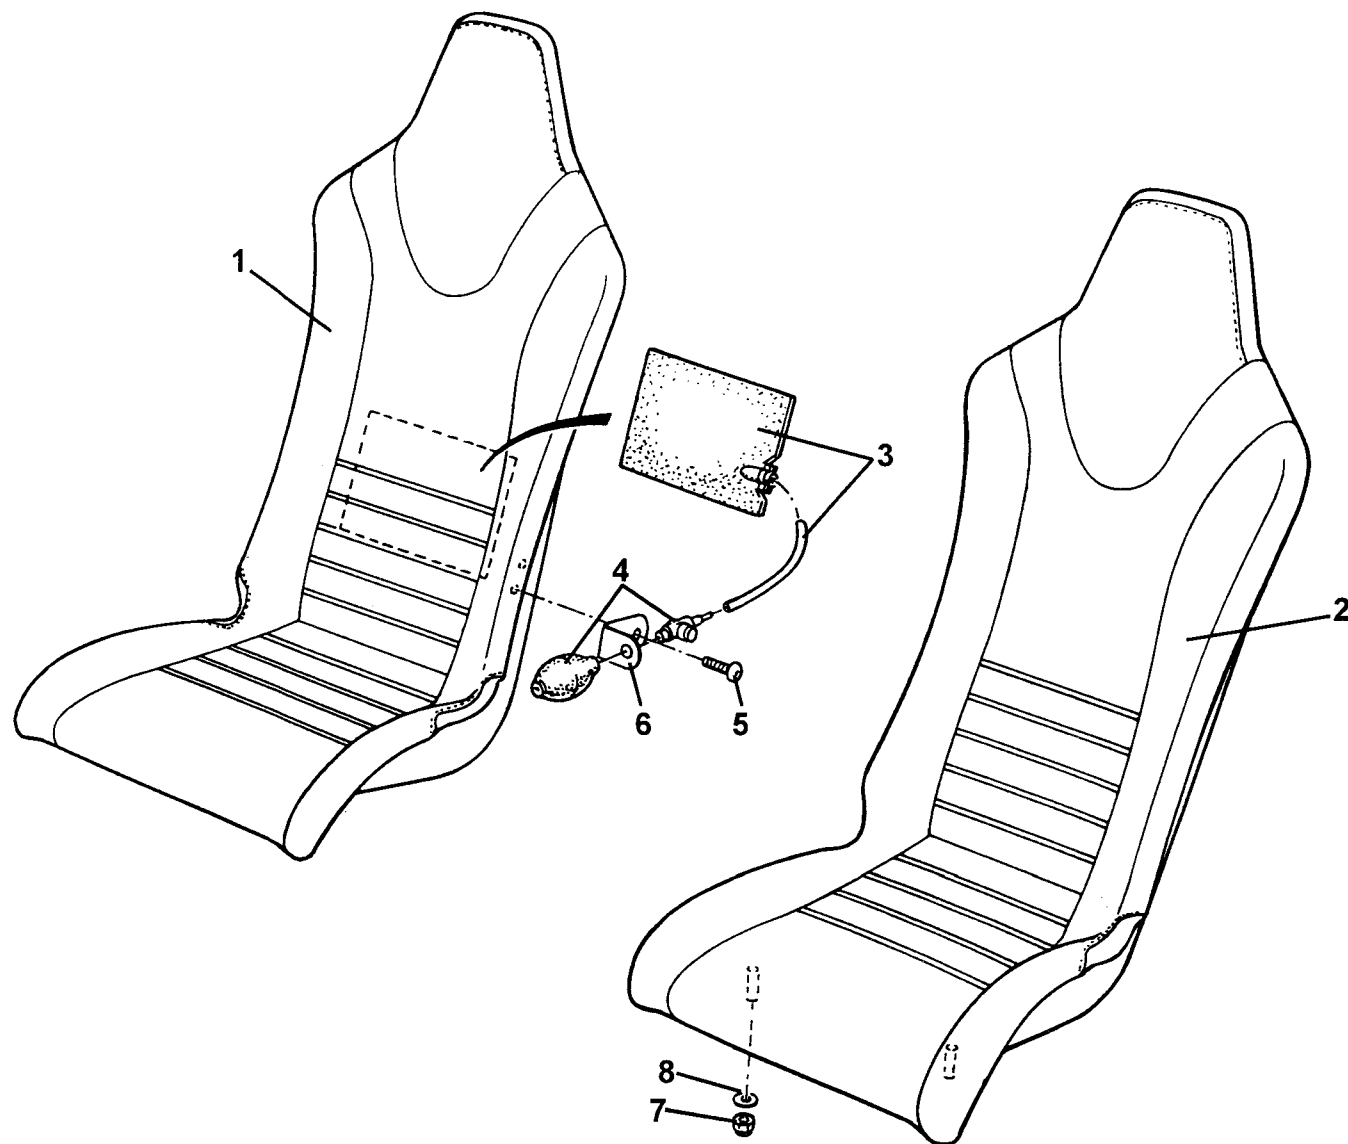

**ELISE**  
13.02




# Service Parts List **ELISE**



## Function Code 13.02 Seat Assemblies, Lumbar Support

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Seat Assembly, driver, RHD		Black cloth, standard		1
01a	Seat Assembly, driver, LHD		Black cloth, standard		1
01b	Seat Assembly, driver, RHD		Grey cloth, standard		1
01c	Seat Assembly, driver, LHD		Grey cloth, standard		1
01d	Seat Assembly, driver, RHD	Seat sides/top in carbon leather	Black alcantara, race tech		1
01e	Seat Assembly, driver, LHD	Seat sides/top in carbon leather	Black alcantara, race tech		1
01f	Seat Assembly, driver, RHD	Seat sides/top in carbon leather	Red alcantara, race tech		1
01g	Seat Assembly, driver, LHD	Seat sides/ top in carbon leather	Red alcantara, race tech		1
01h	Seat Assembly, driver, RHD	Seat sides/top in carbon leather	Silver alcantara, race tech		1
01i	Seat Assembly, driver, LHD	Seat sides/top in carbon leather	Silver alcantara, race tech		1
01j	Seat Assembly, driver, RHD	Seat sides/top in carbon leather	Blue alcantara, race tech		1
01kk	Seat Assembly, driver, LHD	Seat sides/op in carbon leather	Blue alcantara, race tech		1
01l	Seat Assembly, driver, RHD	Seat sides/top in keprotec fabric	Black leather, sports tourer		1
01m	Seat Assembly, driver, LHD	Seat sides / top in keprotec fabric	Black leather, sports tourer		1
01n	Seat Assembly, driver, RHD	Seat sides/top in keprotec fabric	Red leather, sports tourer		1
01o	Seat Assembly, driver, LHD	Seat sides/top in keprotec fabric	Red leather, sports tourer		1
01p	Seat Assembly, driver, RHD	Seat sides/top in keprotec fabric	Silver leather, sports tourer		1
01q	Seat Assembly, driver, LHD	Seat sides/top in keprotec fabric	Silver leather, sports tourer		1


**ELISE**

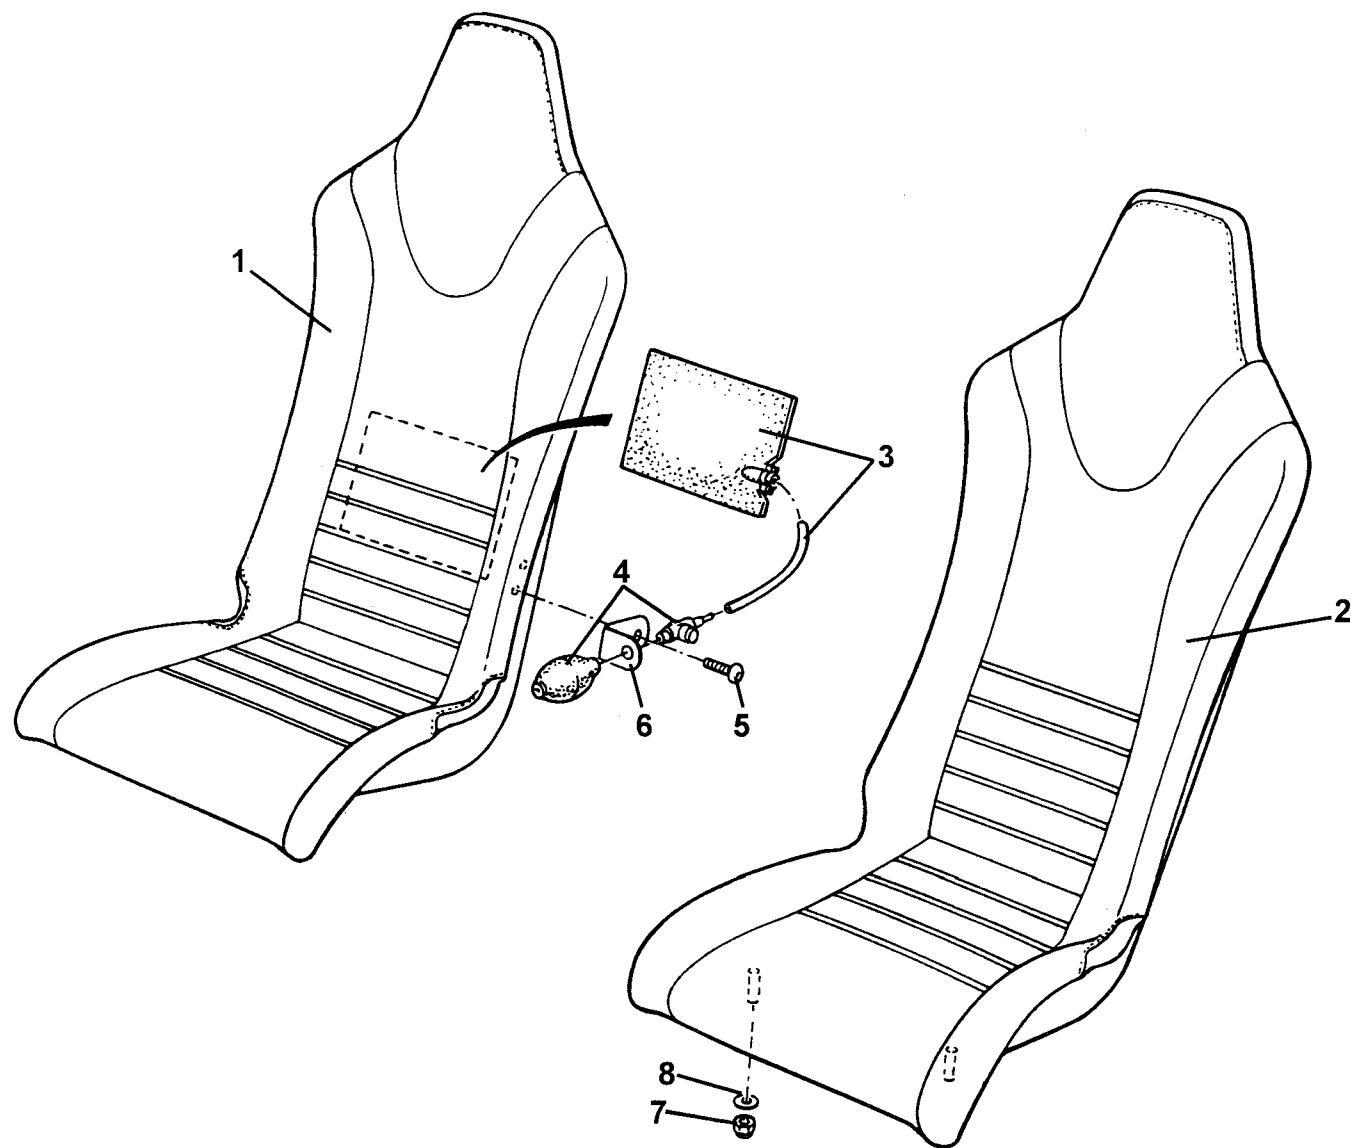

**ELISE**  
13.02

**Function Code 13.02 Seat Assemblies, Lumbar Support**


<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01r	Seat Assembly, driver, RHD	Seat sides/top in keprotec fabric	Tan leather, sports tourer		1
01s	Seat Assembly, driver, LHD	Seat sides/top in keprotec fabric	Tan leather, sports tourer		1
01t	Seat Assembly, driver, RHD	Seat sides/top in keprotec fabric	Blue leather, sports tourer		1
01u	Seat Assembly, driver, LHD	Seat sides/top in keprotec fabric	Blue leather, sports tourer		1
01v	Seat Assembly, driver, RHD	Seat sides/top in keprotec fabric	Stone leather, sports tourer		1
01w	Seat Assembly, driver, LHD	Seat sides/top in keprotec fabric	Stone leather, sports tourer		1
01x	Seat Assembly, driver, RHD	Seat sides/top in keprotec fabric	Green leather, sports tourer		1
01y	Seat Assembly, driver, LHD	Seat sides/top in keprotec fabric	Green leather, sports tourer		1
02	Seat Assembly, passenger, RHD		Black cloth, standard		1
02a	Seat Assembly, passenger, LHD		Black cloth, standard		1
02c	Seat Assembly, passenger, RHD		Grey cloth, standard		1
02d	Seat Assembly, passenger, LHD		Grey cloth, standard		1
02e	Seat Assembly, passenger, RHD	Seat sides/top in carbon leather	Black alcantara, race tech		1
02e	Seat Assembly, passenger, LHD	Seat sides/top in carbon leather	Black alcantara, race tech		1
02f	Seat Assembly, passenger, RHD	Seat sides/top in carbon leather	Red alcantara, race tech		1
02g	Seat Assembly, passenger, LHD	Seat sides/top in carbon leather	Red alcantara, race tech		1
02h	Seat Assembly, passenger, RHD	Seat sides/top in carbon leather	Silver alcantara, race tech		1
02i	Seat Assembly, passenger, LHD	Seat sides/top in carbon leather	Silver alcantara, race tech		1
02j	Seat Assembly, passenger, RHD	Seat sides/top in carbon leather	Blue alcantara, race tech		1
02k	Seat Assembly, passenger, LHD	Seat sides/top in carbon leather	Blue alcantara, race tech		1
02l	Seat Assembly, passenger, RHD	Seat sides/top in keprotec fabric	Black leather, sports tourer		1

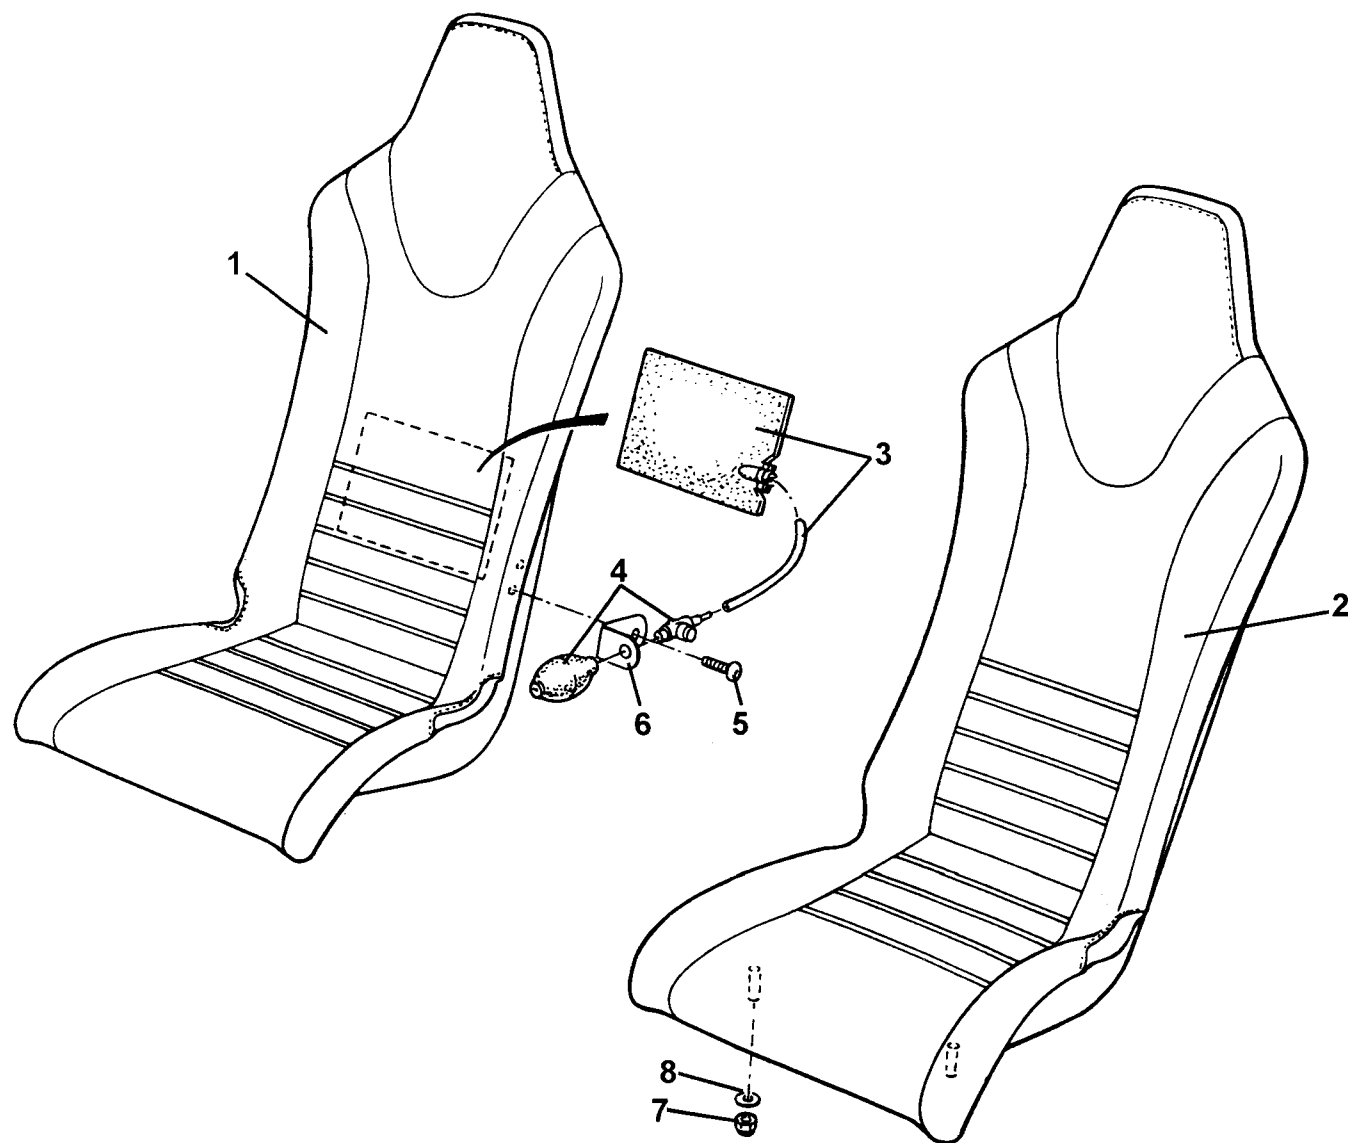

**ELISE**  
13.02

**Function Code 13.02 Seat Assemblies, Lumbar Support**


<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
02m	Seat Assembly, passenger, LHD	Seat sides/top in keprotec fabric	Black leather, sports tourer		1
02n	Seat Assembly, passenger, RHD	Seat sides/top in keprotec fabric	Red leather, sports tourer		1
02o	Seat Assembly, passenger, LHD	Seat sides/ top in keprotec fabric	Red leather, sports tourer		1
02p	Seat Assembly, passenger, RHD	Seat sides/ top in keprotec fabric	Silver leather, sports tourer		1
02q	Seat Assembly, passenger, LHD	Seat sides/top in keprotec fabric	Silver leather, sports tourer		1
02r	Seat Assembly, passenger, RHD	Seat sides/top in keprotec fabric	Tan leather, sports tourer		1
02s	Seat Assembly, passenger, LHD	Seat sides/top in keprotec fabric	Tan leather, sports tourer		1
02t	Seat Assembly, passenger, RHD	Seat sides/top in keprotec fabric	Blue leather, sports tourer		1
02u	Seat Assembly, passenger, LHD	Seat sides/top in keprotec fabric	Blue leather, sports tourer		1
02v	Seat Assembly, passenger, RHD	Seat sides/top in keprotec fabric	Stone leather, sports tourer		1
02w	Seat Assembly, passenger, LHD	Seat sides/top in keprotec fabric	Stone leather, sports tourer		1
02x	Seat Assembly, passenger, RHD	Seat sides/top in keprotec fabric	Green leather, sports tourer		1
02y	Seat Assembly, passenger, LHD	Seat sides/top in keprotec fabric	Green leather, sports tourer		1
03	Inflatable Lumbar Support/Tube	Option on standard car	Race Tech/Sports Tourer	<b>A111V0117F</b>	1
04	Pump & Valve, lumbar support	Option on standard car	Race Tech/Sports Tourer	<b>A089V6142F</b>	1
05	Screw, M8 x 25, big hd.	Option on standard car	Race Tech/Sports Tourer	<b>A111W6532F</b>	4
06	Bracket, Pump & Valve Assy.	Option on standard car	Race Tech/Sports Tourer	<b>B111V0127F</b>	1
07	Nyloc Nut, M8			<b>A075W3010Z</b>	4
08	Washer flat, M8 x 17 x 1.6mm			<b>A075W4020Z</b>	4

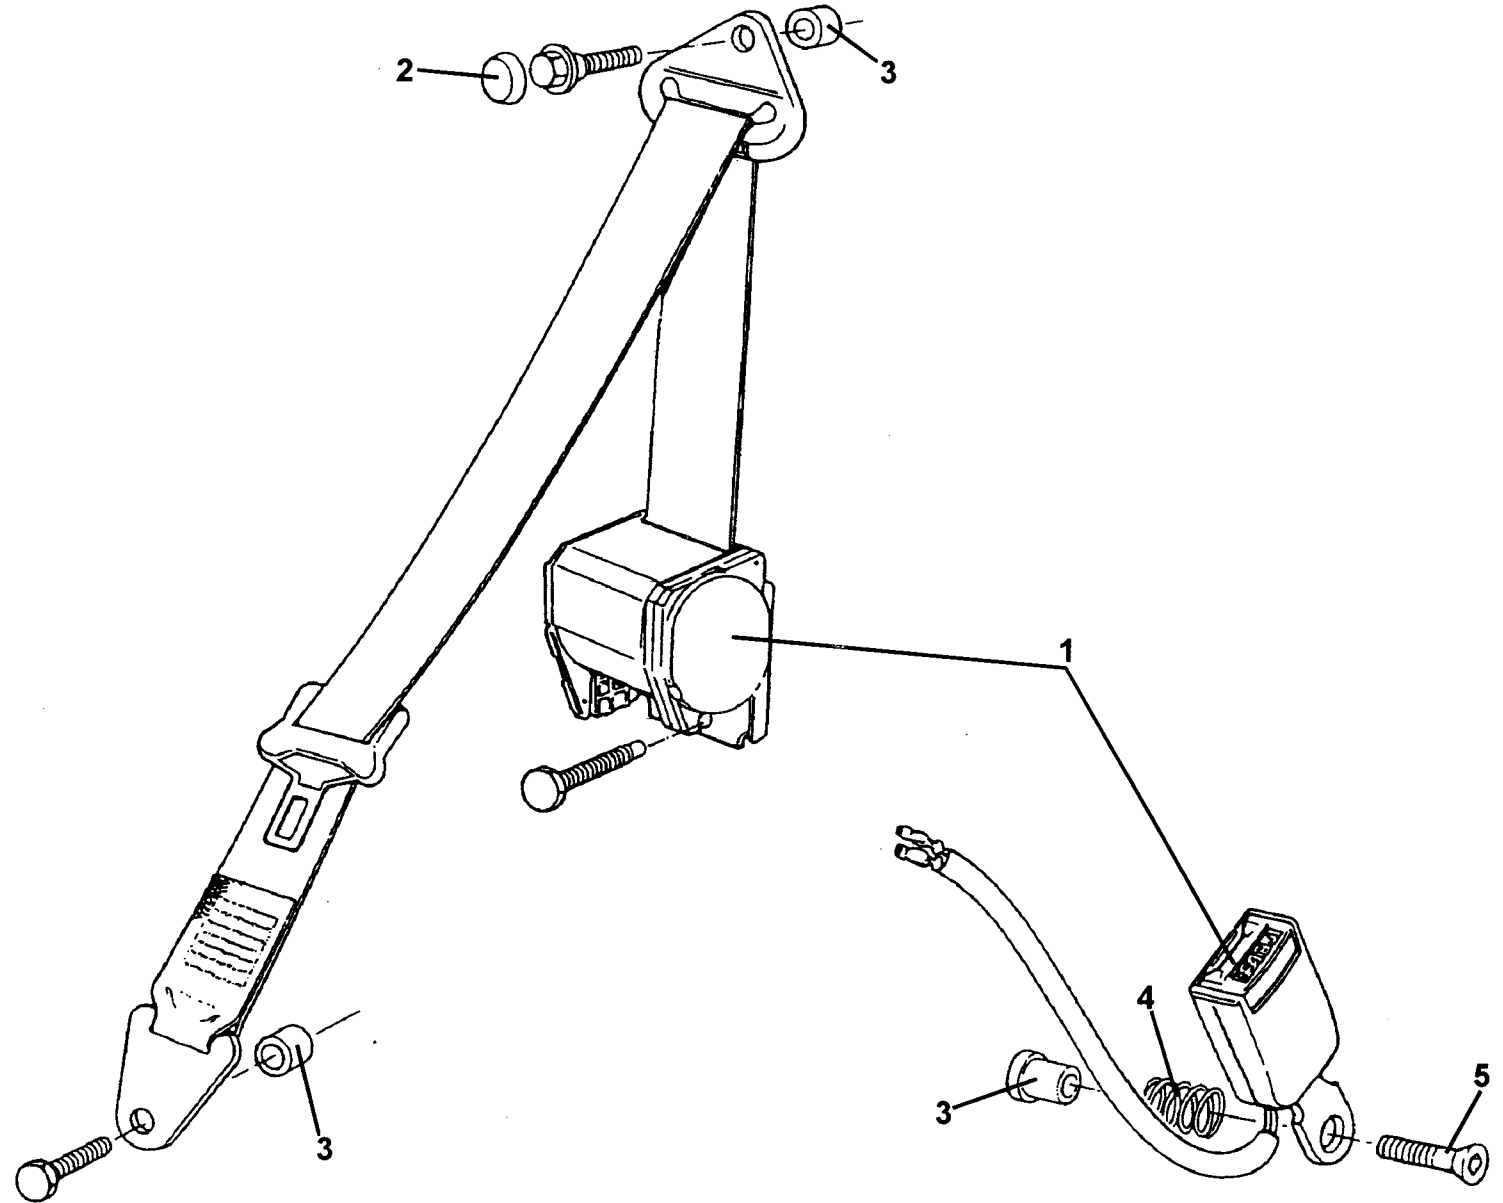

**ELISE**  
13.27

**Function Code 33.05 Parking Brake Mechanism**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
19	Screw, M8 x 25 hex. thn. hd.			A075W1081Z	2
20	Washer, spring, M8			A075W4036Z	2
21	Bush, parking brake			A111J0028K	2
22	Hand-Grip, plastic, parking brake lever		Standard	A111J6037S	1
22a	Hand-Grip, alloy, parking brake lever		Sports Tourer/Race Tech	A117U0084F	1

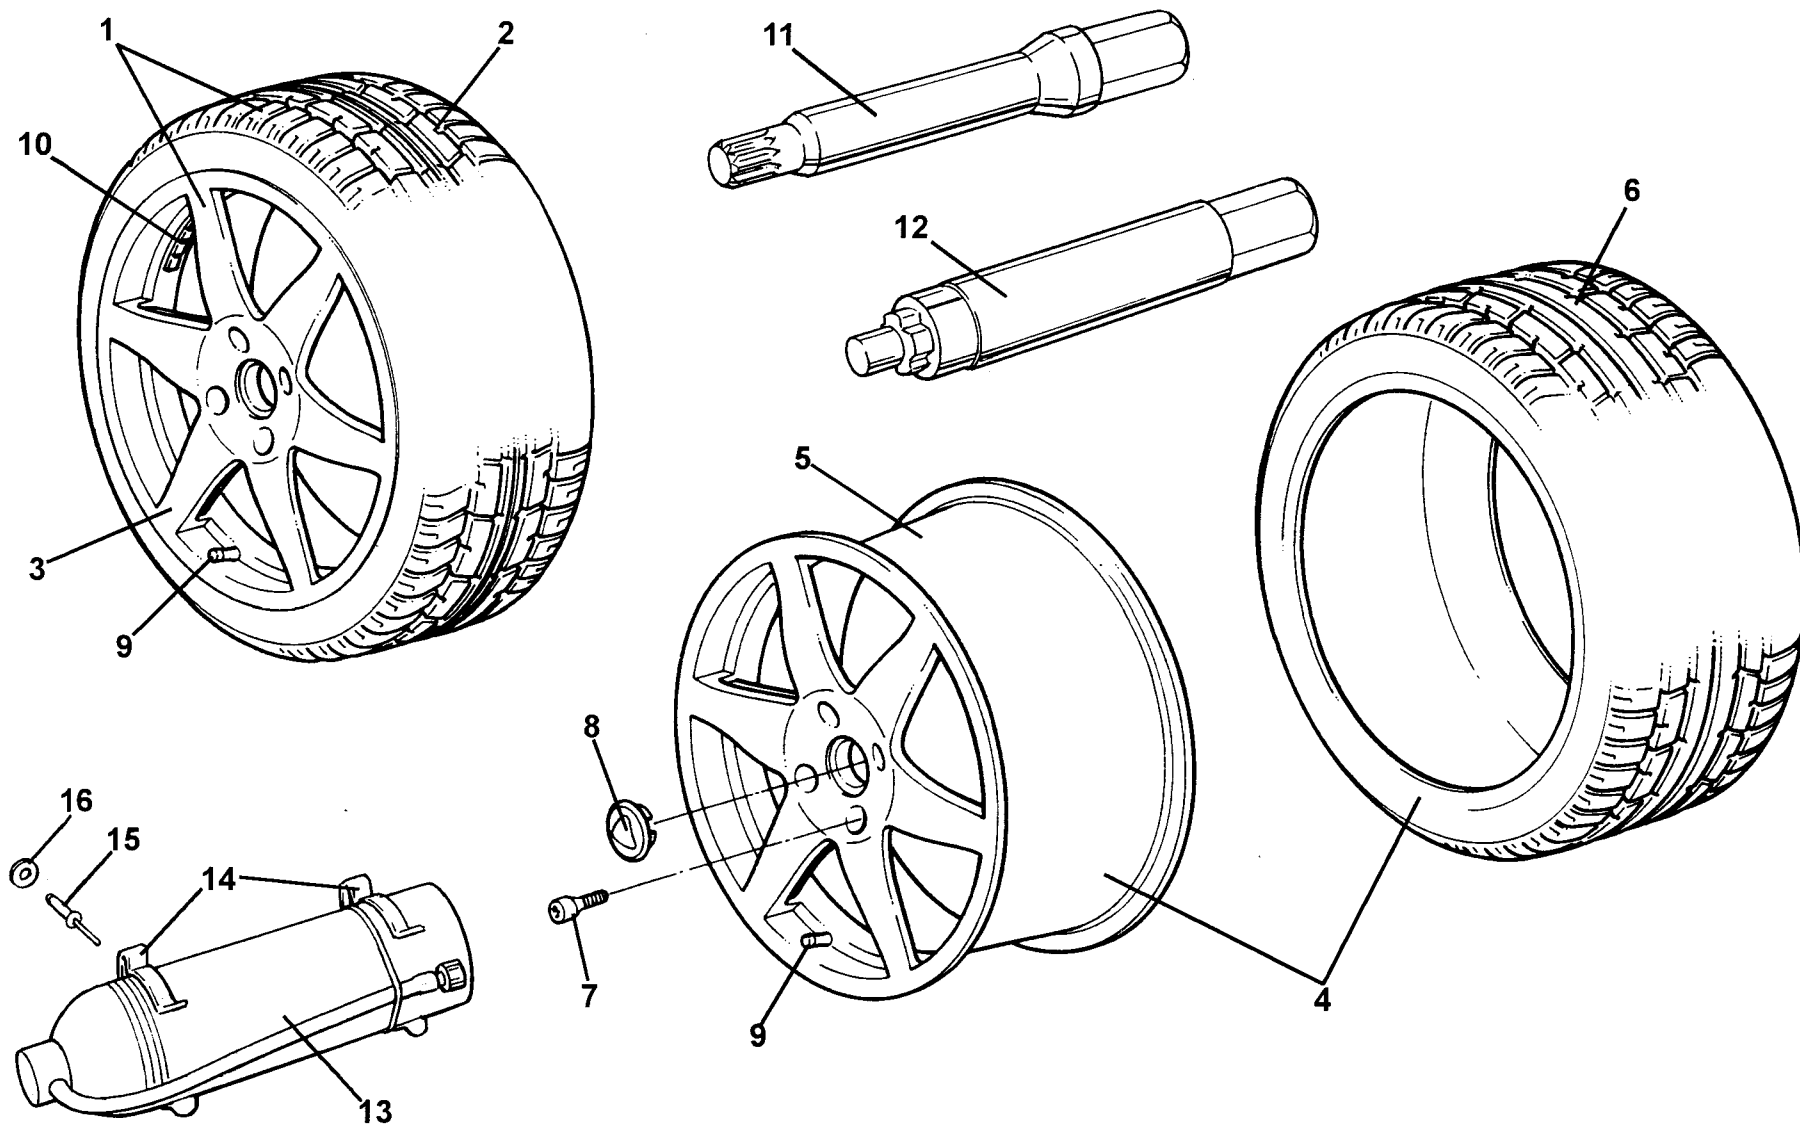

**ELISE**  
34.01




# Service Parts List **ELISE**



## Function Code 34.01 Wheels, Tyres & Valves

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Wheel & Tyre Assy., front, silver wheel, LH		Standard	C117G0019F	1
01a	Wheel & Tyre Assy., front, silver wheel RH		Standard	C117G0020F	1
01b	Wheel & Tyre Assy., front, black wheel LH		Optional	A117G0067F	1
01c	Wheel & Tyre Assy., front, black wheel RH		Optional	A117G0068F	1
02	Tyre, front, 175/55 R16, Bridgestone Potenza			A117G0005L	2
03	Road Wheel, front, silver 5.5J x 16		Standard	D117G0014H	2
03a	Road Wheel, front, black 5.5J x 16		Optional	D117G0024H	2
04	Wheel & Tyre Assy., rear, LH		Standard	C117G0021F	1
04a	Wheel & Tyre Assy., rear, RH		Standard	C117G0022F	1
04b	Wheel & Tyre Assy., rear, LH		Optional	A117G0069F	1
04c	Wheel & Tyre Assy., rear, RH		Optional	A117G0070F	1
05	Road Wheel, rear, silver 7.5J x 17		Standard	D117G0015F	2
05a	Road Wheel, rear, black 7.5J x 17		Optional	D117G0025F	1
06	Tyre. rear, 225/45 R17, Bridgestone Potenza			A117G0018L	2
07	Wheel Bolt			A117G6000F	12
07a	Wheel Bolt, security			A117G6034H	4
08	Wheel Centre cover			A082G4112F	4
09	Tyre Valve			A117G6007H	4


**ELISE**

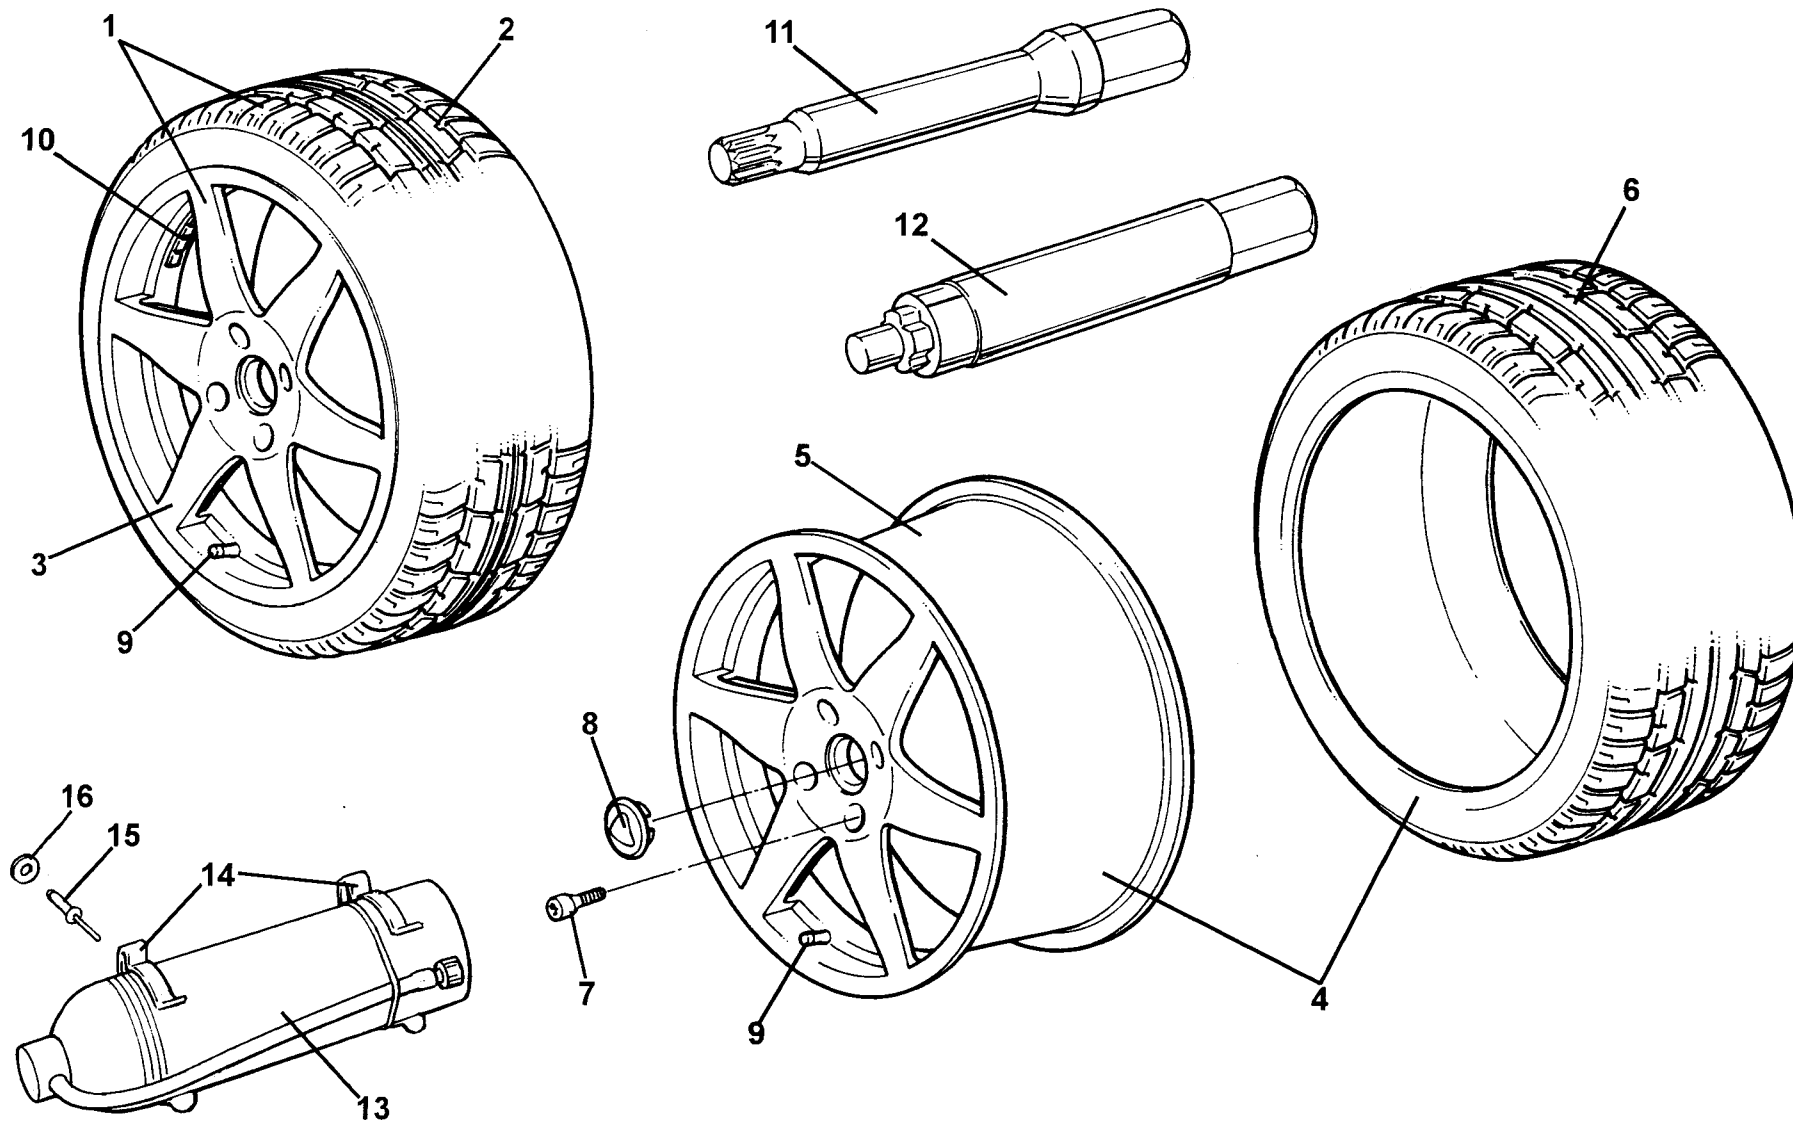

**ELISE**  
34.01

**Function Code 34.01 Wheels, Tyres & Valves**

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
10	Balance Weight			A117G6004H	As req.
11	Wheel Bolt Adaptor, standard bolt			A117G0036F	1
12	Wheel Bolt Adaptor, security bolt			A117G0035H	1
13	Tyre Weld, repair canister			A117G6009F	1
14	Terry Clip, cannister retaining			A111W6590F	2
15	Pop Rivet, clip to bulkhead			A075W6090Z	4
16	Washer, flat, clip to bulkhead			A075W4084F	4
17	Adhesive Foam	Not illustrated		A111P6044V	200mm
18	Security Wheelbolt Kit	Includes items: 7a, 12, plus ID strip & instruction card		A117G0043F	1

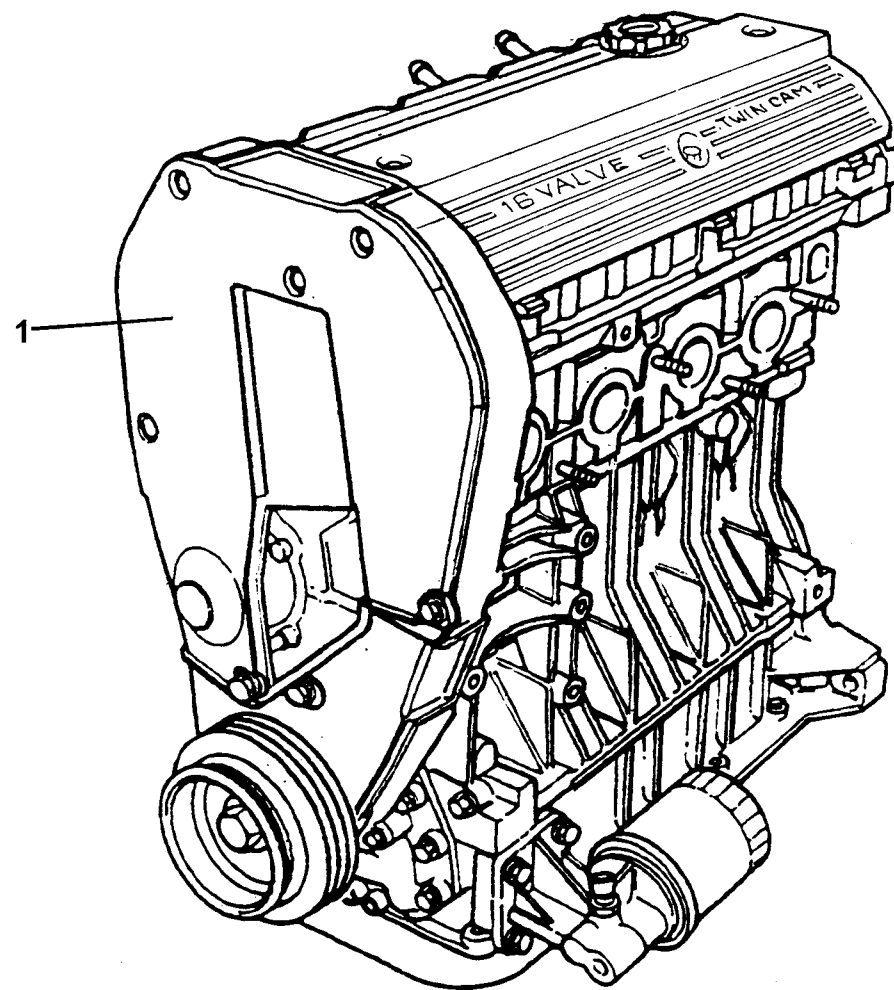

**ELISE**  
40.00

# Service Parts List



# ELISE



## Function Code 40.17 Ignition System, Spark plugs, Leads

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Plug Top Ignition Coil			A117E6030S	2
02	Plug Lead			A117E6032S	2
03	Spark Plug			A117E6023S	4
04	Screw, coils to cam cover			A117E6031S	4

# ELISE

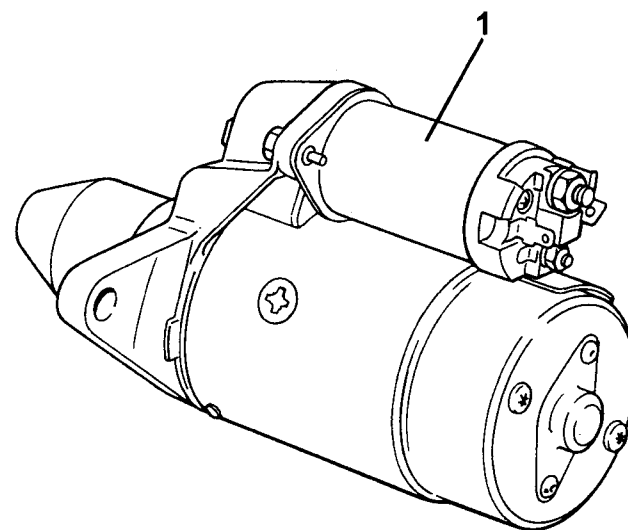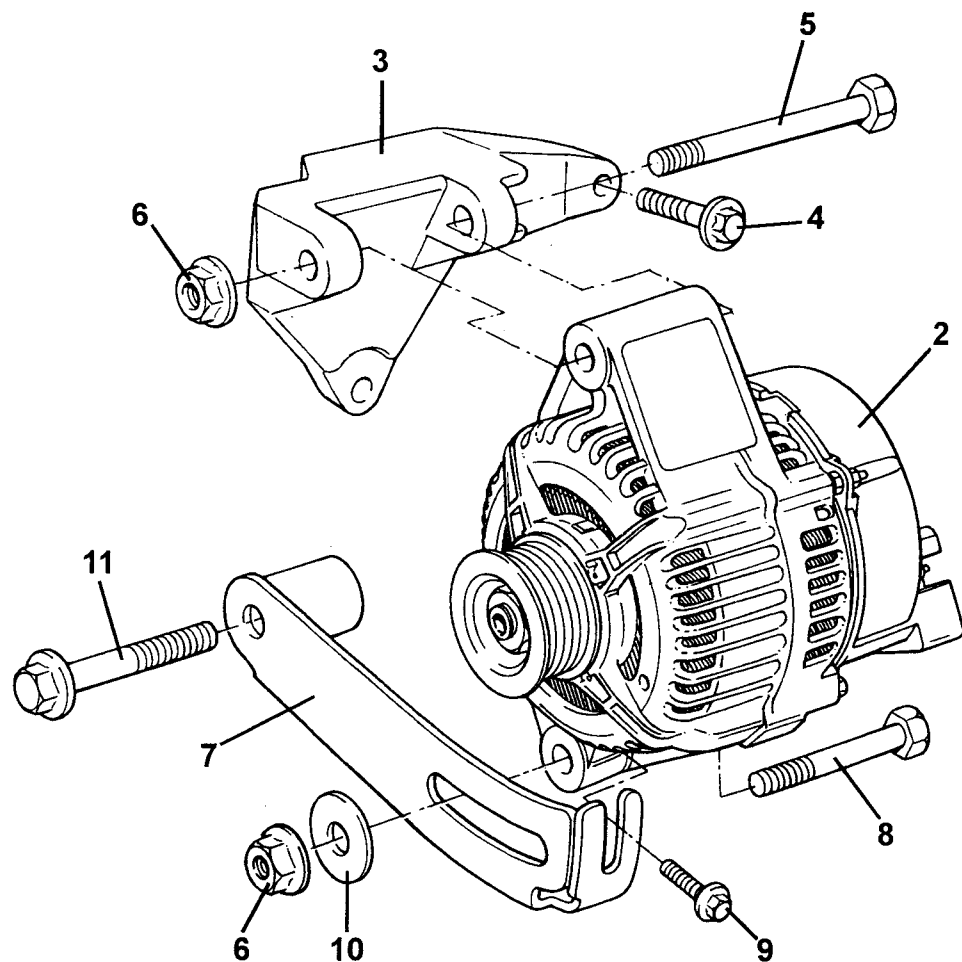


**ELISE**  
40.19

# Service Parts List **ELISE**



## Function Code 40.19 Alternator and Starter Motor

<u>Dep</u>	<u>Part Description</u>	<u>Remarks</u>	<u>Option</u>	<u>Part Number</u>	<u>Qty</u>
01	Starter Motor, 1.4KW			A117E6054S	1
02	Alternator			A111E6082S	1
03	Alternator Bracket		Heater cars	A111E6236S	1
04	Bolt, flg. hd., bracket to block			A111E6237S	3
05	Bolt, hex. hd., alternator to bracket			A111E6104F	1
06	Nut, flg. hd., alternator to bracket			A111E6183S	2
07	Alternator Adjustment Link			A111E6238S	1
08	Bolt, hex. hd., alternator to link			A111E6239S	1
09	Setscrew, flg. hd., alternator adjustment			A111E6241S	1
10	Washer, flat			A111E6240S	1
11	Bolt, flg. hd., link to block			A111E6018F	1

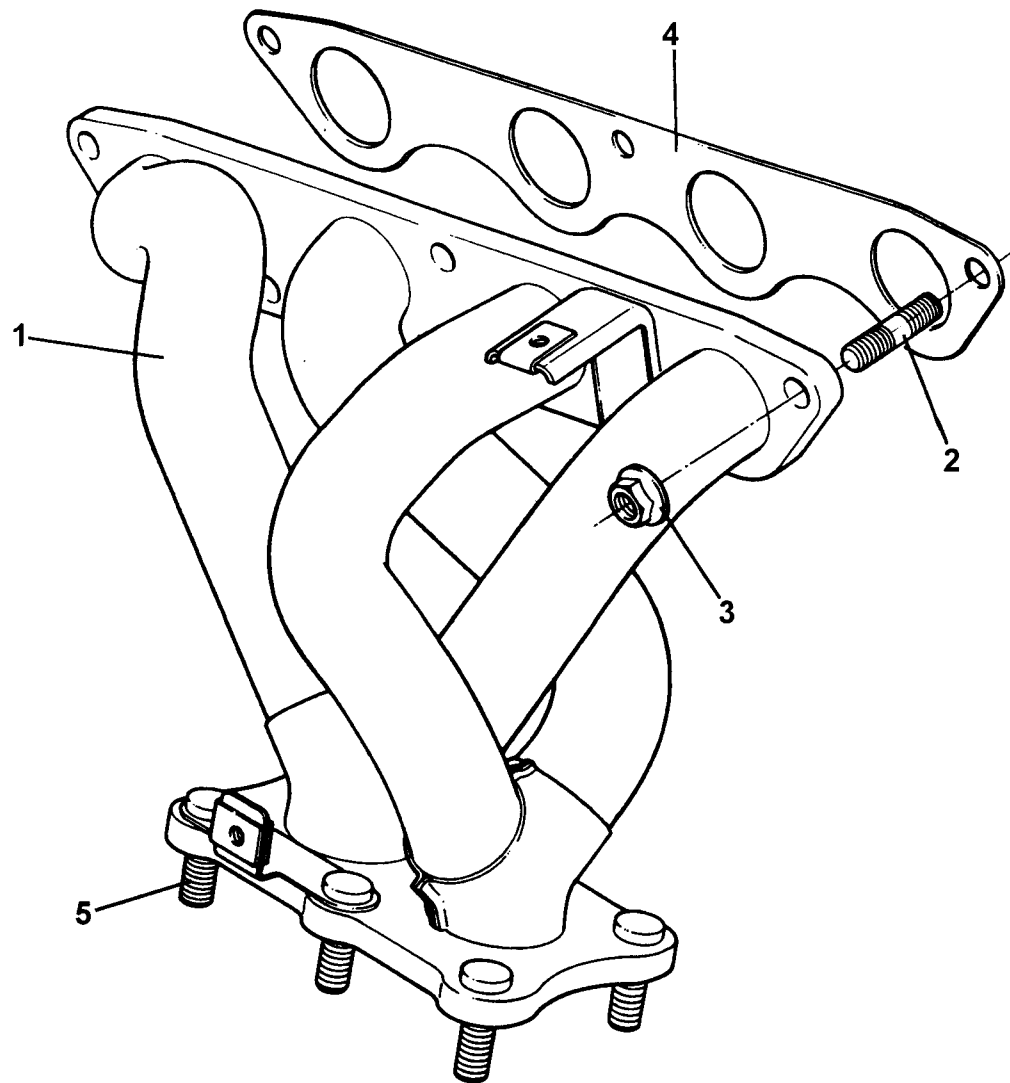

**ELISE**  
40.21